






## The remote control pairing process

- ✧ A New remote control has to establish a new connection to the cooker hood when used for first time. One remote control could possibly control several cooker hood at the same time.

Connection process between remote control and cooker hood

- ✧ Within 15S after the cooker hood connects to the power supply, long press  for 5 seconds, the indicators light begin flashing from one button to another ,the cooker hood is in connection mode, press any button on remote control to confirm the connection. The connection process finished and the remote control can be used for speed selection, lighting and timer setting.
- ✧ If you want to connect again, you will need to clear the code that has been set up previously.
- ✧ To clear the code, press  for 5 seconds, the indicators light begin flashing from one button to another, the cooker is in connection mode. Then, press  again for 3-5 seconds, the previous connection code is cleared.
- ✧ When the previous code has been cleared, the cooker hood back to standby mode, press  for 5 seconds, the indicate light flashing from one button to another ,the cooker hood is in connection mode, then, press any button on remote control to confirm the connection.


## Remote control

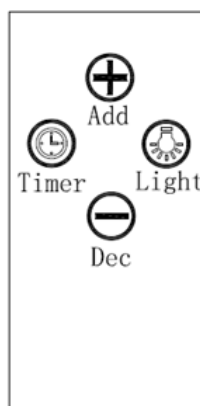



### 1. Lighting





press button once, the light is on, press again, the light is off. The lighting button it is controlled separately and will not affect any other functions.


2. Turning on/ Increasing motor speed key , the motor has low, mid, high totally 3 levels.


2.1 Press  one time, the motor will work at low speed (Turning on).

2.2 When the hood works at low speed, touch  again, the motor changes to mid speed.

2.3 Base on the middle speed condition, touch  again, the motor is running in the high speed.

2.4 Base on the high speed condition, touch  again, the hood still works at high speed.

3. Turning off/Decreasing motor speed key 

3.1  press the button and the motor begins shift to a lower speed and the LCD screen display the speed level. Repeating press the button, it keep on decreasing the motor speed till the cooker hood turning off.

4. Low speed, mid speed and high speed cannot work at the same time. When hood is on high speed, press the speed decrease, it will turn to a lower speed; when it is in low speed, press the speed increase, it will turn to a higher speed.

## 5. Timer



Press the button to set up the timer on/off function.