


COOKE<sup>TM</sup>  
&LEWIS


CLBM1SS-C

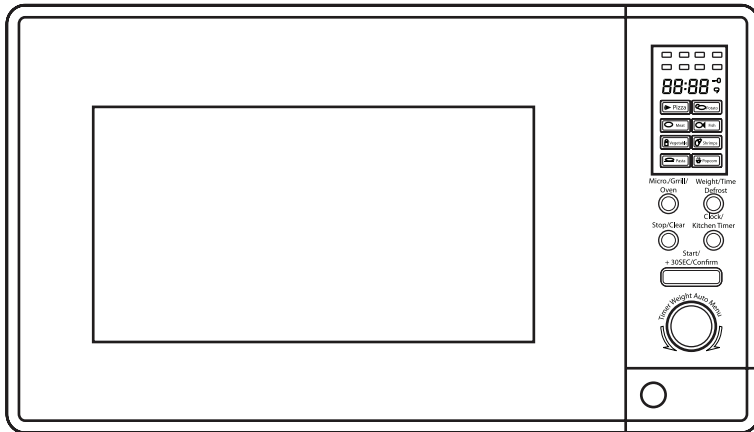


CLBM1SS-C Built In Microwave and Grill V4a




Barcode 5052931055593

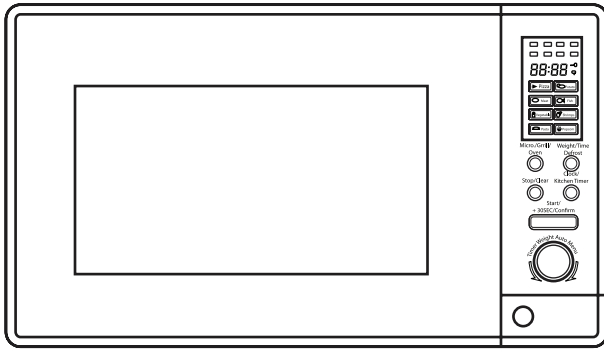


[01] x 1

 

[02] x 1

 

[03] x 1

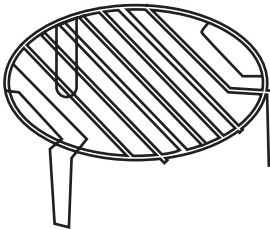

[04] x 1



[05] x 1



[06] x 1



(4 x 32mm)

[07] x 1



[08] x 2

# COOKE<sup>TM</sup> &LEWIS

## CLBM1SS-C



Built-in Microwave & Grill

04

**Installation**

31

# Let's get started...



## Getting **started**...

05

**Before you start**  
**Safety**

06  
07

## In more **detail**...

09

**Product parts list**  
**Operation**  
**Care and maintenance**  
**Troubleshooting**  
**Recycling and disposal**  
**Technical and legal information**  
**Guarantee**  
**CE Declaration of conformity**

10  
11  
20  
25  
27  
28  
28  
30

## Appendix

**Installation**

31




# Getting Started...

**Before you start**  
**Safety**

06

07

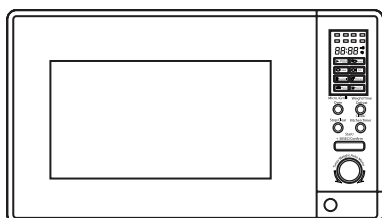

## Before you start

---

- ☒ To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 1 800 535542 (Ireland) and 01 56 48 02 60 (France).
- ☒ Check the package and make sure you have all of the parts listed.
- ☒ Decide on the appropriate location for your product.
- ☒ If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- ☒ The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- ☒ If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

## You will need

---








**These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.**













- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☒ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☒ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- ☒ Therefore, the Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ☒ Children should be supervised to ensure that they do not play with the appliance.
- ☒ This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- ☒ Do not allow the electric cables to touch the hot parts of the appliance.
- ☒ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ☒ Do not remove the plug in the presence of flammable gas.
- ☒ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☒ Please dispose of the packing material carefully.
- ☒ Do not use flammable sprays in close vicinity to the appliance.

-  We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
-  A steam cleaner is not to be used.
-  The appliance is not intended to be operated by means of external timer or separated remote-control system.
-  The appliance is for domestic use only.
-  The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.

#### Precautions to avoid possible exposure to excessive microwave energy

-   Do not attempt to operate this oven with the door open, as this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
-   Do not place any object between the front face of the oven and the door or allow dirt or cleaner residue to accumulate on sealing surfaces.
-   If the door or door seals are damaged, the oven must not be operated until it has been repaired by a qualified person.
-   If the apparatus is not kept in a good state of cleanliness, its surface could be damaged and the lifespan of the apparatus affected, leading to a dangerous situation.
-   Make sure the appliance is attended when in operation.

### IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

**WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

- Only use utensils that are suitable for use in microwave ovens.
- The oven should be cleaned regularly and any food deposits removed.






## In more detail...

<b>Operation</b>	11
<b>Care and maintenance</b>	20
<b>Troubleshooting</b>	25
<b>Recycling and disposal</b>	27
<b>Technical and legal information</b>	28
<b>Guarantee</b>	28
<b>CE Declaration of conformity</b>	30

## Parts list and accessories

**Caution**

This diagram may be slightly different from the layout of the machine.

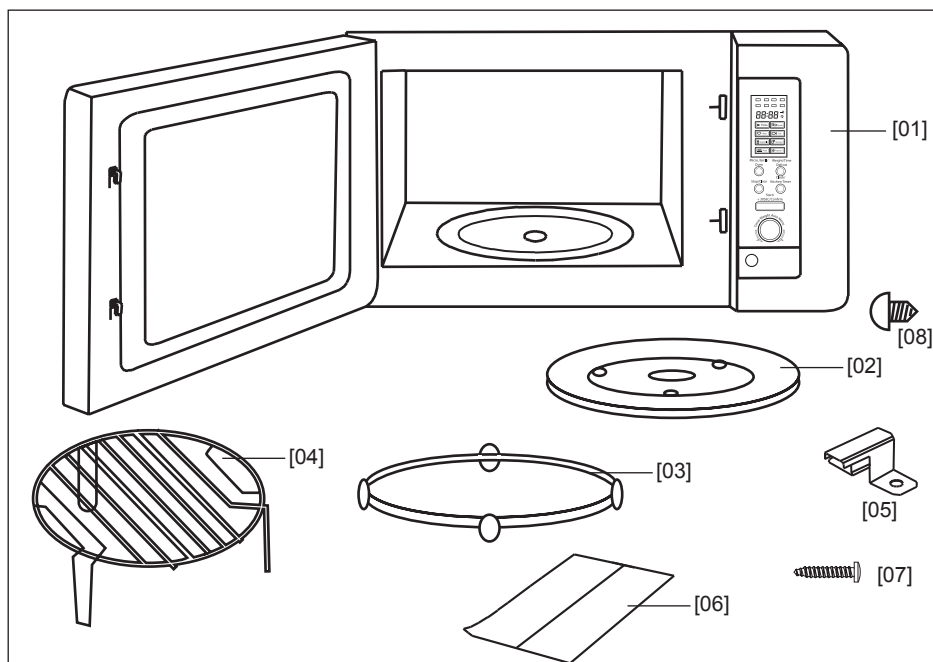




Reference	Description	Qty
[01]	Microwave	1
[02]	Glass tray	1
[03]	Turntable	1
[04]	Grill rack	1
[05]	Brackets	1
[06]	Template	1
[07]	Screw	1
[08]	Screw	2





## Cautions



 - > Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- > When heating food in plastic or paper containers, supervise the oven due the possibility of ignition.
- > If smoke is observed, switch off and unplug the appliance and keep the door closed.
- > Remove wire twist-ties and metal handles from paper or plastic containers / bags before placing them in the oven.
- > The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- > Microwave heating of beverages can result in delayed eruptive boiling; therefore care must be taken when handling the container.

## Operation keys

Reference	Description
	Clock Timer
	Microwave / Grill / Combi
	Start / Confirm






 

	Weight / Time defrost
	Stop / Clear
	Display
	Selector

## Clock Setting

When the microwave oven turns on, the LED will display "0:00" and the buzzer will sound once.

1. Press **Clock Timer** once to select clock function, the hour figures will flash.
  2. Turn **Selector** to adjust the hour figures, the number entered should be from 0--23.
  3. Press **Clock Timer**, the minute figures will flash.
  4. Turn **Selector** to adjust the minute figures, the number entered should be from 0--23.
  5. Press **Clock Timer** to finish clock setting. The symbol ":" will flash and the time will light up.
- > NOTE: During the clock setting process, the oven will return to the previous status automatically if **Stop / Clear** is pressed.

## Microwave cooking

Reference							
Description	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector

1. Press **Microwave / Grill / Combi**. The LED will display "P100".
2. Press **Microwave / Grill / Combi** for times or turn **Selector** to choose the power you require and "P100", "P80", "P50", "P30" or "P10" will be displayed every time you press it.
3. Press **Start / Confirm** to confirm and turn **Selector** to set cooking time from "0:05" to "95:00".
4. Press **Start / Confirm** again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as follows:

1. Press **Microwave / Grill / Combi**. The LED will display "P100".
2. Press **Microwave / Grill / Combi** again or turn **Selector** to select 80% microwave power.
3. Press **Start / Confirm** to confirm and the screen displays "P80".
4. Turn **Selector** to adjust the cooking time until the oven displays "20:00".
5. Press **Start / Confirm** again to start cooking.






 

NOTE: The step quantities for the adjustment time of the cooking switch are as follow:

- 0 — 1 min : 5 seconds
- 1 — 5 min : 10 seconds
- 5 — 10 min : 30 seconds
- 10 — 30 min : 1 minute
- 30 — 95 min : 5 minutes

In more detail...

"Micro/Grill/Combi" Order	Pad instructions Display	Microwave Power	Grill Power
1	P100	100%	
2	P80	80%	
3	P50	50%	
4	P30	30%	
5	P10	10%	
6	G	0%	100%
7	C-1	55%	45%
8	C-2	36%	64%

## Grill or Combi cooking

Reference							
Description	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector

1. Press **Microwave / Grill / Combi**. The LED will display "P100".
2. Press **Microwave / Grill / Combi** for times or turn **Selector** to select the power you require and "G", "C-1" or "C-2" will be displayed every time you press or turn.
3. Press **Start / Confirm** to confirm and turn **Selector** to set cooking time from "0:05" to "95:00".
4. Press **Start / Confirm** again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power (C-1) to cook for 10 minutes, you can operate the oven as follows:








1. Press **Microwave / Grill / Combi**. The LED will display "P100".
2. Press **Microwave / Grill / Combi** once or turn **Selector** to choose "combi 1 mode".
3. Press **Start / Confirm** to confirm, and the screen displays "C-1".

4. Turn **Selector** to adjust the cooking time until the oven displays "10:00".
5. Press **Start / Confirm** again to start cooking.

NOTE: Once half the grill time has passed, the oven will sound twice, which is normal.








For better grilling, turn the food over, close the door and the oven will continue cooking if no other operation is selected.

## Quick Start

Reference							
Description	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector






 

1. In standby mode, press **Start / Confirm** to start cooking at 100% power. Every time you press it you will increase the cooking time by 30 seconds, up to 95 minutes.
2. In microwave cooking or defrost by time mode, every time you press **Start / Confirm** you will increase the cooking time by 30 seconds.
3. In standby mode, turn **Selector** left to set cooking time at 100% microwave power, then press **Start / Confirm** to start cooking.

## Defrost By Weight

Reference							
Description	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector








1. Press **Weight / Time defrost** once, and the oven will display "dEF1".
2. Turn **Selector** to select the weight of food from 100 to 2000 g.
3. Press **Start / Confirm** to start defrosting.

## Defrost By Time

<b>Reference</b>							
<b>Description</b>	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector

1. Press **Weight / Time defrost** twice, and the oven will display "dEF2".
2. Turn **Selector** to select the defrost time. The MAX time is 95 minutes.
3. Press **Start / Confirm** to start defrosting. The defrost power is P30 and this cannot be changed.

## Kitchen Timer






 

<b>Reference</b>							
<b>Description</b>	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector

1. Press **Clock Timer** twice. The LED will display "00:00".
2. Turn **Selector** to enter the correct time (the maximum cooking time is 95 minutes).
3. Press **Start / Confirm** to confirm.
4. When the kitchen time is reached, the clock indicator will go out and the buzzer will sound 5 times. If the clock is set (24-hour system), the LED will display the current time.

NOTE: The kitchen Time differs from 24-hour system. The Kitchen Timer is a timer.



## Auto Menu

Reference							
Description	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector

1. Turn **Selector** right to select the menu and "A-1" to "A-8" will be displayed, which means auto reheat, vegetable, fish, meat, pasta, potato, pizza and soup.
2. Press **Start / Confirm** to confirm.
3. Turn **Selector** to select the default weight from the menu chart.
4. Press **Start / Confirm** to start cooking.

Example: If you want to use "Auto Menu" to cook 350g of fish, you can operate the oven as follows:






 

1. Turn **Selector** clockwise until "A-6" is displayed.
2. Press **Start / Confirm** to confirm.
3. Turn **Selector** to select the weight of fish until "350" is displayed.
4. Press **Start / Confirm** again to start cooking.

### The automatic menu procedure:

Menu		Weight	Display
A-1	Pizza	200 g	200
		400 g	400
A-2	Meat	250 g	250
		350 g	350
		450 g	450
A-3	Vegetable	200 g	200
		300 g	300
		400 g	400

A-4	Pasta	50 g (with 450 ml cold water)	50
		100 g (with 800 ml cold water)	100
A-5	Potato	200 g	200
		400 g	400
		600 g	600
A-6	Fish	250 g	250
		350 g	350
		450 g	450
A-7	Beverage	1 cup (120 ml)	1
		2 cups (240 ml)	2
		3 cups (360 ml)	3
A-8	Popcorn	50 g	50
		100 g	100

## Multi-section cooking

<b>Reference</b>							
<b>Description</b>	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector


A maximum of 2 sections can be set for cooking. In multi-section cooking, if one section involved defrosting then defrosting shall be in the first section.

Example: If you want to defrost food for 5 minutes and then cook at 80% microwave power for 7 minutes, operate it as follows:

1. Press **Weight / Time defrost** twice. The LED will display "DEF2".
2. Turn **Selector** to enter the correct time "5:00".
3. Press **Microwave / Grill / Combi**. The LED will display "P100".
4. Press **Microwave / Grill / Combi** again or turn **Selector** to select 80% microwave power.
5. Press **Start / Confirm** to confirm and the screen will display "P 80".






 

6. Turn **Selector** to adjust the cooking time until the oven displays "7:00".
7. Press **Start / Confirm** again to start cooking. The buzzer will sound once for the first section and the defrosting time counts down. The buzzer will then sound again and the second cooking stage is started. Once cooking is complete, the buzzer will sound five times.

## Query Function

<b>Reference</b>	
<b>Description</b>	Microwave / Grill / Combi

1. In microwave, grill and combination cooking mode, press **Microwave / Grill / Combi** and the current power will be displayed for 3 seconds. After 3 seconds, the oven will switch back to its former mode.
2. In cooking mode, press **Clock/ kitchen timer** to check the time, which will be displayed for 3 seconds.

## Lock-out Function for Children

<b>Reference</b>							
<b>Description</b>	Clock Timer	Microwave / Grill / Combi	Start / Confirm	Weight / Time defrost	Stop / Clear	Display	Selector

### > Lock:

In standby mode, press **Stop / Clear** for 3 seconds and a long beep will be heard to indicate children-lock mode. The current time will be displayed if set, otherwise the LED will display " [ : : ] "

### > Lock removal:

In locked mode, press **Stop / Clear** for 3 seconds and a long beep will indicate that the lock has been released.

## Care



Damaged power cables should be replaced by a competent person or qualified electrician.



For indoor use only.


**NOTE:** If the appliance is not in use for a long period of time, disconnect power, clean the inside parts, place the appliance in a dry area and leave the door slightly open.

## Protection from moisture



### Warning

Always switch off the electricity supply before performing maintenance work.  
In the event of a fault, contact customer services.  
Spraying the appliance with water is forbidden.

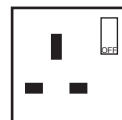

- > Avoid placing the appliance in a place when heavy moisture is present in order to minimise the possibility of its metal parts becoming rusted.

## Protection from heat

- > The appliance should be kept away from any heat source or direct sunlight.

## Materials you can use in microwave oven



### Caution

- > When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- > Do not overcook food.
- > Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
- > Eggs in their shells and whole hard-boiled eggs should not be heated in microwave ovens as they may explode, even after microwave heating is complete.
- > The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns.
- > Microwave heating of beverages can result in delayed eruptive boiling. Therefore, care must be taken when handling the container.

### Aluminium foil

- > Cover only. Small, smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.

### Browning dish

- > Follow the manufacturer's instructions. The bottom of the browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.

### Dinnerware

- > Microwave-safe only. Follow the manufacturer's instructions. Do not use cracked or chipped dishes.

### Glass jars

- > Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.

**Glassware**

- > Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.

**Oven cooking bags**

- > Follow the manufacturer's instructions. Do not close with metal tie. Pierce to allow steam to escape.

**Paper plates and cups**

- > Use for short-term cooking/warming only. Do not leave oven unattended while cooking.

**Paper towels**

- > Use to cover food for reheating and absorbing fat. Use supervised for short-term cooking only.

**Parchment paper**

- > Use as a cover to prevent splattering or a wrap for steaming.

**Plastic**

- > Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as indicated on the packaging.

**Plastic wrap**

- > Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.

**Thermometers**

- > Microwave-safe only (meat and sugar thermometers).

**Wax paper**

- > Use as a cover to prevent splattering and retain moisture.

## Materials to be avoided in microwave oven

### Aluminium trays

- > May cause arcing. Transfer food into a microwave-safe dish.

### Food carton with metal handle

- > May cause arcing. Transfer food into a microwave-safe dish.



### Metal or metal-trimmed utensils

- > Metal shields the food from microwave energy. Metal or metal trimmed utensils must not be placed in the microwave.

### Metal twist ties

- > May cause arcing and could cause a fire in the oven.

### Paper bags

- > May cause a fire in the oven.

### Plastic Foam

- > Foam may melt or contaminate the liquid inside when exposed to high temperatures.

### Wood

- > Wood will dry out when used in the microwave oven and may split or crack.

 
## Maintenance

### Appliance cleanliness



#### Warning

Always switch off the electricity supply and unplug before performing maintenance work. In the event of a fault, contact customer services.



#### Caution

Do not use hot water, diluents, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc. for cleaning so as not to damage the enamel coating and plastic. The appliance must not be cleaned directly with water as this could cause rusting or render the insulation less efficient.

- > The appliance should be cleaned after use.
- > Wipe the inner and outer surface of the appliance and its accessories with a wet cloth.
- > The door frame and seal and adjoining parts must be cleaned carefully with a damp cloth when dirty.



## Troubleshooting

The following circumstances may not be a problem. Do not contact the customer services until the problem has been confirmed.

Fault	Cause	Solution
Microwave oven interference	Radio and TV reception interference may be noticed when the microwave oven operating. This is similar to the interference of small electrical appliances such as a mixer, vacuum cleaner or electric fan.	This does not indicate malfunctioning.
	Low-power microwave cooking.	This does not indicate malfunctioning.
Steam accumulating or hot air released out of vents	The steam given off from food will mostly be released through the vents, although some could accumulate on places such as the oven door.	This does not indicate malfunctioning. Please dry surfaces with condensation.
Oven started accidentally with no food inside	Human error.	Stop the appliance, this is very dangerous. It is forbidden to run the appliance with no food inside.
	Appliance error.	Contact the customer services.

Oven cannot be started	Power cord not plugged in properly.	Disconnect the plug and connect again after 10 seconds.
	Fuse blowing or circuit breaker tripping.	Switch off and replace the fuse.
	Trouble with socket.	Test socket with another electrical appliance.
Oven does not heat	Door not closed properly.	Close door properly.
Glass turntable makes a noise when microwave oven is operating	Dirty roller rest and oven bottom.	See "Maintenance".

If your appliance is still not functioning properly after making the above checks, please contact customer services.

## Recycling and Disposal

### Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

## Technical data and legal information

### Technical information:

Power supply:	230 V~/ 50 Hz
Rated input power (Microwave):	1250 W
Rated output power (Microwave):	800 W
Rated input power (Grill):	1000 W

### Measurements:

Oven capacity:	20 l
Turntable diameter:	245 mm
External dimensions (WxHxD):	595 x 388 x 345 mm
Net weight:	15.35 kg

### Legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

### Manufacturer's Guarantee

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

#### Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

### **Exclusions to the guarantee (continued)**

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

### **This Guarantee does not affect your statutory rights.**

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,  
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

## **Customer Service**

To arrange an in guarantee service call, please contact customer services on the following numbers.

### **UK and N.Ireland – ISDAL Customer Care Centre**

**T: 0844 8001128 E: [uksupport@cnagroup.hk](mailto:uksupport@cnagroup.hk)**

**[www.myspareparts.co.uk](http://www.myspareparts.co.uk)**

### **Republic of Ireland (ROI) – ISDAL Customer Care Centre**

**T: 1-800 535542 E: [uksupport@cnagroup.hk](mailto:uksupport@cnagroup.hk)**

### **France – SIDEPAR Customer Care Centre**

**T: 01 56 48 02 60 E: [callcenter@sidepar.fr](mailto:callcenter@sidepar.fr)**

## CE Declaration of Conformity

In more detail...

<b>MANUFACTURER:</b> CATA		
<b>ADDRESS:</b> C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)		
<p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p>		
<b>MACHINE APPLICATION:</b>	<b>CLBM1SS-C</b>	
<b>TYPE:</b>	MicroWave	
<b>EC DIRECTIVES APPLIED:</b>	Comply with the European Directives 2006/95/CE: LVD and the 2004/108/CE: EMC	
<b>APPLIED HARMONIZED STANDARDS:</b>		
EN 60335-2-25/A2:2006		
EN 60335-2-6/A2:2008		
EN 60335-1/A13:2008		
EN 62233:2008		
<b>APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:</b>		
ISO9001.2008		
<b>PLACE:</b> Torelló	<div style="text-align: right;"> <b>David Sala</b>  <hr/>           Technical Manager         </div>	

This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc  
 Chandlers Ford, Hants  
 SO53 3LE United Kingdom  
[www.diy.com](http://www.diy.com)

Castorama  
 Parc d'Activités B.P.101  
 59175 Templemars - France  
[www.castorama.fr](http://www.castorama.fr)



# Appendix...

## Installation


Appendix...

## Installation instructions



### Caution


Do not apply force to any external part when moving. Good ventilation is required around the appliance for easier dissipation of heat and low power consumption. Sufficient clearance is required around the appliance.

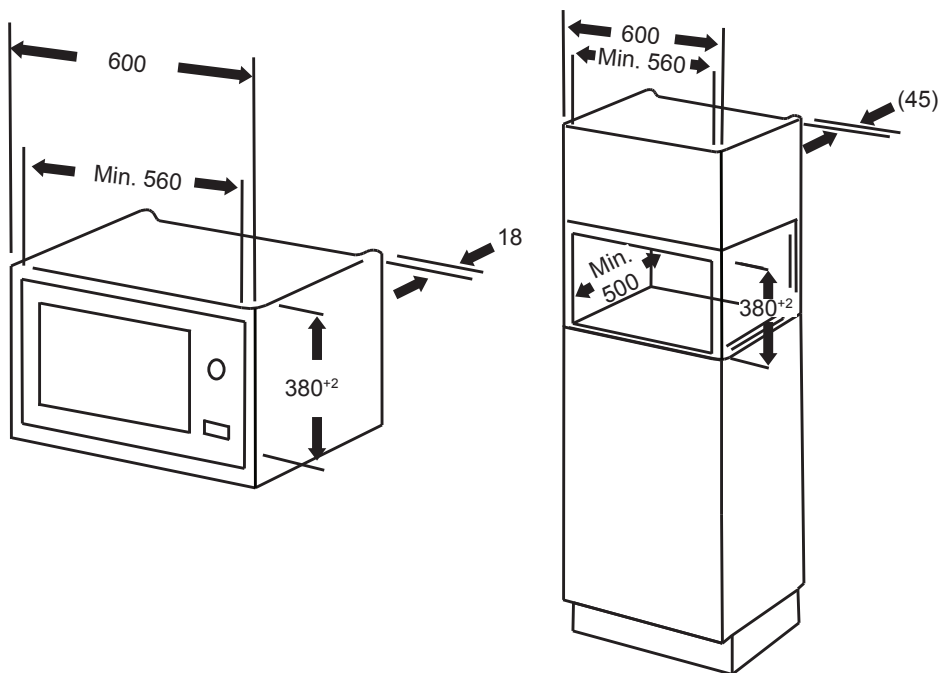

> This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cupboard.





## Turntable installation

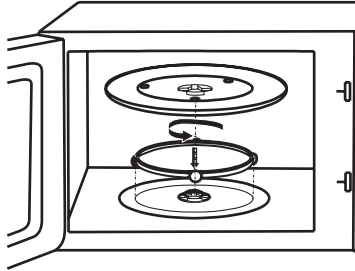

- > Never place the glass tray upside down. The glass tray should never be restricted. (see fig.1)
- > Both the glass tray and the turntable ring assembly must always be used during cooking.
- > All food and food containers must be placed on the glass tray for cooking.
- > If the glass tray or turntable ring assembly cracks or breaks, contact customer services.

## 01

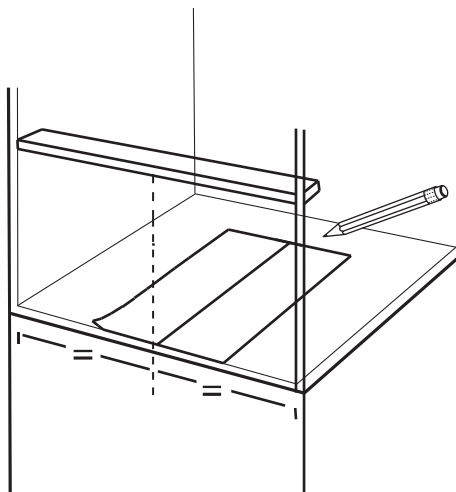 


## 02





[05] x 1



[08] x 2

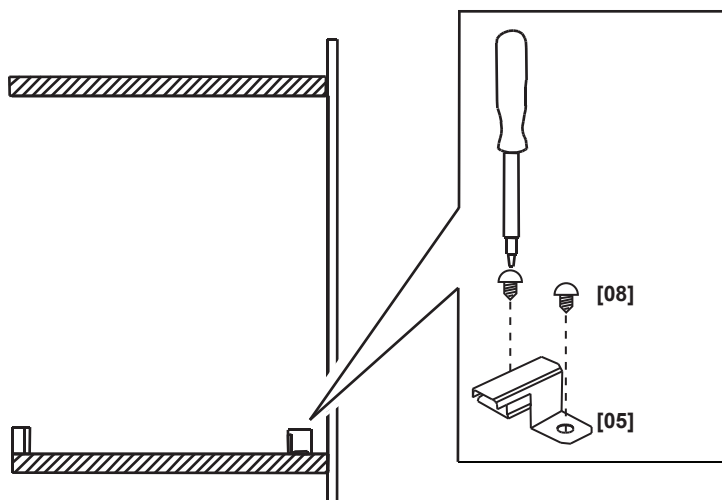

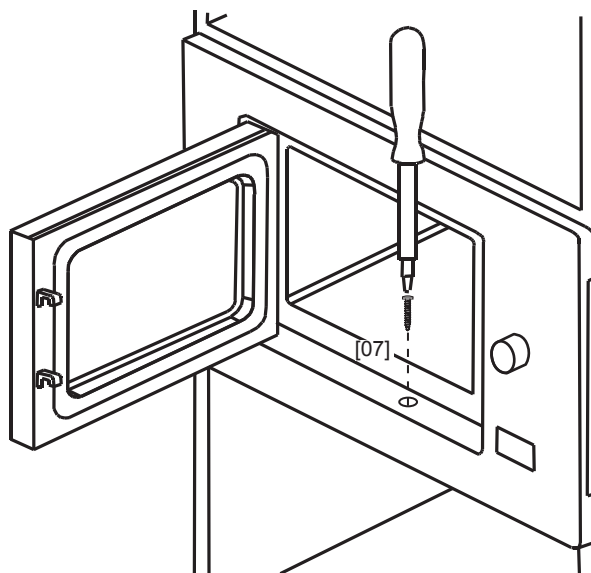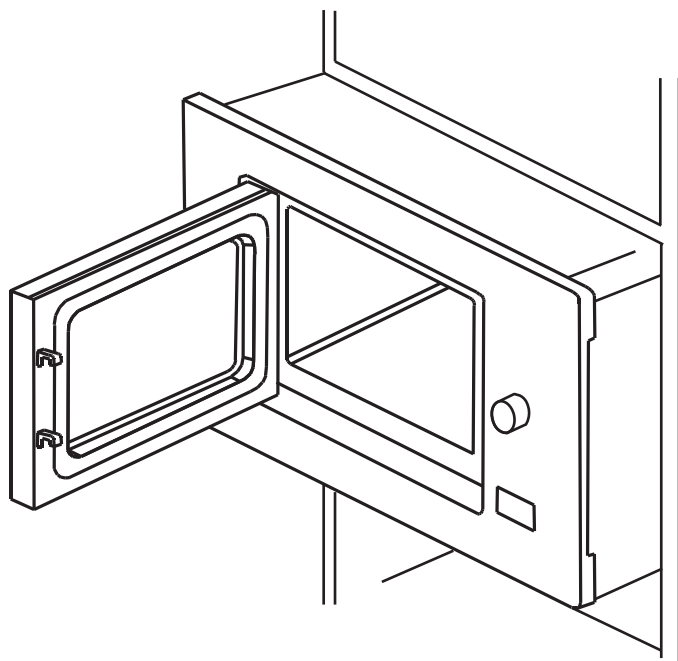

[07] x 1



B&Q plc  
Chandlers Ford, Hants  
SO53 3LE United Kingdom  
**[www.diy.com](http://www.diy.com)**



Castorama  
Parc d'Activités B.P.101  
59175 Templemars - France  
0 810 104 104  
**[www.castorama.fr](http://www.castorama.fr)**

---