


Cooker Hood
Model Number
UBSCH60BK
Parts Manual

Exploded Drawing

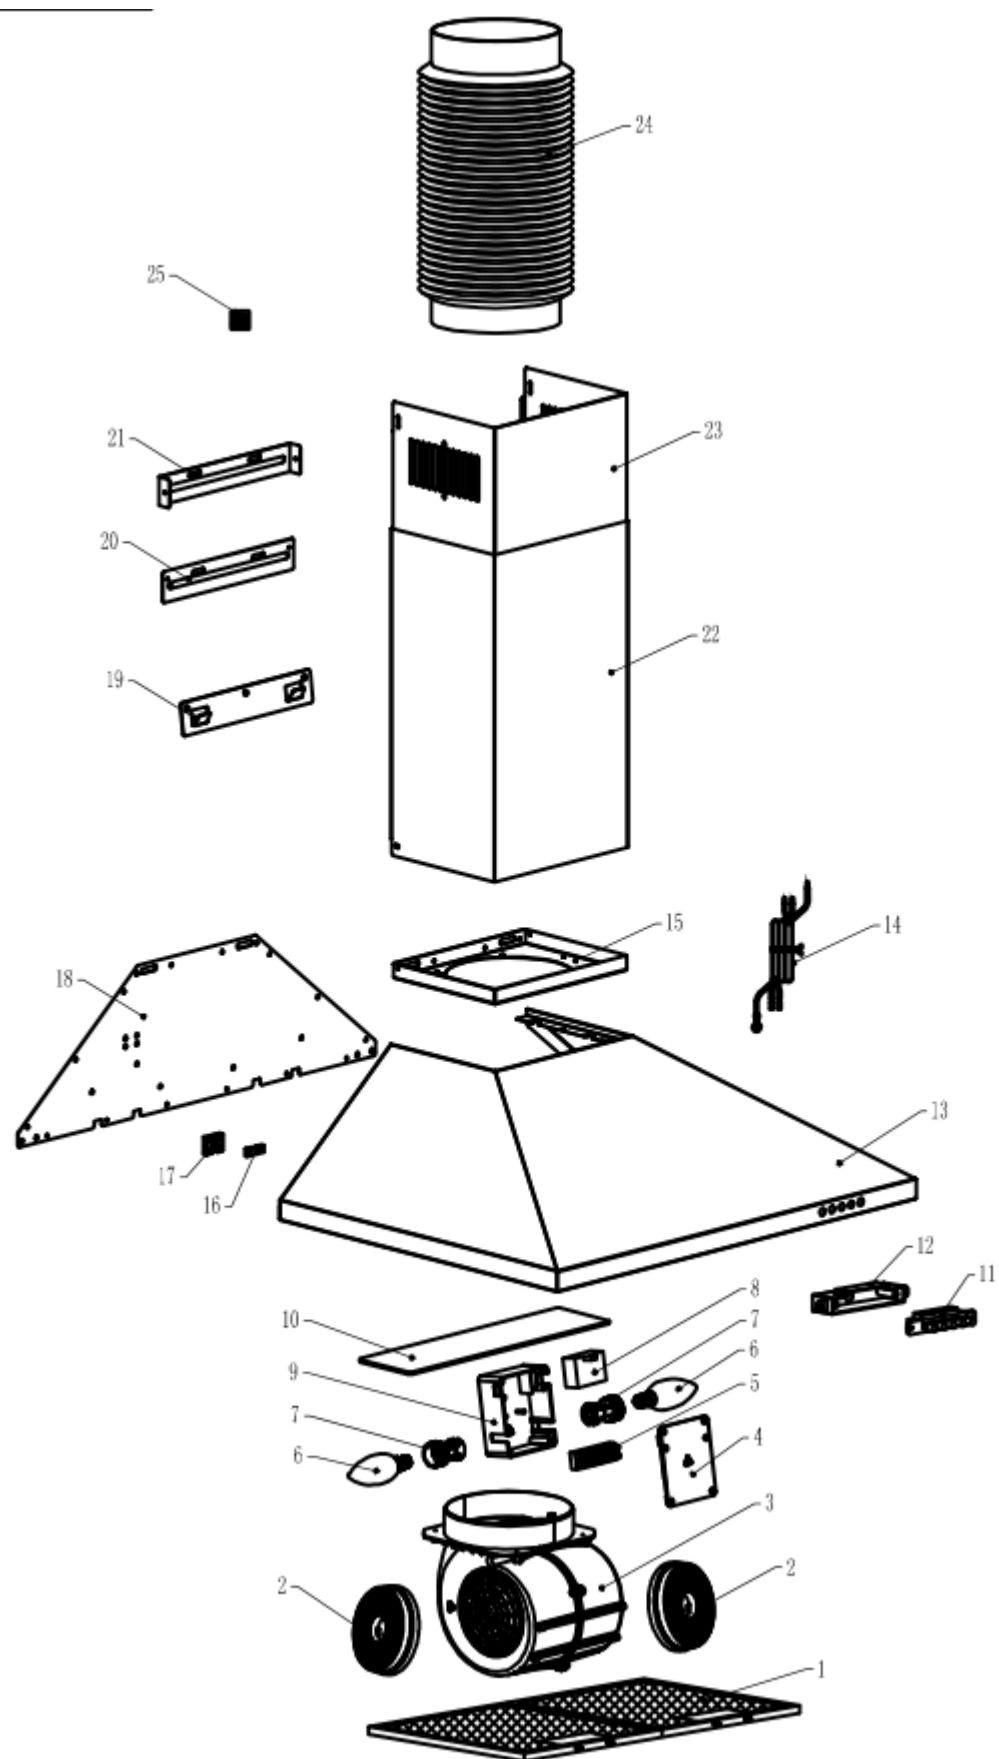

Parts List

ID No	Part Number	Part Description	QTY
25	2.03.13.0005	SCREW BAG	1
24	1.04.07.0001	FLEXIBLE PIPE FOR OPTIONAL	1
23	1.08.11.0011	INNER CHIMNEY	1
22	1.08.11.0010	OUTER CHIMNEY	1
21	2.01.06.0109	INNER CHIMNEY BRACKET	1
20	2.01.06.0107	OUTER CHIMNEY BRACKET	1
19	1.09.01.0003	HOOK PLATE	1
18	2.03.01.0354	REAR BOARD	1
17	1.04.12.0004	CRIMPING SEAT	1
16	1.04.12.0005	CRIMPING BOARD	1
15	2.01.01.0005	TOP BOARD	1
14	2.03.09.0059	POWER CORD ASSEMBLY (WITHOUT PLUG)	1
13	1.08.01.0113	HOUSING ASSEMBLY	1
12	1.04.04.0024	PUSH SWITCH BOX	1
11	1.01.07.0001	PUSH SWITCH	1
10	1.05.01.0011	GLASS LAMP COVER	1
9	1.04.03.0014	ELECTRICAL BOX	1
8	1.01.02.0016	CAPACITOR	1
7	1.01.10.0001	LAMP HOLDER	2
6	1.01.03.0030	LED BULB	2
5	1.01.04.0001	TERMINAL	1
4	1.04.03.0015	ELECTRICAL BOX COVER	1
3	2.03.06.0013	M7 MOTOR ASSEMBLY	1
2	1.11.01.0005	CARBON FILTER FOR OPTIONAL	2
1	1.03.12.0079	ALUMINIUM FILTER	2