


Cooker Hood
Model Number
UBSCG70BK
Parts Manual

Exploded Drawing

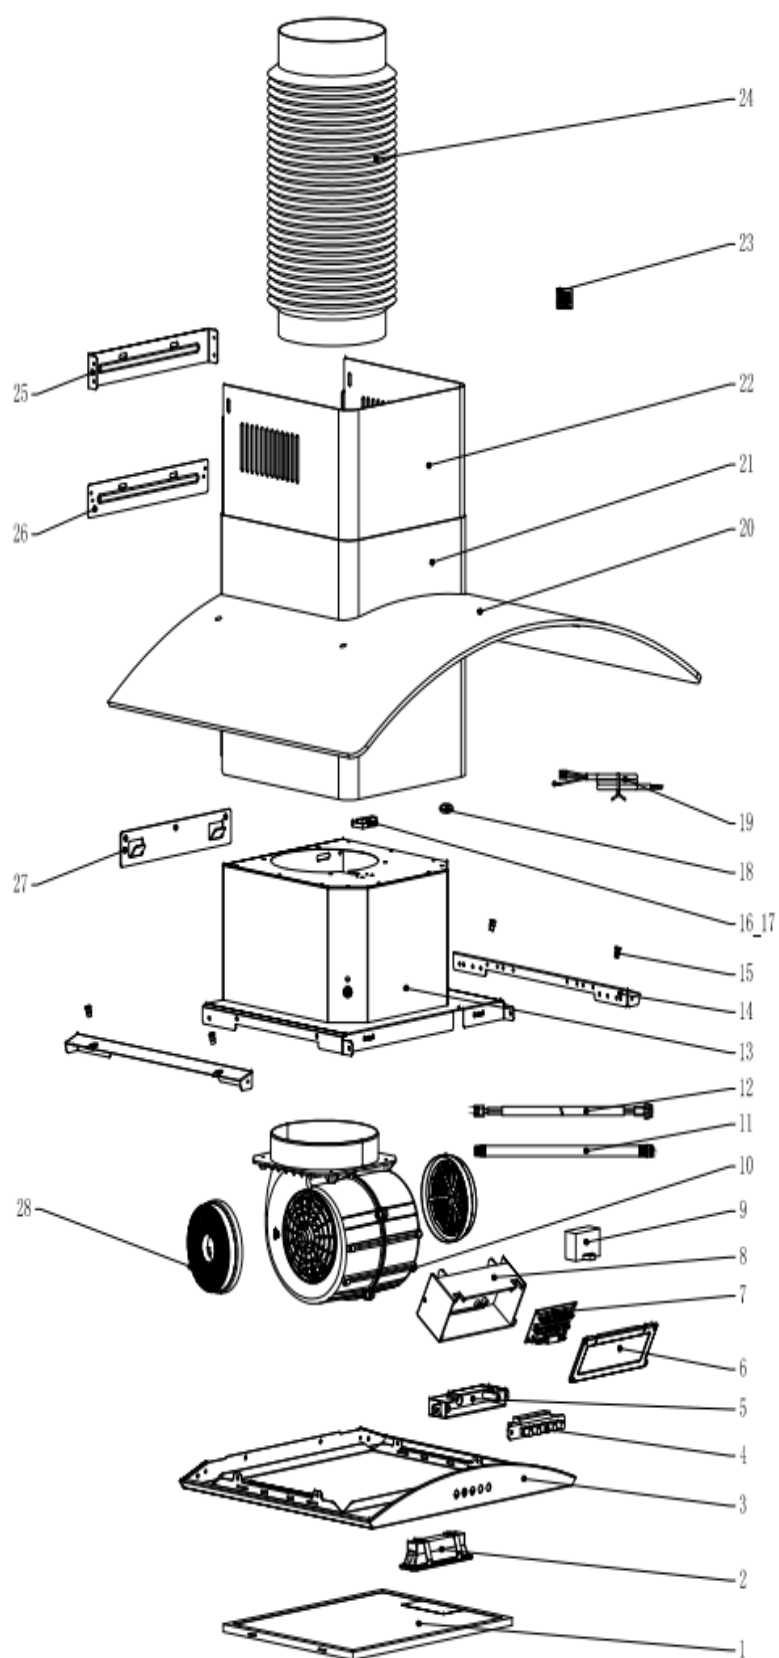

Parts List

ID No	Part Number	Part Description	Qty
28	1.11.01.0005	CARBON FILTER	1 set
27	1.09.01.0003	HOOK PLATE	1
26	2.01.06.0297	OUTER CHIMNEY BRACKET	1
25	2.01.06.0298	INNER CHIMNEY BRACKET	1
24	1.04.07.0001	PLASTIC PIPE	1
23	2.03.13.0001	SCREW BAG	1
22	1.08.11.0157	INNER CHIMNEY	1
21	1.08.11.0156	OUTER CHIMNEY	1
20	1.05.01.0635	GLASS	1
19	2.03.09.0054	POWER CORD ASSEMBLY (WITHOUT PLUG)	1
18	1.04.14.0004	NOT AVAILABLE	1
17	1.04.12.0005	CRIMPING BOARD	1
16	1.04.12.0004	CRIMPING SEAT	1
15	1.07.02.0008	SCREW	4
14	2.01.05.0024	GLASS CONNECT BOARD	2
13	2.03.01.0672	CASING ASSEMBLY	1
12	1.02.10.0045	LAMP WIRE	1
11	1.02.07.0007	SWITCH WIRE	1
10	2.03.06.0133	M7 MOTOR ASSEMBLY	1
9	2.03.10.0012	CAPACITOR	1
8	1.04.03.0021	ELECTRICAL BOX	1
7	1.01.01.0102	PLUG-IN CIRCUIT CARD	2
6	1.04.03.0022	ELECTRICAL BOX COVER	2
5	1.04.04.0024	PUSH SWITCH BOX	1
4	1.01.07.0001	PUSH SWITCH	1
3	1.08.13.0031	PANEL ASSEMBLY	1
2	1.01.03.0045	RECTANGLE LED LAMP	2
1	1.03.12.0079	ALUMINUM FILTER	2