


Cooker Hood  
Model Number  
UBSDCH902BK  
Parts Manual

# Exploded Drawing

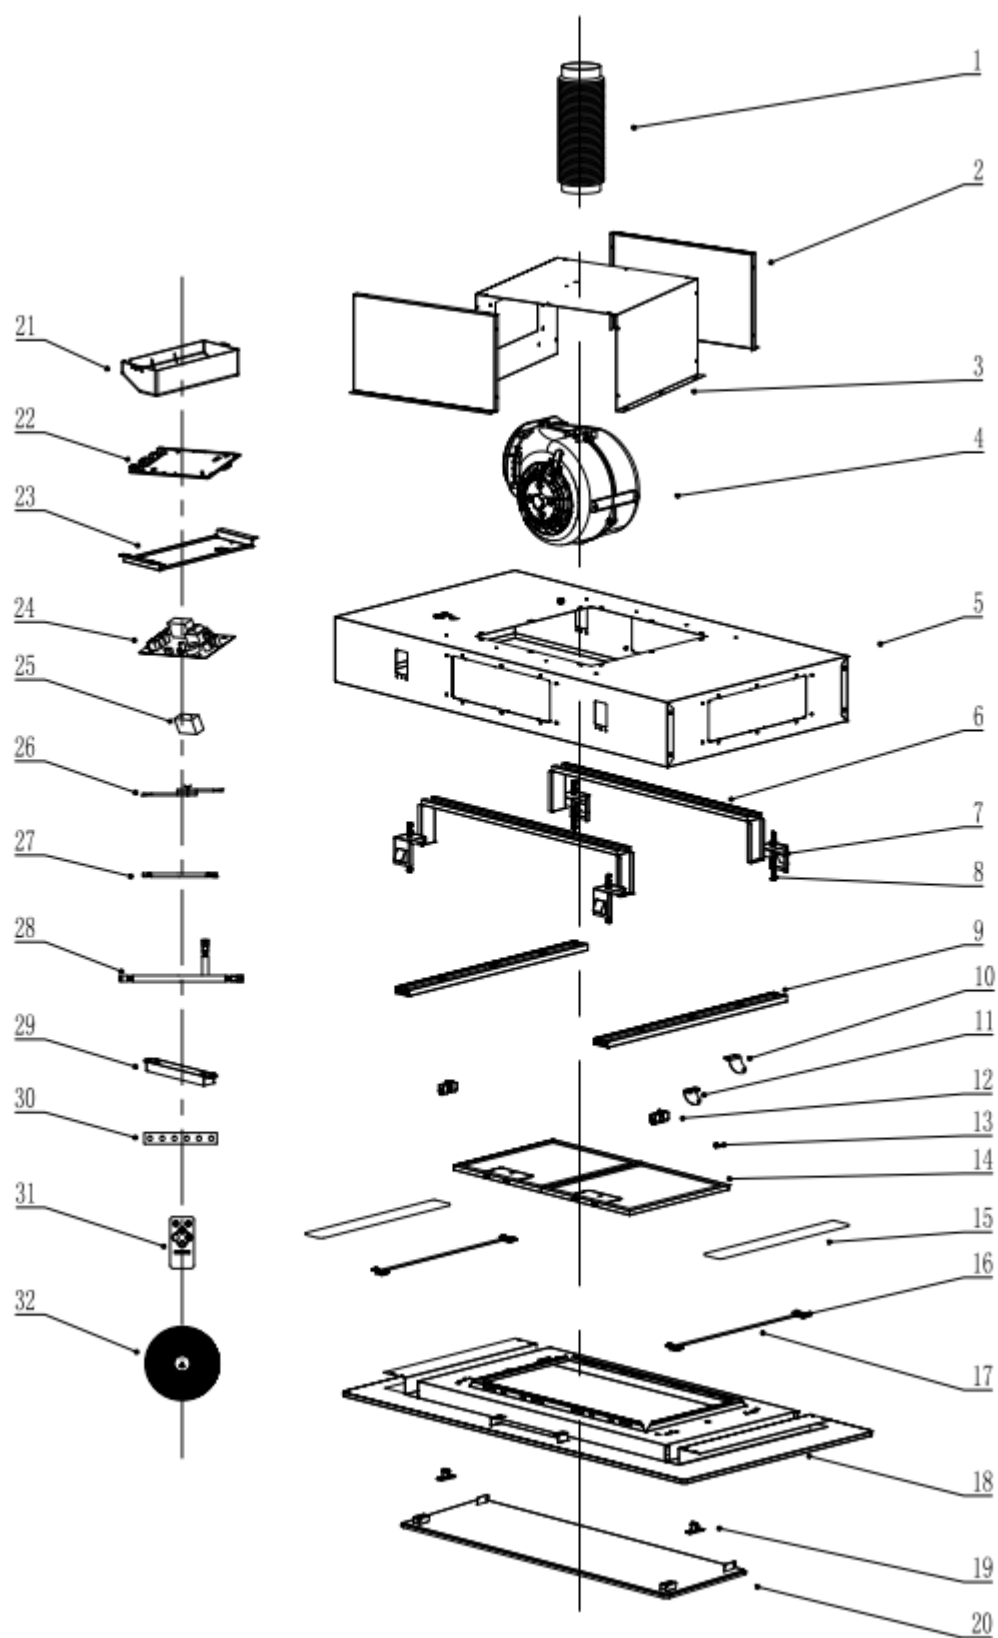

## Parts List

ID No	Part Number	Part Description	QTY
32	1.11.01.0004	CARBON FILTER FOR OPTIONAL	2
31	1.01.06.0003	REMOTE CONTROL	1
30	1.01.01.0075	SWITCH BOARD	1
29	1.04.04.0049	SWITCH BOX	1
28	1.02.10.0020	LIGHT WIRE	1
27	1.02.08.0001	SWITCH WIRE	1
26	2.03.09.0054	POWER CORD ASSEMBLY (WITHOUT PLUG)	1
25	1.01.02.0013	CAPACITOR	1
24	1.01.01.0046	PCB BOARD ASSEMBLY	1
23	2.01.06.0047	POWER BOX BRACKET	1
22	1.04.03.0001	POWER BOX BASE	1
21	1.04.03.0004	POWER BOX COVER	1
20	2.03.03.0051	SMALL GLASS ASSEMBLY	1
19	1.03.14.0007	LOWER CARD BUCKLE	2
18	2.03.03.0234	GLASS ASSEMBLY	1
17	1.01.03.0046	LED STRIP LIGHT	2
16	1.04.12.0013	STRIP LIGHT PRESSPLATE	4
15	1.04.20.0010	ASTIGMATISM PLATE	2
14	1.03.12.0072	ALUMINUM FILTER	2
13	1.07.01.0054	STEP SCREW	2
12	1.03.14.0006	UPPER CARD BUCKLE	2
11	2.01.06.0280	LEFT ROTATE BRACKET	1
10	2.01.06.0281	RIGHT ROTATE BRACKET	1
9	2.01.06.0315	SUPPORT STRIP	2
8	1.07.01.0064	FIX SCREW	4
7	2.01.06.0314	FIX BOARD	4
6	2.01.06.0032	REINFORCEMENT BAR	2
5	2.01.14.0129	REAR HOUSING BOARD	1
4	2.03.06.0026	M15 MOTOR ASSEMBLY	1
3	2.01.02.0031	CASING HOARDING	1
2	2.01.03.0086	FRONT BOARD	2
1	1.04.07.0001	FLEXIBLE PIPE FOR OPTIONAL	1