


# **CUL57PGSS**

## **Oven Instruction Manual**

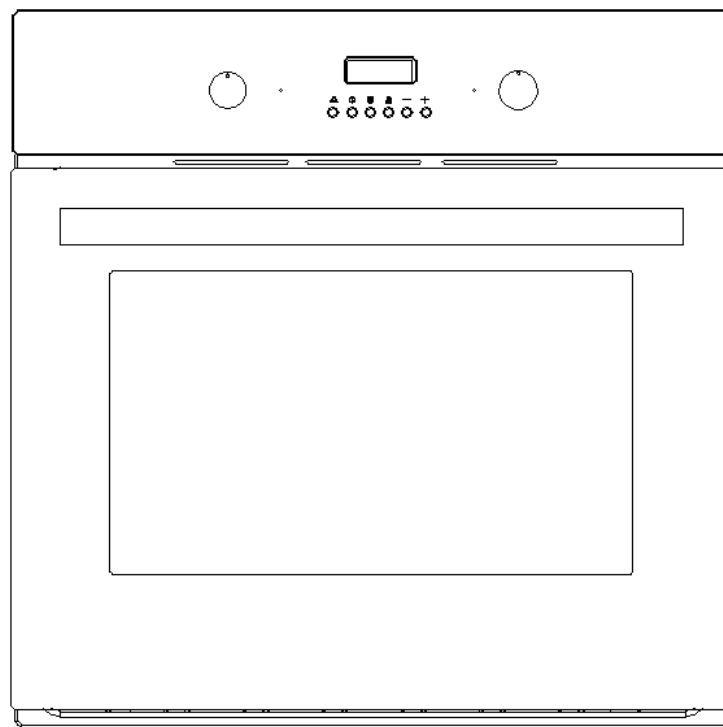

## Content

1.....	Important safety information
2.....	Installation
3.....	Prior to start up of the appliance
4.....	Selecting a cooking function and temperature
5.....	Troubleshooting
6.....	Maintenance and cleaning
7.....	Environmental note
8.....	Transportation

## **Important safety information**

This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

### Warning:

- The appliance and its accessible parts become hot during use. Care

should be taken to avoid touching heating elements.

- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- A steam cleaner is not to be used.
- Accessible parts may become hot during use. Young children should be kept well away when in use.
- Do not use harsh abrasive cleaners or metal scrapers to clean the oven door glass as this can scratch the surface, which may result in the oven glass shattering.
- Do not use abrasive products to clean the glass door panel to avoid scratching it. Otherwise, severe failure might happen to the appliance.
- The appliance must not be installed behind a decorative door in order to avoid overheating.



**Warning!**

### Danger of explosion!

- Liquids and other foods must not be heated in sealed containers since they are liable to explode.

## Operation:



**Warning! Danger of fire!**

- Do not allow paper or cloth to come in contact with any heating element.
- Never store or use corrosive chemicals, vapors, flammables or non food products in or near oven. It is specifically designed for use when heating or cooking food. The use of corrosive chemicals in heating or cleaning will damage the appliance and could result in injury
- If food inside an oven should ignite, keep door closed. Switch off the oven and disconnect from supply power.
- Exercise caution when opening the door. Standing to the side, open the door slowly and slightly to let hot air and/or steam escape. Keep your face clear of the opening and make sure there are no children or pets near the oven. After the release of hot air and/or steam, proceed with your cooking. Keep doors closed at all time unless necessary for cooking or cleaning purposes.
- Only use utensils that are suitable for use with ovens.

- If smoke is observed, switch off the oven and keep the door closed in order to stifle any flames.
- Do not allow any accessories or electric cables to contact the hot parts of the appliance.



**Warning!**

## Hot surfaces! Risk of burns!

- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- **Warning!** Accessible parts may become hot during use. Young children should be kept away.
- Never move racks or pans when they are hot. Wait until they cool.

## Safety advices:



### IMPORTANT!

Always switch off the electricity supply at the mains during installation and maintenance.

## General Information

- This appliance is designed for domestic household use and can be built into a standard kitchen cabinet or housing unit.
- Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- The appliance surfaces will become hot during use and retain heat after operation.
- Any damage caused by the non-compliance of temperature tolerance of oven during installation or by the too close distance between the furniture and the oven will be borne by the owner.
- This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety .

## Installation

- The oven must be installed in accordance with the installation instructions and all measurements must be followed.
- All installation work must be carried out by a competent person or qualified electrician.

## Children

- Please dispose of the packaging material carefully. Packaging material can be dangerous to children.
- Make sure to keep children away from the appliance, children should be supervised to ensure that they do not play with the appliance. It might be dangerous to allow the children to touch the appliance.

## General Safety

- Do not place heavy objects on the oven door or lean them on the oven door when it is open, as it may cause damages to the oven door hinges.
- Do not place those baked hot oil or fat unattended on unattended areas, as it will be a fire risk.
- Do not place pans or baking trays directly on the base of the oven cavity.
- Do not allow cable or plug to come into contact with the heating areas of appliance.
- Do not install the appliance next to curtains or soft furnishings.
- Do not attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.

## Electrical safety

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance must be placed in such a way, that the power supply is accessible at all times.
- Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.
- Never use a damaged appliance! Disconnect the appliance from the power source and contact your supplier if it is damaged.
- Danger of electric shock! Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
- To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.
- Do not open the appliance casing under any circumstances. Do not insert any foreign objects into the inside of the casing.
- Never use accessories which are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level, stable, clean and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, dripping and splashing water.

- Do not place objects with open flames, e.g. candles, on top of or beside the appliance.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- The fixed wiring for applicant shall have an all-pole disconnection device.



## Safety:

- Attention, the glass is extremely fragile. Always wear gloves when handling.
- For your safety, this product is made of tempered glass. This type of glass is highly resistant but has the feature to retain the "memory" of shocks.
- Therefore, it should handle the product with the greatest care to avoid shocks and twists, especially during installation.
- Avoid installing this type of product in areas where it would be highly exposed to shocks.
- Do not let children play with the product.
- Do not stick adhesive film on the glass surface. In case of breakage, it would generate large pieces that could be dangerous

## Electrical connection



### Danger of electric shock!

- Any electrical installation must be carried out by an authorised professional.
- All fittings must be installed by a competent person in accordance with local regulations. If in doubt, consult a qualified electrician.

- **I**mportant! Always switch off the electricity supply at the mains or remove the plug from its mains socket during installation and maintenance. If the appliance is hard wired we recommend that the fuse is withdrawn or circuit breaker switched off at the distribution board whilst work is in progress.
- **T**his product must be earthed – if no earth feed wire is available, consult an electrician.
- **M**eans for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. This oven can either be plugged into an appropriate socket or if hard wired an appropriate switched fused connection unit should be used.
- **N**ote! A switched fused connection unit having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- **I**f the oven is to be hard wired, connect the incoming positive, neutral and earth cables to the terminals of the switched fused connection unit. Ensure connections are tight.
- **T**he spur outlet or mains socket must still be accessible even when your oven is located in its housing to enable the appliance to be disconnected from the mains supply.
- **A**lways disconnect the power supply prior to cleaning the appliance. If the switched fused connection unit or mains socket is difficult to reach, shut off the power supply by using the corresponding circuit breaker at the distribution board.
- **C**lean the appliance thoroughly before first use. The oven should be cleaned regularly and any food deposits removed.
- **N**ever clean the oven surfaces by steam cleaning.
- **T**he oven cavity should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- **A**ny stains that may appear on the bottom of the oven will have originated from food splashes or spilt food, these splashes occur during the cooking process. These could possibly be a result of the food being cooked at an excessively high temperature or being placed in cookware that is too small.
- **Y**ou should select a cooking temperature and function that is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and that you use the drip tray where appropriate.

## Cleaning

# Installation

## Electrical connection

Before connecting the appliance, make sure that the supply voltage marked on the Rating Plate corresponds with your mains supply voltage.

**WARNING: THIS APPLIANCE MUST BE EARTHED.**

- This model of oven can be plugged into the mains sockets or hard wired. If the oven is to be hard wired it must be connected to a suitable disconnection switch is to be


incorporated in the permanent wiring. The switch is to be of approved type and positioned in accordance with local wiring and electrical rules and specifications. The switch must have 3 mm air gap contact separation in all poles, in the active (phase) conductor of the fixed wiring.




- To connect the oven power cord, loosen and remove the cover on the terminal block, in order to gain access to the contacts inside. Make the connection, securing the cord in place with the cable clamp provided and then immediately close the terminal block cover again.
- If you have to change the oven power cord, the earthing (yellow/green) conductor must always be 10 mm longer than the line conductors.
- The installation must include 1.5m of free cable within the enclosure for ease of installation and future maintenance.
- The mains cable must not touch any hot metal.
- Care must be taken to ensure that the temperature of the mains supply cable does not exceed 50°C.
- If the mains supply cable is damaged, then it must be replaced by an appropriate replacement which can be obtained from Spares Department.

## Installing the oven into the kitchen cabinet

- The kitchen area should be dry and aired and equipped with efficient ventilation. When installing the oven, easy access to all control elements should be ensured.
- **Installation method 1:**

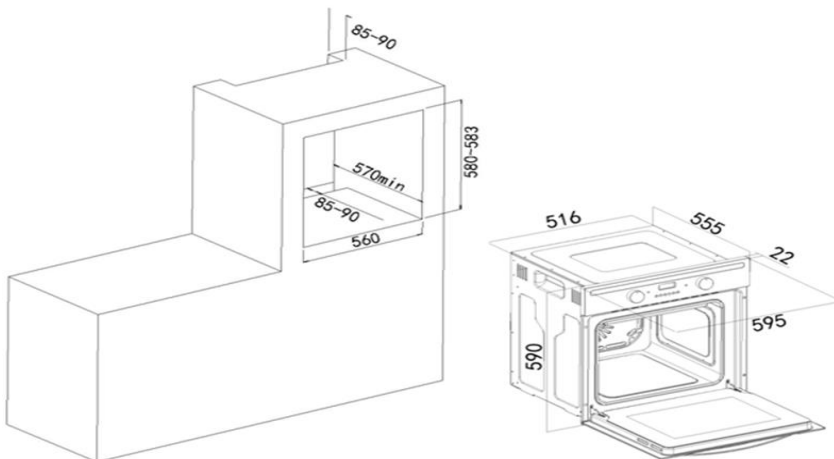



- **Installation method 2:**

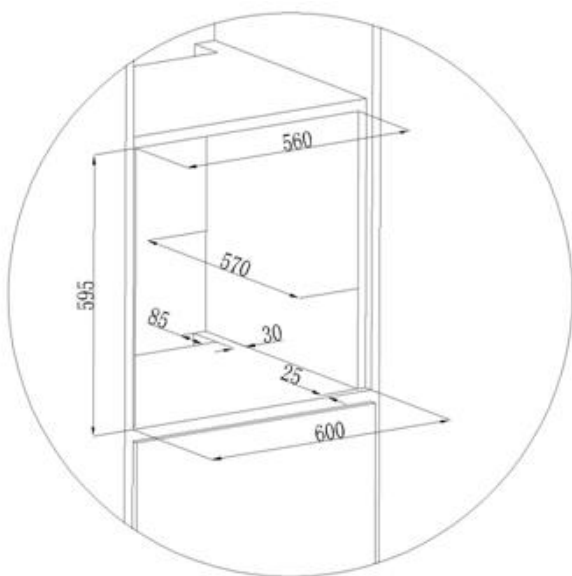

## Positioning the appliance

- Ensure that the aperture that you will be fitting the oven into is of the size given in the above diagram.
- The oven must be fitted into an oven housing with the ventilation cut-outs shown in the “Ventilation requirements” section on the next page.
- Ensure that the rear panel of the furniture housing unit has been removed.
- Ensure that the oven has been securely fixed into the housing unit. The fixing of the oven into the housing is made by using four screws. These should be screwed through the oven cabinet and into the housing unit.

## Ventilation requirements

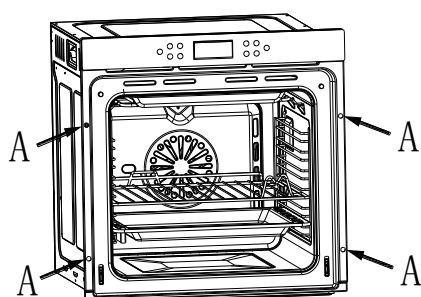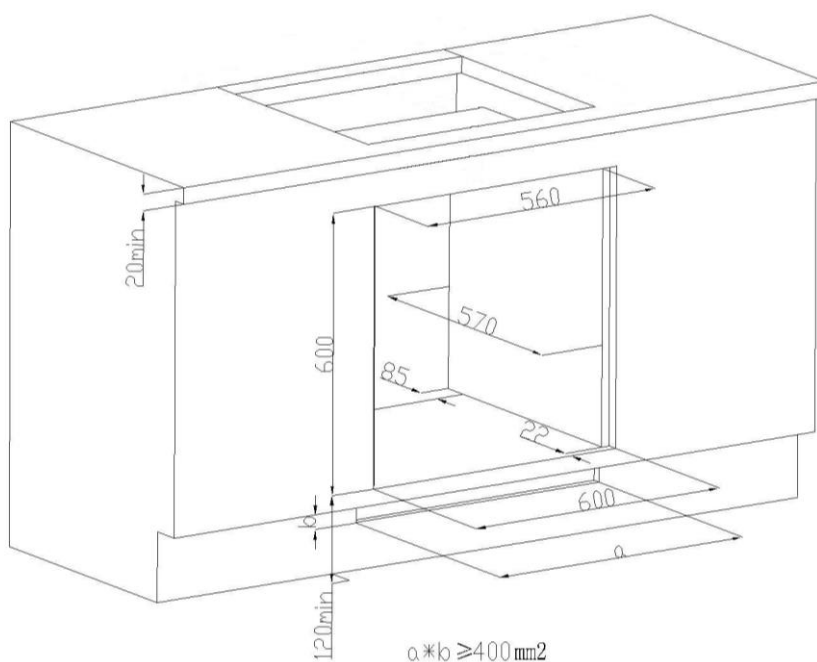

(Figure shows the ventilation and cut-out requirements for the installation of the appliance into a tall housing unit).




Ensure that the oven has been securely fixed into the housing unit. The fixing of the oven into the housing is made by using four screws. These should be screwed through the oven cabinet and into the housing unit.

## **Prior to start up of the appliance**

- Once this simple operation has been carried out the oven is ready to use for cooking.
- This appliance is exclusively for domestic use.
- Use the oven to cook food only.
- Before cooking, make sure all oven accessories that are not required are removed from the oven.
- Pre-heat the oven to the cooking temperature before using it.
- Place the cooking trays in the center of oven and leave space in between when using more than one, so that the air can circulate.
- Do not put oven trays on the base of the oven or cover it with aluminium foil. This will cause thermal accumulation. The cooking and roasting times will not coincide and the enamel may be damaged.
- Try to open the oven door as little as possible to see the food (the oven light remains on during cooking).
- Take care when opening the door to avoid contact with hot parts and steam.

## **A. Specifications**

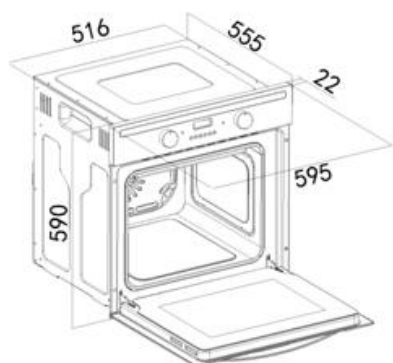

### **Dimensions**

Height: 590 mm

Width: 595 mm

Depth: 555 mm

### **Specifications**

- 4 functions
- Oven capacity: 51 litres
- Thermostatically controlled grill
- Cooling fan


### **Cooling fan**

A tangential cooling fan is fitted inside of this appliance, to make the internal temperature of

the oven stable and the external surface temperature lower. After the oven has been used the cooling fan will run on for a period of time, until the oven is sufficiently cooled.


## B. Control panel

Here, you will see an overview of the control panel. Depending on the appliance model, individual details may differ.

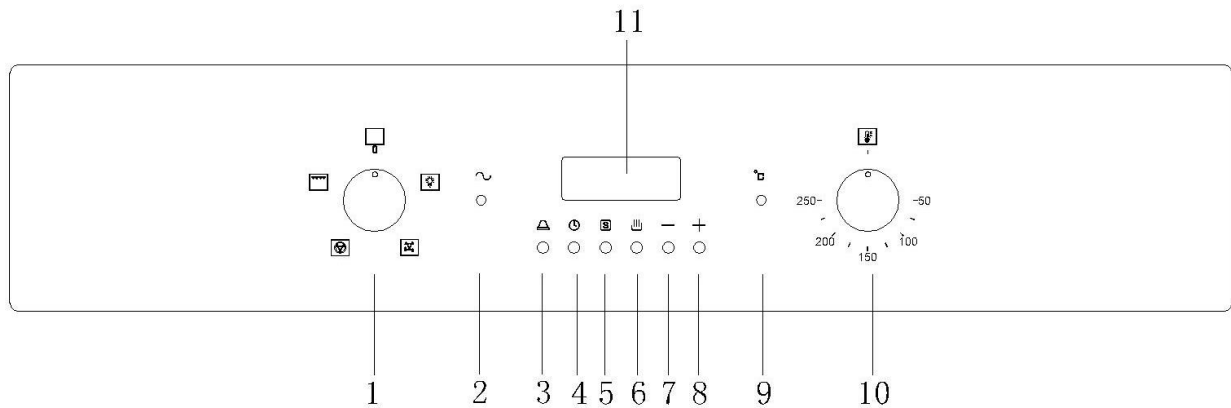

- 1) Oven function selector knob
- 2) Power lamp
- 3) Alarm button (K1 button)
- 4) Cooking time setting button (K2 button)
- 5) Cooking end time setting button (K3 button)
- 6) System time setting button (K4 button)
- 7) Decrease button/ring selection button (K5 button)
- 8) Increase button (K6 button)
- 9) Heating lamp
- 10) Thermostat control knob
- 11) Digital tube displayer

### Oven programmer/timer display

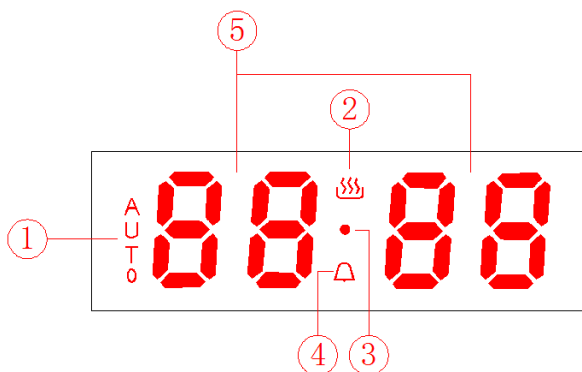

- ① "Auto" function icon
- ② "Oven in use" icon
- ③ Second icon
- ④ Alarm icon
- ⑤ Display the time, can display system time, clock and cooking time

## C. Setting and using the oven programmer/timer

### 1. Timer working status

Switching the timer status


The timer has 3 status, they are standby, select function and working status.

**Stand-by status:** After connected to the power supply, the display screen will show system time, the second icon flashes, it is the status before entering cooking function; If exceeds 10 seconds without any operation under standby mode, the display brightness automatically reduces, press any button to recover to the original brightness.

**Select function:** In standby status, press K4 or simultaneously press K2 and K3 enter to the selection function status, the display screen will show system time, it is the status when oven in use icon and second icon keep bright.

**Working status:** After completed setting any one of the system time, clock, cooking time or cooking end time, the display screen will show system time, and it is the status when corresponding working icon keep bright.

Status switching diagram refer to below:

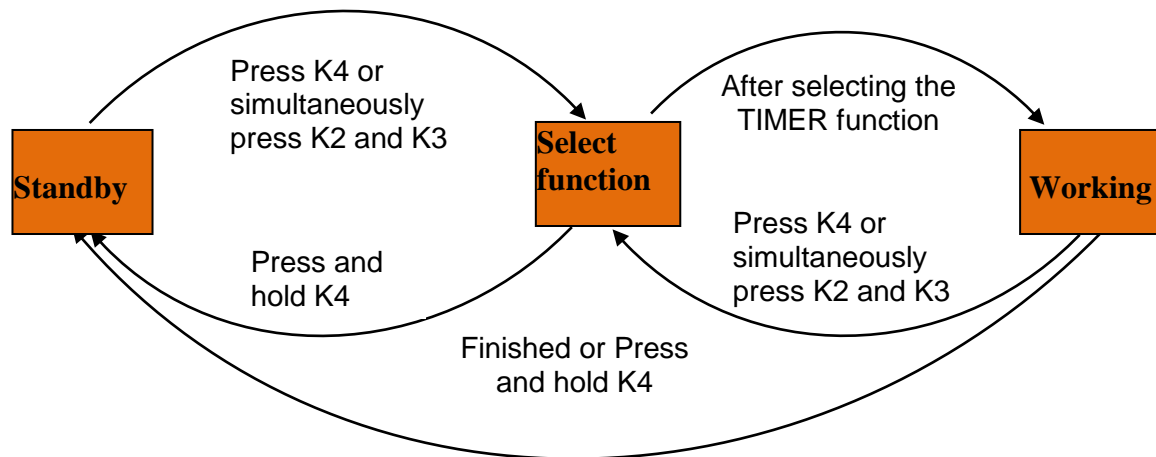


**Status switching diagram**

## 2. Timer function mode switching

In Select function status, you can select timer function mode by button “K1” “K2” “K3” “K4”.

The operation flow and corresponding functional sequence are as followings:

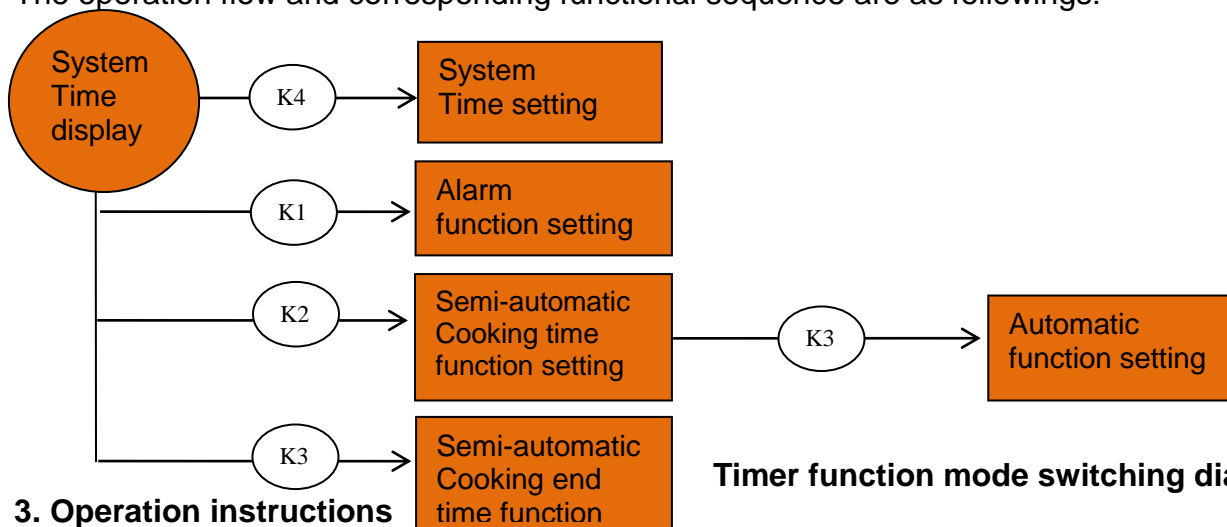


**Timer function mode switching diagram**

## 3. Operation instructions

### 3.1 Power on

For the first time, the buzzer “beep” for once to show that the timer enters into the standby

state. The clock shows the system time and starts the timing(The default system time as 0.00). The second icon “●” is flashing,1 second 1 time, the effect is shown in Pic 5.You can press “K5” to choose 3 kinds of ring tone, The default is the second ring tone. Whenever user wants to adjust the ring tone again, press “K5”.

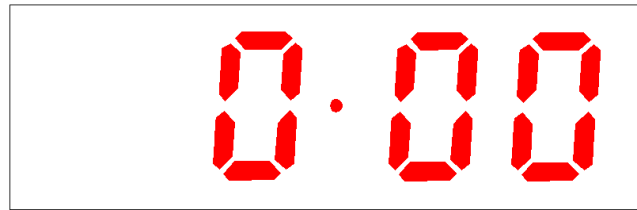

Pic 5 Power-on default clock diagram (standby state)

### 3.2 Start up

In the standby state, press the “K4” button, the oven in use icon“🔥” is always bright, the second icon “●” flashes(Pic 6). There is a 5-second lapse for acceptance during which no button must be touched, timer will enter the select function state. The second icon“●” will turn to always bright (Pic 7).

In the standby state, Simultaneously press “K2” and “K3” button can also choose to enter the select function status. the oven in use icon“🔥” and second icon“●” are always bright (Pic 7).



Pic 6 Time setting state diagram  
(second icon flashes)



Pic 7 Select function state diagram  
(second icon always bright)

In the select function state or working state, press and hold the “K4” button for 3 seconds, the timer returns to the standby state.

### 3.3 System time setting function

In the standby state ,press the “K4” button to turn on the oven and enter the system time setting state. At this time, the oven in use icon“🔥” and the system time are always on, and the second icon “●” flashes (as shown in Pic 6). You can press “K6” and “K5” to set the clock. If the clock setting operation is not performed within 5 seconds, the current time is automatically confirmed, and the second icon “●” stops flashing and turns to the constant light display.

In the select function state, press the “K4” button, the second icon “●” flashes, and the

system time can be adjusted. Set the clock by pressing "K6" and "K5". After the setting is completed, wait for 5 seconds to automatically determine the set time. The second icon "●" stops flashing and turns to the constant light display. The display effect of the setting is as shown in Pic 8 (set an hour).

**Note:**

1. System time setting range: 0:00 to 23:59.
2. When setting the time of each function of the timer, short press or long press "K6" and "K5" to set the time. Short press means that each press of the button will increase by 1 minute or Decrease by 1 minute, long press to quickly increase the time or decrease the time in units of 1 minute, so it can set the time quickly.




Pic 8 System time setting completion diagram

### 3.4 Alarm setting function

In the select function state, press "K1", the alarm icon "🔔" flashes, and the display shows the alarm time (Pic 9), The default setting "0:00" is displayed for the first setting. Press "K6" and "K5" to set the alarm time. (Pic 10, eg: assuming 10 minutes is set).



Pic 9 Alarm setting initial state  
(alarm icon flashes)

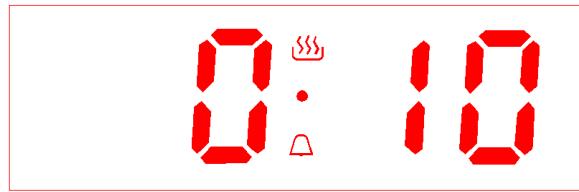


Pic 10 Alarm setting completion status  
(alarm icon flashes)

When the time setting is completed, wait for 5S to automatically confirm this time. The alarm icon "🔔" stops flashing and turns to always bright. The display shows the system time. (Pic 11)

At the end of the time, the alarm icon "🔔" (Pic 12) will flash and an intermittent sound signal will be triggered, which can be interrupted by pressing any button. the alarm icon "🔔" turns off (Pic 13). If it is not stopped, it will do so automatically after 5 minutes.



Pic 11 Alarm clock working status diagram  
(alarm clock icon always bright)

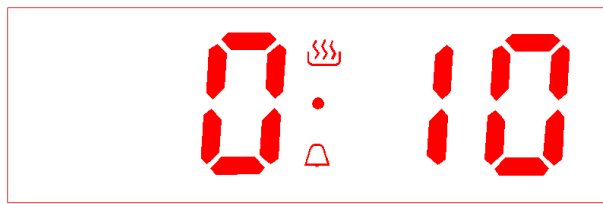

Pic 12 At the end of alarm clock time  
(alarm clock icon flickering)



Pic 13 Cancel alarm or After alarm clock over

#### Note:

1. After the alarm time setting is completed, if you need to query the remaining alarm time or reset the alarm time after entering the working state, you can press the alarm button "K1" to query or reset the alarm time in the working state. To cancel, press "K1" and then "K5" until the alarm timer becomes zero.
2. Alarm time setting range: 0:00 to 23:59.
3. The alarm does not control any of the oven functions.
4. Once set the alarm, if the work state change to the standby state, the alarm will also continue to run.

### 3.5 Cooking time setting function

In the select function state, press "K2", the icon "AUTO" and icon "☹" will flash, and the display will show the cooking time (the default setting is "0:00" for the first time), the cooking time and the second icon "●" are always bright (Pic 14). Set the cooking time by press "K6" and "K5". (pic 15, eg: assuming 30 minutes is set).





Pic 14 Cooking time setting initial status



Pic 15 Cooking time setting completion status

When the cooking time setting is completed, wait for 5S to automatically confirm this time.

The icon "AUTO" and icon "☹" stop flashing and turn to always bright. The display shows the system time. (Pic 16)


At the end of the set time, The display shows the system time, the icon “” goes out, the second icon “” and the automatic function icon “AUTO” flash(Pic 17), the cooking will be interrupted and the intermittent sound signal will be heard. Cancel it as indicated above. the icon “AUTO” turn off and enter to standby mode (Pic 18).



Pic 16 Cooking time working status  
(All the icons always bright)



Pic 17 Cooking time over diagram  
(All the icons flickering)

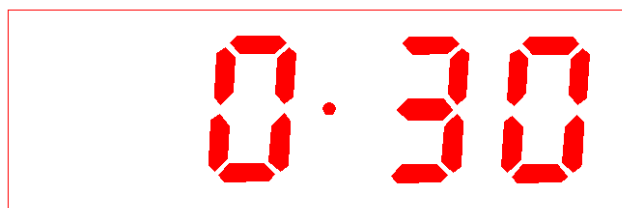



Pic 18 Cancel “AUTO” or After cooking time

#### Note:

1. After the cooking time setting is completed, if you need to query the previously set cooking time or reset the cooking time after entering the working state, you can press the cooking time setting button “K2” to query or reset the cooking time in the working state.
2. Cooking time setting range: 0:00 to 10:00.
3. The cooking time is not set after power on, the system will automatically shut down after 10 hours of operation, no buzzer reminder function.

### 3.6 Cooking end time setting function


In the select function state, press “K3”, the icon “AUTO” and icon “” will flash, and the display will show the cooking end time (the default display shows the current system time for the first time), the cooking end time and the second icon “” are always bright(Pic 19), Set the cooking end time by press "K6" and "K5". (Pic 20, eg:assuming the setup end time is 0:30).





Pic 19 Cooking end time setting  
initial status



Pic 20 Cooking end time setting  
completion status

When the cooking end time setting is completed, wait for 5 seconds to automatically confirm this time. The automatic function icon “AUTO” and the oven in use icon “” stop flashing and turn to always bright. The display shows the system time( Pic 21).

When the cooking end time is reached (assuming the end time is 0:30), the display shows the system time, the oven in use icon “” goes out, the second icon “” and the automatic function icon “AUTO” flashing(Pic 22). the cooking will stop and the intermittent sound signal will be heard. Cancel it as indicated above. the icon “AUTO” turn off and enter to standby mode (Pic 23).



Pic 21 Cooking end time working status  
(All the icons are always on)



Pic 22 Cooking finished diagram  
(All the icons flashing)



Pic 23 Cancel “AUTO” or After cooking finished


#### Note:


1. After the cooking end time setting is completed, if you need to query the previously set cooking end time or reset the cooking end time after entering the working state, you can press the cooking end time setting button “K3” to query or reset cooking end time in the working state.
2. The cooking end time is more than the current system time plus cooking time, but less than 23:59.

### 3.7 Cooking start time setting function (reservation function)


Select the required temperature and function using the thermostat controls and selector.

In the select function state, the cooking time by pressing “K2” and selecting the required time with “K6” and “K5”.( Refer to section 3.5;) as shown in the Pic 24.


Then set the end of the cooking time by pressing “K3” and selecting the required time with “K6” and “K5” ( Refer to section 3.6) ,icon “AUTO” is flashing and icon “” is always bright , as shown in the Pic 25.

After these operations, The display shows the system time and icon “” is always bright, The automatic function icon “AUTO” stops flashing and turns to always bright. showing that the oven has been programmed. as shown in the Pic 26.



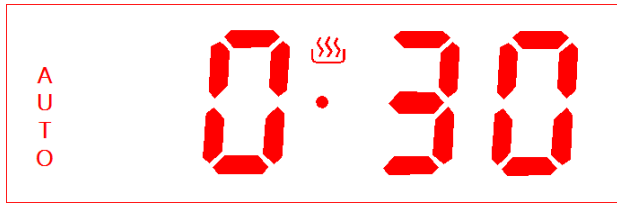

Pic 24 Cooking time setting  
completion diagram

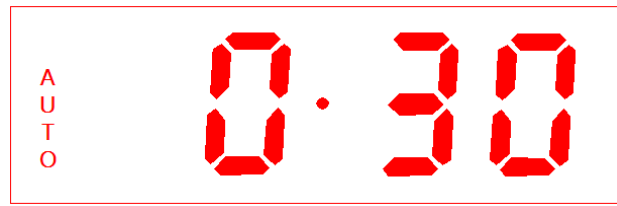

Pic 25 Reservation function setting  
initial status



Pic 26 Reservation function setting completion status

Practical example:

We want to cook for 45 minutes and for the cooking to end at 2 p.m.

1. We press "K2" and select 0.45 by using "K6" and "K5"
2. We press "K3" and select 14.00 with "K6" and "K5"
3. After these operations, the current time will reappear on the display and the indicators will show that our programming has been memorised.
4. At 1.15 p.m. (2 p.m. less 45 minutes), the oven will start automatically.
5. At 2 p.m. the cooking will stop automatically and the intermittent sound signal will be heard.
6. We can switch it off by pressing any button.


### 3.8 Cancelling the "AUTO" function mode

1. During the semi-automatic function mode setting process, press the "K2" button and the "K3" button at the same time to cancel the semi-automatic function mode setting and return to the select function status.
2. In the process of entering the automatic function mode setting, press the "K2" button and the "K3" button at the same time to cancel the automatic function mode setting and return to the select function status.
3. After the semi-automatic or fully automatic functions have been set, press the "K2" and "K3" keys simultaneously to cancel and return to the select function status.

# Selecting a cooking function and temperature

## Using your oven

Selecting an oven function

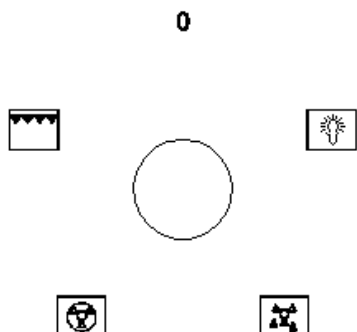

The oven function selector knob should be used to select the particular mode of cooking that you require. The appliance will utilise different elements within the oven cavity, depending on the oven function that you select. When a function is selected, the power indicator light will come on.

## Four functions mechanical-timer model & the function mode

You have 4 functions for choices. Select cooking function according to different food.



**OVEN LIGHT:** This mode switches on the oven light and other electric devices do not work.



**DEFROST:** The fan runs without heat to reduce the defrosting time of frozen foods. The time required to defrost the food will depend on the room temperature, the quantity and type of food.




**FAN OVEN:** This method of cooking uses the circular element whilst the heat is distributed by the fan. This results in a faster and more economical cooking process. The fan oven allows food to be cooked simultaneously on different shelves, preventing the transmission of smells and tastes from one dish onto another.



**FULL GRILL:** This method of cooking utilises the inner and outer parts of the top element, which directs heat downwards onto the food. This function is suitable for grilling medium or large portions of sausages, bacon, steaks, fish etc.


## Thermostat control knob

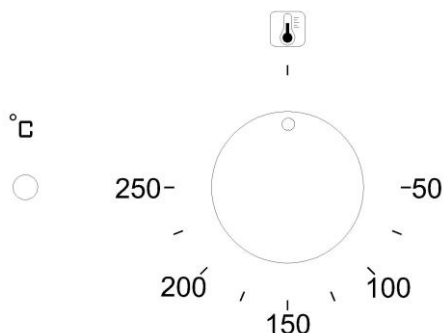

The oven thermostat control knob sets the required temperature of the oven. It is possible to regulate the temperature within a range of 50 - 250°C.

Turn the control knob clockwise.

## Oven operating light

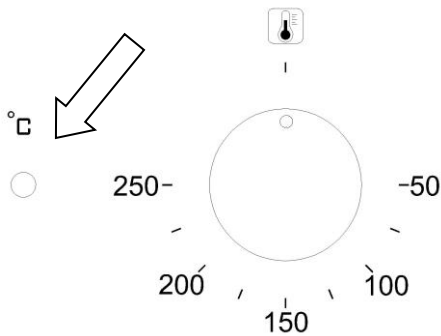

This light will come on to indicate that the oven's heating elements are in operation. The light will turn off when the temperature set on the thermostat control knob has been reached. It will cycle on and off throughout the cooking time.

You should not place food inside the cavity, until the correct cooking temperature has been reached.

## Cooking guidelines

- Please refer to the information given on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, temperatures and times can be varied to suit personal preference.
- If you are using the fan oven function, then you should follow the information given on the food packaging for this particular mode of cooking.
- Make sure that frozen foods are thoroughly thawed before cooking, unless the instructions on the food packaging advise that you can “cook from frozen”.
- You should pre-heat the oven and not place food inside of it until the oven operating light has gone off. You can choose not to pre-heat when using the fan oven mode; however you should extend the cooking time given on the food packaging by approximately ten minutes.
- Before cooking, check that any accessories that are not required are removed from the oven.
- Place cooking trays in the centre of the oven and leave gaps between the trays to allow air to circulate.
- Try to open the door as little as possible to view the dishes.
- The oven light will remain on during cooking.

## Warnings

- Keep the oven door closed when using any of the grill functions.
- Do not use aluminium foil to cover the grill pan or heat items wrapped in aluminium foil under the grill. The high reflectivity of the foil could potentially damage the grill element.
- You should also never line the base of your oven with aluminium foil.
- During cooking, never place pans or cookware directly onto the bottom of your oven. They should always be placed on the shelves provided.
- The grill heating element and other internal components of the oven becomes extremely hot during operation, avoid touching it inadvertently when handling the food which you are grilling.
- **Important:** Be careful when opening the door, to avoid contact with hot parts of the oven and steam.
- A steam cleaner is not to be used.
- **Warning:** Accessible parts may become hot during use. Young children should be kept well away when in use.
- Do not use harsh abrasive cleaners or metal scrapers to clean the oven door glass as this can scratch the surface, which may result in the oven glass shattering.

# **Troubleshooting**

<b>Fault</b>	<b>Cause</b>	<b>Solution</b>
Oven doesn't work.	Something at the connection is wrong, or it's not connected.	Turn off main supply and check if some wire has been disconnected.
	Power supply connections are loose.	Turn off main supply and check if some wire has been disconnected.
	Something at house installation is wrong.	Turn off main supply and check if some wire has been disconnected.
Oven light doesn't work.	Light bulb is blown.	Replace bulb as described in the manual in the section "Maintenance and cleaning".
Oven will not heat.	No function is selected.	Choose a cooking function turning the selector.
	No temperature is selected.	Choose a temperature turning the selector.


# **Maintenance and cleaning**

- The oven should be cleaned after every use. When cleaning the oven the lighting should be switched on to enable you to see the surfaces better.
- The oven chamber should only be washed with warm water and a small amount of washing-up liquid.
- After cleaning the oven chamber wipe it dry.
- Never clean the oven surfaces by steam cleaning.
- The oven cavity should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- Any stains that may appear on the bottom of the oven will have originated from food splashes or spilt food, these splashes occur during the cooking process. These could possibly be a result of the food being cooked at an excessively high temperature or being placed in cookware that is too small.
- You should select a cooking temperature and function that is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and that you use the drip tray where appropriate.
- Outer parts of the oven should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- If you use any form of oven cleaner on your appliance, then you must check with the manufacturer of the cleaner that it is suitable for use on your appliance.
- Any damage that is caused to the appliance by a cleaning product will not be fixed free of charge, even if the appliance is within the guarantee period.
- Do not use cleaning products containing abrasive materials for the cleaning and maintenance of the glass front panel.

## Replacement of the oven light bulb


In order to avoid the possibility of an electric shock ensure that the appliance is switched off before replacing the bulb.

- Set all control knobs to the position "0" and disconnect the mains plug, unscrew and wash the lamp cover and then wipe it dry.
- Take the light bulb from the socket, replace the bulb with a new one - a high temperature bulb (300°C) with the following parameters:
  - voltage 230V
  - power 25W
  - thread G9.
- Do not use any other type of bulb.
- Insert the bulb in, making sure it is properly inserted into the ceramic socket.
- Screw in the lamp cover.

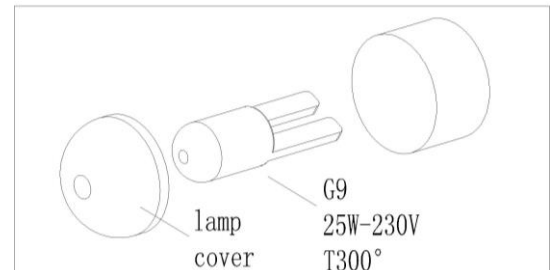

## Remove the door

- Full open the door.
- Lift the two mobile links of the hinges to position. (picture A)
- Close the door to the half-way position. Lift the door upwards and remove it by sliding the hinges outwards. Hold the door by the sides close to the hinges when doing this

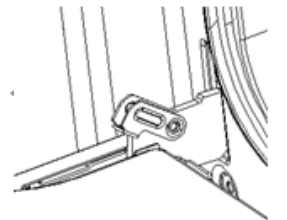


A

## Install the oven door

Accord to the opposite order of door disassembly

- When install oven door, make sure both hinge plug into opening mouth directly.
- Both sides of hinge rabbet must bite up each other.
- When open the door, spread down locking rod (picture B)

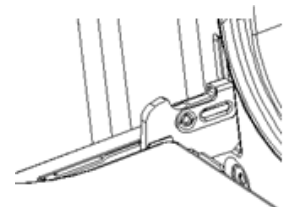


B



If the door drop accidentally or hinges shut up suddenly, do not push your hand in hinges. Please call your after-sell department.

## Removal of the internal glass panel

Unscrew and unfasten the bracket latch that is in the corner at the top of the door. Next take out the glass from the second blocking mechanism and remove. After cleaning, insert and block the glass panel, and screw in the blocking mechanism. As shown picture C.

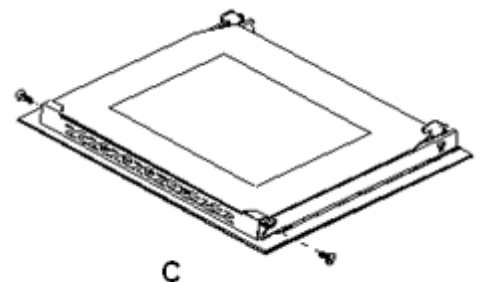

C

## Regular inspections

Besides keeping the cooker clean, you should:

1. Carry out periodic inspections of the control elements and cooking units of the cooker.  
After the guarantee has expired you should have a technical inspection of the cooker carried out at a service centre at least once every two years.
2. Fix any operational faults

Carry out periodical maintenance of the cooking units of the cooker.



### Caution!


All repairs and regulatory activities should be carried out by the appropriate service centre or by an appropriately authorized fitter.

## Environmental note

***Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person.***

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol  on the product or on the documents accompanying the product

indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office or local waste management office.

The packaging materials that we use are environmentally friendly and can be recycled. Please discard all packaging material with due regard for the environment.



# **Transportation**

Keep the original carton of the product and use this packaging if the item needs to be transported.

Follow the transport signs on the carton.

Tape cardboard or paper onto the inside face of the glass as it will be prone to damage from the trays. Use cardboard covers for the wire grill and trays in your oven. Also tape the oven's covers to the side walls.

If the original carton is unavailable, take measures to protect the external surfaces (glass and painted surfaces) of oven against possible blows, as well as the above.