


COOKE™
&LEWIS

Built under freezer

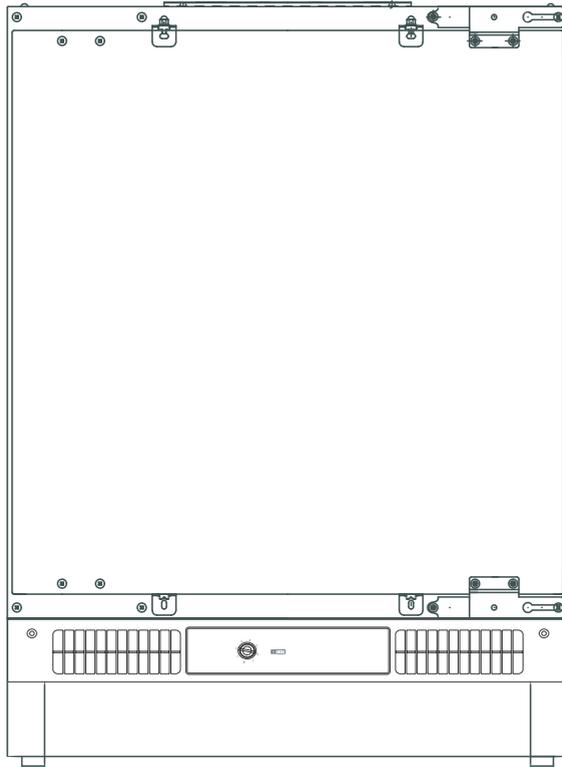

CLBFZ60-C&L-IM-EN-V01

CLBFZ60


Barcode: 5052931675692




Warning! Read the instructions before using the appliance.

Scope of delivery

Built under freezer CLBFZ60

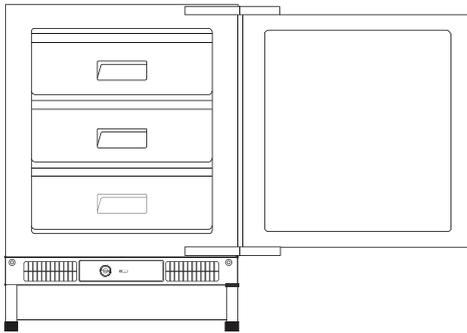

[A] x 1

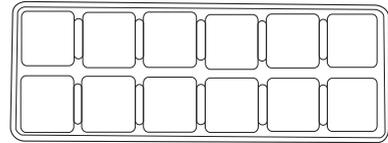

[B] x 1



[C] x 2



[D] x 2



[E] x 2



[F] x 2



[G] x 7



[H] x 2

[A] Main unit

[E] Flange screws

[B] Ice cube tray

[F] Nuts

[C] Mounting bracket

[G] Screws

[D] Mounting bracket

[H] Screws

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting **started...** 04

Safety	04
Your product	12
Before you start	13



In more **detail...** 14

Operation	14
Care and maintenance	19
Troubleshooting	20
Recycling and disposal	22
Technical and legal information	22
Guarantee	23
CE declaration of conformity	25
Installation	

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



All installation work must be carried out by a competent person or qualified electrician.

This appliance must be installed correctly by a qualified person, strictly following the manufacturer's instructions.

- Your appliance is only designed to be used indoors. This appliance is suitable for freezing fresh food, storing frozen food and making ice cubes. If it is used for any other purpose or it is not used correctly, then manufacturer will accept no liability for any damage that might be caused.
- Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices. For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.
- Altering the specification of the appliance must not be attempted for reasons of safety.

- ✓ Check the appliance for any signs of transport damage. If you notice any damage, do not connect your appliance to your mains supply and then contact your supplier.
- ✓ Your appliance contains R600a refrigerant, which is a natural gas that does not contain CFCs that can damage the environment. However it is a flammable substance, therefore care should be taken:
 - During the transportation and installation of the appliance, make sure that the refrigeration pipework does not get damaged.
 - If it does become damaged then sources of ignition and open flames should be avoided. Also the room that the appliance is situated in should be thoroughly ventilated.
- ✓ Do not place any objects on top of the appliance, as this may damage the table top.
- ✓ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- ✓ Packaging material should be kept away from children.
- ✓ If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- ✓ If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.
- ✓ **WARNING!** This appliance is intended to be used in a domestic household environment only! Commercial usage is not covered under the manufacturer's warranty.
- ✓ **WARNING!** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- ✓ **WARNING!** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ✓ **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear or obstruction.
- ✓ **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ✓ **WARNING!** Do not damage the refrigerant circuit.
- ✓ **WARNING!** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ✓ **WARNING!** The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
- ✓ **WARNING!** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- ✓ **WARNING!** Remove the protective transparent polythene film on the side panels and door of the appliance before installation.

- ☑ If the refrigerant circuit should be damaged:
 - Avoid opening flames and sources of ignition.
 - Thoroughly ventilate the room in which the appliance is situated. It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a shortcircuit, fire, and/or electric shock.
- ☑ The power cord must not be lengthened.
- ☑ A separate, special power socket is mandatory and reliable grounding is required.
- ☑ Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
- ☑ Make sure that you can access the main plug of the appliance.
- ☑ If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- ☑ You must not operate the appliance without the interior lighting lamp cover.
- ☑ The fridge is only applied with power supply of single phase alternating current of 220 - 240 V/50 Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake,

be sure to apply A.C. Automatic voltage regulator of more than 350 W to the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

- ☑ Do not store flammable gas or liquids in the appliance. There is a risk of an explosion.
- ☑ When unplugging always pull the plug from the mains socket, do not pull on the cable.
- ☑ Store pre-packed frozen food in accordance with the frozen food manufacture's instructions.
- ☑ The appliances manufactures storage recommendations should be strictly adhered to. Refer to relevant instructions for storage.
- ☑ Do not place arbonated or fizzy drinks in the freeze compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- ☑ Frozen food can cause frost burns if consumed straight from the freezer compartment.
- ☑ Do not place the appliance near hot sources or in direct sunlight.
- ☑ Do not expose the refrigerator into a cold or frozen environment, open air or rain.

- ✓ Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
- ✓ The appliance is intended for keeping food stuff and/or beverages in normal household as explained in this instructions booklet. The appliance is heavy. Care should be taken when moving it.
- ✓ Do not remove nor touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- ✓ Never use the base, drawers, doors... to stand on or as supports.
- ✓ Frozen food must not be refrozen once it has been thawed out.
- ✓ Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
- ✓ Never cover or obstruct the ventilation slats on the appliance.
- ✓ For electrical connection carefully, follow the instructions given in this manual.
- ✓ Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged.
- ✓ Report possible damages immediately to the place you bought it. In this case retain packing.

- ✓ It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- ✓ Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- ✓ Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.
- ✓ Make sure that the mains plug is accessible after the installation of the appliance.


Service

- ✓ Any electrical work required to do the serving of the appliance should be carried out by qualified electrician or competent person.
- ✓ This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
 - 1) If the appliance is Frost Free.
 - 2) If the appliance contains freezer compartment.

Your product

**Note!**

It is important that none of the drawers are overloaded. Overloading can break the drawers and reduce the appliances performance due to poor air circulation.

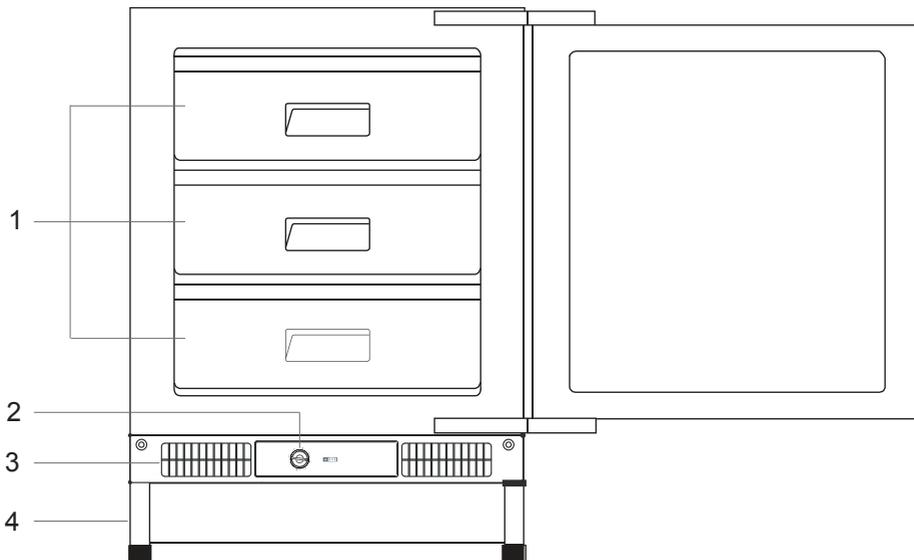

- | | | | |
|---|-------------------------|---|--------------------|
| 1 | Frozen food drawers | 3 | Ventilation grills |
| 2 | Thermostat control dial | 4 | Levelling feet |

 
Thermostat control dial

- Allows you to adjust the internal temperature of the appliance.

Frozen food drawers

- Pull out drawers for storage and easy access to frozen food.

You will need (not supplied)



We advise when installing this appliance two people are recommended.

Installation guide located at the end of the guidebook

26

Things to check before you start

- To avoid the risks that are always present when you use an electrical appliance, it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0344 800 1128 (UK) and 01 4475261 (Ireland).
- Check the package and make sure you have all of the parts listed.
- Clean the refrigerator before use (refer to Care and Maintenance section).
- Remove all packing material. This includes the foam base and all adhesive tapes holding the refrigerator accessories inside and outside.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

Product functions


Before switching on

- Make sure that it has been installed by a suitably qualified person, as per the information contained in installation instructions.
- After delivery, wait for 4 hours before connecting the appliance to the mains supply. This will allow any refrigerant gases that may have been disturbed during the transportation process to settle.
- The outside of the appliance and the removable accessories contained within it, should be cleaned with a solution of liquid detergent and water.
- The interior of the appliance should be cleaned with a solution of sodium bicarbonate dissolved in lukewarm water. The interior and accessories should be thoroughly dried, after the cleaning process has been completed.
- There can be an odour when first switch on the appliance. It will lessen as the appliance starts to cool.

Before first use

- Set the thermostat dial to <6> or <7> for 2 hours after switching on the appliance for the first time.
- When first switch on the appliance, the compressor will run continuously until the freezer reaches a sufficiently cool temperature.
- During this period of time, try not to open the door frequently
- Do not place large amounts of food into the appliance either.
- If the unit is switched off or unplugged, allow at least 5 minutes before restarting the appliance.

Switching on the appliance and setting the thermostat

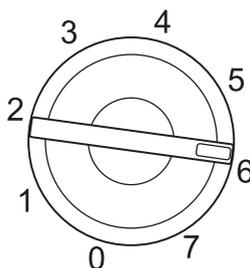

Switch on your appliance by connecting it to the mains supply and setting the thermostat. The thermostat control dial is located at the bottom of the appliance.

Product functions

- The thermostat automatically regulates the temperature inside the freezer, depending on what number you have turned the thermostat control dial to:

Position <0> means that the appliance is off and all indicator lights are off.

Position <1> provides the highest temperature inside the freezer.

Position <7> provides the lowest temperature inside the freezer.

Ideally, the thermostat should be set to a position between <3> to <4>.

The freezer can cool down to -18 °C and lower.



Note!

The ambient temperature of the room, the temperature of food and the amount of food that has been placed in the appliance and how often the door is opened, will all affect the temperature being maintained by the appliance.

- On the maximum setting (position <7>), the compressor of your freezer will work continuously to maintain a lower temperature, which will result to more energy-consuming. Please switch the thermostat dial to between <3> to <4> during normal use.

Noise during operation

The following noises are characteristics of the appliances:

- **Clicks** - Whenever the compressor switches on or off, a click can be heard.
- **Humming** - As soon as the compressor is in operation, you can hear it humming.
- **Bubbling** - When refrigerant flows into thin tubes, you can hear bubbling or splashing noises.
- **Splashing** - Even after the compressor has been switched off, this noise can be heard for a short time.

The freezer drawer



Note!

The freezer drawers are suitable for freezing fresh food and storing frozen food and deep-frozen food for a long time.

Freezing fresh food

- Temperature of the freezer drawer must have already reached $-18\text{ }^{\circ}\text{C}$ (or lower) before storing frozen food or freezing fresh food.
- The freezer is only able to freeze a certain quantity of food at one time. The maximum amount of food that can be frozen in 24 hours is specified on the rating plate, a label located on the inside of the appliance.
- The freezing process lasts 24 hours. Do not add other food to be frozen during this period.
- After 24 hours, please check that the fresh food is satisfactorily frozen. If it is then the thermostat should be turned down to its normal setting (between <3> and <4>).
- Warm food should be allowed to cool down before freeze. If place warm food in the freezer, the increased humidity will cause quicker ice formation and increase the amount of power that the appliance uses.
- Fresh food should be packed into airtight containers or packaging. This will help to make sure that the food doesn't dry out or lose its flavour. It will also ensure that flavour does not transfer to/from other foods.
- Do not allow fresh food to touch items that are already frozen.

Storing frozen food

- When first starting-up or after a period out of use, let the appliance run at least 2 hours on the higher settings before putting the product in the compartment.
- The guidance of the food manufacturer should be followed, in regard to the maximum storage time.

Thawing

- Deep-frozen or frozen food, prior to be used, can be thawed in the freezer compartment or at room temperature, depending on the time available for this operation.
- Small pieces may even be cooked still frozen directly from the freezer. In this case, cooking will take longer.
- Thawed foods must not be frozen for a second time.

The freezer drawer



Warning!

In the event of accidental defrosting, for example, the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked.)

Tips on freezing

- Freezer bags, polythene wraps, aluminium foil (extra thick) and special cans for frozen foods are suitable packaging for storing frozen goods in.
- Tape, rubber bands or plastic clips are suitable for sealing bags and wrappings.
- Before sealing a suitable bag, please compress the air out of it, as this will help the food to freeze more easily.
- Flat packages freeze more easily.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required.
- Do not allow fresh, unfrozen food to touch food which is already frozen, avoiding a rise in temperature of the latter.
- If you are freezing liquid, then do not fill the container to the rim. Liquids will expand when being frozen.





Note!

Do not place bottles (glass or tin) containing liquids (especially sparkling liquids) into the freezer as they could cause the bottle to burst during freezing.

Making ice cubes

- Fill an ice cube tray with water and place it in the freezer compartment.
- After the water is completely frozen and turned to ice, twist the ice cube tray to dispense the ice:

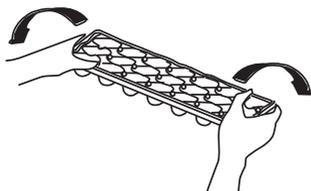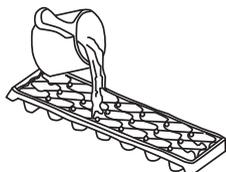

Saving energy when using your freezer

Installing

- Install the appliance in a cool position. If it is placed in direct sunlight or next to an oven or other heat source, the energy consumption can increase substantially.
- Ensure the appliance is installed with the correct ventilation requirements. Restricting ventilation can increase the energy consumption.

Cleaning and maintenance

- Clean the door gasket with warm water or a neutral detergent that leaves no residue. A tight-sealing door gasket is critical to the efficiency of your appliance.

Usage

- Do not open the door repeatedly or more frequently than you have to.
- Do not set the thermostat too low. A change of just one degree can effect the energy consumption. Use a thermometer to check the temperature.
- Allow food to sufficiently cool before putting it in the appliance.
- In the freezer, food packages should be scattered and never grouped or stacked together until they are completely frozen.
- If you are going away for a long period of time, turn off the appliance, empty and clean it and leave the door ajar.
- If you have a second appliance that is not used, make sure that it is stored with the power off and the door left ajar until it is actually required.

Disposal

- If you're going to throw out your old freezer, see if there's a chlorofluorocarbons (CFCs) recycler in your area. The government department which looks after the environment in your area may be able to help you.

Care and maintenance



Warning!

Please ensure that your appliance is disconnected from your mains supply before attempting to clean it.

- Do not clean the appliance by pouring water onto it or spraying water over it.
- The freezer compartment should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.
- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.
- Do not use abrasive products, detergents or soaps.
- Check the water drain hole on the rear wall of the refrigerator compartment.
- Clean a blocked drain hole with the aid of something like soft green peg, be careful not to make any damage to the cabinet by sharp objects.
- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.
- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.

Defrosting

The frost in the freezer compartment should be removed manually.



Note!

The freezer compartment should be defrosted at least once a month. The number of times that you need to defrost will depend on the setting of your thermostat, and how much food you freeze and store in the freezer compartment.

- Before defrosting, take the food out or put them into the fresh food compartment temporarily.
- Set the thermostat control dial to <0>, then the compressor will stop working.
- Leave the door of the refrigerator open until ice and frost dissolve thoroughly and accumulate at the bottom of the freezer chamber. You can place a bowl of warm water (about 50 °C) inside the freezer compartment to speed up the defrost process.
- Wipe off the water with soft cloth.
- After drying the compartment, with dry hands, reconnect your appliance to your mains supply and set the thermostat control dial to position <6> or <7> for about 2 – 3 hour, before returning it to the normal setting of between <2> and <4>.

**Note!**

Do not place food back in the freezer compartment once it has started to thaw.

**Warning!**

Do not use mechanical devices (e.g. hair dryer) or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not use sharp metal objects to remove the ice on the freezer, as this could cause damage to the refrigerant system.

Troubleshooting

**Note!**

If your freezer appears not to be operating properly, before contacting the Customer Services, please refer to the checklist below.

My freezer does not appear to be working/there is no power to my appliance

- Check that the plug is fully inserted into the power socket.
- Check that there is power to your mains supply (e.g. there isn't a power cut or that the fuse hasn't blown).
- Check that the thermostat inside the appliance has not been turned to the <0> position.
- Check that your mains supply voltage, corresponds to the voltage stated on the rating plate of your appliance.

My freezer appears to be performing poorly

- Check that the appliance isn't overloaded and that food hasn't been packed too tightly into it.
- The thermostat setting is too low; turn the thermostat up higher.
- Ensure that the door is closing properly and that the door has not been opened for a prolonged period in error.
- Ensure that there is adequate ventilation for your appliance.

Heavy build-up of frost, possibly also on the door seal

- Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time, shape the warmed door seal by hand so that it sits correctly.
- Check that the door is closing properly and that the door seal is not crushed, twisted or torn.

Unusual noises

- The appliance is not level; Readjust the feet.
- The appliance touching the wall or other objects; Move the appliance slightly.
- A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.

The compressor does not start immediately after changing the temperature setting

- This is normal. The compressor starts after a period of time.

**Note!**

If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and contact Customer Services on 0344 800 1128 (UK), 014475261 (Ireland).

**Warning!**

Do not attempt to repair the appliance yourself. Repairs to refrigerators/ freezers may only be performed by competent service engineers. Improper repairs can give rise to significant hazards for the user.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, such as mechanical or electrical breakdown, then you may be liable for the cost of the call out charge.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical specifications

Supply voltage	220 – 240 V~, 50 Hz
Rated current	0.5 A
Dimensions (W x D x H)	596 x 543 x 820 – 870 mm
Net weight	35 kg
Net capacity	97 litres
Energy class	A+

Guarantee

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product.

The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Guarantee

Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland

Phone: 0344 800 1128*

Email: uksupport@apelson.co.uk

Web: www.spareszone.co.uk

Republic of Ireland (Eire)

Phone: 014475261

*Local call rates apply

CE declaration of conformity

MANUFACTURER: CATA		
ADDRESS:	C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)	
<p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p>		
MACHINE APPLICATION:	CLBFZ60	
TYPE:	Built under freezer	
EC DIRECTIVES APPLIED:	Comply with the European Directives 2014/35/EU: LVD and the 2014/30/EU: EMC	
APPLIED HARMONIZED STANDARDS:		
<div style="border: 1px solid red; padding: 5px;"> EN 60335-2-24; EN 60335-1; EN 62233 EN 55014-1; EN 55014-2; EN61000-3-2; EN61000-3-3 </div>		
APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:		ISO9001.2008
PLACE: Torelló	David Sala <hr style="width: 100px; margin: 0 auto;"/> Technical Manager	


This appliance respects laws of the suppression of radio-interference.

As the manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc,
 Chandlers Ford, Hants,
 SO53 3LE United Kingdom
www.diy.com

01

Dimensions

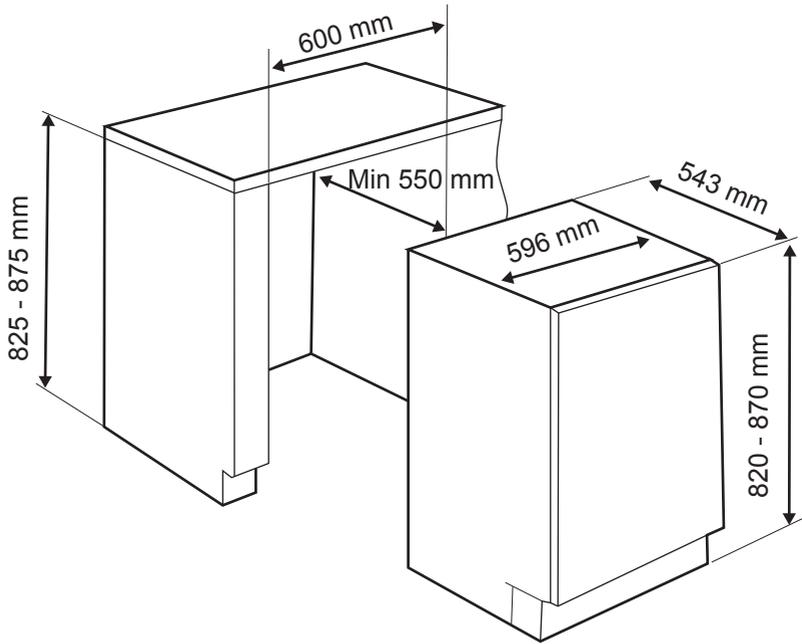

The appliance must be placed on a level floor. Use the levelling feet to take into account any minor unevenness in the floor.

Dimensions of appliance

Height: 820 – 870 mm

Width: 596 mm

Depth: 543 mm

Dimensions of aperture*

Height: 825 – 875 mm

Width: 600 mm

Depth: 550 mm (min)

* Please refer to the installation instructions for more specific information on the size of cabinet.

Positioning



Note!

When you install your appliance it is important to bear in mind its climatic rating.

It is advisable that your appliance is only installed in a location where the ambient temperature of the room, corresponds with the climate classification that is stated on the rating plate of your appliance. The rating plate is located inside of the freezer. Open the door of your appliance to be able to find it.

The rating plate will indicate the ambient temperature range that your appliance will function correctly within. Your appliance may not function correctly if the ambient temperature falls outside of the following ranges.

Climate classification	Appropriate ambient temperature
SN	+10 to +32 °C
N	+16 to +32 °C
ST	+16 to +38 °C
T	+16 to +43 °C

- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler).
- The appliance should be situated in the place that is easily access the food stored in. The door should be able to open completely and freely.
- The appliance must not be exposed to rain.
- Please check whether there is an electrical socket available, which will be accessible after your appliance is installed.



Warning!

Before installation and usage read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found on the front left edge of the inside of the freezer.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

Reversing the door


- This procedure **MUST** be completed before the cabinet door is attached.
- Any parts that you remove from the appliance whilst reversing the door, should be retained for later use.



Warning!

Take care when opening the hinges, they are sprung loaded and there is the risk of injury if they close on your hand.

02

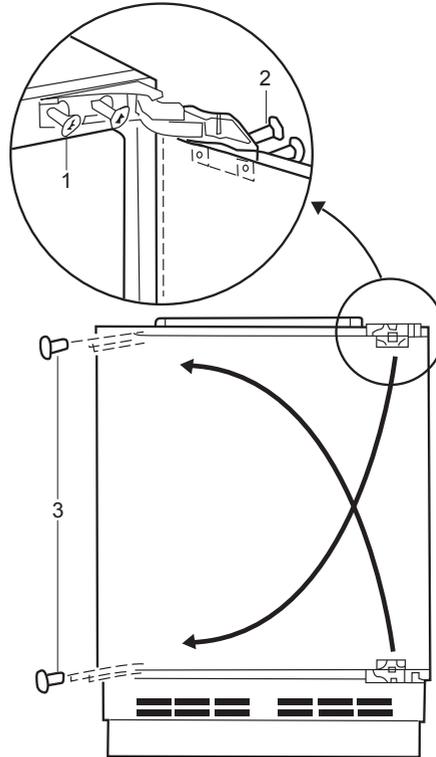

1. Slacken the retaining screws (1) on the appliance and then carefully remove the appliance door.
2. Place the appliance door on a cushioned surface, so that damage does not occur to it.
3. Lever off the cover caps (3).
4. Remove the door retaining screws (2) and then reverse the position of the top and bottom hinge (as shown in above diagram).
5. Reattach the appliance door and then fully re-assemble the retaining screws (1) and the door retaining screws (2).
6. Insert the cover caps (3) into the holes that are now exposed on the right hand side of the cabinet.

**Note!**


Check that the door opens and shuts correctly, without fouling, after you have completed the door reversal process. After the door has been reversed, you should check the door seal of the appliance. The seal should not be creased or crushed; otherwise there will be a gap between it and the inside of the door.

- The seal must adhere properly all the way around the door.
- If the seal is not adhering to the cabinet properly, please:
Use a warm damp cloth and manipulate the seal until it does adhere to the cabinet properly, all the way around the door.

**Note!**

Do not heat the door seal on anything but the lowest heat setting, or heat the seal for a long period of time. Otherwise damage may be caused to the door seal, which would not be rectified under the guarantee free of charge.


Pushing the appliance into the cabinet

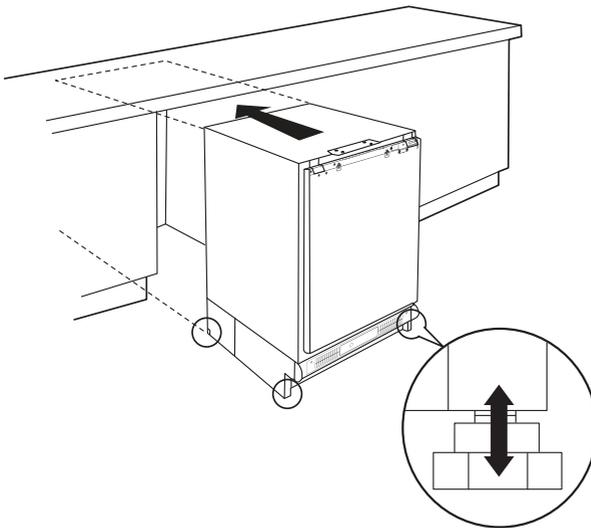**03**

Push the freezer into the cabinet. Use a spanner to adjust the height of the adjustable feet to suit the height of the cabinet.

Attaching the plinth/kickboard

04

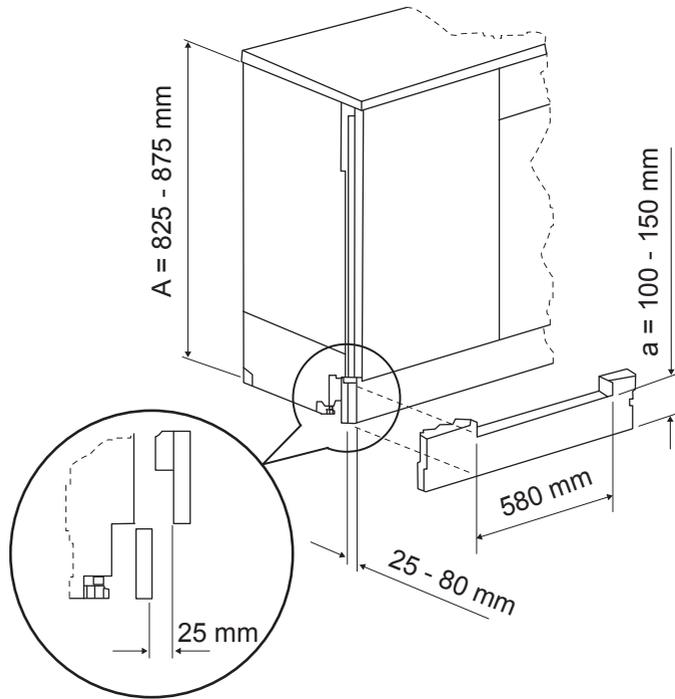

When the appliance has been placed underneath the worktop, you may decide to attach a plinth or kickboard to match your existing kitchen units.

- If the niche for appliance has a height of $A = 820$ mm and a plinth height of $a = 100$ mm, the plinth can be fitted without any modification.
- If the height of the appliance is adjusted to greater than 820 mm, adjust "a" to fit the appliance.




Warning!

The original ventilation grill must be used in order not to compromise the appliance's operation. The plinth must also be positioned at least 25 mm way from the cabinet's door.

- Fasten the plinth/kickboard to the kitchen block.

Mounting the cabinet door to the appliance

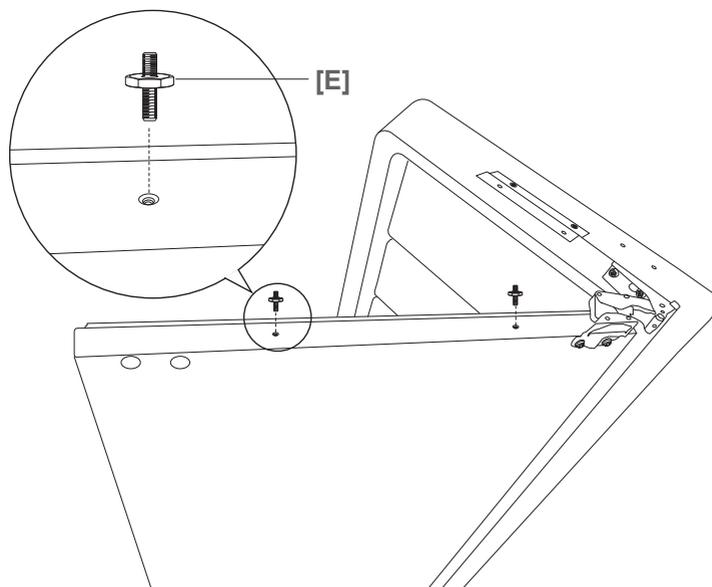

05



[E] x 2

a) Remove the cover caps from the top of the freezer door and screw the two flange screws [E] into the place.

06


Mounting the cabinet door to the appliance



[C] x 2




[G] x 2

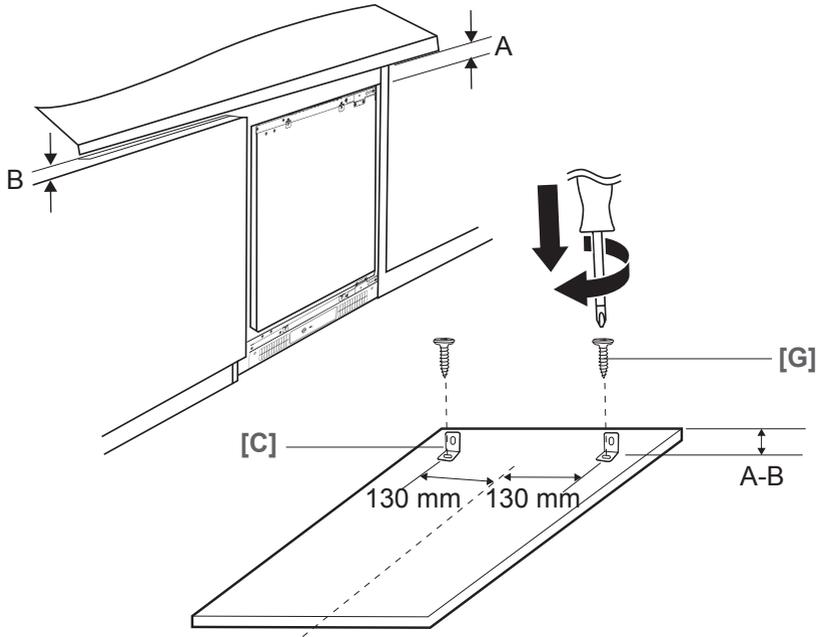

- b) Measure the width of the cabinet door, at the halfway point mark a line vertically down the inner surface of the cabinet door. You should draw the line from the top of the cabinet door to approximately halfway down.
- Place the mounting bracket on the cabinet door.
 - The mounting bracket should be positioned 130 mm from the line that you have just drawn. Please note the position of the mounting bracket in the above drawing, to ensure that you have the mounting bracket the correct way up.
- Distance A is from the top of the appliance's door to the underneath of the worktop.
Distance B is from the top of the cabinet door to the underneath of the worktop.
- Fix the mounting bracket to the cabinet door using the screws [G] provided and a cross-head screwdriver. These screws should be fully tightened.


Mounting the cabinet door to the appliance

07

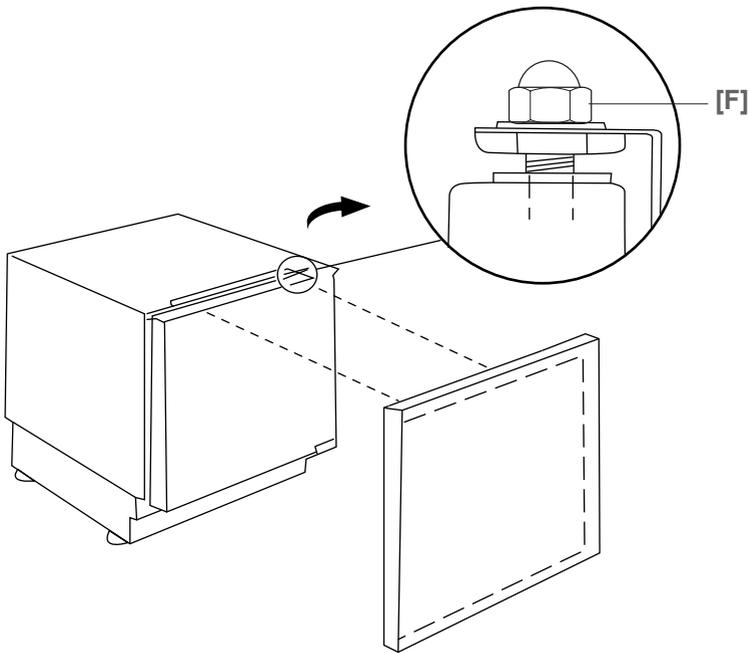


- c) Hang the cabinet door onto the appliance door, then tighten with the nuts [F].

 08




[D] x 2

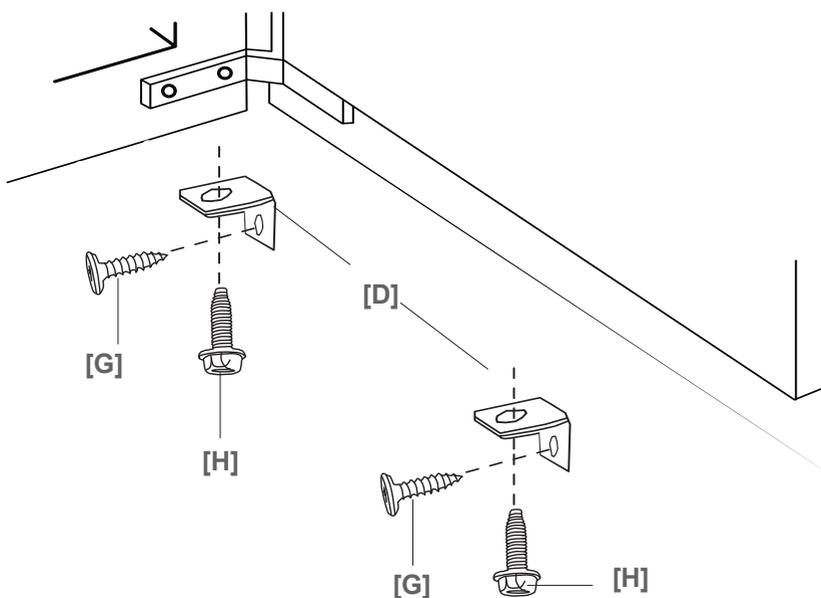

- d) Fix the two brackets [D] to the underneath of the appliance door using screws [H], then fix the brackets to the bottom of the cabinet door using screws [G].


09

Mounting the cabinet door to the appliance

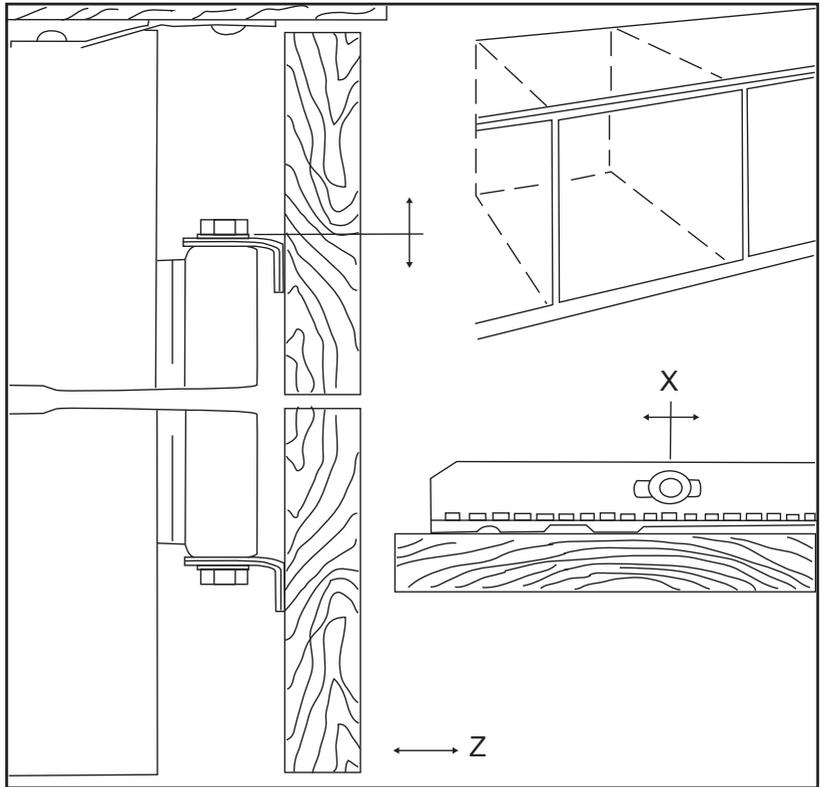

- e) Align the cabinet's door to those on the neighbouring units by adjusting the position of the brackets to the cabinet door.

Fixing the appliance to the cabinet

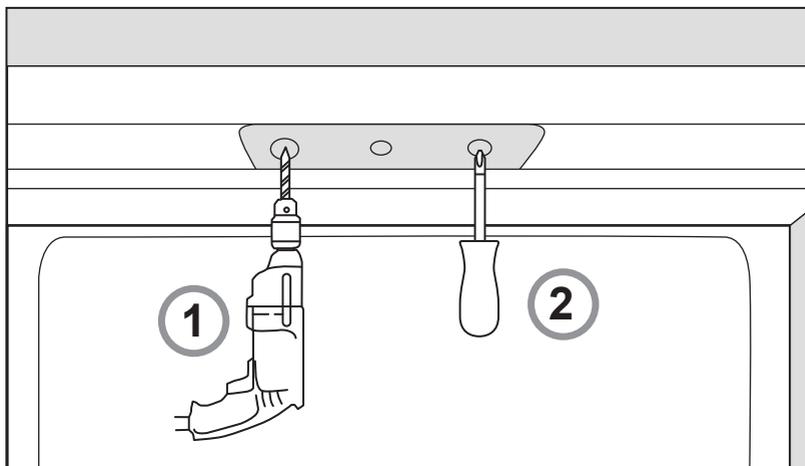

10



[G] x 3

- a) Open the appliance door.
- b) Use a suitably sized drill bit to drill through the three holes in the bracket, into the work top.



Note!

The drill bit should be appropriate for the material that your work top is made from.

- c) Secure the bracket to the underside of the worktop, using the screws [G] provided.



Note!

These screws should be fully tightened.



B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com
