


# Built-in Electric Oven

## OV7C-BF5

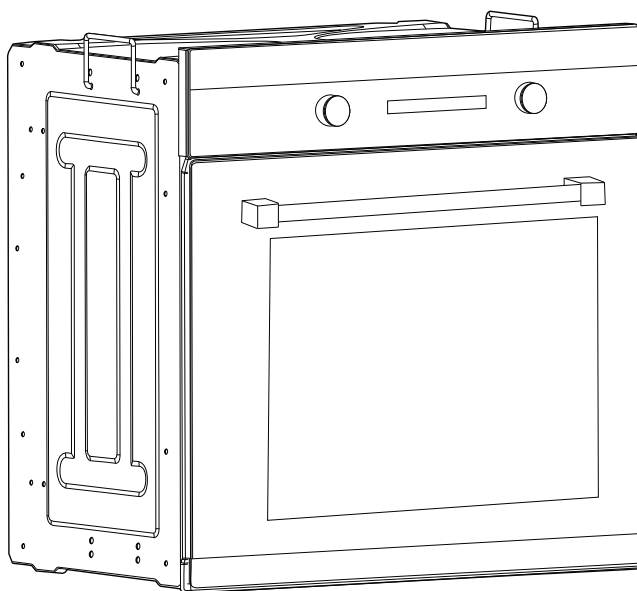


OV7C-BF5\_V01\_GB




Barcode 3601653433312




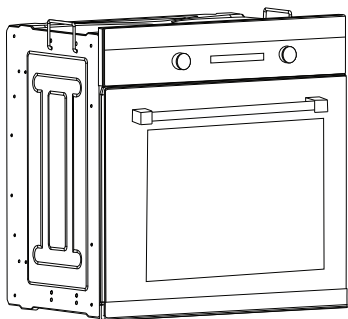


[01] x 1

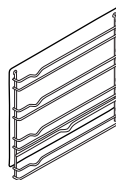


[02] x 1

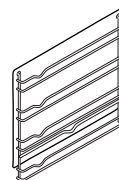

[03] x 1

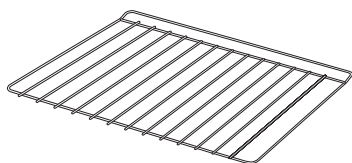

[04] x 1

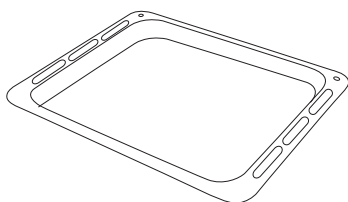

[05] x 1



[06] x 4



[07] x 4  
(Ø 3.9 x 32 mm)

# Let's get started...



## Getting **started**...

**Safety**  
**Before you start**



## In more **detail**...

**Product functions**  
**Operation**  
**Care and maintenance**  
**Troubleshooting**  
**Information for dismantling**  
**Recycling and disposal**  
**Technical and legal information**  
**Guarantee**



## Appendix

**Installation**

03

04

10

13

13

15

18

23

23

24

25

28

29

**These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.**



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☒ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☒ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- ☒ Therefore, the Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.

- ☑ Children should be supervised to ensure that they do not play with the appliance.
- ☑ This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- ☑ Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.
- ☑ Do not allow the electric cables to touch the hot parts of the appliance.
- ☑ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.

- ☑ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☑ Please dispose of the packing material carefully.
- ☑ Do not use flammable sprays in close vicinity to the appliance.
- ☑ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ☑ A steam cleaner is not to be used.
- ☑ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ☑ The appliance is for domestic use only.
- ☑ Do not place heavy objects on this oven or lean on the door when opening it, as this may damage the hinges.
- ☑ Do not leave hot oil or fats unattended as they may catch light.

- ✓ Do not place oven dishes or trays of the base part of the oven or cover it in aluminium foil.
- ✓ Do not install the appliance near curtains or upholstered furniture.
- ✓ Do not try to lift or move kitchen appliances by pulling any door or handle as this may cause damage.
- ✓ If the oven seal is very dirty, the door will not close properly when the oven is working. The fronts of neighbouring furniture may be damaged. Keep the oven seal clean.
- ✓ Open the oven carefully as hot steam may escape.
- ✓ Do not pour water inside a very hot oven. The enamel may be damaged.
- ✓ Heat, vapour and humidity are produced during use, avoid all kinds of personal damage and ensure that the room is suitably ventilated. If used for a prolonged period of time, additional ventilation may be necessary. Consult a qualified installer if you have any doubts about the necessary volume.

- ☑ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ☑ **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
- ☑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ☑ During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven.

- ☑ Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- ☑ Warning - Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- ☑ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## Before you start

### Before you start

---

- ☒ To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0344 800 1128 (UK), 0144 75261 (Ireland) and 01 56 48 02 60 (France).
- ☒ Check the package and make sure you have all of the parts listed.
- ☒ Decide on the appropriate location for your product.
- ☒ If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- ☒ The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- ☒ If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

## Instructions



- ✓ This user manual must be kept for future reference and use by someone who is not familiar with the appliance.
- ✓ Before using the oven, carefully clean the inside with a non-abrasive detergent and warm water. Position the grill and tray in their respective runners. Once the operation is complete, turn the oven on to the maximum temperature for approximately 20 minutes to remove any traces of manufacturing grease, oil or resins which may cause unpleasant odours when cooking.

## Prior start up of the appliance

- ✓ **WARNING:** During this first use some smoke or unpleasant odours may appear. Should this happen ventilate the room suitably until the first operation is finalised.
- ✓ Once this simple operation has been carried out the oven is ready to use for cooking.
- ✓ This appliance is exclusively for domestic use.
- ✓ Use the oven to cook food only.
- ✓ Before cooking, make sure all oven accessories that are not required are removed from the oven.
- ✓ Pre-heat the oven to the cooking temperature before using it.
- ✓ Place the cooking trays in the centre of the oven and leave space in between when using more than one, so that the air can circulate.
- ✓ Do not put oven trays on the base of the oven or cover it with aluminium foil. This will cause thermal accumulation. The cooking and roasting times will not coincide and the enamel may be damaged.
- ✓ Try to open the oven door as little as possible to see the food (the oven light remains on during cooking).
- ✓ Take care when opening the door to avoid contact with hot parts and steam.

## Before you start



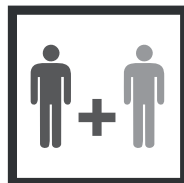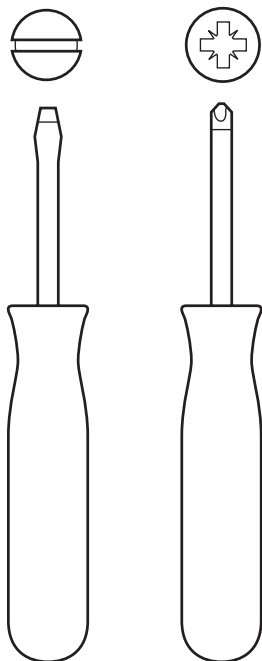


### Tools Required



We advise when installing this appliance two people are recommended.

## Product functions

- > The oven is controlled by a thermostat between 50 °C and 250 °C, depending on the temperature required. The thermostat pilot light turns on and off to indicate the temperature control during use.
- > The required cooking mode is selected using the multi-functional control button. The functions that may be selected are:

	Oven Light	Turning control knob to this setting, the oven light will illuminate in the oven cavity, and will operate on all selected functions.
	Top Heating	Upper element comes on, heat radiates by natural convection from the top of the oven.
	Conventional	Upper and lower heating element come on. Heat is distributed by natural convection and this means the top half of the oven is warmer than the bottom half, food should be placed on a higher shelf if the food is to be crisped. It is recommended that the oven is pre-heated for 10-15 minutes before commencing cooking.
	Fan Assisted	Upper and lower elements come on with the fan. Heat is distributed by convection and dispersed by the fan. An even temperature is produced on all shelves within the oven. It is recommended that the oven is pre-heated for 10-15 minutes before commencing cooking.
	Bottom Heating	Lower element comes on, heat radiates by natural convection from the base of the oven.







- > Read the information of the food packaging for the cooking temperatures and times. Once familiar with the performance of the appliance, the temperatures and times may be varied to adapt them to your personal tastes.
- > Check that frozen food is completely thawed before cooking, unless indicated otherwise.

In more detail...

## Operation instructions

### Using the 6-button electronic timer

Description of the button functions:

	Alarm
	Automatic cooking (duration)
	End of cooking time (end time)
	Manual operation
	Reducing number in all programmes
	Adding number in all programmes

### Auto: Automatic programme

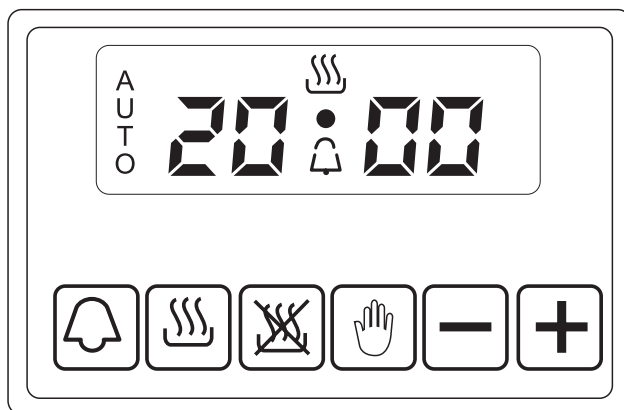







FIG. 1

- > (Light on): Programmer in automatic position and programmed.
- > No symbol lit, except the clock numbers means that a waiting time is programmed.



### Programmer functions:

- > 24-hour display clock.
- > Alarm (Maximum 23:59).
- > Automatic programming (start and end of cooking).
- > Semi-automatic cooking (only start or only end of cooking).
- > The timer only works when the appliance is connected to the electricity supply.

### Electronic clock




- > Immediately after connection (also after a power cut) three flashing digits will appear on the panel.
- > To enter the correct time press  symbol and at the same time one of the buttons  or  until the correct time is shown. There is a 5-second acceptance delay during which no button should be touched.
- > The speed that the marker changes will noticeably increase some seconds after beginning to press the buttons  and .

### Manual cooking (without using the programmer)




- > To use the oven with the help of the programmer, the flashing "AUTO" indication must be cancelled by pressing the button .
- > If the "AUTO" indicator is not flashing (which means that the oven is programmed) the programming must be cancelled first by pressing  and setting the marker to 0.

### Automatic cooking







Start of cooking:

1. Programme the cooking time using .
2. Press the buttons  or  to select the cooking time.
3. Select the temperature and function required using the thermostat and selector knobs.

End of cooking:

1. Programme the end of the cooking time using .
2. Press the buttons  or  to select the cooking time.
3. Select the temperature and function required using the thermostat and selector knobs.





Start and End of cooking:

1. Programme the cooking time using .
2. Press the buttons  or  to select the cooking time.
3. Press  for programming the off time.
4. Select  or  to set the off time.

> After these operations, the "AUTO" symbol will appear on the display, indicating that the oven has been programmed.



### Practical example:

We wish to cook for 45 minutes and that the cooking time ends at 2 p.m.



1. Pressing  we set 0.45 on the display.
  2. Pressing  we set 14:00 on the display.
- > After these operations the current time will reappear on the display as well as the "AUTO" symbol, indicating that our programming has been understood and memorised.
- > At 13:15 (14:00 minus 45 minutes), the oven will automatically start, the symbols  and "AUTO" appearing during cooking.
- > At 14:00 the cooking will automatically stop and the alarm will sound intermittently.
- > Press  to turn the alarm off.

### Pre-set cooking function



Programming the duration of the cooking:

- > Set the chosen cooking time using the button  and set the duration.
- > Cooking will start immediately, the symbols "AUTO" and  will appear on the display. When the programmed time has passed the cooking will stop and the alarm will sound intermittently.
- > Turn the alarm off as described above.





Programming the end of the cooking:

- > Set the chosen end time for the cooking using the button  and set the end time. Cooking will start immediately and the symbols "AUTO" and  will appear on the display. Cooking will end at the set time and the alarm will sound intermittently. Turn it off as





indicated above.

- > The state of the programming can be checked at any time by pressing the corresponding button.
- > The programming can also be cancelled at any time by pressing  and setting the marker to zero. By then pressing  the oven will be ready for manual operation.

### Electronic alarm

- > The timer function consists solely of an alarm which can be adjusted for a maximum period of 23:59. To adjust the time, press the button  and at the same time  or  until the desired time appears. Having made the adjustment, the real time will reappear next to the symbol .
- > The countdown will begin immediately and can be viewed on the display at any time by simply pressing the button.
- > When the time has ended, the symbol will disappear and the alarm will sound intermittently, which may be turned off by pressing the button. The alarm does not control any of the oven functions.

### Notes:

- > If an error is made it will be indicated via an alarm and the "AUTO" symbol will flash. Cancel the adjustment by pressing the button , and then re-programme to rectify it.
- > The alarm that sounds at the end of a programme will continue for seven minutes unless cancelled by pressing the button . However, at the end of the seven minutes the "AUTO" symbol will continue flashing.
- > The alarm has three tone positions: low, medium and high. To adjust the tone, check that the timer is in the manual mode, then press the button  and hold down to hear the tone selected. On releasing the button , press again and hold down to select another tone. Repeat the procedure until the required tone is heard.




**WARNING!** A power cut will result in the programmed functions to be cancelled, including the clock. Once the power returns three flashing zeros will appear and the oven can be re-programmed.

## Care and maintenance



### Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

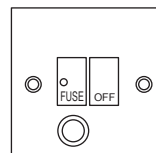

- ① Cleaning an oven that does not feature self-cleaning panels must be done after use, when it is switched off but still warm, not hot, so that the film of grease produced by the cooking vapours on the walls is still easy to remove, as well as the drips and splashes of fat that are not yet hard and dry.
- ② To clean the stainless steel external parts, use a soft cloth with soap and water; do not use any powdered products that contain abrasive substances.

Normally, wiping with a damp soft cloth and warm detergent is enough, but for stubborn stains the following is recommended:

### Cleaning the oven cavity

- > Spray a proprietary oven cleaner inside your oven and leave it to work for the time specified in the manufacturers instructions. Then use a clean sponge to wipe off the foam residue.
- > Wear rubber gloves to prevent the cleaner coming into contact with your skin and make sure the kitchen is well-ventilated to disperse the fumes produced by the cleaner. Repeat if necessary.
- > Also avoid the use of acid or alkaline substances (lemon juice, vinegar, salt, tomatoes, etc.). Avoid using products containing chlorine, acid or abrasive substances specially for cleaning the varnished walls. Do not use thick steel wool or hard utensils, as they can damage the surface finishes.
- > Do not use high pressure cleaners or steam appliances for cleaning the oven.
- > Only use a recommended cleaner for this type of material – avoid chloride-based products such as bleach.

**Removing the door from the oven (Fig. 2)**

- > To simplify cleaning the interior of the oven, the door can be removed. The process of removing the door is shown below:
- > Open the door fully to position "C"
- Lift the two mobile links "A" of the hinges, until fixing at point "B".
- > Then close the door to the half-way position.
- > Next, lift the door upwards and remove it, sliding it outwards; hold the door by the sides close to the hinges when doing this.
- > To replace the door, first slide the hinges into their grooves and open the door completely.
- > Remember to turn the two moving links "B" used to engage the two hinges before closing the door (Fig. 2).

**WARNING**

- Take care not to remove the hinge locking system when taking off the door, as the hinge mechanism can spring back suddenly.
- Never submerge the door in water for any reason.

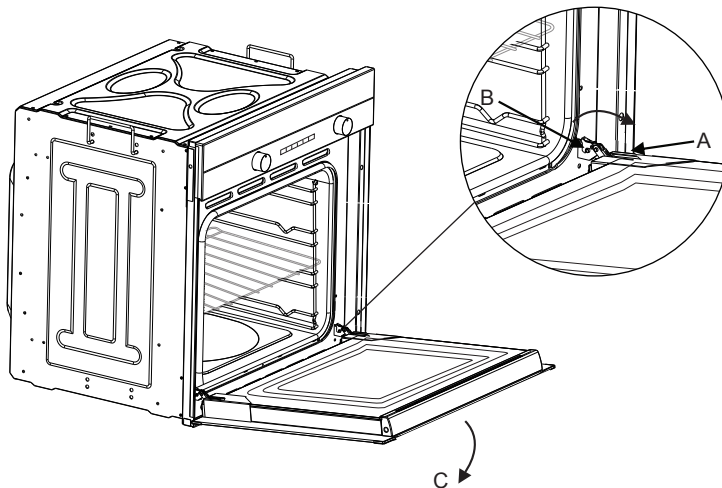


FIG. 2

### Cleaning the glass door (Fig. 3)

- > If possible, remove the oven door glass following the manufacturer's instructions. Use warm water with a little detergent to clean the glass sections of the door.
- > Do not use abrasive products which could damage the glass. Remember that if the surface of the glass panel becomes scratched, it could cause a dangerous failure.
- > To simplify the cleaning, the inner glass panel can be taken out of the door. The method for removing the glass from the door is shown below.
- > After removing the screws fixing the upper support of the glass, remove the support in direction "A". Then the glass can be pulled out. In versions with three glasses the intermediate glass can also be removed.


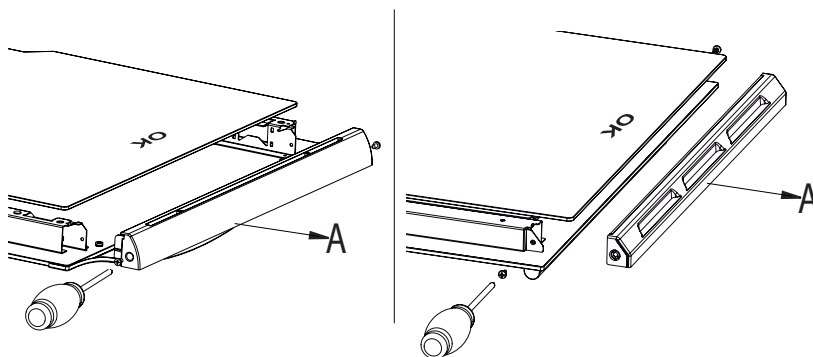


FIG. 3

## Replacement of the oven light bulb (Fig. 4)

> Not covered by the appliance guarantee.

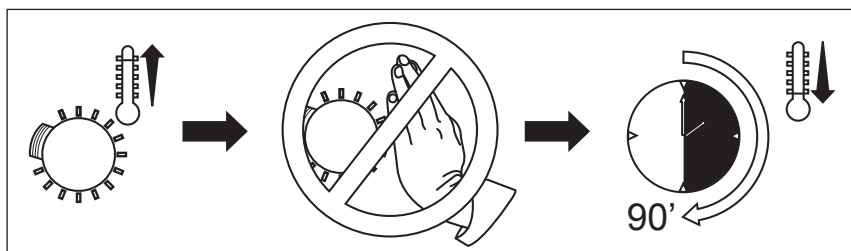

**WARNING:** Disconnect the appliance from the electricity supply, open the oven door and remove the oven shelves.

The oven has a light with the following characteristics:

> 15 W or 25 W, 300 °C and type E-14

1. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
2. **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
3. Remove the glass cover that protects the light bulb by turning it anti-clockwise.
4. Unscrew the old light bulb and dispose of it safely and ecologically, change it for one as specified in the "Technical data" and replace the cover.

**Note:** The glass cover may be tight and, therefore, may need a grip to release it.

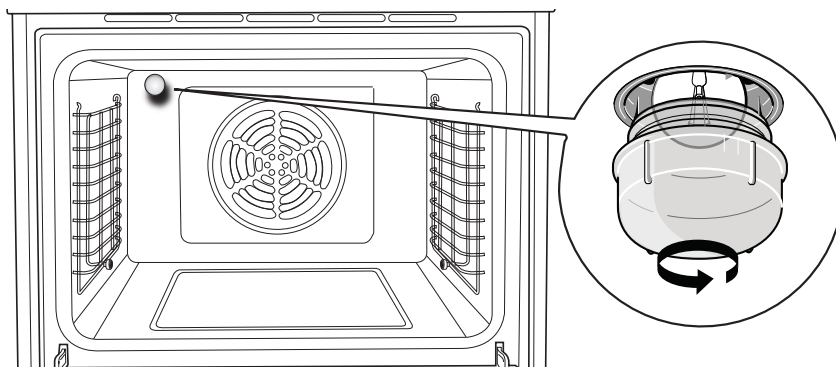


FIG. 4


In more detail...

**WARNING:**

Never use a steam cleaner to clean the inside of the oven.

**For easier cleaning of the oven interior, the side rails can be removed.**

1. Remove all pans and grills from inside the oven to easily access the side rails.
2. Loosen the screws fixing the side rails.

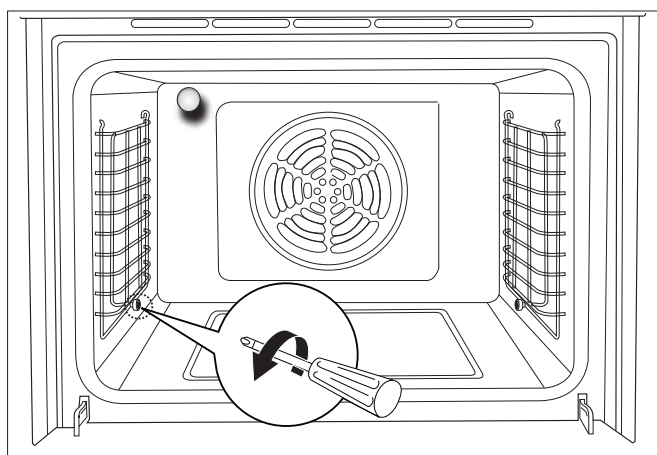

3. After thorough cleaning, dry the oven and the side rails well.
4. Attach the side rails to the oven walls and fix with the screws.

**Warning**

This oven has catalytic liners. The catalytic liners are self cleaning and will vaporise food splashes and fats while the oven is on. To aid this process and to ensure continued good performance of the liners we recommend you run the oven, without food in it, once a week at 250 °C for at least an hour. Manual cleaning of the catalytic liners is not recommended and damage will occur if oven sprays or abrasives of any kind are used. Slight discolouration of the catalytic surfaces may occur in time. This does not affect catalytic properties in any way.

## Troubleshooting

Fault	Cause	Solution
Oven doesn't work	Something at the connection is wrong, or it's not connected.	Turn off main supply and check if some wire has been disconnected.
	Power supply connections are loose.	Turn off main supply and check if some wire has been disconnected.
	Something at house installation is wrong.	Turn off main supply and check if some wire has been disconnected.
Oven light doesn't work	Light bulb is blown.	Replace bulb as described in the manual in section "Care and maintenance".
Oven will not heat	No function is selected.	Choose a cooking function turning the selector.
	No temperature is selected.	Choose a temperature turning the selector.

In more detail...

## Information for dismantling

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with you Local Authority or retainer for recycling advice.

## Recycling and Disposal

### Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.



On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

## Technical data

### Electrical information:

Nominal voltage: 230 V~, 50 Hz


Output power: 2000 W

Information for domestic ovens (www.diy.com)			
	Symbol	Value	Unit
Model identification	OV7C-BF5		
Type of oven		Electric oven	
Mass of the appliance	M	31	kg
Number of cavities		1	
Energy consumption (electricity) required to heat a standardised load in a cavity of an electric heated oven during a cycle in conventional mode per cavity (electric final energy)	EC <sub>electric cavity</sub>	0.82 (at position  )	kWh/ cycle
Heat source per cavity (electricity or gas)		Electricity	
Volume per cavity	V	50	L
Energy consumption required to heat a standardised load in a cavity of an electric heated oven during a cycle in fan-forced mode per cavity (electric final energy)	EC <sub>electric cavity</sub>	0.77 (at position  )	kWh/ cycle
Energy Efficiency Index per cavity	EEl <sub>cavity</sub>	101.3	—
1kWh/cycle= 3.6MJ/cycle			

The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

In more detail...


## Technical and legal information

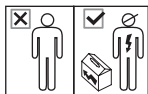

All installation work must be carried out by a competent person or qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

**Warning: THIS APPLIANCE MUST BE EARTHED.**

Mains Supply could be connected to the Mains Voltage by Direct Connection

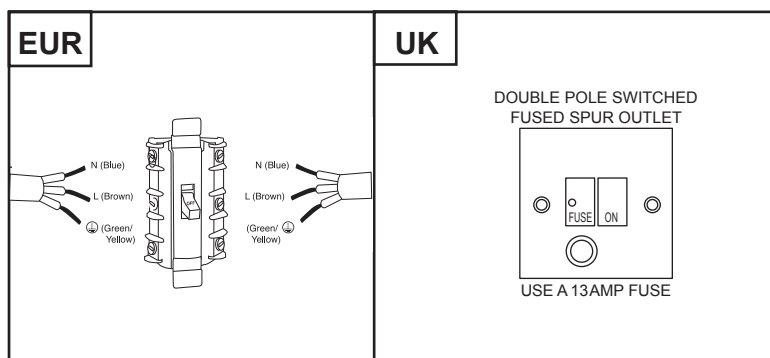

### Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

If the cable is damaged or to be replaced, the operation must be carried out by a qualified electrician with dedicated tools to avoid any accidents.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

The cable must be checked regularly and replaced by authorized technicians only.

In more detail...

## Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

## Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.

### **WARNING: THIS APPLIANCE MUST BE EARTHED**

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only  
A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

**The fuse must be rated at 13 Amps.**

The wires in the mains lead are coloured in accordance with the following code:

**Brown = L - Live**

**Blue = N - Neutral**

**Green and Yellow =  - Earth**

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

**Disconnect the appliance from the mains supply before carrying out any kind of maintenance or cleaning.**

## Guarantee

We offer a **2** year guarantee against manufacturing defects on our products.

Our guarantees are valid from the date of purchase only on products installed in accordance with our instructions and in normal domestic use.

Proof of purchase required. This guarantee does not cover:

- Normal wear and tear to the product
- Products which are damaged or become defective due to failure to store, assemble, transport, install, use, connect to correct power input, care for or uninstall the products in accordance with the instructions
- Damage caused by faulty installation
- Damage caused by modification
- Products that have been damaged during transportation
- Damage or corrosion caused by cleaning with inappropriate materials
- Damage caused by use of unsuitable or counterfeit accessories and/or spare parts
- Consumable items such as carbon filters and bulbs
- Claims arising from non-domestic use or commercial environment

If the retailer determines that a claim under this guarantee is valid, the retailer will replace the affected product or part. If the retailer cannot supply you with the same product because it is no longer available, the retailer will provide you with the closest alternative in terms of quality and price.

All claims must be supported with the original receipt or other reasonable proof of purchase.

Should any person other than an authorised engineer modify or attempt to repair the appliance then the warranty will be invalid.

**This guarantee is in addition to and does not affect your statutory rights as a consumer.**

For residents of France, to claim under this guarantee, please contact customer services in any of the following ways:

**Eurem France**  
**5 Rue Montgolfier, Prahecq (79230) France**  
**Téléphone : (0)549326976**  
**Courriel : a.bazier@eurem.fr**

## Fitting the appliance

### Important

- > The adjacent piece or furniture or cupboard and all the materials used in the installation must resist a minimum temperature increase of 85 °C above the ambient temperature during use of the appliance.
- > Certain types of vinyl or laminated kitchen furniture are particularly susceptible to damage due to decolouration at temperatures below those indicated.
- > If the appliance is installed without paying attention to this temperature limit or if it is placed less than 4 mm from the adjacent cupboards, liability will belong to the owner.

### Installation Notes

1. The oven has to be installed in a standard gap of 600 mm, as indicated in Fig. 5, whether under a hob or in a column.
2. On inserting the oven in a column, it is essential in order to ensure there is enough ventilation, to remove the rear panel of the furniture and have an opening of at least 85 – 90 mm as indicated in Fig. 5.
3. Check that the oven has been fixed securely in the housing. Fixing the oven into the cupboard is done using 4 screws. One in each corner of the oven door frame.



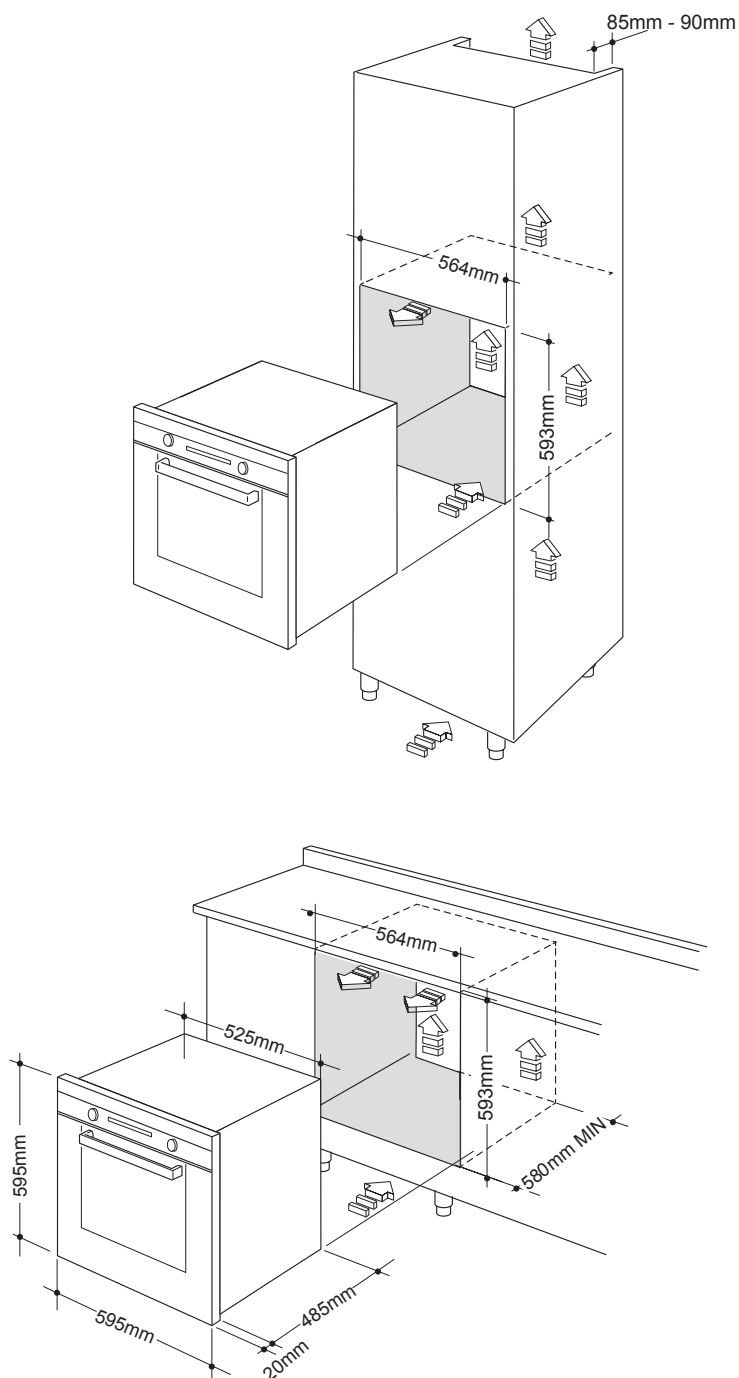


FIG. 5

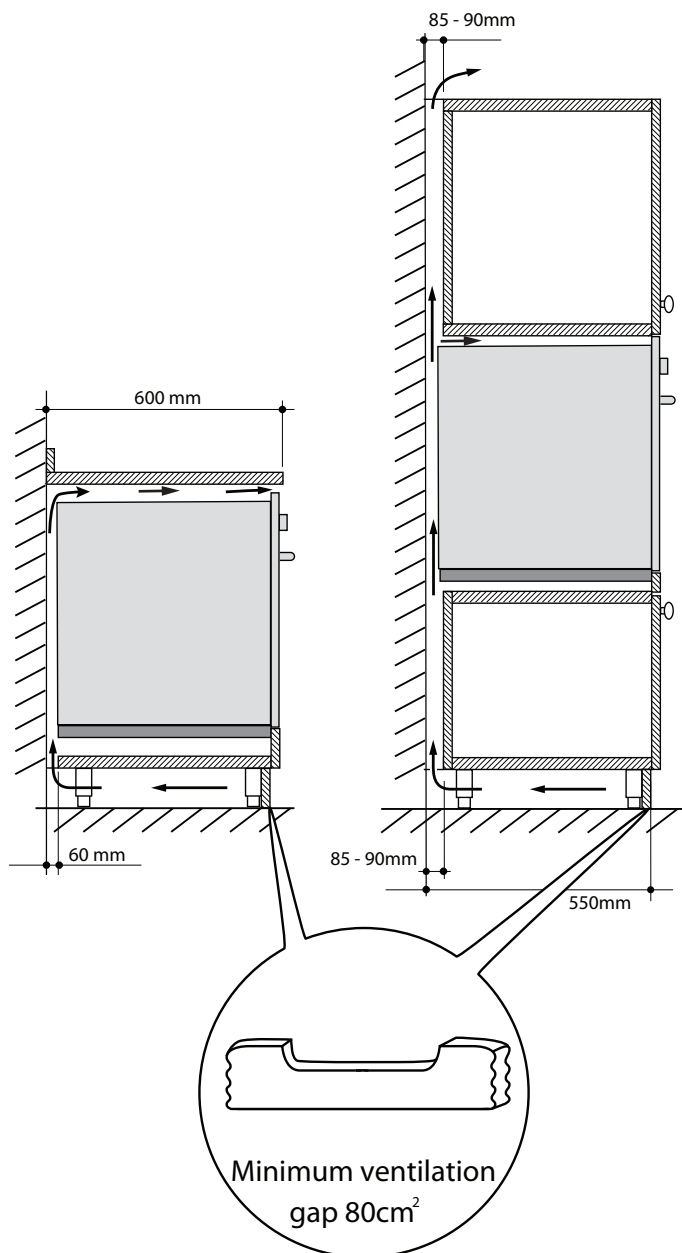

## 01

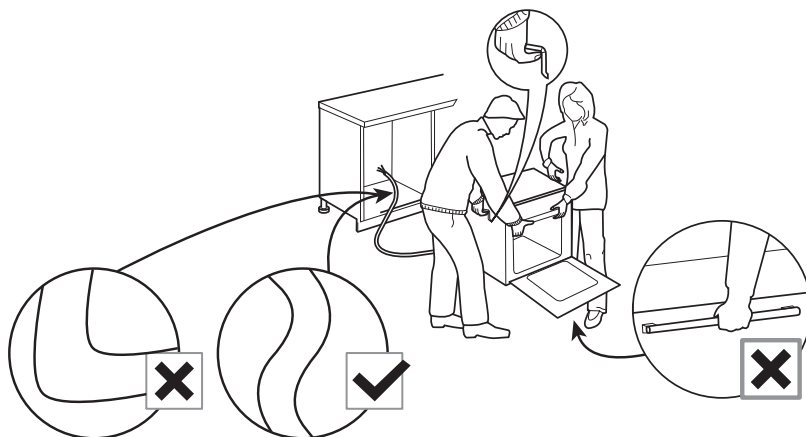


## 02




[06] x 4



[07] x 4

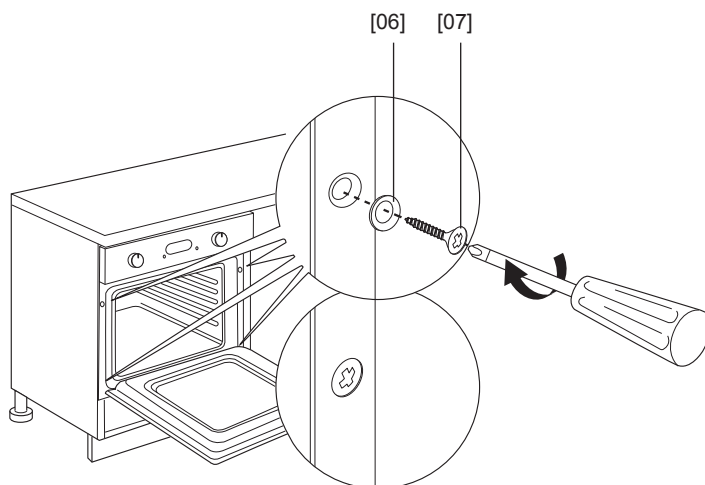

**Note:** For electrical connection see **Technical and legal information** section

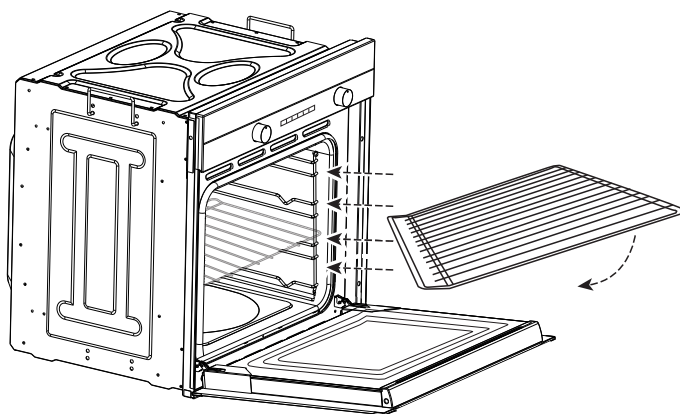

### Adjusting the shelf position

**Note:** For electrical connection see **Technical and legal information** section



---

B&Q plc  
Chandlers Ford, Hants  
SO53 3LE United Kingdom  
**[www.diy.com](http://www.diy.com)**

---