




single oven:AMFTZ60SS

Version:00

Date:2014-05-27

AMFTZ60SS Exploded drawing

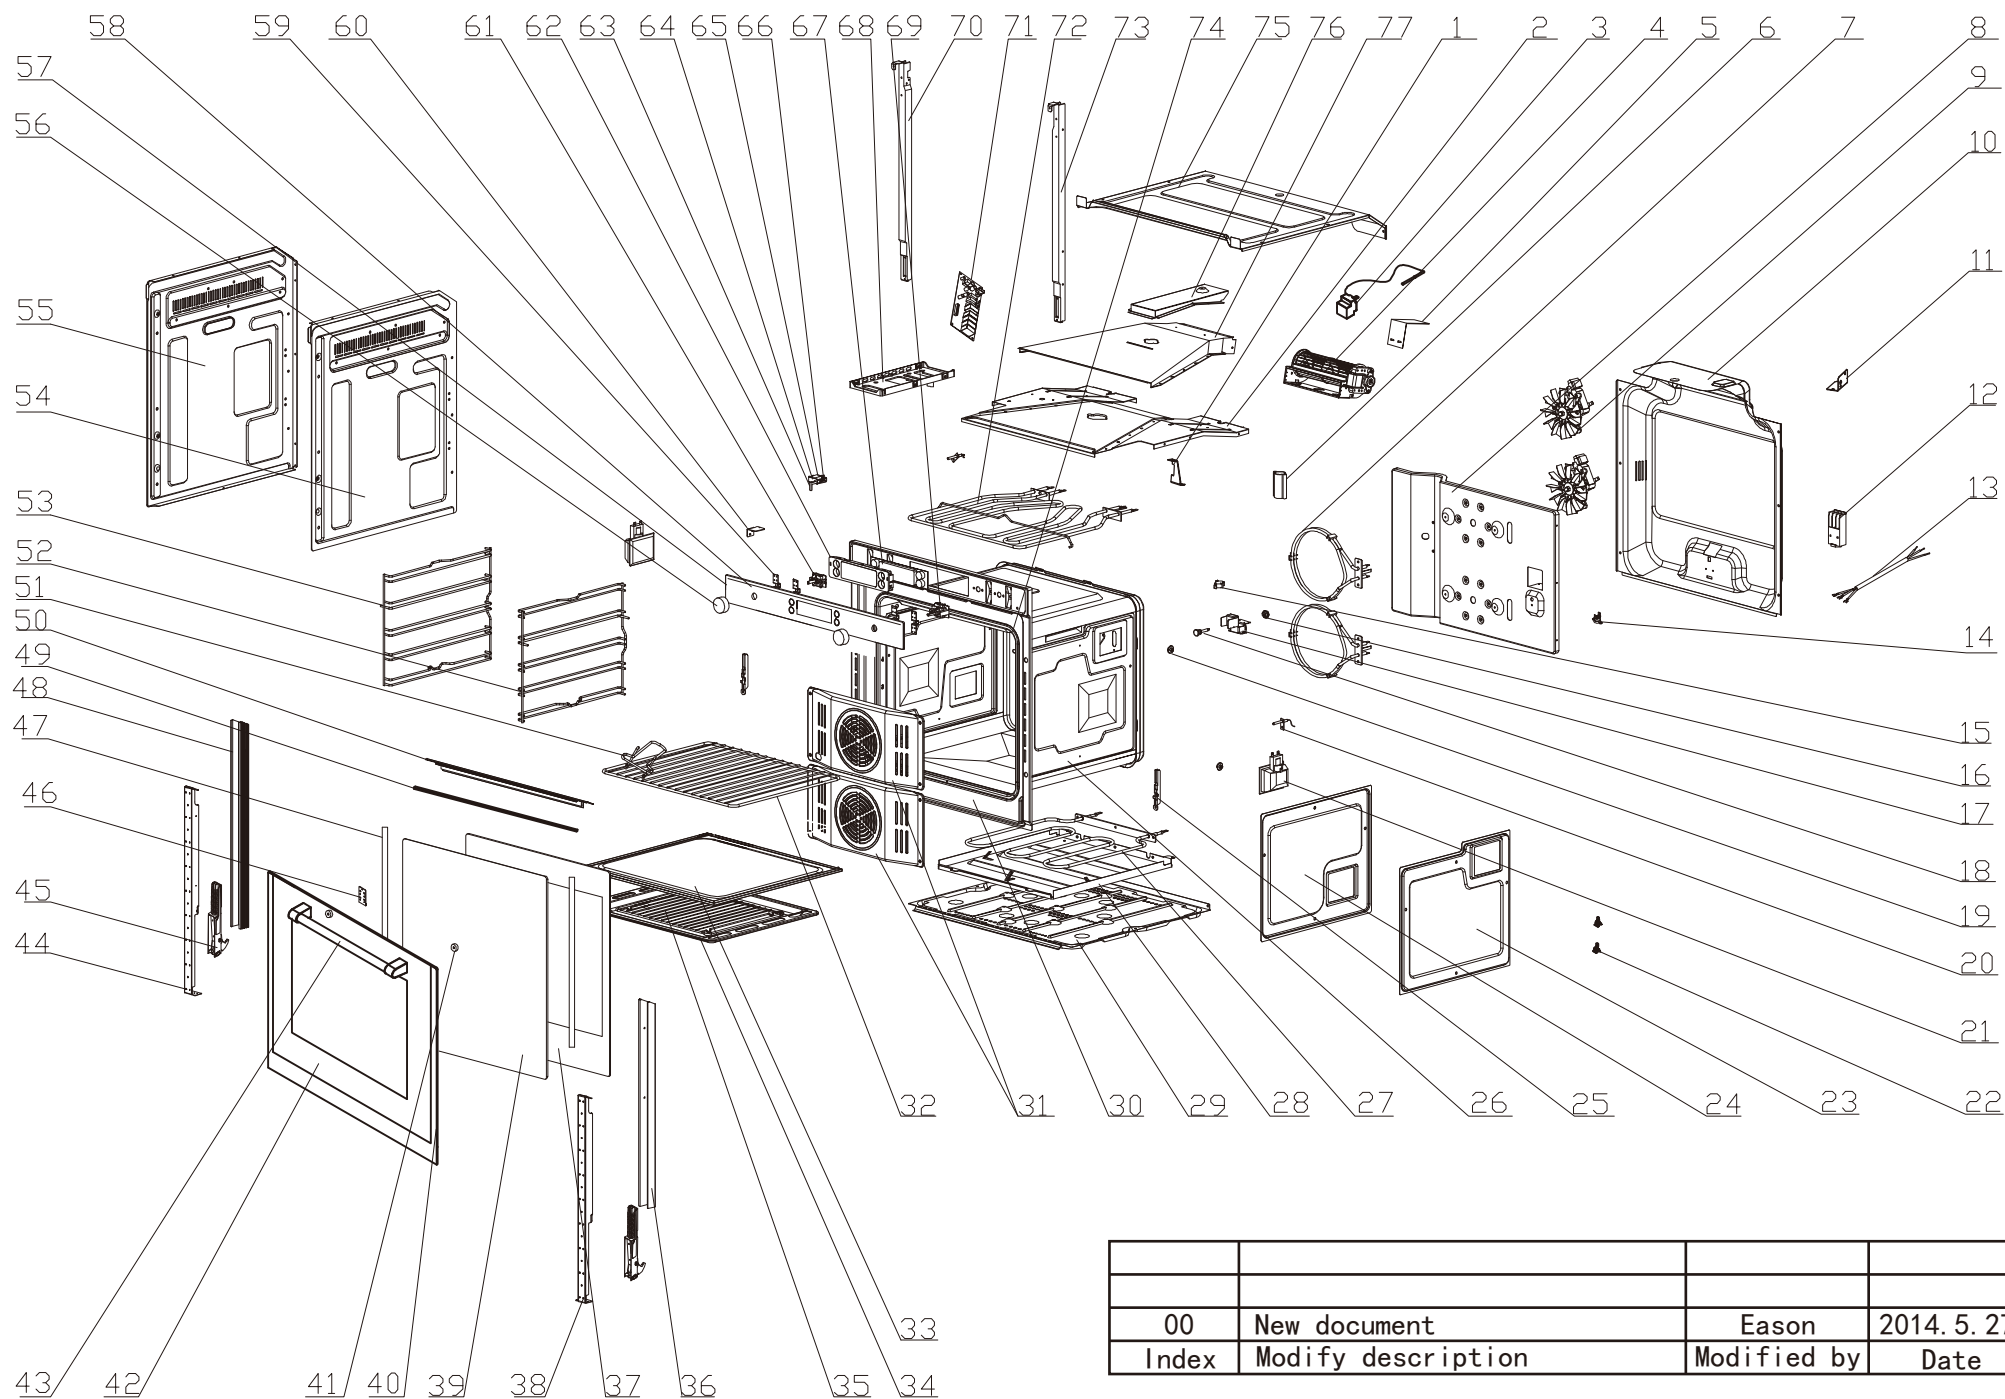

00	New document	Eason	2014. 5. 27
Index	Modify description	Modified by	Date

AMFTZ60SS parts list

NO.	Part code	Part description	Quantity
1	33027008	the block for exhausting pipe base board	1
2	33027005	exhausting pipe base board	1
3	33311013	temperature protector (290 degree)	1
4	33313019	cooling fan assembly	1
5	91127002	insulation paper for cooling fan	1
6	33215007	exhausting pipe	1
7	33303040	rear heating element	2
8	33016002	back support for cavity	1
9	33315016	circulating fan assembly	2
10	33030012	back cover plate	1
11	33004010	temperature protector holder	1
12	33305008	terminal box	1
13	32307016	cable without plug	1
14	34152001	thermostat 140°	2
15	33301022	microwave switch for divider	1
16	33301024	the nut for S.S pin on divider	1
17	33004008	the fixing bracket for the divider sensor	1
18	33301023	the S.S pin on divider for sensor	1
19	33141005	fixing base for side rack panel	4
20	33323001	temperature sensor assembly	2
21	33317001	square lamp assembly	2
22	33035001	thermostat switch sensor fixer	2
23	33039005	removeable side panel (right)	1
24	33039004	removeable side panel (left)	1
25	33005004	fixing panel for hinge	2
26	33058059	cavity assembly	1
27	33303039	bottom heating element	1
28	33003002	the fixing panel for bottom heating element	1
29	33029009	bottom plate	1
30	33018093	Inner bladder panel	1
31	33001022	the cover plate for rear heating elment	1
32	33170001	grill rack	2
33	33316003	Divider	1
34	33224003	baking tray	1
35	33170003	the grill rack for baking tray	1
36	33014014	left fixing panel for oven door glass	1
37	33103013	inner glass	1
38	33014010	the fixing panel for left hinge	1
39	33104010	middle glass	1
40	33015227	s.s trim for door panel	2
41	33214005	the fixing part for handle	2
42	33102321	glass door panel	1
43	33190007	handle no.1	1
44	33014019	the fixing panel for right hinge	1
45	33180008	hinge assembly	2
46	33014063	middle glass stop block	1
47	33219004	embedding strip for glass	1
48	33014015	right bracket for glass	1
49	33219003	top bracket washer	1
50	33014020	top bracket for oven door	1
51	33172001	the handle for grill rack	1
52	33140008	right side rack	1
53	33140007	left side rack	1
54	33032002	right side panel	1
55	33033002	left side panel	1
56	32244031	Knob K21	2
57	33007111	s.s trim for control panel	2
58	33101248	glass control panel	1
59	33006006	the connect panel for control panel	4
60	33004009	fixing panel for door switch bracket	1
61	33316006	4 steps function control switch assembly	1
62	33322006	fixing box for display board	1
63	33005006	slide block for door stwich	1
64	33005005	fixing panel for door switch	1
65	33301020	door switch	1
66	33319002	the spring for door switch	1
67	33321021	display board	1
68	33322007	The fixing bracket for PCB	1
69	33316005	temperature control switch assembly	1
70	33024004	lateral bracket (left)	1
71	33321020	PCB	1
72	33303041	top heating element	1
73	33025004	lateral bracket (right)	1
74	33803002	door seal assembly	1
75	33031009	top cover board	1
76	33026007	exhausting pipe guard board	1
77	33028007	exhausting pipe cover board	1