


COOKE™ &LEWIS

CLEP2ASS




CLEP2ASS - Version: 01

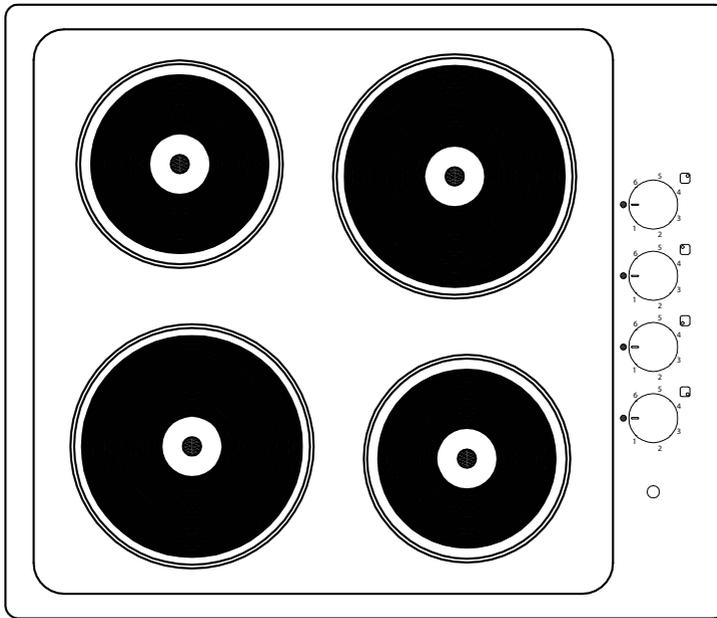

60 cm Solid Plate Electric Hob - Barcode: 5052931268351



WARNING: Read the instructions before using the appliance.

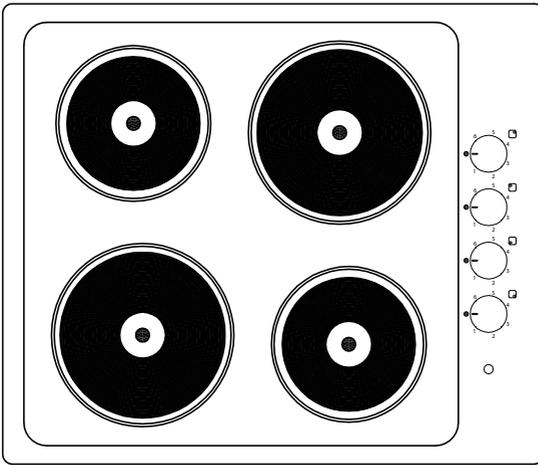

[01] x 1



[02] x 4



[03] x 1

1 : 1



[04] x 4



[05] x 1

CLEP2ASS 60 cm Solid Plate Electric Hob


Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

	Getting started...	04
	Your product	04
	Before you start	04
	Safety	05
	In more detail...	08
	Operation	08
	Care and maintenance	11
	Troubleshooting	13
	Recycling and disposal	14
	Technical specifications	14
	Wiring	15
	Technical and legal information	16
	Guarantee	17
	CE Declaration of conformity	19
	Appendix...	
	Installation	20

Your product Before you start

Your product

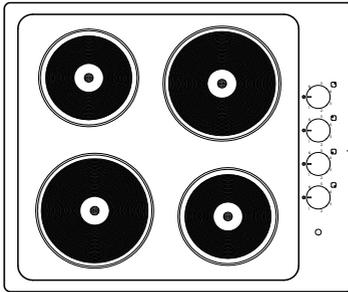

Control panel

Installation guide
located at the end of
the guidebook

Things to check before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 0144 75261 (Ireland).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

You will need



Safety

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
 - This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.
-
- ✓ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
 - ✓ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance.
 - ✓ The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
 - ✓ Children should be supervised to ensure that they do not play with the appliance.

- ✓ This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- ✓ Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.
- ✓ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ✓ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ✓ Do not allow the electric cables to touch the hot parts of the appliance.
- ✓ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.


Safety

- Please dispose of the packing material carefully.
- Do not use flammable sprays in close vicinity to the appliance.
- We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of external timer or separated remote-control system.
- The appliance is for domestic use only.
- When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the metal surface.
- Do not store detergents or flammable materials beneath the hob.
- Do not leave hot oils or fats unattended as they may catch light.
- The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.

Product functions


- 2 x 2.00 kW thermostatic plates (diameter 180 mm). Rapid hot plates.
- 2 x 1.50 kW thermostatic plates (diameter 155 mm). Semi-rapid hot plates.
- Side control operation. 6 power levels.

Control elements

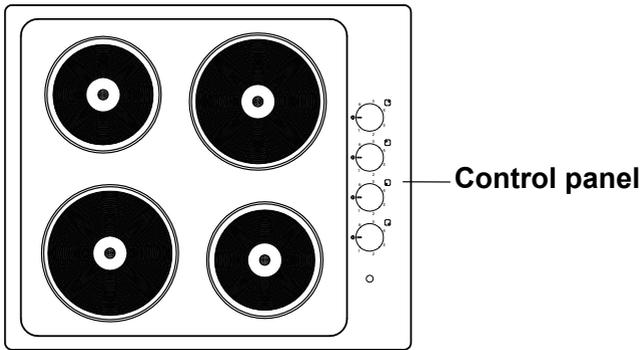

Reference	Description	Qty
A	Rapid hot plates	2
B	Semi-rapid hot plates	2
C	Control panel	1

Operation

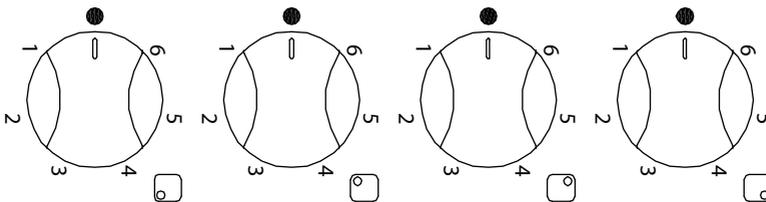

Caution

Any film or stickers that are present on the hob surface when it is delivered should be removed before use.

Care should be used when utilizing the appliance, otherwise there is a risk of burns being caused.


If fat and oil overheats, then it can ignite extremely quickly. For this reason, when cooking with fat and oil the appliance should not be left unattended. Make sure that all of the cooking zones are switched off after use.

Before first use


- You should switch on one cooking zone at a time, for 5 minutes at the maximum setting. This will help to eliminate any new smell that exists and evaporate any humidity that has formed on the heating elements during transit. Make sure the room is properly ventilated during this procedure.
- When doing this burn off process, an appropriately sized saucepan containing cold water should be placed on the zone in question.
- Do not burn off more than one zone at once.

Control knobs

- All operations are performed by means of the 4 control knobs that can be found on the right hand side of the hob top.
- The control knobs can be turned either clockwise or anti-clockwise to select a heating level. The numbers around the outside of each control knob indicates the power level that you have set the zone to.
- A marking to the bottom right of each control knob, indicates which zone that it controls.

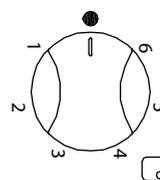

Turning on a zone and setting a power level

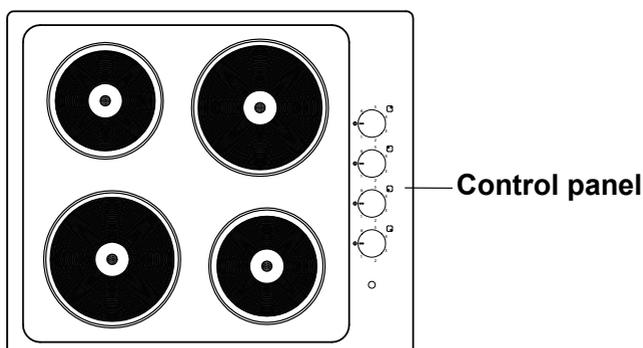

- Turn the control knob of the zone that you wish to cook on, clockwise or anticlockwise until it reaches the power level that you desire.
- Each cooking zone can be adjusted between 1 and 6, one being the coolest zone setting and six being the hottest zone setting.
- When you have finished cooking, make sure that you turn the control knob anti-clockwise, to the 0 position.

Turning on a zone and setting a power level

Burner		Recommended pan diameters (cm)
A	Semi-rapid burner	14-22
B	Rapid burner	18-22

Hob guidelines

- The first few times the hob top is used, it may give off an acrid, burning smell.
- This smell will disappear completely with repeated use.
- The hob surface is fitted with cooking areas of different diameter and power.
- The positions where the heat will radiate from are clearly marked on the hob top. The saucepans must be positioned exactly on these zones for efficient heating to occur. Pans should have the same diameter as the cooking zone that they are being used on.
- You should not use saucepans with rough bottoms, as this can scratch the solid plates.
- Before use, make sure that the bottoms of the saucepans are clean and dry.
- When cold, the bottom of the pans should be slightly concave, as they expand when hot and lie flat on the surface of the hob. This will allow the heat to transfer more easily.
- The best thickness for the bottom of the pans is 2 – 3 mm of enameled steel and 4 – 6 mm for stainless steel with sandwich type bottoms.
- If these rules are not followed, then there will be a great loss of heat and energy. Heat not absorbed by the saucepan, will spread to the hob, frame and surrounding cabinets.
- Preferably cover pans with a lid to permit cooking at a lower heat.
- Always cook vegetables and potatoes, etc. in as little water to reduce cooking times.
- Food or liquid that has high sugar content may damage the hob top if it comes into contact with the hob surface. Any spillages should be wiped up immediately, however this may not prevent the hob surface from becoming damaged.

Care and maintenance



If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.



For domestic use only.



When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the ceramic surface.



Do not leave metal objects, such as knives, forks, spoons and lids on the hob as they may get hot.



Do not put detergents or flammable materials beneath the hob.




If the surface of the hob is cracked, disconnect from power supply the appliance to avoid any possibility of electric shocks.



Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact an official distributor or authorised dealer.

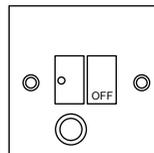

Caution

- Use soapy water and a cloth for cleaning. Never use abrasive powders.
- Avoid banging pots and pans down on the hob.
- Cleaning and maintenance operations must only be carried out when the hob is cool.

- The appliance should be cleaned after use.
- Wipe the inner and outer surface of the appliance and its accessories with wet cloth.
- Any liquid overflowing from the pan must always be removed with a cloth.
- Any residues that are left on the hob top surface from cleaning agents will damage it.

Care and maintenance

After each use

- Wipe the inner and outer surface of the appliance and its accessories with wet cloth.
- Dry the appliance by the surface with a clean cloth.
- If the hob top is heavily soiled a suitable stainless steel cleaner should be used.



Note: If a stainless steel cleaner is not used regularly, then it is possible for the surface of the hob to change colour over a period of time.

Using a specialist hob cleaner

- It is possible to purchase specialist stainless steel cleaner/conditioner.
- You should follow the instructions given by the manufacturer of the specialist stainless steel cleaner/conditioner. You should ensure that it is suitable for use on your appliance.

Maintaining the solid plates

- If something is spilt onto the plate itself, then it can be removed using a soft brush, plastic or nylon scourer and warm water when the plate is cool.
- To keep the solid plates in good condition, you should put a little olive oil on a kitchen towel and rub it onto the surface of the plate. The next time the plate is used, then it may produce a little smoke.
- Alternatively you can use a hotplate conditioner. The manufacturer's instructions should be followed when using these products.



Note: If the solid plates are not maintained regularly with olive oil or a hotplate conditioner, then they may rust.

Troubleshooting

The following circumstances may not be a problem. Do not contact the customer services until the problem has been confirmed.

If your appliance is still not functioning properly after making the below checks, please contact customer services.

Do not take the appliance apart yourself, as you may damage the hob.

Problem	Possible cause	Possible solution
The cooking zones are not functioning or will not switch on	The mains electrical supply is disconnected	Check that the mains electrical supply to the appliance is correct and working
	The mains fuse is broken.	Check the mains fuse
A humming sound is heard when a cooking zone is selected	The sound disappears when the zone heats up	It is normal
The cooking zones have become discoloured	Caused by burning of remnants on zone	This will not affect the working of the appliance. You should make sure that the cleaning instructions are being followed regularly
Only two of the zones on my hob are working	Electrical connection failure	Recheck that the terminal screws are all tightened between the links

Recycling and disposal

Technical specifications

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.


On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical specifications

Supply voltage	220-240V~, 50Hz
Max. rated inputs	7000W
Dimensions (W x H x D)	590 x 100 x 500mm
Net weight	11.2kg

* Double pole switched fused outlet with 3 mm contact gap.

Wiring

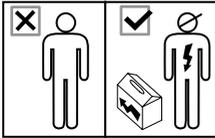


All installation work must be carried out by a competent person or qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hob.



WARNING: THIS APPLIANCE MUST BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

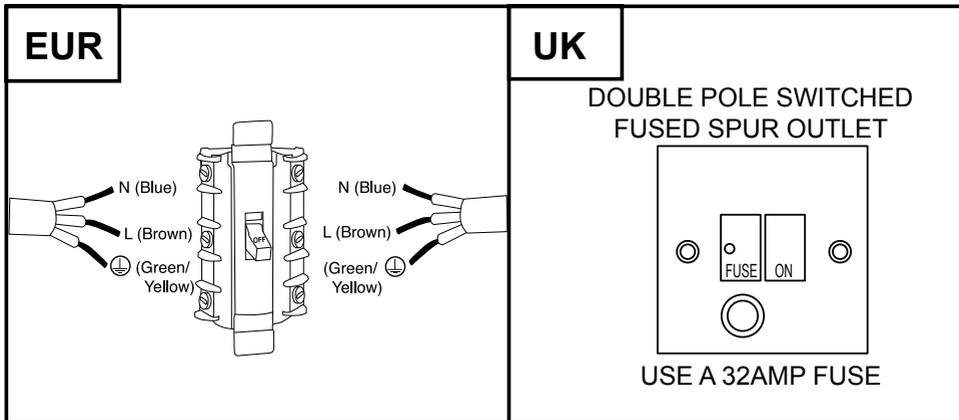

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Technical and legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.



WARNING: THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 32 Amps.

The wires in the mains lead are coloured in accordance with the following code:

Brown = L - Live

Blue = N - Neutral

Green/Yellow = ⊕ - Earth

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Guarantee

This appliance is covered by a full manufacturer's 2 year parts and 2 year labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Extended parts only warranty

As testimony to our commitment to you as a valued customer of Cooke & Lewis, we will offer you an additional 3 years parts warranty absolutely free.

If during the extended parts warranty period the appliance fails and it is considered uneconomical to repair our Customer Service Department will offer you the opportunity to purchase the same or equivalent model at a discounted price.

All parts supplied free of charge under the extended warranty must be fitted by our approved engineers and will be subject to a call out charge to fit the part.

Guarantee

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland
Phone: 0844 800 1128
Email: uksupport@apelson.co.uk
Web: www.myspareparts.co.uk

Republic of Ireland (Eire)
Phone: 014475261

CE Declaration of Conformity

	
MANUFACTURER:	CATA
ADDRESS:	C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)
<p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p>	
MACHINE APPLICATION:	CLEP2ASS
TYPE:	Electric Hob
EC DIRECTIVES APPLIED:	Comply with the following European Directives 2006/95/CE: LVD (Low Voltage Directive) and the 2004/108/CE: EMC (Electromagnetic Conformity)
APPLIED HARMONIZED STANDARDS:	EN 60335-2-6 2003 + A1:2005 + A2:2008 used in conjunction with EN 60335-1:2002 + A11:2004 + A1:2004 + A12:2006 + A2:2006 + A13:2008 and EN 62233:2008
APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:	ISO9001.2008
PLACE:	Torelló
	<u>David Sala</u> Technical Manager

The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc,
 Chandlers Ford, Hants,
 SO53 3LE United Kingdom
www.diy.com



Clearance

**Warning**


Good ventilation is required around the appliance for easier dissipation of heat and low power consumption.

Sufficient clearance is required around the appliance.

The gap between the hob and any cupboard above it should be at least 600mm.

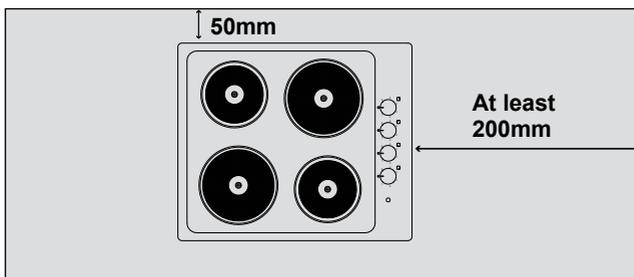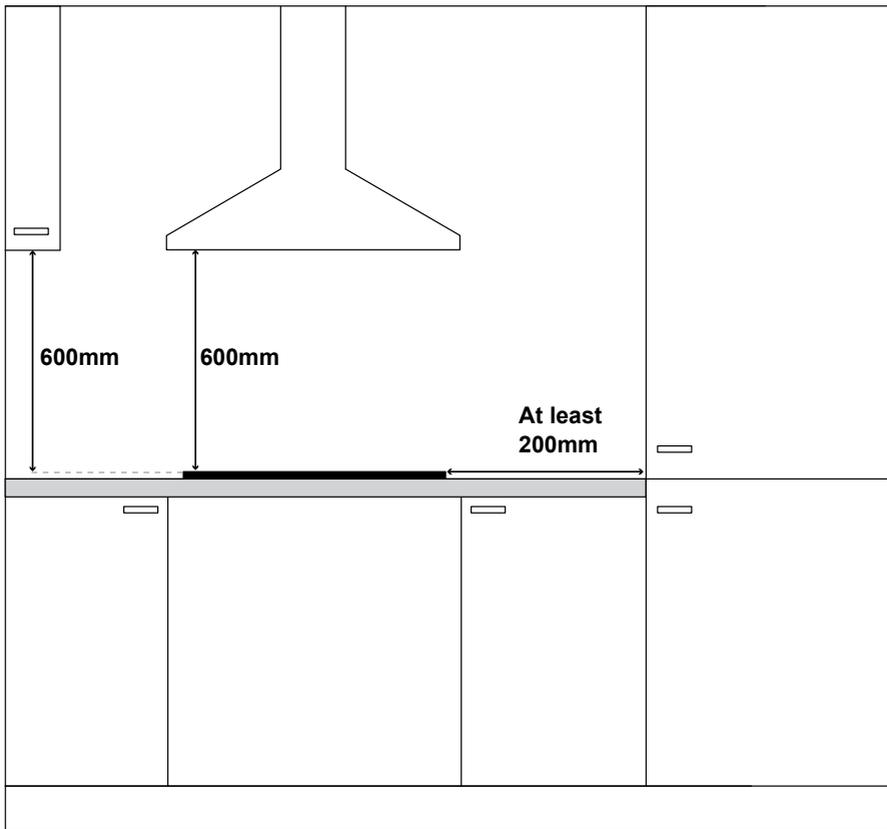

Installation

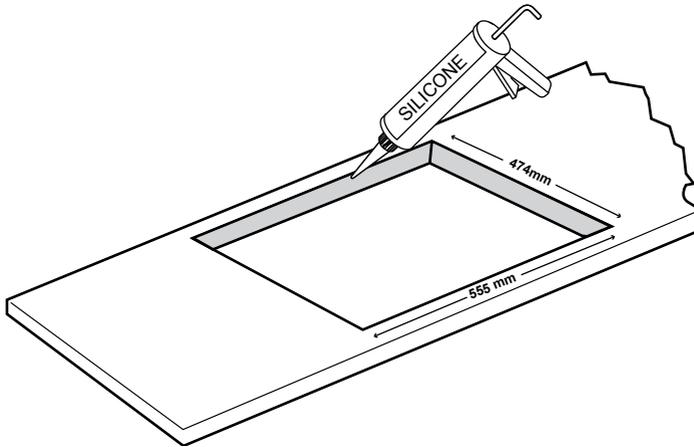


01



[05] x 1

Cut out worktop to the template dimensions with suitable equipment and seal the cut edge with appropriate sealant.

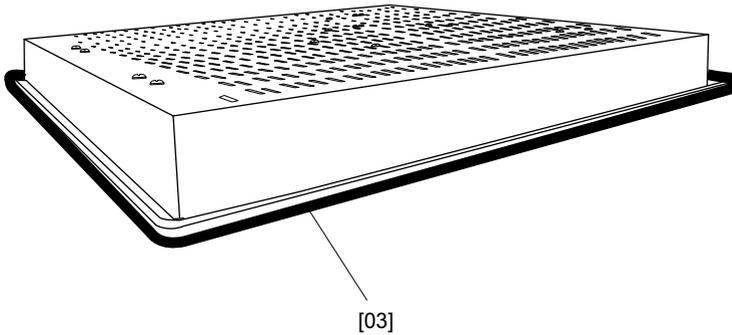


02



[03] x 1

Stretch out the supplied seal along the underside edge of the hob, ensuring the ends overlap.

03

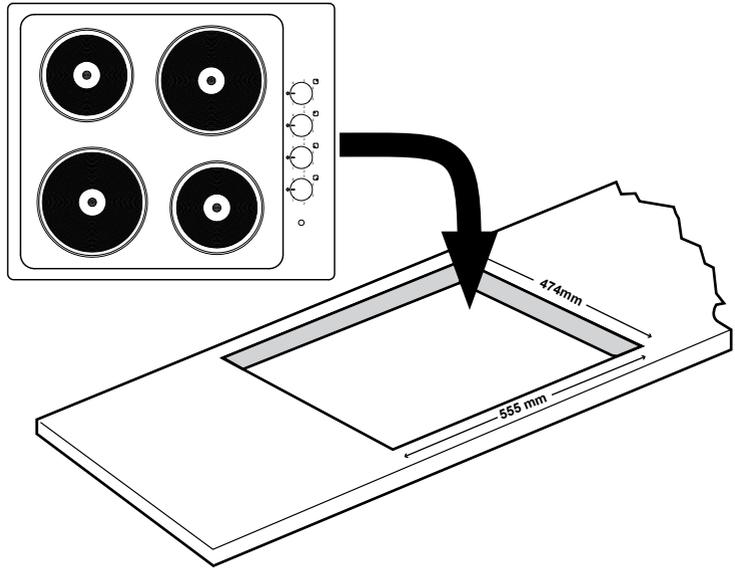


04



[02] x 4



[04] x 4

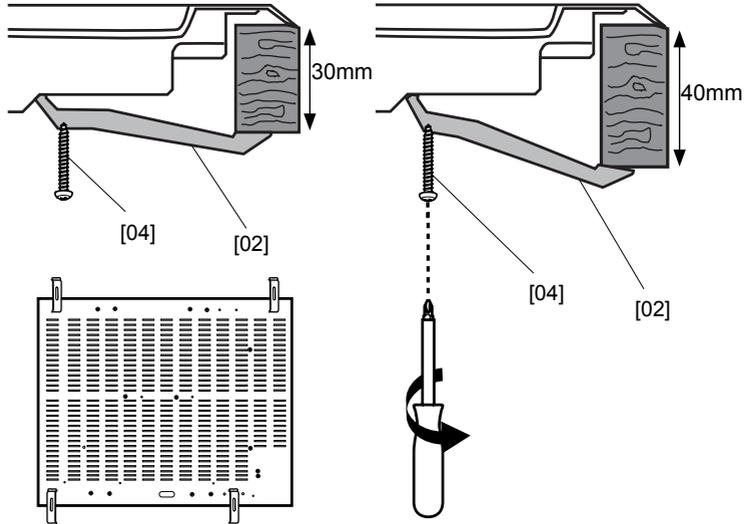

Note: For electrical connection see Technical and legal information section.



B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

