



COOKE[™]
&LEWIS

CLFR1W-C

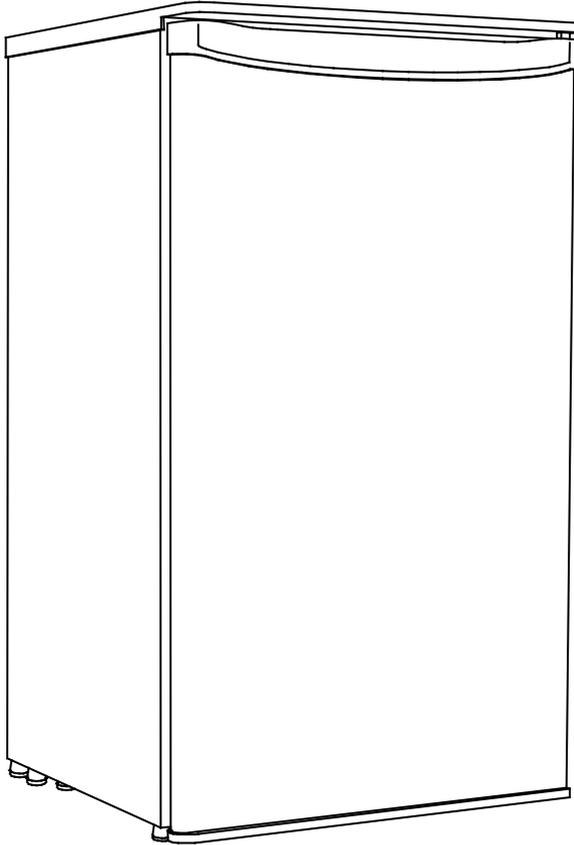

Barcode 5052931055821

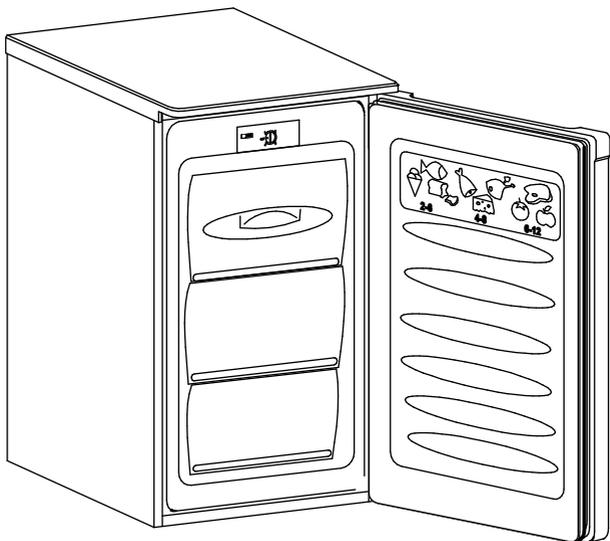


[01] x 1



[02] x 1



[03] x 1

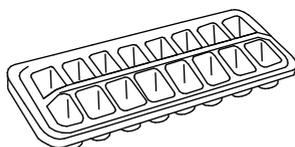

[04] x 1

COOKE™ &LEWIS

CLFR1W-C

GB **IE** Freestanding Freezer

04

Installation

19

Let's get started...



Getting started...

05

Before you start
Safety

06
07

In more detail...

09

Operation
Care and maintenance
Troubleshooting
Recycling and disposal
Technical and legal information
Guarantee
CE Declaration of conformity

10
13
14
15
15
16
18

Appendix

Installation

19




Getting Started...

Before you start

06

Safety

07

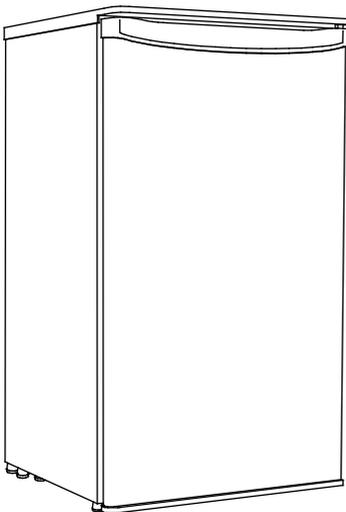

Before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 1 800 535542 (Ireland) and 01 56 48 02 60 (France).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

You will need



These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- Therefore, the Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- Do not allow the electric cables to touch the hot parts of the appliance.
- Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- Do not remove the plug in the presence of flammable gas.
- Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- Please dispose of the packing material carefully.
- Do not use flammable sprays in close vicinity to the appliance.

- We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of external timer or separated remote-control system.
- The appliance is for domestic use only.
- The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- Caution:** Do not place the freezer directly on a carpet or close to a wall or furniture. To avoid damage from impact and shaking.
- Caution:** Do not apply force to any external part such as the pipe, condenser, door or handle when moving
- Caution:** Good ventilation is required around the freezer for easier dissipation of heat, high freezer efficiency and low power consumption. Sufficient clearance is required around the freezer. The freezer should not be placed near anything that may echo.
- Caution:** The floor on which the freezer is to be placed must be flat and solid. It should not be placed on soft material such as foam, etc.
- Connect the freezer to the power supply (220 to 240 V~/50 Hz).
- WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING:** Do not damage the refrigerant circuit.
- WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance
- WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.



This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.



Caution: The cord should be neither lengthened nor coiled up during operation. Moreover, the cord must not be stored close to the compressor at the back of the freezer.




In more detail...

Operation	10
Care and maintenance	13
Troubleshooting	14
Recycling and disposal	15
Technical and legal information	15
Guarantee	16
CE Declaration of conformity	18

Operation

Temperature regulator (thermostat)

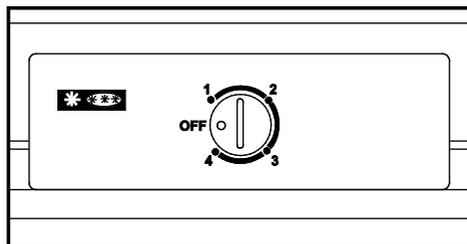

Operating for the first time

- When operating under normal conditions and unloaded, auto mode usually stops at the required temperature in 2 or 3 hours.
- Then set the thermostat to the required setting for the freezer conditions.

Temperature control




Caution: When the thermostat is turned clockwise to position "4", do not attempt to turn it further or it will be damaged.

The freezer temperature can be adjusted by turning the thermostat.

- The closer the knob is set to position "3" position, the lower the temperature. A medium setting is the most suitable for general operations.
- Position "4" is colder than the position "1". The freezer temperature will vary depending on the quantity of food stored and the frequency of door opening.
- Use a wide flat bladed screwdriver or coin to adjust the temperature.

NOTE: In order to maintain good cooling efficiency and save energy, we recommend you do not store too much food inside and do not open the door too frequently.

Defrosting

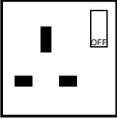

Warning: Always switch off the electricity supply and unplug before performing maintenance work. In the event of a fault, contact customer services.




Caution: The freezer chamber should not be directly heated using hot water or a hair dryer while defrosting to avoid deformation of the inner casing.

NOTE: We recommend defrost the freezer once per year at least, to keep the performance. Have a towel ready as water will splash onto the floor.

NOTE: Water contained inside or the air getting into the freezer when the door is opened forms a layer of frost inside.


Thick frost will make the freezer less efficient. Frost that is more than 2 mm thick should be defrosted.

1. Before defrosting, take the food, the ice tray and the shelf separately from cold chamber -A-.
2. Defrosting in the freezer chamber is operated manually. Set the temperature regulator -1- to the "OFF" position, or alternatively switch off at the mains.
3. Leave the unit door open.
4. Keep removing water from the base to avoid spillages.
5. Switch the appliance back on or adjust the thermostat to the required setting.

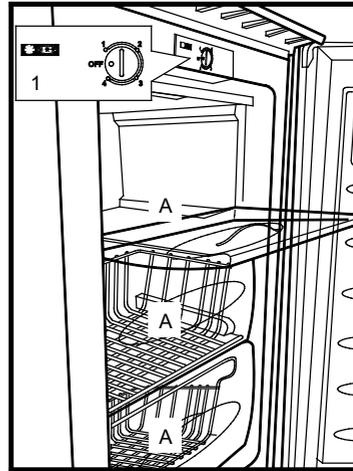

NOTE: The compressor will stop running and ice and frost will dissolve completely and fall to the bottom of the freezer chamber.

6. Wipe off the water with soft cloth in order to speed up defrosting.
7. You may put a bowl of hot water (about 50 °C) into the freezer chamber.
8. So as not damage the inner casing or the surface of the evaporator, ice and frost should not be scraped off.

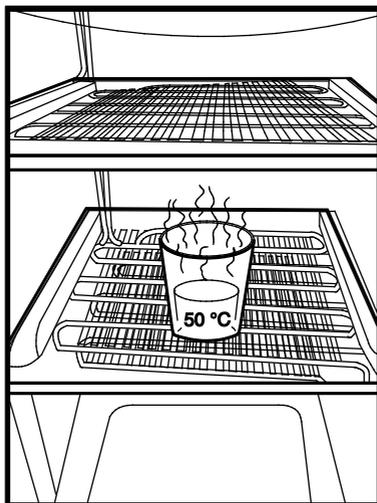

Care



Damaged power cables must be replaced by a competent person or qualified electrician.



For indoor use only.


- Avoid placing the freezer in a place when heavy moisture is present in order to minimise the possibility of its metal parts becoming rusted.

Protection from heat

- The freezer should be kept away from any heat source or direct sunlight.

Maintenance

Machine cleanliness

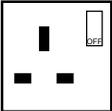

Warning: Always switch off the electricity supply and unplug before performing maintenance work. In the event of a fault, contact customer services.

- The freezer should be cleaned and maintained once a month.
- Wipe the inner and outer surface of the freezer and its accessories with wet cloth. If they are too dirty, scrub them with a neutral detergent and then clean with water and dry with a clean cloth.
- Be careful to check the rubber seals on the doors, as they should remain clean.

Troubleshooting

The following circumstances may not be a problem. Do not contact the customer services until the problem has been confirmed.

If your freezer is still not functioning properly after making the above checks, please contact customer services.

Fault	Cause	Solution
The freezer does not work	There is power failure	Check if there is power failure
	The plug is not connected to the socket	Connect the plug to the socket
	The fuse has blown	Switch off and change the fuse
The freezer is running too noisily	The freezer is touching furniture that can transmit or amplify noise or vibrations	Refer to Assembly
	The freezer is not properly levelled	Refer to Assembly
	The containers or solid packages stored inside are not touching each other	This does not indicate malfunctioning
	The mains supply is not stable	Contact qualified personnel
The freezer is not cooling enough	The door may not have been closed properly	Close the door properly
	The door seals may leak	Contact the customer services
	There may be insufficient clearance between the freezer and the surfaces immediately on both sides and above	Refer to Assembly
	The temperature control dial may not be set properly	Set temperature control properly
	The door is opened too frequently and for too long	This does not indicate malfunctioning

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical and legal information

Technical and legal information

Technical data

Power supply	: 220-240 V~/50 Hz
Rated current	: 0.7A
Capacity	: 80 l
Refrigerant / Amount	: R600a / 28g
Climate class	: N
Net weight	: 27 kg

Legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Manufacturer's Guarantee

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK and N.Ireland – ISDAL Customer Care Centre
T: 0844 8001128 E: uksupport@cnagroup.hk
www.myspareparts.co.uk

Republic of Ireland (ROI) – ISDAL Customer Care Centre
T: 1-800 535542 E: uksupport@cnagroup.hk

France – SIDEPAR Customer Care Centre
T: 01 56 48 02 60 E: callcenter@sidepar.fr

CE Declaration of conformity



MANUFACTURER : CATA

ADDRESS : C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)

We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.

MACHINE APPLICATION : CLFR 1W - C

TYPE : Freezer

EC DIRECTIVES APPLIED : Comply with the essential requirements of the Low Voltage Directive (2006/95/EC) and Electromagnetic Compatibility Directive(2004/108/EC)

APPLIED HARMONIZED STANDARDS :

Standard EN 60335-1:2002+A11:2004+A12:2006+A2:2006+A13:2008

Standard EN60335-2-24:2003+A11:2004+A12005 +A12005+A2:2007

Standard EN55034-1:2006

Standard EN153:2006

Standard EN55034-2:1997+A1:2001

Standard EN ISO15502:2005

Standard EN61000-3-2:2006

Standard EN62233:2008

Standard EN61000-3-3:1995+A1:2001+A2:2005

APPLIED INTERNATIONAL TECHNICAL

STANDARDS AND SPECIFICATIONS : ISO9001:2008


PLACE : Torelló

David Sala
 Technical Manager

This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.


B&Q plc
 Chandlers Ford, Hants
 SO53 3LE United Kingdom
www.diy.com

Castorama
 Parc d'Activités B.P.101
 59175 Templemars - France
www.castorama.fr

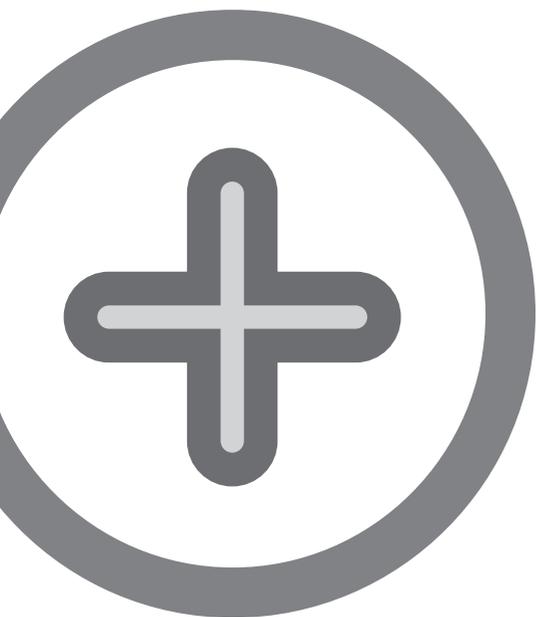


Appendix...

Installation

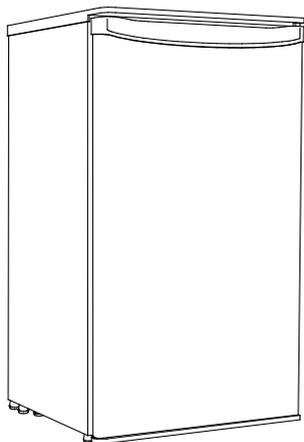


01

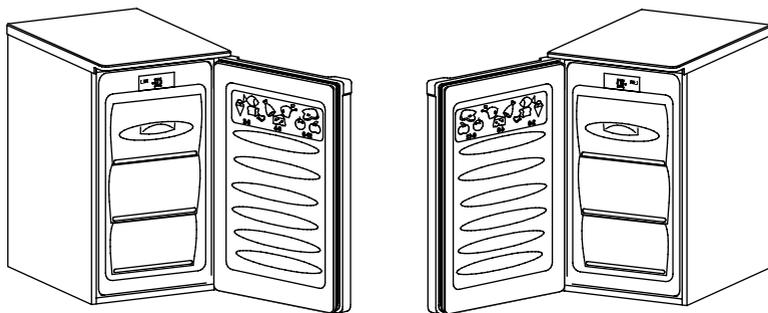


Choose which side you would like the door to open, right handed (standard) or left handed (optional)

02

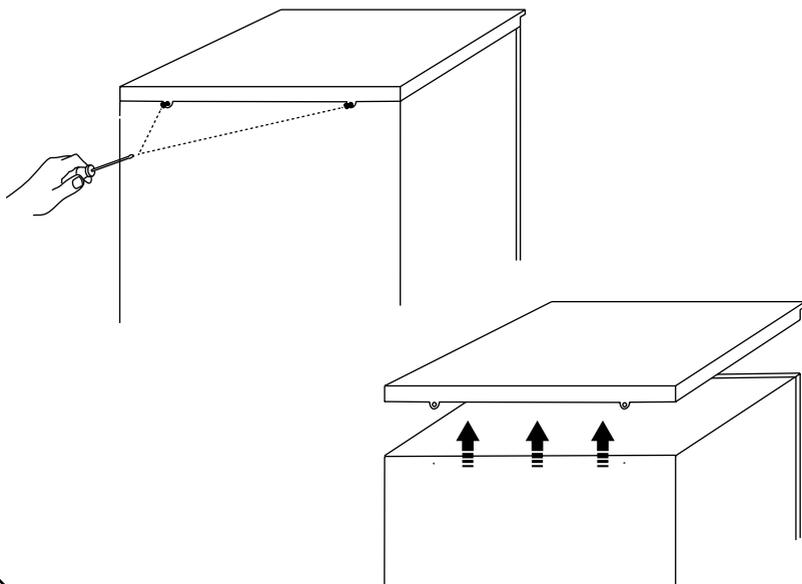


To change door position remove the two screws from back of top panel and lift off panel

03


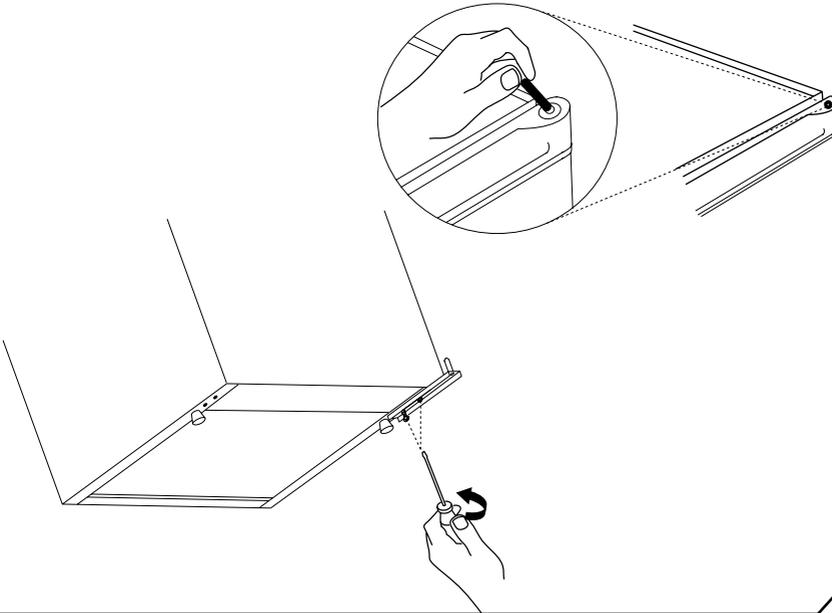


Remove the metal pin from door and detach door by lifting upwards, then position unit so you can remove the two screws holding the bracket onto the bottom of the appliance.

04

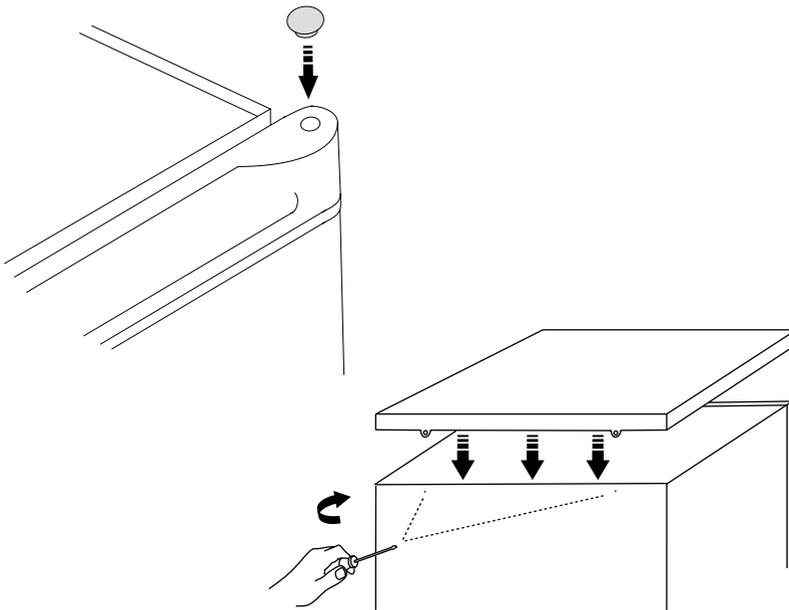

Reposition the bracket on the opposite side of the appliance, remove blanking plug from top of door and insert metal pin, re attach the top panel and tighten screws at rear and insert blanking plug into top of door

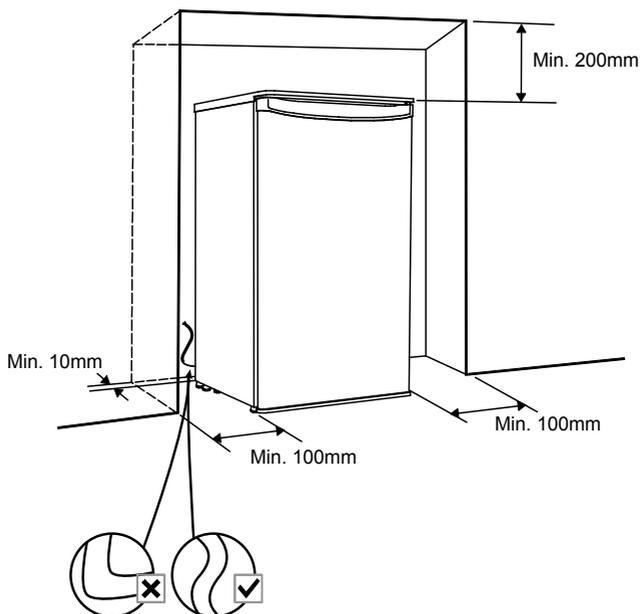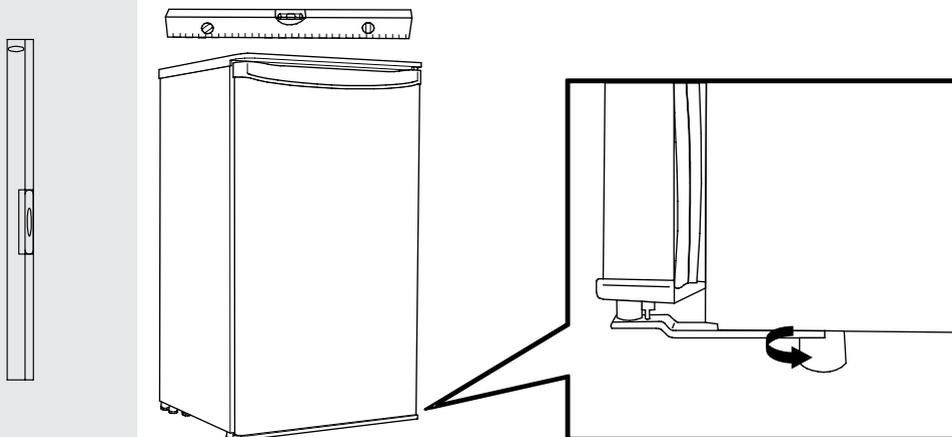

Note: For electrical connection see **Technical and legal information** section



B&Q plc
Chandlers Ford, Hants
SO53 3LE United Kingdom
www.diy.com



Castorama
Parc d'Activités B.P.101
59175 Templemars - France
0 810 104 104
www.castorama.fr
