


REF	Model
ES60SS2 (VER2)	ES60SS2 (VER2)

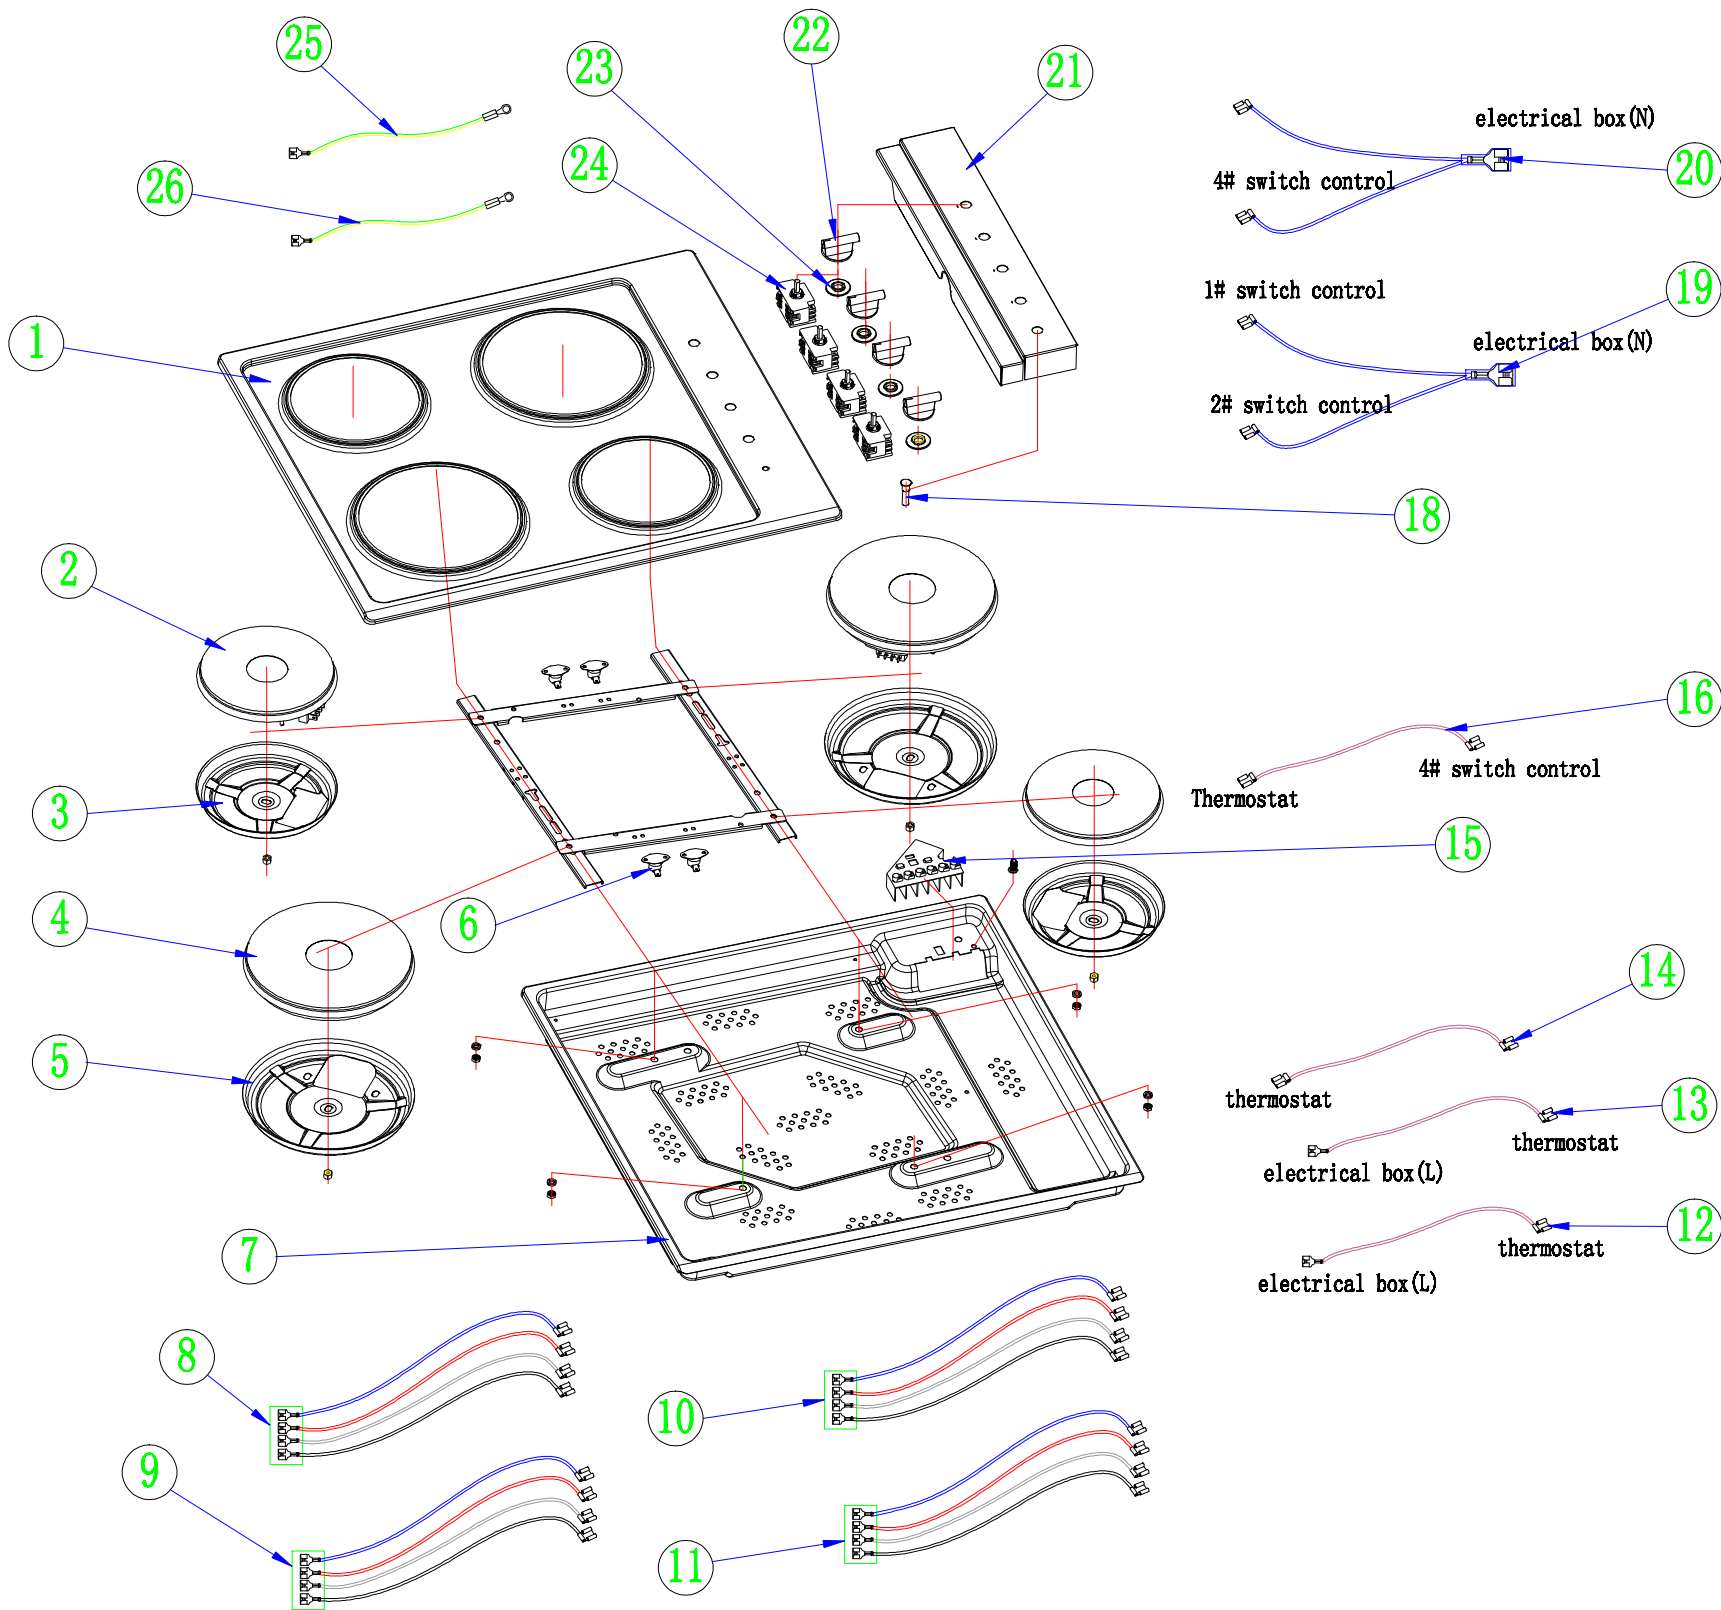

Electric cooker				
S/N	Ref	Description(en)	QTY	Material
1	25102505	PANEL-electric cooker-ES60SS	1	
2	69402755	HP-145R-4 hotplate-electric cooker-ES60SS	2	
3	69402760	Ø145hotplate basement-electric cooker-ES60SS	2	
4	69402765	HP-180R-4 hotplate-electric cooker-ES60SS	2	
5	69402770	Ø180hotplate basement-electric cooker-ES60SS	2	
6	69405560	thermostat-electric cooker-ES60SS2	4	
7	25102515	bottom plate-electric cooker-ES60SS	1	
8	60100135	wire for NO.1 HOTPLATE-electric cooker-ES60SS	1	
9	60100140	WIRE FOR NO.2 HOTPLATE-electric cooker-ES60SS	1	
10	60100145	WIRE FOR NO.3 HOTPLATE-electric cooker-ES60SS	1	
11	60100150	WIRE FOR NO.4 HOTPLATE-electric cooker-ES60SS	1	
12	60100240	17# wire for thermostat-electric cooker-ES60SS2	1	
13	60100245	18# wire for thermostat-electric cooker-ES60SS2	1	
14	60100250	19# wire for thermostat-electric cooker-ES60SS2	1	
15	69402775	electrical box-electric cooker-ES60SS	1	
16	60100255	20# wire-electric cooker-ES60SS2	1	
18	69407635	INDICATION LIGHT(big)-electric cooker-ES60SS	1	
19	60100175	21# CONNECTING WIRE-electric cooker-ES60SS	1	
20	60100180	22# CONNECTING WIRE-electric cooker-ES60SS	1	
21	64700505	switch for heat insulation plate-electric cooker-ES60SS	1	
22	60701625	knob-electric cooker-ES60SS2	4	
23	69402790	screw for knob-electric cooker-ES60SS	4	
24	69402795	switch for knob-electric cooker-ES60SS	4	
25	60100190	24# connecting wire-electric cooker-ES60SS	1	
26	60100195	25# connecting wire-electric cooker-ES60SS	1	

03	change indicator light to big one	Bob.Liu	2010.12.17	03	<div>cata</div> <div>ELECTRODOMESTICOS S.L.</div> <div><div><div></div><div></div></div><div>DIM without tolerance</div><div>.....6 >6...30 >30...120 >...120</div><div>±0.1 ±0.2 ±0.3 ±0.5</div></div>
----	-----------------------------------	---------	------------	----	--