


cata 

ES60SS2

60cm 4x Burner Electric Hob



GB IE

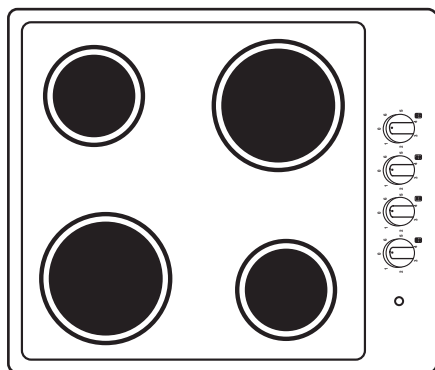

[01] x 1



[02] x 4




[05] x 1

[03] x 4



[04] x 1

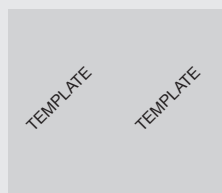



ES60SS2

GB **IE** 60 cm 4 Solid Plate Electric Hob

04

Installation

26

Let's get started...



Getting **started**...

05

Before you start
Safety

06
07

In more **detail**...

09

Product functions
Operation
Care and maintenance
Troubleshooting
Recycling and disposal
Technical and legal information
Guarantee
CE Declaration of conformity

10
11
14
16
17
18
23
25

Appendix

Installation

26




Getting Started...





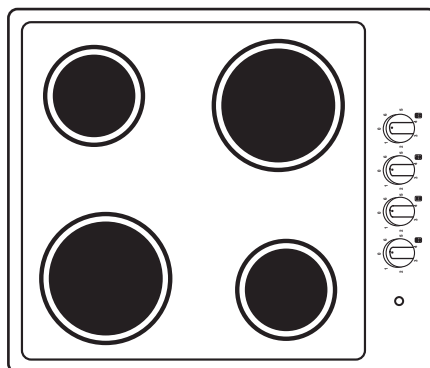

Before you start
Safety

06

07




Before you start

-  To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 1 800 535542 (Ireland) and 01 56 48 02 60 (France).
-  Check the package and make sure you have all of the parts listed.
-  Decide on the appropriate location for your product.
-  If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
-  The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
-  If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

Tools required



Parts not supplied

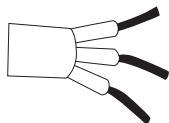

Cable type: H05 RRF 3 core x 2.5 mm²

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☒ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☒ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- ☒ The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ☒ Children should be supervised to ensure that they do not play with the appliance.
- ☒ This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- ☒ Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.
- ☒ Damaged power cables should be replaced by a competent person or qualified electrician.
- ☒ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ☒ Do not allow the electric cables to touch the hot parts of the appliance.
- ☒ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☒ Please dispose of the packing material carefully.
- ☒ Do not use flammable sprays in close vicinity to the appliance.

- ☒ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ☒ A steam cleaner is not to be used.
- ☒ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ☒ The appliance is for domestic use only.
- ☒ When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the metal surface.
- ☒ Do not store detergents or flammable materials beneath the hob.
- ☒ Do not leave hot oils or fats unattended as they may catch light.
- ☒ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.




In more detail...

| | |
|--|----|
| Product functions | 10 |
| Operation | 11 |
| Care and maintenance | 14 |
| Troubleshooting | 16 |
| Recycling and disposal | 17 |
| Technical and legal information | 18 |
| Guarantee | 23 |
| CE Declaration of conformity | 25 |

Product functions


- > 2 x 2.00 kW thermostatic plates (diameter 180 mm). Rapid hot plates.
- > 2 x 1.50 kW thermostatic plates (diameter 145 mm). Semi-rapid hot plates.
- > Side control operation. 6 power levels.

Control elements

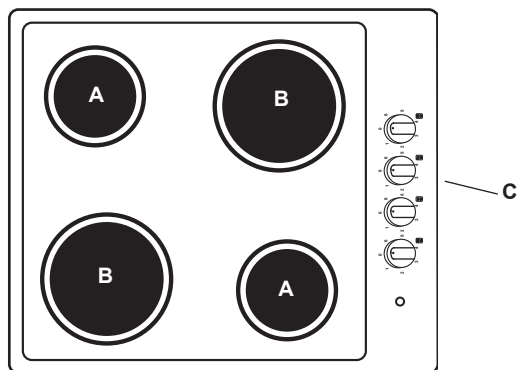

| Reference | Description | Qty |
|-----------|-------------------|-----|
| A | Semi-rapid burner | 2 |
| B | Rapid burner | 2 |
| C | Panel | 1 |

Operation

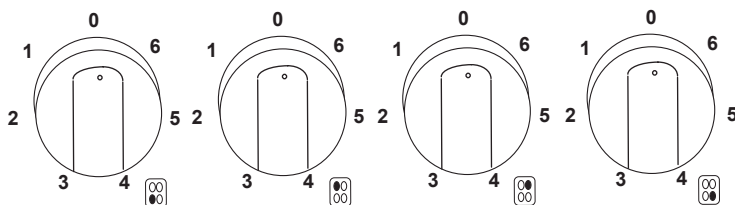

(fig.2)

Before first use



Caution

Any film or stickers that are present on the hob surface when it is delivered should be removed before use.


Care should be used when utilizing the appliance, otherwise there is a risk of burns being caused.

If fat and oil overheats, then it can ignite extremely quickly. For this reason, when cooking with fat and oil the appliance should not be left unattended. Make sure that all of the cooking zones are switched off after use.


- > You should switch on one cooking zone at a time, for 5 minutes at the maximum setting. This will help to eliminate any new smell that exists and evaporate any humidity that has formed on the heating elements during transit. Make sure the room is properly ventilated during this procedure.
- > When doing this burn off process, an appropriately sized saucepan containing cold water should be placed on the zone in question.
- > Do not burn off more than one zone at once.

Control knobs

- > All operations are performed by means of the 4 control knobs that can be found on the right hand side of the hob top. (see fig. 2)
- > The control knobs can be turned either clockwise or anti-clockwise to select a heating level. The numbers around the outside of each control knob indicates the power level that you have set the zone to. (see fig.3)
- > A marking to the bottom right of each control knob, indicates which zone that it controls.

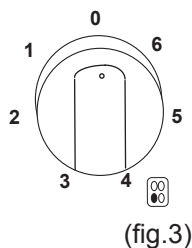

Turning on a zone and setting a power level

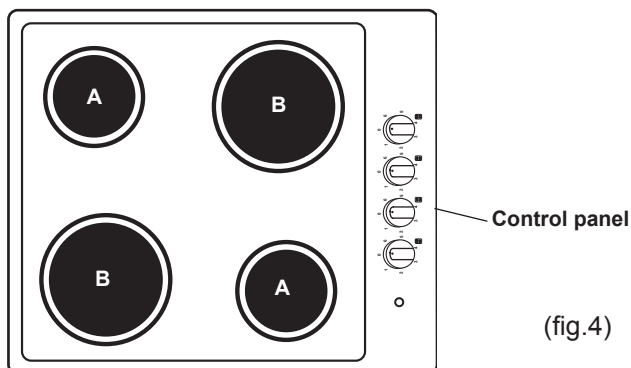

- > Turn the control knob of the zone that you wish to cook on, clockwise or anticlockwise until it reaches the power level that you desire. (see fig.4)
- > Each cooking zone can be adjusted between 1 and 6, one being the coolest zone setting and six being the hottest zone setting.
- > When you have finished cooking, make sure that you turn the control knob anti-clockwise, to the 0 position.

| Burner | | Recommended pan diameters (cm) |
|--------|-------------------|--------------------------------|
| A | Semi-rapid burner | 14-26 |
| B | Rapid burner | 18-26 |

Hob guidelines

- > The first few times the hob top is used, it may give off an acrid, burning smell.
- > This smell will disappear completely with repeated use.
- > The hob surface is fitted with cooking areas of different diameter and power.
- > The positions where the heat will radiate from are clearly marked on the hob top. The saucepans must be positioned exactly on these zones for efficient heating to occur. Pans should have the same diameter as the cooking zone that they are being used on.
- > You should not use saucepans with rough bottoms, as this can scratch the solid plates.
- > Before use, make sure that the bottoms of the saucepans are clean and dry.
- > When cold, the bottom of the pans should be slightly concave, as they

expand when hot and lie flat on the surface of the hob. This will allow the heat to transfer more easily.

- > The best thickness for the bottom of the pans is 2 – 3 mm of enameled steel and 4 – 6 mm for stainless steel with sandwich type bottoms.
- > If these rules are not followed, then there will be a great loss of heat and energy. Heat not absorbed by the saucepan, will spread to the hob, frame and surrounding cabinets.
- > Preferably cover pans with a lid to permit cooking at a lower heat.
- > Always cook vegetables and potatoes, etc. in as little water to reduce cooking times.
- > Food or liquid that has high sugar content may damage the hob top if it comes into contact with the hob surface. Any spillages should be wiped up immediately, however this may not prevent the hob surface from becoming damaged.

Care



Damaged power cables should be replaced by a competent person or qualified electrician.



For domestic use only.



When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the ceramic surface.



Do not leave metal objects, such as knives, forks, spoons and lids on the hob as they may get hot.



Do not put detergents or flammable materials beneath the hob.



If the surface of the hob is cracked, disconnect from power supply the appliance to avoid any possibility of electric shocks.


Maintenance

Appliance cleanliness



Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

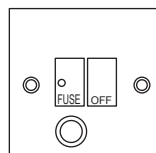

**Caution**

- Use soapy water and a cloth for cleaning. Never use abrasive powders.
- Avoid banging pots and pans down on the hob.
- Cleaning and maintenance operations must only be carried out when the hob is cool.

- > The appliance should be cleaned after use.
- > Wipe the inner and outer surface of the appliance and its accessories with wet cloth.
- > Any liquid overflowing from the pan must always be removed with a cloth.
- > Any residues that are left on the hob top surface from cleaning agents will damage it.

After each use

- > Wipe the inner and outer surface of the appliance and its accessories with wet cloth.
- > Dry the appliance by the surface with a clean cloth.
- > If the hob top is heavily soiled a suitable stainless steel cleaner should be used.
- > NOTE: If a stainless steel cleaner is not used regularly, then it is possible for the surface of the hob to change colour over a period of time.

Using a specialist hob cleaner

- > It is possible to purchase specialist stainless steel cleaner/conditioner.
- > You should follow the instructions given by the manufacturer of the specialist stainless steel cleaner/conditioner. You should ensure that it is suitable for use on your appliance.

Maintaining the solid plates

- > If something is spilt onto the plate itself, then it can be removed using a soft brush, plastic or nylon scourer and warm water when the plate is cool.
- > To keep the solid plates in good condition, you should put a little olive oil onto a kitchen towel and rub it onto the surface of the plate. The next time the plate is used, then it may produce a little smoke.
- > Alternatively you can use a hotplate conditioner. The manufacturer's instructions should be followed when using these products.

> NOTE: If the solid plates are not maintained regularly with olive oil or a hotplate conditioner, then they may rust.

Troubleshooting

The following circumstances may not be a problem. Do not contact the customer services until the problem has been confirmed.

If your appliance is still not functioning properly after making the below checks, please contact customer services.

Do not take the appliance apart yourself, as you may damage the hob.

| Potential failure mode | Potential cause | Corrective action |
|---|---|---|
| The cooking zones are not functioning or will not switch on | The mains electrical supply is disconnected | Check that the mains electrical supply to the appliance is correct and working |
| | The mains fuse is broken. | Check the mains fuse |
| A humming sound is heard when a cooking zone is selected | The sound disappears when the zone heats up | It is normal |
| The cooking zones have become discoloured | Caused by burning of remnants on zone | This will not affect the working of the appliance. You should make sure that the cleaning instructions are being followed regularly |
| Only two of the zones on my hob are working | Electrical connection failure | Recheck that the terminal screws are all tightened between the links |

Recycling and Disposal

Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

 
Technical data

| | | |
|-----------------------------|--------|-------------------|
| Power supply | V / Hz | 220-240 V~/ 50 Hz |
| Max. Rated Inputs | kW | 7.00 |
| Supply connection | A | 30 * |
| Mains supply lead | | 3 x 2.5 |
| External dimensions (WxHxD) | mm | 580 x 45 x 500 |
| Net weight | kg | 8.9 |

*Double pole switched fused outlet with 3 mm contact gap.

Legal information


The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.



All installation work must be carried out by a competent person or qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

Warning: THIS APPLIANCE MUST BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

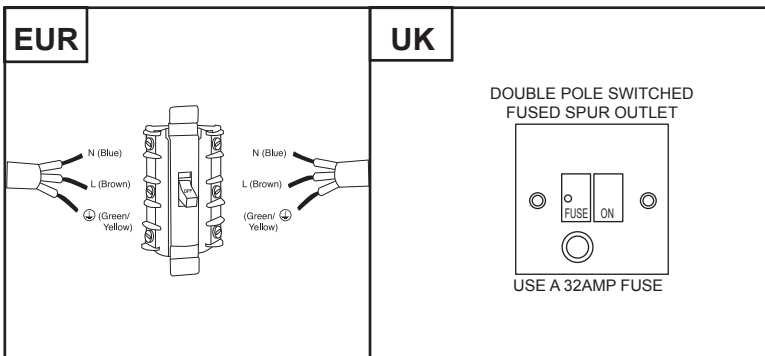

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

If the cable is damaged or to be replaced, the operation must be carried out by a qualified electrician with dedicated tools to avoid any accidents.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

The cable must be checked regularly and replaced by authorized technicians only.

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.

WARNING: THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only
A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 32 Amps.

The wires in the mains lead are coloured in accordance with the following code:

Brown = L - Live


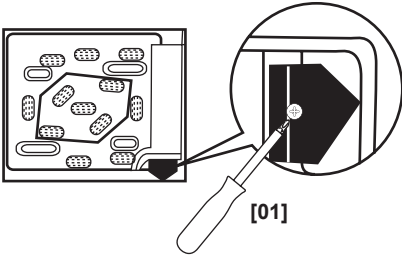
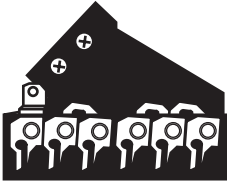
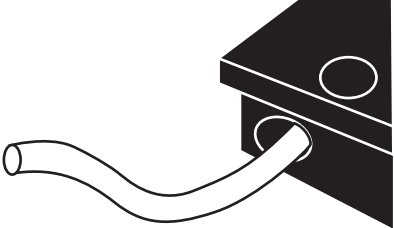
Blue = N - Neutral

Green/Yellow = - Earth

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Disconnect the appliance from the mains supply before carrying out any kind of maintenance or cleaning.

Electrical connection

| | |
|---|---|
| <p>01</p>  |  <p>[01]</p> |
| <p>02</p> |  <div data-bbox="564 857 909 925"> <p>240V IN~ H05 RR-F3x2.5</p> <p>1 2 3 4 5</p> <p>L N PE</p> </div> |
| <p>03</p> |  |

In more detail...

Connect the appliance to the power supply (220 to 240 V~/ 50 Hz).

Disconnection devices must be fitted to the wiring in accordance with wiring regulations.

- > This appliance must be wired into a 32 A double pole switched fused spur outlet, having 3 mm contact separation and placed in an easily accessible position adjacent to the appliance. It should not be located above the appliance and no more than 1.25 m away from it.
- > The spur outlet must still be accessible even when your oven is located in its operating position.

- > Cable type: H05 RRF 3 core x 2.5 mm²

Connecting the mains supply cable

- > The mains terminal block is located on the underside of the hob and the terminals are accessible by removing the terminal block cover by removing the cover screw.
- > The cable connections must be in accordance with the diagram located on the bottom of the hob.
- > The brass links must be positioned as marked in the appropriate diagram.
- > NOTE: ALL terminal screws must be tightened down firmly.

Manufacturer's Guarantee

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK and N.Ireland – ISDAL Customer Care Centre


T: 0844 8001128 E: uksupport@cnagroup.hk

www.myspareparts.co.uk

Republic of Ireland (ROI) – ISDAL Customer Care Centre

T: 1-800 535542 E: uksupport@cnagroup.hk


CE Declaration of Conformity

| | | |
|---|--|---|
| MANUFACTURER: CATA | |  |
| <p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p> | | |
| MACHINE APPLICATION: | ES60SS2 | |
| TYPE: | Electric Hob | |
| APPLIED HARMONIZED STANDARDS: | | |
| Standard EN 60335-2-102:2006 | | |
| Standard EN 60335-1:2002 + A1:2004 + A12:2006 + A2:2006 | | |
| Standard EN 50366:2003 + A1:2006 | | |
| APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS: | | |
| | | ISO9001.2008 |
| PLACE: | Torelló | |
| | <div>David Sala</div> <div>Technical Manager</div> | |

In more detail...

The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

Appendix...

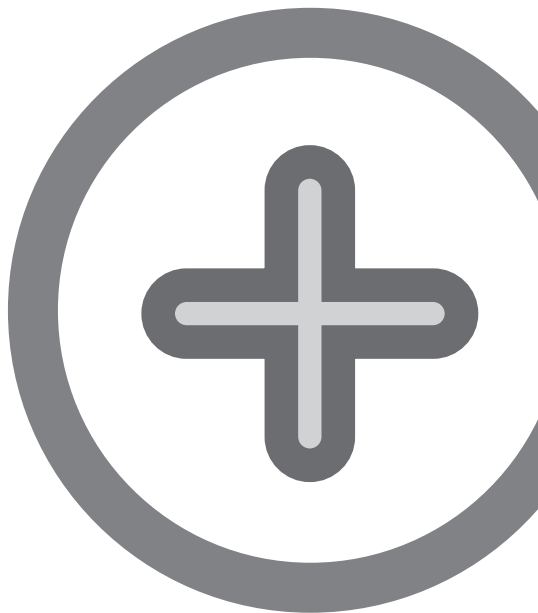


Installation

Clearance




Warning

Good ventilation is required around the appliance for easier dissipation of heat and low power consumption. Sufficient clearance is required around the appliance. The gap between the hob and any cupboard above it should be at least 750mm.

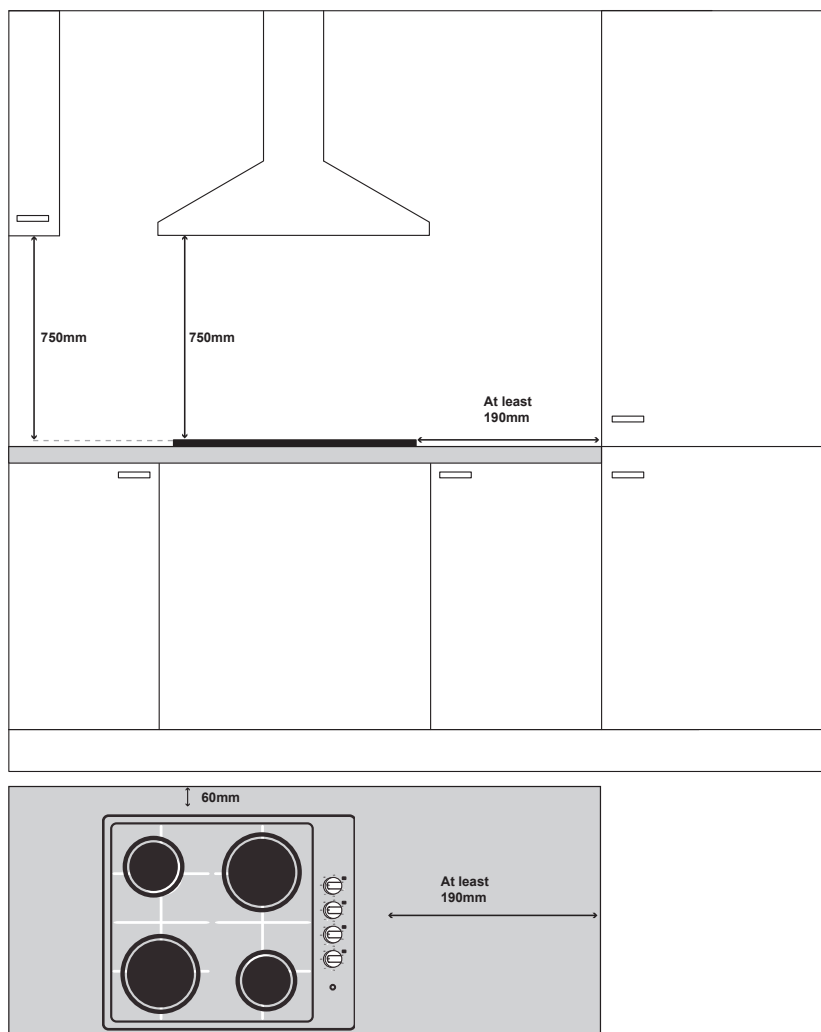


Installation

01

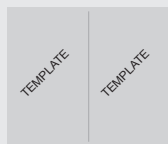

[04] x 1

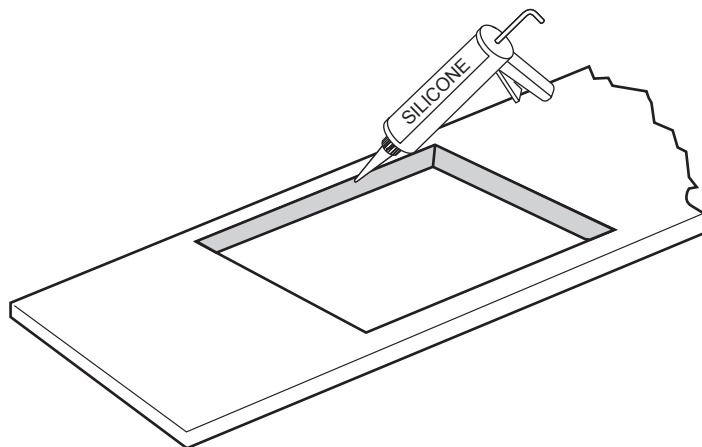


Cut out worktop to the template dimensions with suitable equipment and seal the cut edge with appropriate sealant.

02




[05] x 1

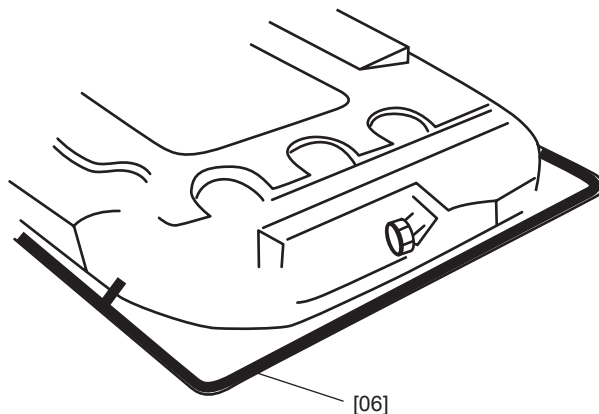


Stretch out the supplied seal along the underside edge of the hob, ensuring the ends overlap.

03

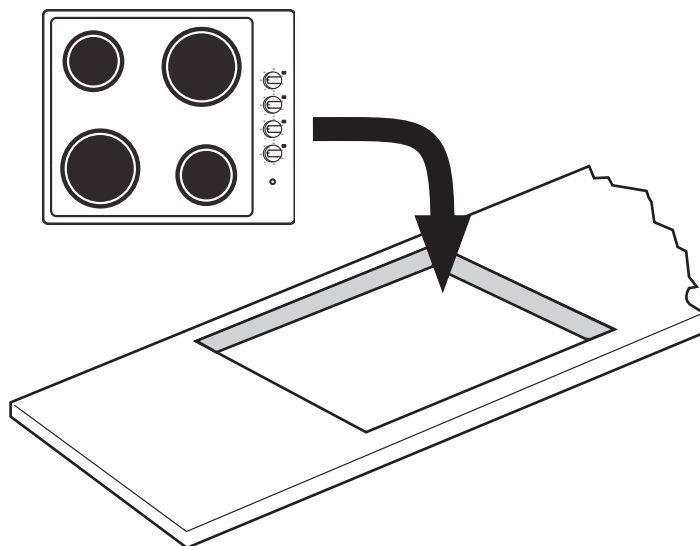

04

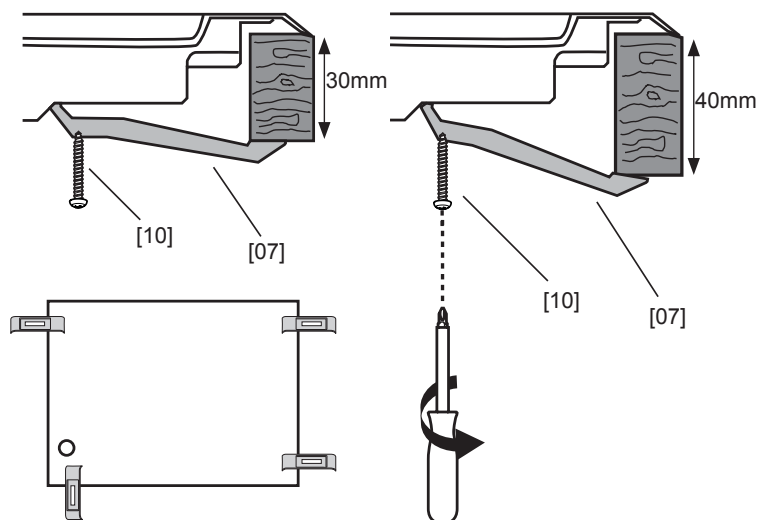

[07] x 4



[10] x 4



Note: For electrical connection see **Technical and legal information** section

Notes

[illegible]

Notes

[illegible]



CNA Trading U.K. Ltd
Hillbrow House
Hillbrow Road
Esher
Surrey
KT10 9NW
