


COOKE™ &LEWIS

60cm Ceramic Hob

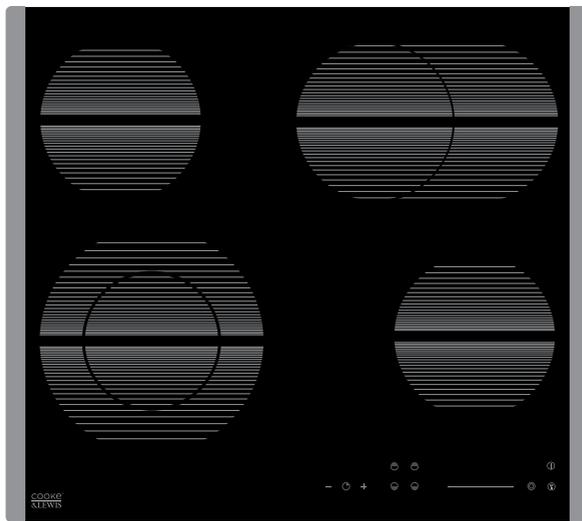


HEC60CL - Version: 01




60cm Ceramic Hob - Barcode: 5052931258598



WARNING: Read the instructions before using the appliance.

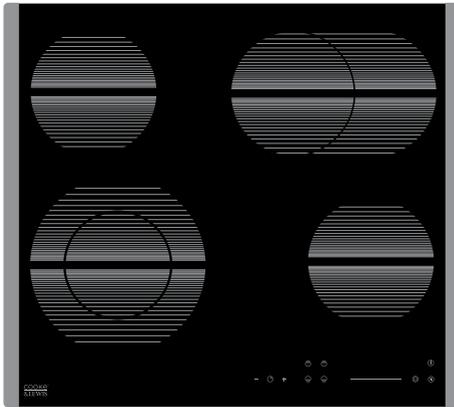

[01] x 1

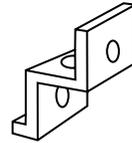

[02] x 4

1 : 1



[03] x 4

HEC60CL 60cm Ceramic Hob

Let's get started...


These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

	Getting started...	04
	Your product	04
	Before you start	04
	Safety	05
	In more detail...	09
	Operation	09
	Care and maintenance	18
	Troubleshooting	20
	Recycling and disposal	20
	Technical and legal information	21
	Guarantee	24
	CE Declaration of conformity	26
	Appendix...	
	Installation	27

Your product Before you start

HEC60CL 60cm Ceramic Hob

Your product

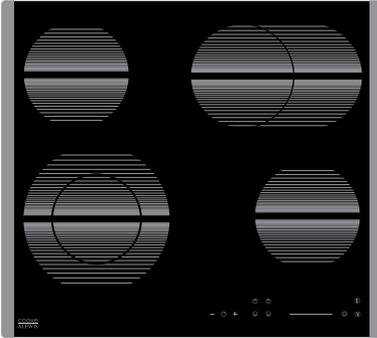


Installation guide
located at the end of
the guidebook

Things to check before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK) and 01 4475261 (Ireland).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

You will need

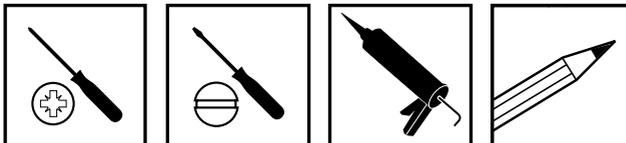

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ✓ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ✓ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance.
- ✓ The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ✓ If the surface of the hob is cracked, disconnect from power supply of the appliance to avoid any possibility of electric shocks.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.
- Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.

- ✓ Do not allow the electric cables to touch the hot parts of the appliance.
- ✓ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ✓ Please dispose of the packing material carefully.
- ✓ Do not use flammable sprays in close vicinity to the appliance.
- ✓ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ✓ A steam cleaner is not to be used.
- ✓ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ✓ The appliance is for domestic use only.
- ✓ When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the metal surface.

- ✓ Do not store detergents or flammable materials beneath the hob.
- ✓ Do not leave hot oils or fats unattended as they may catch light.
- ✓ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ✓ **Warning!** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- ✓ Never try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- ✓ **Warning! Risk of fire!** Do not store items on the cooking surfaces.
- ✓ After use, switch off the hob element by its control. Do not rely on the pan detector.
- ✓ The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- ✓ **Caution!** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Product functions

- The ceramic hob caters for all kind of cooking and its electronic touch controls and multi-functions, making it the ideal choice for the modern family.
- The ceramic hob is extremely user-friendly, durable and safe.

Special functions

Protection from over-heating

A sensor monitors the temperature in the cooking zones. When the temperature exceeds a safe level, the cooking zone is automatically switched off.

Residual heat indicator

When the hob has been operating for some time, there will be some residual heat. The letter "H" appears to warn you that it is too hot to touch the surface.


Auto shutdown

Another safety feature of the ceramic hob is auto shutdown. This occurs whenever you forget to switch off a cooking zone.

The default shutdown times are shown in the table below:

Power level	The heating zone shutdown automatically after
1-3	8 hours
4-6	4 hours
7-9	2 hours

Function keys

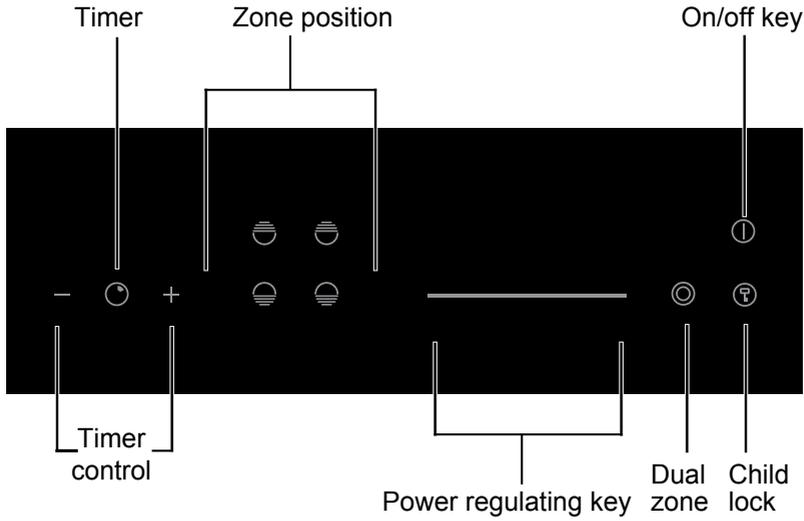

Reference	Description
	Zone position
	Power regulating key (decrease/increase)
	Dual zone
	Child lock
	On/off key
	Timer key

Preparation before use

- When the power is switched on, the buzzer will sound once and all the indicators will switch on for one second and then switch off. The hob is now in standby mode. Place the pan in the centre of the cooking zone.



Caution

- When the ON/OFF key is pressed, the ceramic hob returns to standby mode if no other operation is carried out within one minute.


Heating zone operation

When the ON/OFF key  is pressed, all the indicators show "-".

- Select the hotplate and select the power level by sliding the  key for the relevant hotplate.
- Adjust up or down by sliding the  key.
- If you press the  keys at the end of the control simultaneously, the power setting returns to "0" and the entire cooking zone switches off.
- See the table below for the power specific to each cooking zone.

The above may vary according to the size of the pan and the material from which it is made.


Heating Zone	Max. Power (W)	Cooking Zone
Left 	1200	2#
Right 	1100/2000	3#
Right 	1200	4#
Left 	1000/2200	1#

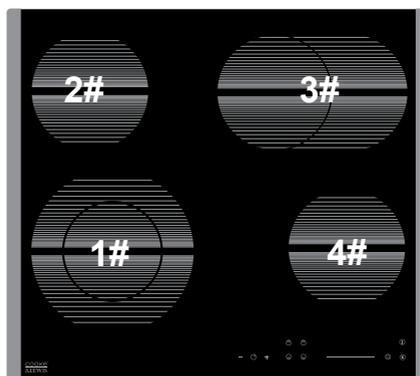


Double zone function

The function only work in 1# and 3# cooking zone

- The dual cooking zone has two cooking areas that you can use a central section and an outer section. You can use the central section (**A**) independently or both sections (**B**) at once.

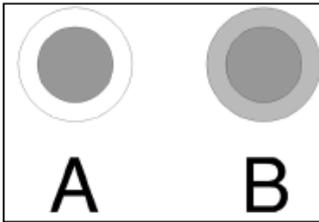

Zone 1#

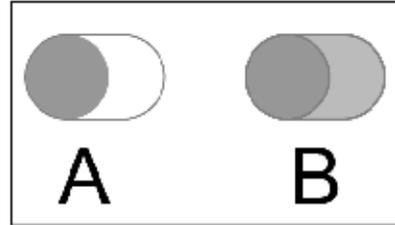

Zone 3#

Activate the double zone (e.g. power level is 6)

- Press the heating zone selection control of the double loop heating zone.



- When the power level indicator flashes press "  ", after 5 seconds, the indicator stop flashes, the double loop function is activate, and power level shows "6" and "=" alternately.



Deactivate the double zone

- Press the heating zone selection control of the double loop heating zone. When the power level indicator flashes, press "  ", the double loop function will be cancelled, and power level return to "6" .

Note:

- The double loop is available only in the 1# and 3# cooking zone.
- You can select the function from level 1 to level 9.
- When you deactivate the double zone function, the power level will be the final power setting.

Using the timer

You can use the timer in two different ways:

- You can use it as a minute reminder. In this case, the timer will not turn any cooking zone off when the set time is up.
- You can set it to turn all the cooking zone off after the set time is up.
- You can set the timer for up to 99 minutes.

Using the timer as a minute reminder

If you are not selecting any cooking zone

1. Make sure the cooktop is turned on.
Note: You can use the minute reminder even if you are not selecting any cooking zones.
2. Touch the timer control, the timer indicator show "--".




3. Adjust the timer setting by touching the "-" or "+" control. The minute reminder indicator will start flashing and will show in the timer display.
Hint: Touch the "-" or "+" control of the timer once to decrease or increase by 1 minute. Touch and hold the or control of the timer to decrease or increase by 10 minutes.



If the setting time exceeds 99 minutes, the timer will automatically return to 0.

4. Touch "-" and "+" simultaneously to cancel the timer . The "--" is show on the minute display.

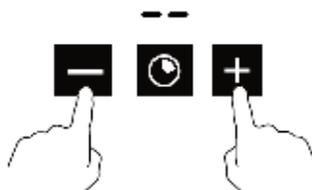

Using the timer as a minute reminder

- When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator will flash for 5 seconds.



- Buzzer will beep for 30 seconds and the timer indicator shows "- -" when the setting time finished.



Setting the timer to turn one cooking zone off

- Touch the heating zone selection control.




- Touch the timer control, the timer indicator show "10".



- Set the time by touching the control of the timer. Hint: Touch the "-" or "+" control of the timer once will decrease or increase by 1 minute.


Touch and hold the "-" or "+" control of the timer will decrease or increase by 10 minutes.

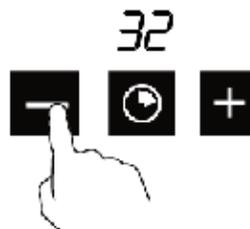

If the setting time exceeds 99 minutes, the timer will automatically return to 0.

Setting the timer to turn one cooking zone off

- Touch "-" and "+" simultaneously to cancel the timer. The "--" is show on the minute display.

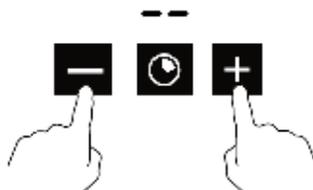

- When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator flash for 5 seconds.



Note: The red dot next to power level indicator will illuminate indicating that zone is selected.

Setting the timer to turn more than one cooking zone off

- If more than one heating zone use this function, the timer indicator will show the shortest time.
(e.g. zone 1# setting time of 5 minutes, zone 2# setting time of 15 minutes, the timer indicator shows "5".)



Note: The red dot next to power level indicator will flash.



Setting the timer to turn more than one cooking zone off

- Once the countdown timer expires, the corresponding zone will switch off. Then it will show the new min. timer and the dot of corresponding zone will flash.



- When cooking timer expires, the corresponding cooking zone will be switch off automatically.



Note: If you want to change the time after the timer is set, you have to start from step 1.

Safety mode (Child lock)

To ensure the safety of children, the ceramic hob is fitted with an interlock device.

To lock:

Hold down the "Lock" ; the hob then switches to "Lock" mode, the timer displays "Lo" and the rest of the keys are disabled except the "ON/OFF" key.

Unlocking:


Hold down the "Lock"  key for 2 seconds and the hob will return to normal working mode.

Care and maintenance



Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact an official distributor or authorised dealer.

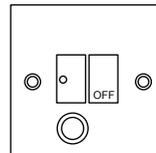

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.



For domestic use only.



Never place the ceramic hob directly into water.



Never place an empty pan on the hob as this will cause an error message to appear on the control panel.



When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the ceramic surface.



Occasionally check that nothing is obstructing the air inlet beneath the ceramic hob.



If the surface of the hob is cracked, disconnect from power supply the appliance to avoid any possibility of electric shocks.



Do not place rough or uneven vessels on the hob, as they could damage the ceramic surface.



Avoid banging pots and pans down on the hob.
The ceramic surface is tough but not unbreakable.



Do not leave metal objects, such as knives, forks, spoons and lids on the hob as they may get hot.



Do not store detergents or flammable materials beneath the hob.

Care and maintenance



Caution

- Avoid rubbing with any abrasive or with the base of the pans, etc, as this will wear the markings on the top of the ceramic hob over time.
- Clean the ceramic hob on a regular basis to prevent the build up of food residue.

- The appliance should be cleaned after use.
- The surface of the induction hob may be easily cleaned in the following way:

Type of dirt	Cleaning method	Cleaning materials
Lime scale	Apply white vinegar to the surface, then wipe it dry with soft cloth	Special ceramic cleaner
Burnt-on stains	Clean with damp cloth and dry it with a soft cloth	Special ceramic cleaner
Light stains	Clean with damp cloth and dry it with a soft cloth	Cleaning sponge
Melted plastics	Use a scraper suitable for ceramic glass to remove residue	Special ceramic cleaner

Troubleshooting

Before calling the customer services, please check that the appliance is correctly connected, any of the following cases are not covered by the guarantee

- Damage caused by improper use, storage or maintenance
- Damage caused by unauthorised disassembly and repair.
- Damage caused by misuse.
- Using the ceramic hob for commercial purposes.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical specifications

Supply voltage	220-240V~, 50Hz
Dimensions (W x H x D)	590 x 55 x 520mm
Max. power consumption	6000-7200W
Net weight	9kg

Wiring

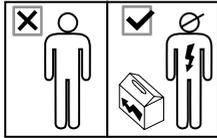


All installation work must be carried out by a competent person or qualified electrician.
Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate.



WARNING: THIS APPLIANCE MUST BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

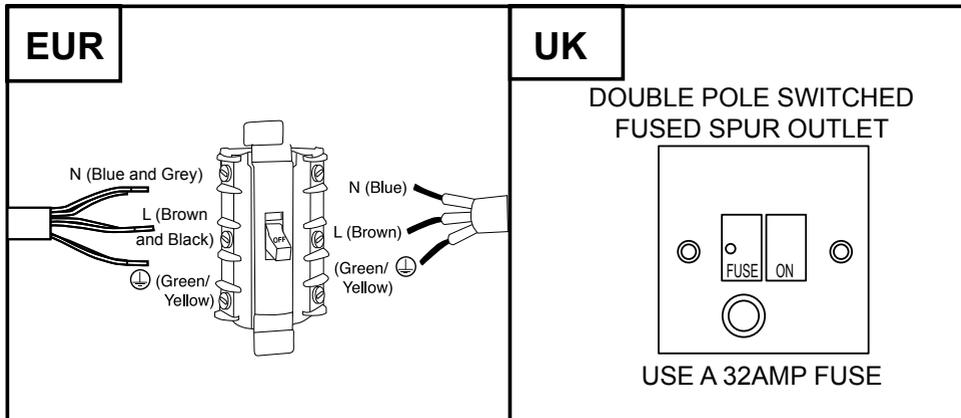

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Technical and legal information

The manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.



WARNING: THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.
The fuse must be rated at 32 Amps.

The wires in the mains lead are coloured in accordance with the following code:

Brown and Black = L - Live

Blue and Grey = N - Neutral

Green/Yellow = ⊕ - Earth


The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Technical and legal information



Caution

The surface of the appliance becomes quite hot when operating. This could alter the electrical insulation and could cause electricity leakage.

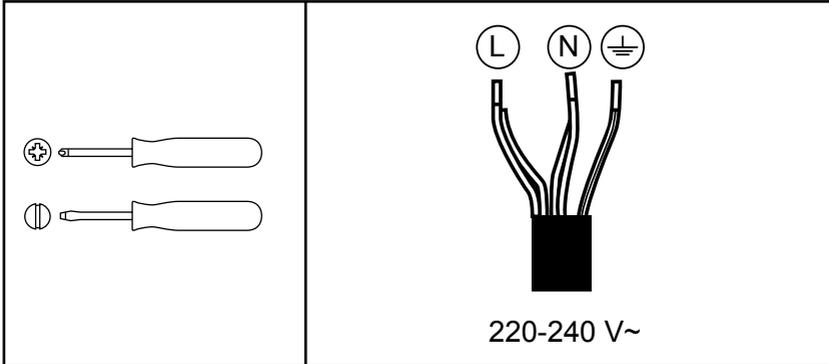

Guarantee

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Guarantee

Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland

Phone: ~~0344 800 1128~~ 0344 800 1128*

Email: uksupport@apelson.co.uk

Web: ~~www.mysparesparts.co.uk~~ www.spareszone.co.uk

Republic of Ireland (Eire)

Phone: 014475261

Email: uksupport@apelson.co.uk

* Local call rates apply

CE Declaration of Conformity

	
MANUFACTURER:	CATA
ADDRESS:	C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)
<p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p>	
MACHINE APPLICATION:	HEC60CL
TYPE:	60 cm Ceramic Hob
EC DIRECTIVES APPLIED:	Comply with the following European Directives 2006/95/CE: LVD (Low Voltage Directive) and the 2004/108/CE: EMC (Electromagnetic Conformity)
APPLIED HARMONIZED STANDARDS:	
Standard EN 60335-1 Safety of household and similar electrical appliances	
Standard EN 60335-2-6	
Standard EN 55014 Limits and methods of measurement of radio disturbance	
Standard EN 61000-3-2 Electromagnetic compatibility limits for harmonic.	
Standard EN 61000-4-5 Electromagnetic compatibility (EMC)	
APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS: ISO9001.2008	
PLACE:	Torelló
	<u>David Sala</u> Technical Manager

The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc,
 Chandlers Ford, Hants,
 SO53 3LE United Kingdom
www.diy.com

Installation



Caution

The ceramic hob must be installed by a suitably qualified person. Never try to install the appliance yourself. The ceramic hob must not be installed above refrigerators, freezers, dishwashers or tumble dryers. The wall and the area above the hob should be able to withstand heat.

- Cut a hole in the worktop of the size shown in the diagram. The worktop should be at least 30 mm thick and made of a heat-resistant material. Seal cut edge of the worktop with silicone or PVA.
- Attach the brackets and place the hob into the cut out and push down firmly.

Electrical connection



Caution

- The cord should not be extended or folded into coil during operation.
- Adapters, multi-socket strips and extension leads must not be used.
- Overloading could result in a risk of fire.



Caution

Before connecting to the power supply, check:



- The voltage meets requirements.
- The appliance uses an individual socket and does not share one with another electric appliance. A dedicated power protection switch must be incorporated in the fixed wiring in accordance with the wiring rules.

Clearance



Warning

Good ventilation is required around the appliance for easier dissipation of heat and low power consumption.
Sufficient clearance is required around the appliance.
The gap between the hob and any cupboard above it should be at least 750mm.

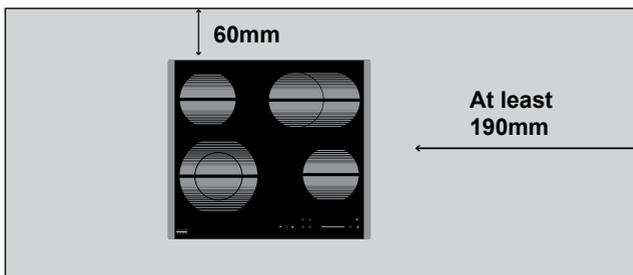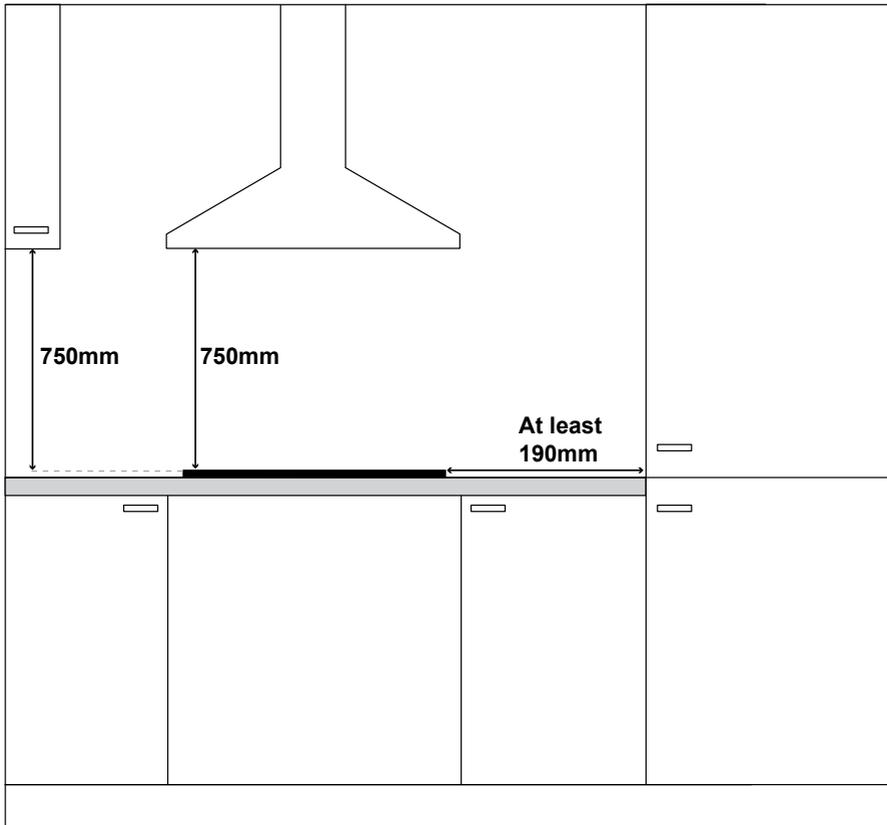


Positioning



Caution

Good ventilation is required around the appliance for easier dissipation of heat and low power consumption. Sufficient clearance is required around the appliance. The appliance should not be placed near anything that may echo.

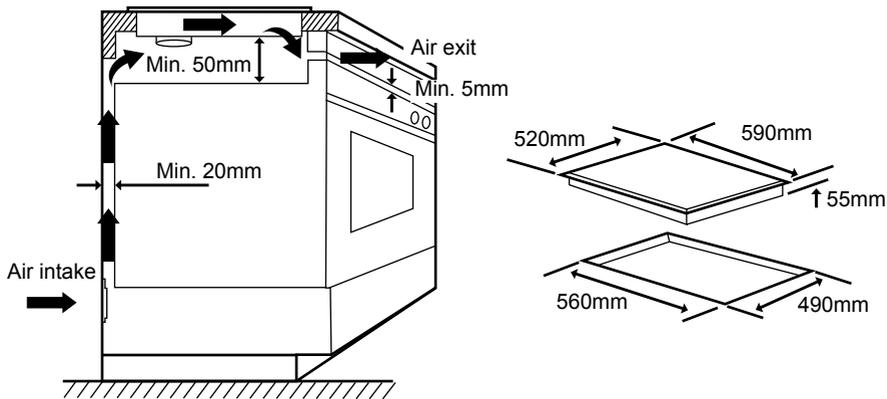


- The ceramic hob must be well ventilated and the air inlet and outlet must not be blocked. Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the hotplate.




Note: The safety distance between the induction hob and the cupboard above the hotplate should be at least 750mm.

01

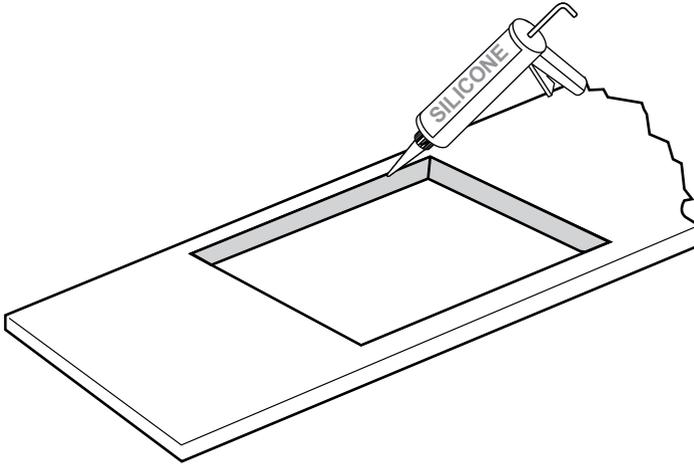


Cut out worktop to supplied dimensions shown on previous page with suitable equipment and seal the cut edge as appropriate sealant.

02

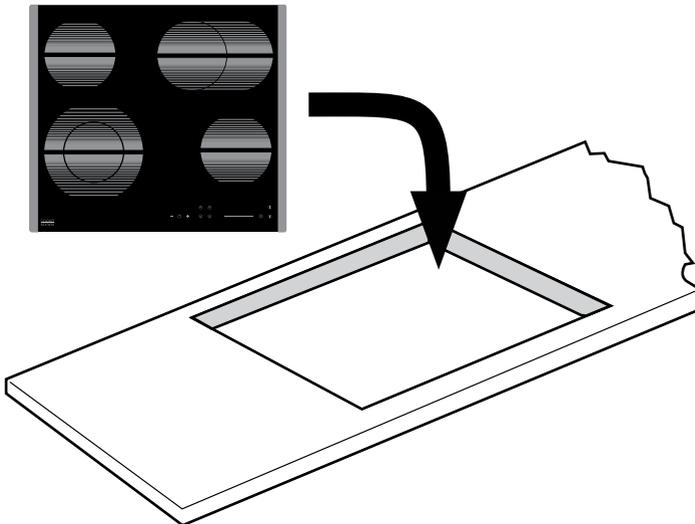

29


03

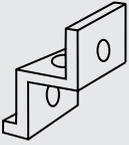

[02] x 4



[03] x 4

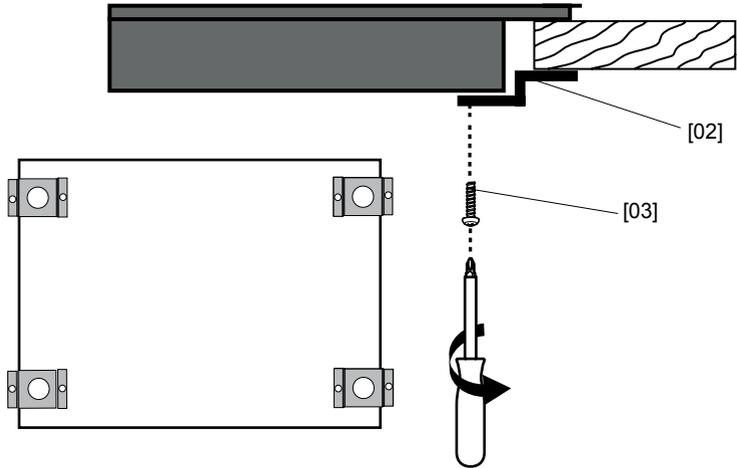

Using a screwdriver, assemble the 4 plates with the screw. Move the plates along and fix them using the screw.

Note: For electrical connection see *Technical and legal information* section.



B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

