 
 



COOKETM &LEWIS

42cm Box Island Hood

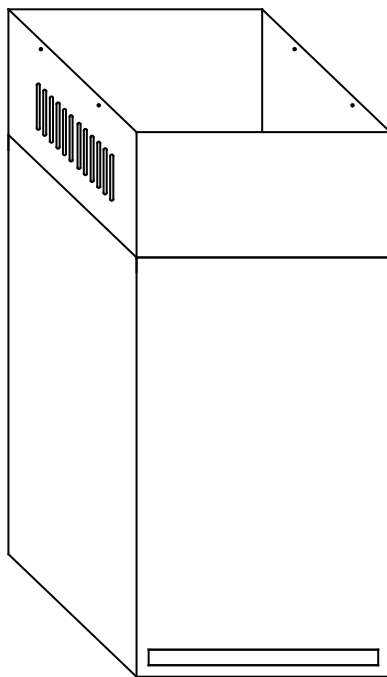


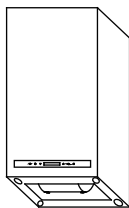

 [01] x 1

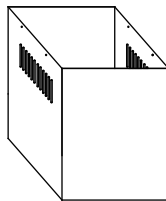

[02] x 1

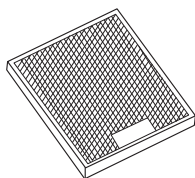 

[03] x 1

1 : 1



[04] x 12 (3.5 x 9.5mm)

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting **started...**

04

Your product

05

Before you start

05

Safety

06



In more **detail...**

11

Operation

11

Care and maintenance

13

Troubleshooting

15

Recycling and disposal

16

Technical and legal information

16

Guarantee

19

CE Declaration of conformity

21



Appendix...

 
Installation

22

Information for EU66

27

Your product


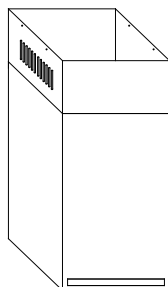


Installation guide
located at the end of
the guidebook

Things to check before you start


- ☒ To avoid the risks that are always present when you use an electrical appliance it is important that this cooker hood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the cooker hood please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0344 800 1128 (UK), 0144 75261 (Ireland).
- ☒ Check the package and make sure you have all of the parts listed.
- ☒ Decide on the appropriate location for your product.
- ☒ If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- ☒ The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- ☒ If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

  You will need

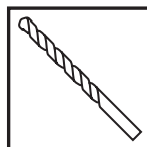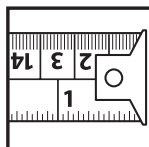


Accessories not supplied

 Recirculation

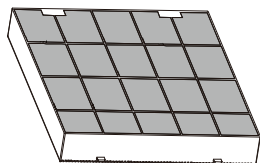

CARBILT 6 (UK & IE)

 Extraction

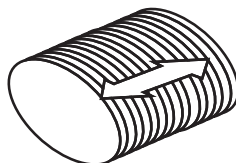

**Ø150mm
VENT PACK 2 (UK & IE)**



**SELF ADHESIVE
ALUMINIUM TAPE**

Safety

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.









- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☑ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☑ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance.
- ☑ The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ☑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- ☑ Keep the appliance and its cord out of reach of children less than 8 years.
- ☑ Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.

- ☒ Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.
- ☒ Do not allow the electric cables to touch the hot parts of the appliance.
- ☒ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ☒ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☒ Do not use flammable sprays in close vicinity to the appliance.
- ☒ Please dispose of the packing material carefully.
- ☒ Do not use flammable sprays in close vicinity to the appliance.
- ☒ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ☒ A steam cleaner is not to be used.

- ☑ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ☑ The appliance is for domestic use only.
- ☑ **Warning:** Consult local regulations regarding fumes outlets. Do not connect the hood to a fume, ventilation or hot air duct. Confirm that room ventilation is appropriate with the local authorities. Make sure the maximum air extraction flow rate for the appliances in the room does not exceed 4 Pa (0.04 mbar). The room must have adequate ventilation if an extractor hood is used simultaneously with appliances that run on gas or other fuels. The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels. Regulations regarding air extraction must be complied with.
- ☑ **Warning:** Before connecting the hood: switch off the electricity supply and check that the supplied voltage and frequency coincide with that indicated on the appliance nameplate.

Safety

-  **Warning:** The hood may stop working during an electrostatic discharge (e.g. lightning). This involves no risk of damage. Switch off the electricity supply to the hood and reconnect after one minute.
-  To avoid the risk of fire, clean the metal filter regularly and closely watch and regulate pans containing hot oil.
-  Do not use the hood if it shows signs of damage or imperfection. Contact customer services.
-  Flambe cooking must not be carried out underneath this appliance.
-  When installing the appliance, make sure that the following distances between the top of cooker or hob and the lowest part of the cooker hood must be observed:
 - > Gas hobs: 750mm.
 - > Electric hobs: 650mm.
-  The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.



Warning

There is a risk of electric shock and fire if cleaning is not carried out in accordance with the instructions.

 
Product functions

- This appliance extracts the air of the kitchen to remove the odours and keep an optimum level of the air quality inside the room, it also allows you to illuminate the cooking area.

Switching on/off

- Switch on the appliance at the switched fused connection unit. The appliance is ready for operation functions.

Touch control panel

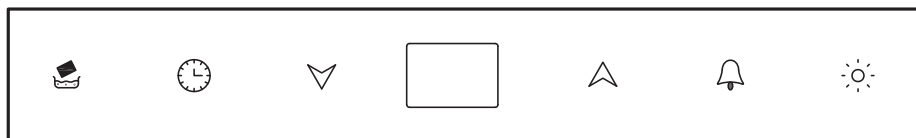

This panel is located on the front part of the hood and includes:

Filter cleaning alert indicator/switch. Icon will flash when you need to clean the aluminium grease filters and can be deactivated with a single press.



Clock setting. Press to turn on the LED display and then press for 3 seconds, the clock will be on and the minute time will flash then press and to adjust the minute time, press to confirm the minute time, then the hour time will flash then press and to adjust the hour time, the clock time is confirmed after 3 seconds. The max clock setting time is 23:59.



Control for setting the timer of motor. When the motor is on, press to turn on the timer and the minute time will flash then press and to adjust the minute time, press to confirm the minute time, then the hour time will flash then press and to adjust the hour time, the timer time is confirmed after 3 seconds. The max setting time is 9:59. The extractor will operate at current speed for the duration set on the timer.



Extractor fan speed and time "-" control: 4 speed setting.









Digital display.



Extractor fan speed and time "+" control: 4 speed setting.

Switching on/off



Alarm on and off. Press  to turn on alarm and the minute time will flash then press  and  to adjust the minute time, press  to confirm the minute time, then the hour time will flash then press  and  to adjust the hour time, the alarm time is confirmed after 3 seconds. The max setting time is 9:59. Press for 3 seconds can cancel the alarm setting.



Lighting on and off.

 
To obtain the best results from your cooker hood it is recommended that you leave it switched on for 15 minutes after you have finished cooking.

Care and maintenance




Warning

always switch off the electricity supply before carrying out maintenance work on the hood. In the event of a fault, contact customer services.

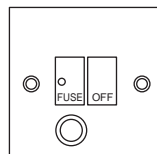

Active charcoal filter replacement

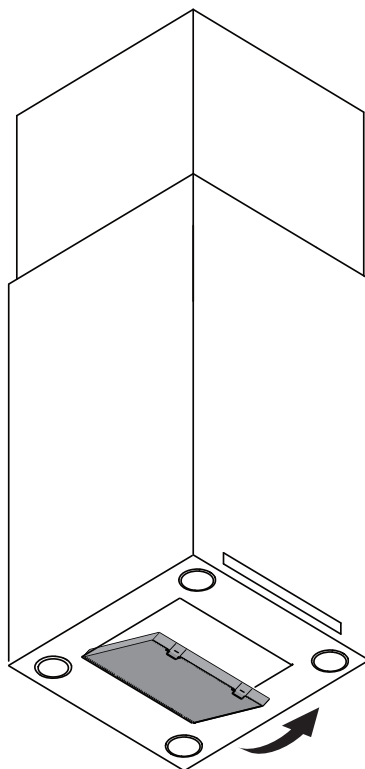 

1 X ACTIVE CHARCOAL FILTER (NOT SUPPLIED)
MODEL NUMBER CARBFILT 6 (UK & IE)

CARBON FILTER ORDERING HOTLINE
0344 800 1128 (UK), 0144 75261 (IE)

 
 
Aluminium and charcoal filters replacement

Aluminium filters:


Use non-corrosive, liquid detergent or a stainless steel cleaner.



1 MONTH

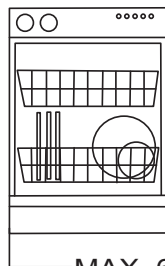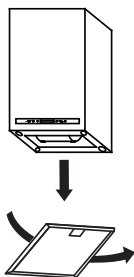

MAX. 65°C

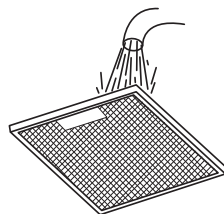 



Aluminium filters: To avoid fires, clean thoroughly once a month. To do so, remove the filters and wash with hot water and detergent. If using a dishwasher, position the filters vertically to improve the cleaning process.

Charcoal filters:

replace every 3 months.



  3 MONTHS

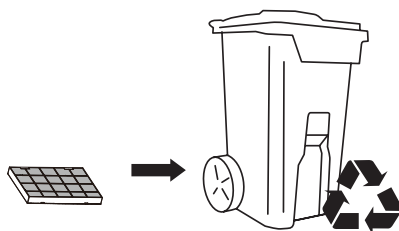

Important: Increase the filter cleaning/replacement frequency if the hood is used for more than 2 hours a day. Always use genuine filters from the manufacturer.

Troubleshooting

Fault	Cause	Solution
Hood doesn't work.	No power supply.	Check the plug.
		Check the main switch.
Poor airflow.	Aluminum grease filters are dirty.	Clean the filters. See <i>Care and maintenance</i> section.
	Charcoal filters are dirty.	Replace the charcoal filters.
Motor running, but no airflow.	Butterfly valve jammed.	Repair to be carried out by qualified service personnel only.
After running for a while, motor stop working.	High temperature safety device activated.	Ensure that the vent kit is fitted to the manufactures instructions.
	Distance between the cooker hood and the hob is too small.	Readjust the distance to: Gas hobs: 750mm Electric hobs: 650mm
Works normally but cooking smells linger.	Charcoal filter not fitted in recirculation mode or charcoal filter is full of grease.	Fit charcoal filter if recirculating or change the filter. See <i>Care and maintenance</i> section.
Whirring sound.	Fan blade probelm.	Repair to be carried out by qualified service personnel only.



NOTE

If the lamp is failed please contact the after-sales care.

Recycling and disposal

Technical and legal information

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical specifications

Supply voltage	220-240V~, 50Hz
Power consumption - Fan	198W
Power consumption - Luminary	4x 1W Max
Power consumption - Total	202 W
Protection class	I
Light bulb	Max. 1 W (LED)

 Wiring

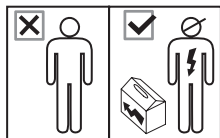


All installation work must be carried out by a competent person or qualified electrician.
Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate.



WARNING: THIS APPLIANCE MUST BE EARTHED.

 Mains Supply could be connected to the Mains Voltage by Direct Connection

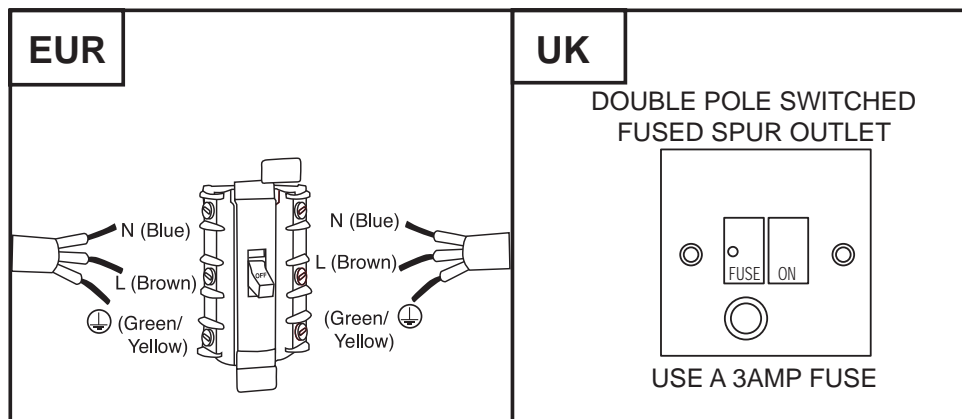

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Technical and legal information

Technical and legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.



WARNING: THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 3 Amps.

The wires in the mains lead are coloured in accordance with the following code:

Brown = L - Live

Blue = N - Neutral

Green/Yellow = ⊕ - Earth

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Guarantee

This appliance is covered by a full manufacturer's 2 year parts and 2 year labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Extended parts only warranty

As testimony to our commitment to you as a valued customer of Cooke & Lewis, we will offer you an additional 3 years parts warranty absolutely free.

If during the extended parts warranty period the appliance fails and it is considered uneconomical to repair our Customer Service Department will offer you the opportunity to purchase the same or equivalent model at a discounted price.

All parts supplied free of charge under the extended warranty must be fitted by our approved engineers and will be subject to a call out charge to fit the part.

Guarantee

Guarantee

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland
Phone: 0344 800 1128*
Email: uksupport@apelson.co.uk
Web: www.spareszone.co.uk

Republic of Ireland (Eire)
Phone: 014475261

*** Local call rates apply**

CE Declaration of Conformity



MANUFACTURER: CATA

ADDRESS: C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)

We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.

MACHINE APPLICATION: IHB40CL

TYPE: Glass Island Hood

EC DIRECTIVES APPLIED: Comply with the European Directives 2006/95/EC: LVD and the 2004/108/EC: EMC
2011/65/EU:RoHS

**APPLIED HARMONIZED
STANDARDS:**

Standard EN 60335-1 Safety of household and similar electrical appliances
Standard EN 60335 part 2-31, particular requirements for range hoods
Standard EN 55014 Limits and methods of measurement of radio disturbance
Standard EN 61000-3-2 Electromagnetic compatibility limits for harmonic
Standard EN 61000-4-5 Electromagnetic compatibility (EMC)

APPLIED INTERNATIONAL TECHNICAL

STANDARDS AND SPECIFICATIONS: ISO9001.2008

 
PLACE: Torelló

David Sala

Technical Manager


This appliance respects laws of the suppression of radiointerference.
As the Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

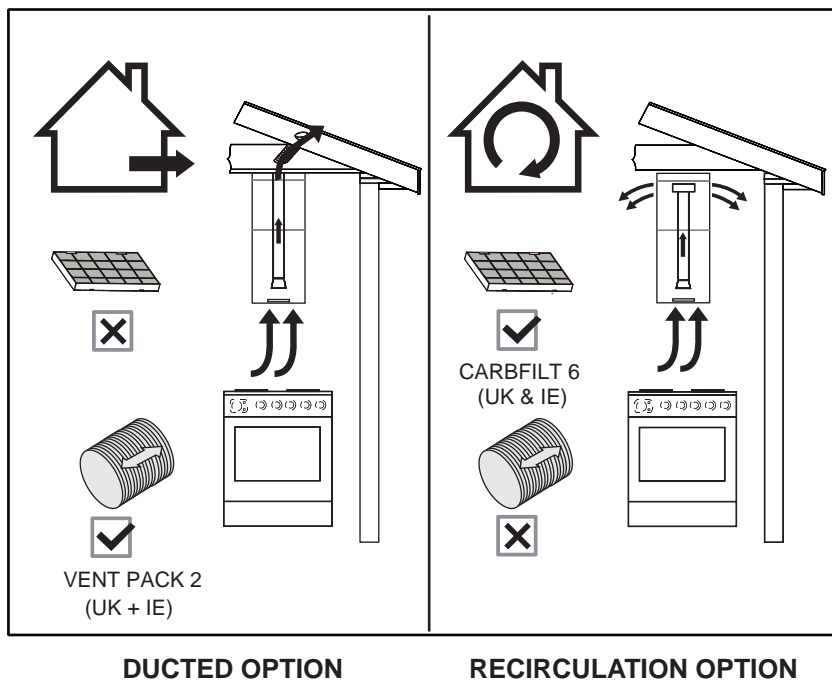


You can choose two type of installation:

 - Ducted option
- Recirculation option

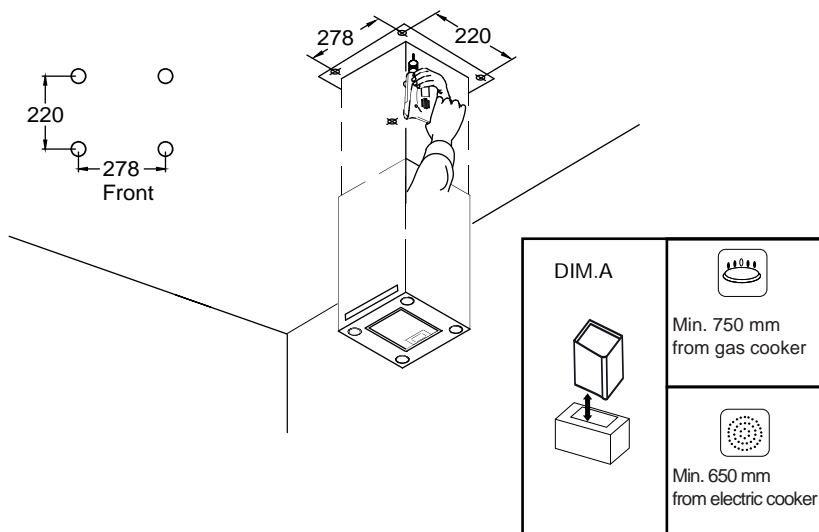


 Mark and drill four holes of suitable diameter on the ceiling according to the dimensions shown.

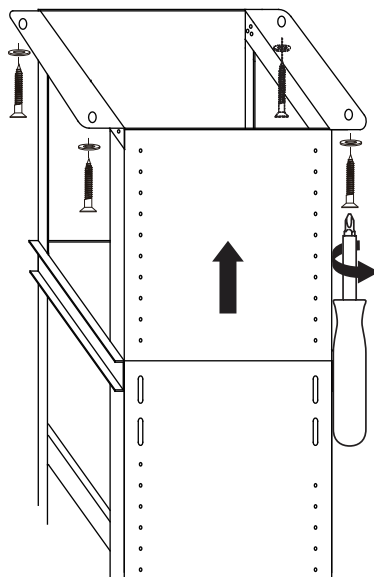


Take out the upper part of bracket and fix it to the ceiling using suitable fixings.

 04





Vent Pack 2
(UK + IE)
x 1

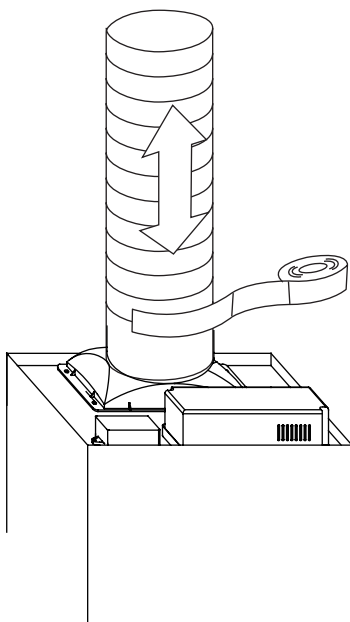 

Fix the vent pack 2 using self adhesive aluminium tape.

  05

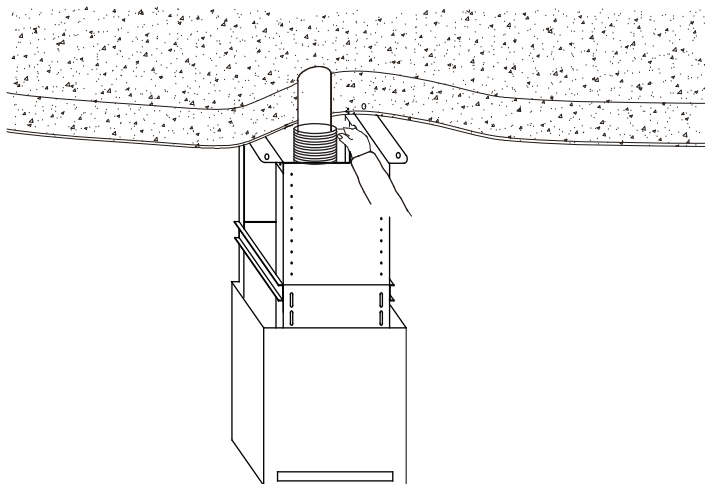


Lift up main body and fix the vent pack 2 using self adhesive aluminium tape.

06



 [04] x 8

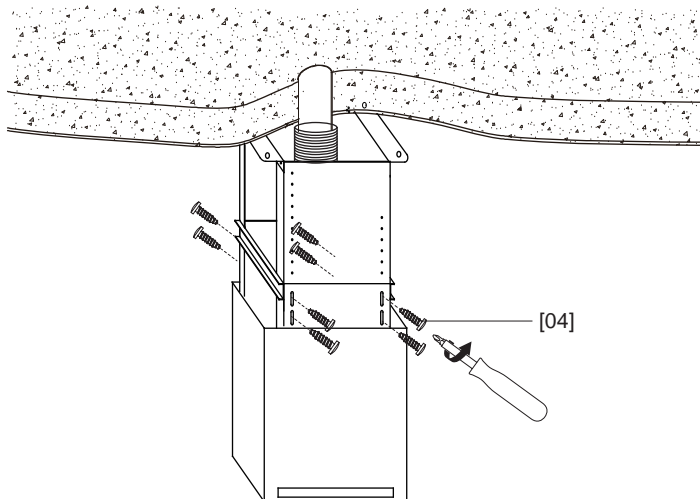


Fix the upper and lower part of bracket together at the required length using eight screws.


07



 [04] x 4

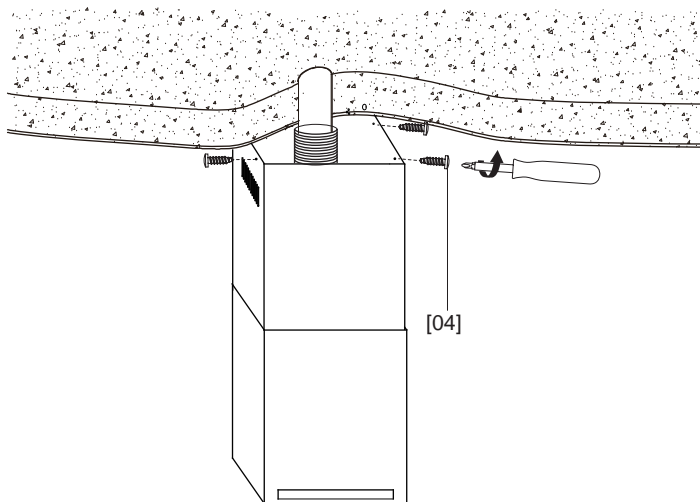

 Fix the upper decorative chimney to the upper part of bracket using four screws.

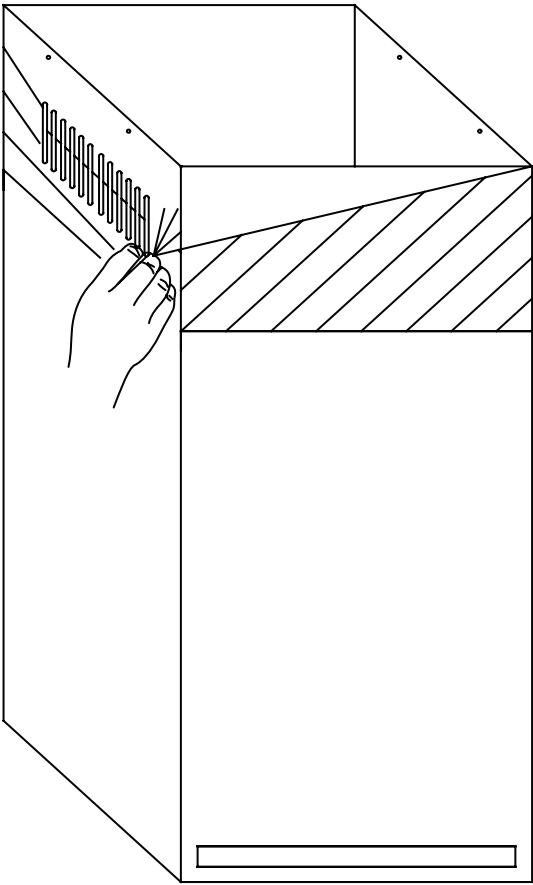

Remove the protector film.

**(A) Information of the cooker Hood (www.diy.com)**

	Symbol	Value	Unit
Model identification		IHB40CL	
Annual Energy Consumption	AEC_{hood}	60.3	kWh/a
Time increase factor	f	1.5	
Fluid Dynamic Efficiency	FDE_{hood}	12.9	
Energy Efficiency Index	EEl_{hood}	81.8	
Measured air flow rate at best efficiency point	Q_{BEP}	278.5	m ³ /h
Measured air pressure at best efficiency point	P_{BEP}	170	Pa
Maximum air flow	Q_{max}	482	m ³ /h
Measured electric power input at best efficiency point	W_{BEP}	102.3	W
Nominal power of the lighting system	W_L	4.0	W
Average illumination of the lighting system on the cooking surface	E_{middle}	412	lux
Measured power consumption in standby mode	P_s	—	W
Measured power consumption off mode	P_o	0.42	W
Sound power level	L_{WA}	Min 75 / Max 61	dB

The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

(B) The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process.

- (1) Install the cooker hood in a proper place where there is efficient ventilation.
- (2) Clean the cooker hood regularly so as not to block the airway.
- (3) Remember to switch off the cooker hood light after cooking.
- (4) Remember to switch off the cooker hood after cooking.

(C) Information for dismantling.

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with you Local Authority or retainer for recycling advice.



B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com
