



# Cooker hood

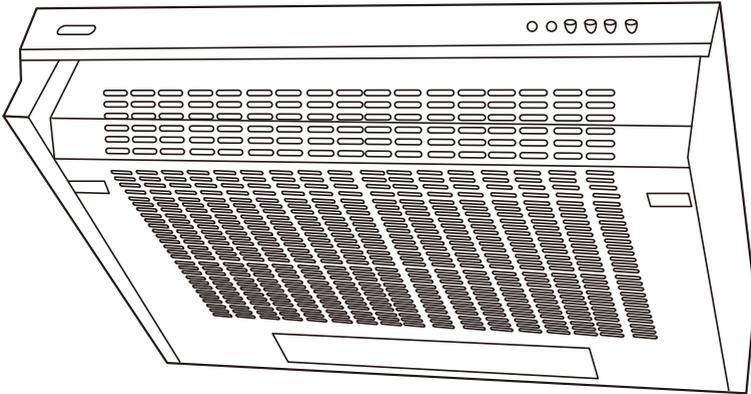


60900345\_05 VHX60W2SS2



**WARNING:** Read the instructions before using the appliance.

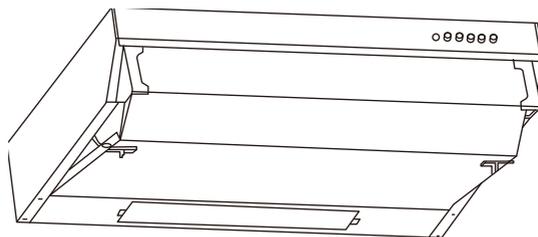


[01] x 1

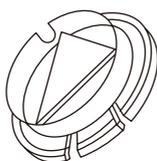

[02] x 1



[03] x 1

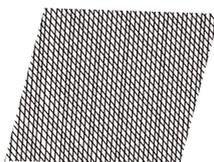

[04] x 1



[05] x 1



[06] x 2  
(3x 12mm)


# Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

	<b>Getting started...</b>	<b>04</b>
	<b>Your product</b>	04
	<b>Before you start</b>	04
	<b>Safety</b>	05
	<b>In more detail...</b>	<b>10</b>
	<b>Operation</b>	10
	<b>Care and maintenance</b>	11
	<b>Troubleshooting</b>	13
	<b>Recycling and disposal</b>	14
	<b>Technical and legal information</b>	14
	<b>Guarantee</b>	17
	<b>Appendix...</b>	
	<b>Installation</b>	19
	<b>ErP Information of the bulb provided</b>	25
	<b>Information for EU66</b>	26

## Your product Before you start

### Your product

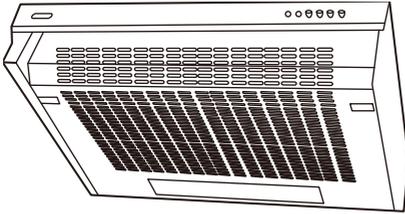


Installation guide  
located at the end of  
the guidebook

### Things to check before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this cooker hood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the cooker hood please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0344 800 1128 (UK) and 01 4475261 (Ireland).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

### You will need

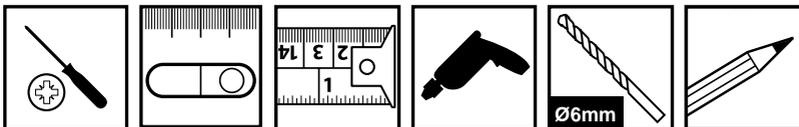

## Accessories not supplied

### Recirculation




**CARBFILT1 (UK & IE)**  
**ORDERING HOTLINE**  
**0344 800 1128 (UK)**  
**014475261 (IE)**



**SELF ADHESIVE  
ALUMINIUM TAPE**

### Extraction

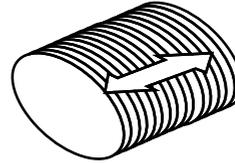

**Ø125mm or Ø150mm  
VENT PACK 2 (UK & IE)**



3.9 x 32 mm



Short Screw for cabinet



Wall Plug Ø6mm

## Safety

**These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.**



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

## Safety

- ✓ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ✓ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance
- ✓ The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ✓ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- ✓ Keep the appliance and its cord out of reach of children less than 8 years.
- ✓ Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.

- ✓ Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.
- ✓ Do not allow the electric cables to touch the hot parts of the appliance.
- ✓ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ✓ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ✓ Do not use flammable sprays in close vicinity to the appliance.
- ✓ Please dispose of the packing material carefully.
- ✓ Do not use flammable sprays in close vicinity to the appliance.
- ✓ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ✓ A steam cleaner is not to be used.

## Safety

- ✓ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ✓ The appliance is for domestic use only.
- ✓ **Warning:** Consult local regulations regarding fumes outlets. Do not connect the hood to a fume, ventilation or hot air duct. Confirm that room ventilation is appropriate with the local authorities. Make sure the maximum air extraction flow rate for the appliances in the room does not exceed 4 Pa (0.04 mbar). The room must have adequate ventilation if an extractor hood is used simultaneously with appliances that run on gas or other fuels. The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels. Regulations regarding air extraction must be complied with.
- ✓ **Warning:** Before connecting the hood: switch off the electricity supply and check that the supplied voltage and frequency coincide with that indicated on the appliance nameplate.

## Safety

- ✓ **Warning:** The hood may stop working during an electrostatic discharge (e.g. lightning). This involves no risk of damage. Switch off the electricity supply to the hood and reconnect after one minute.
- ✓ To avoid the risk of fire, clean the metal filter regularly and closely watch and regulate pans containing hot oil.
- ✓ Do not use the hood if it shows signs of damage or imperfection. Contact customer services.
- ✓ Flambe cooking must not be carried out underneath this appliance.
- ✓ When installing the appliance, make sure that the following distances between the top of cooker or hob and the lowest part of the cooker hood must be observed:
  - > Gas hobs: 750mm.
  - > Electric hobs: 650mm.
- ✓ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.



### Warning

There is a risk of electric shock and fire if cleaning is not carried out in accordance with the instructions.

## Operation


### Product functions

- This appliance extracts the air of the kitchen to remove the odours and keep an optimum level of air quality inside the room, it also allows you to illuminate the cooking area.

### Switching on/off

- Switch on the appliance at the switched fused connection unit. The appliance is ready for use.

#### Five-button panel

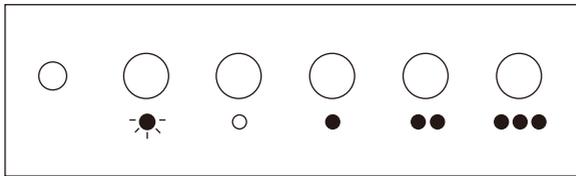

- Extractor fan operating indicator pilot light.
- On/off button for built-in light.
- On/off button for extractor fan.
- Extractor fan speed 1 button.
- Extractor fan speed 2 button.
- Extractor fan speed 3 button.


To obtain the best results from your cooker hood it is recommended that you leave it switched on for 15 minutes after you have finished cooking.

## Care and maintenance




### Warning


Always switch off the electricity supply before carrying out maintenance work on the hood. In the event of a fault, contact customer services.

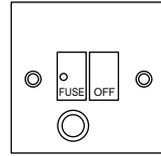

### Bulb replacement

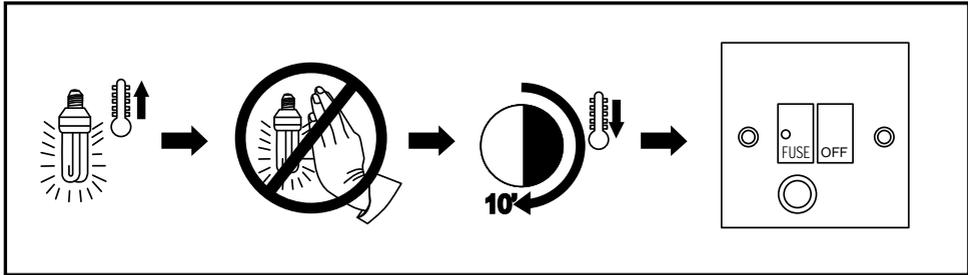


The bulb may be hot, leave it 10 minutes before removing it.

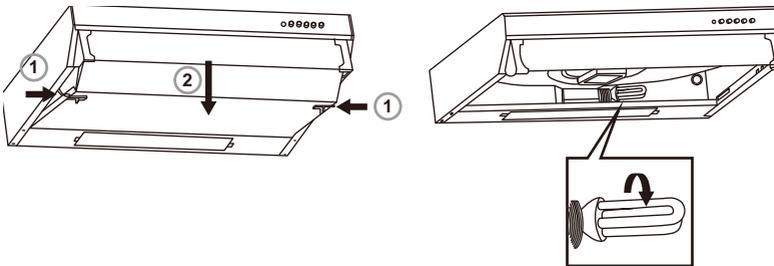

Push the clips (1) inwards and release the metal filter & cover (2).  
Unscrew bulb, remove and screw in new bulb.

### Active charcoal filter replacement :

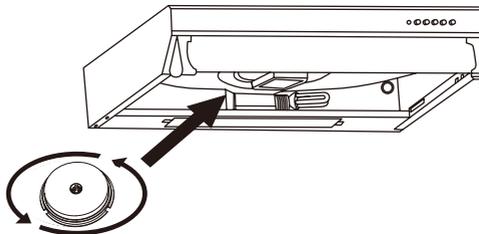

1 x active charcoal filter (not supplied).  
Model number\_CARBFILT1 (UK & IE)




## Care and maintenance
  
### Aluminium and active charcoal filters replacement

Use non-corrosive, liquid detergent and avoid the use of abrasive cleaning products.



1 MONTH

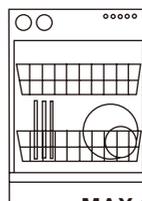




**Aluminium filters:** To avoid fires, clean thoroughly once a month or whenever the display pilot light lights up (if fitted). To do so, remove the filters and soak in hot water and detergent for an hour. If using a dishwasher, position the filters vertically to improve the cleaning process.

**Active charcoal filters:**  
Replace every 3 months.



 3 MONTHS

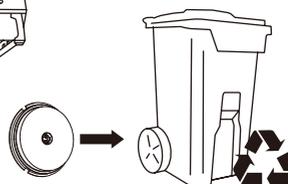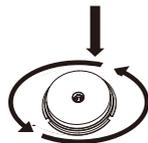

**Note:** Increase the filter cleaning/replacement frequency if the hood is used for more than 2 hours a day. Always use genuine filters from the manufacturer.

## Troubleshooting

<b>Fault</b>	<b>Cause</b>	<b>Solution</b>
Excessive vibration.	The appliance is not installed properly on the brackets.	Take down the appliance and check it is properly fixed.
	The fan blade is damaged.	Switch off the appliance. Repair to be carried out by qualified service personnel only.
	The fan motor is not fixed tightly.	
Light on, but motor does not work.	The fan blade is jammed.	
	The motor is damaged.	
Both light and motor do not work.	Light bulb blown.	Replace with a bulb with correct rating.
	Power connection loose.	Check power supply.
Suction performance reduced.	Speed may be too low.	Select a higher speed.
	Distance between the cooker hood and the hob is too great.	Readjust the distance to: Gas hobs: 750mm Electric hobs: 650mm
	Aluminium grease filter is dirty.	Clean filters. See <i>Care and maintenance</i> section.
	Top vent might be obstructed.	Clear any obstruction.
	Optional vent kit might be twisted.	Ensure that the vent kit is fitted to the manufacturers instructions.
Works normally but cooking smells linger.	Charcoal filter not fitted in recirculation mode or charcoal filter is full of grease.	Fit charcoal filter if recirculating or change the filter. See <i>Care and maintenance</i> section.

## Recycling and disposal

### Technical and legal information

## Recycling and disposal

### Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.




The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

## Technical specifications

Supply voltage	220-240V~, 50Hz
Power consumption - Fan	95W
Power consumption - Luminary	1 x 9W Max
Power consumption - Total	104W
Protection class	II
Light bulb	Max. 9 W (E-14)

## Wiring

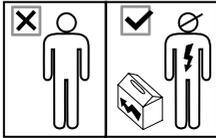


All installation work must be carried out by a competent person or qualified electrician.  
Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate.



**WARNING: THIS APPLIANCE MUST NOT BE EARTHED.**

Mains Supply could be connected to the Mains Voltage by Direct Connection

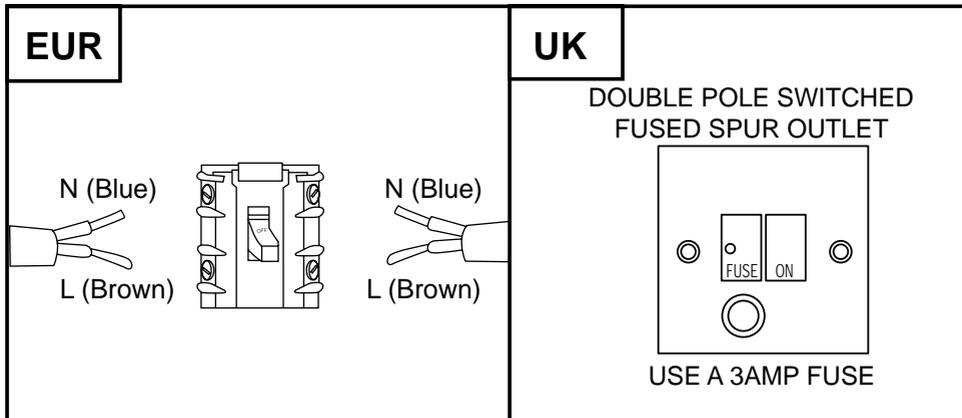

### Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

## Technical and legal information

### Technical and legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

#### Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

#### Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.



**WARNING: THIS APPLIANCE MUST NOT BE EARTHED**

The appliance is supplied with a 2-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 3 Amps.

The wires in the mains lead are coloured in accordance with the following code:

**Brown = L - Live**

**Blue = N - Neutral**

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

## Guarantee

---

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

### Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

## Guarantee

### Guarantee

---

#### Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

#### **This Guarantee does not affect your statutory rights.**

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

#### **Customer Service**

To arrange an in guarantee service call, please contact customer services on the following numbers.

##### **UK & Northern Ireland**

**Phone: 0344 800 1128\***

**Email: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)**


**Web: [www.spareszone.co.uk](http://www.spareszone.co.uk)**

##### **Republic of Ireland (Eire)**

**Phone: 014475261**

**Email: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)**


**\* Local call rates apply**

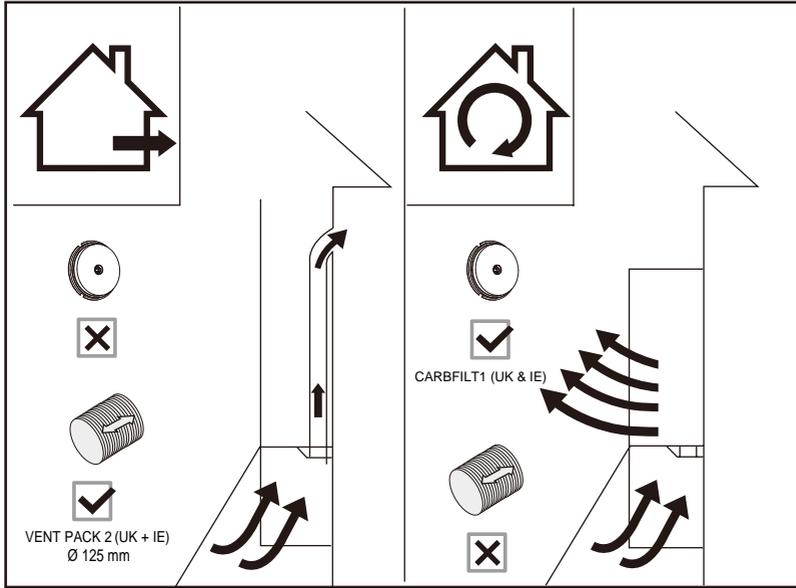

**DUCTED OPTION**

**RECIRCULATION OPTION**



- You can choose two types of installation:
- Extraction option
  - Recirculation option

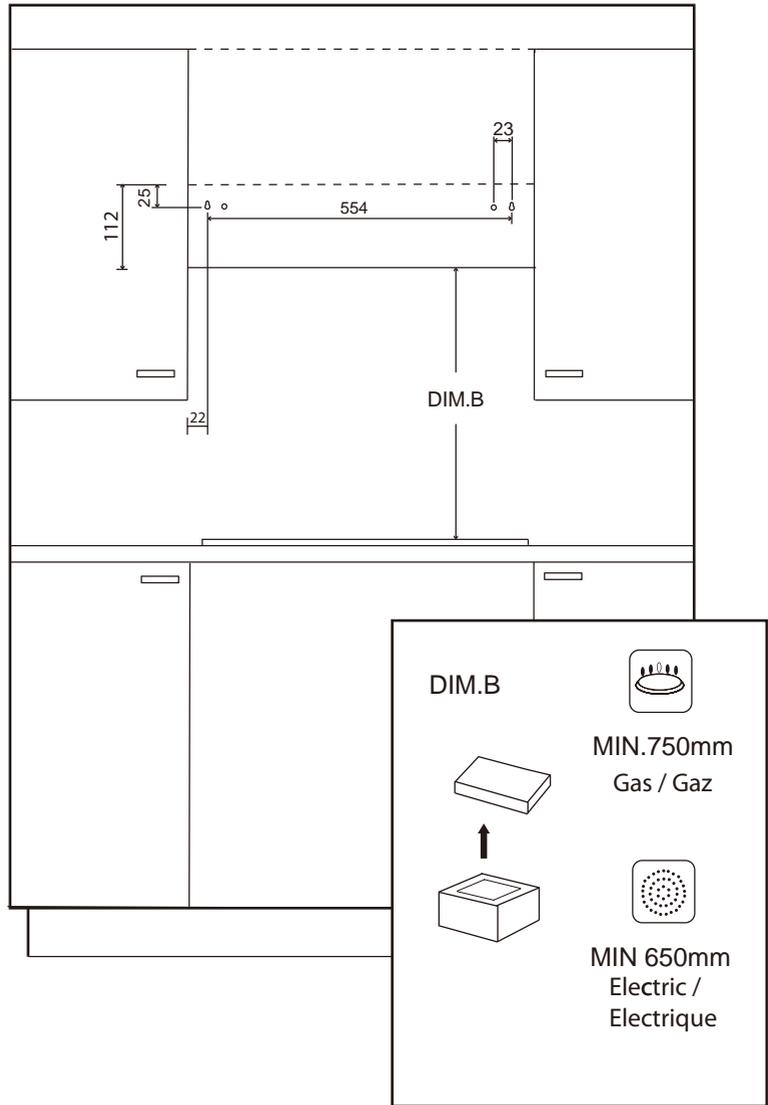

Mark the holes on the kitchen wall to fix the cooker hood.

The wall plugs supplied are suitable for solid walls only. When fixing to any other type of wall use suitable alternative fixings.

# 03

 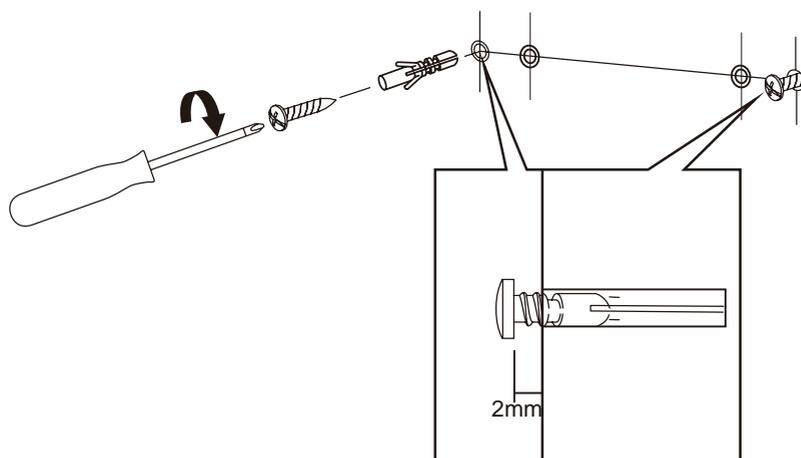

[05] x 1



x2



x4

## MOUNTING OF THE HOOD TO THE WALL (without cupboard above)


In this situation the hood should only be used for recirculation purposes only

Drill 4 holes corresponding to the diagram on page 19

Insert wall plugs.


Insert correct length screw leaving the head protruding 2mm

# 04

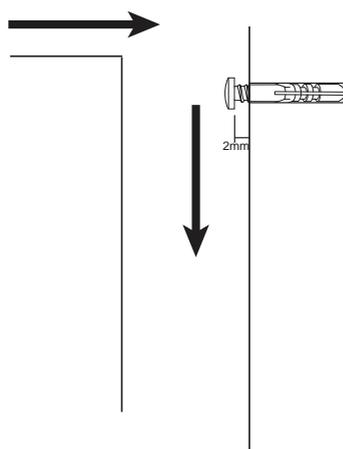

Position hood over 2 wall screws, and use keyhole slots on adjustment bracket to support the weight.

# 04

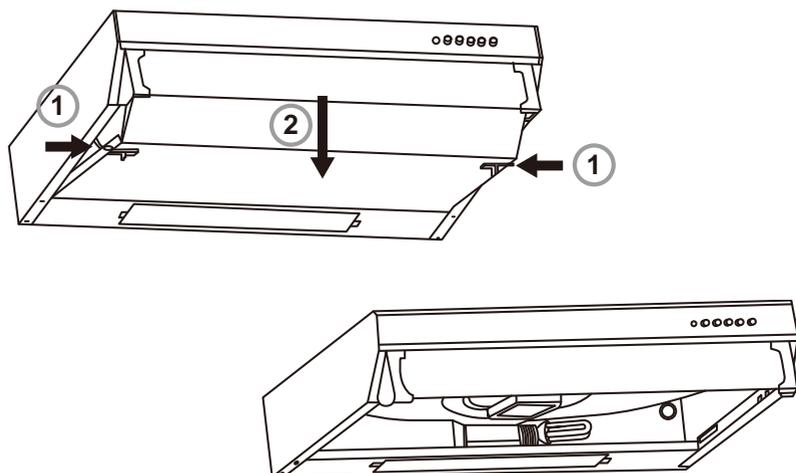


Remove the grill

Push the clips (1) inwards and release the metal filter & cover (2).

# 05




x2

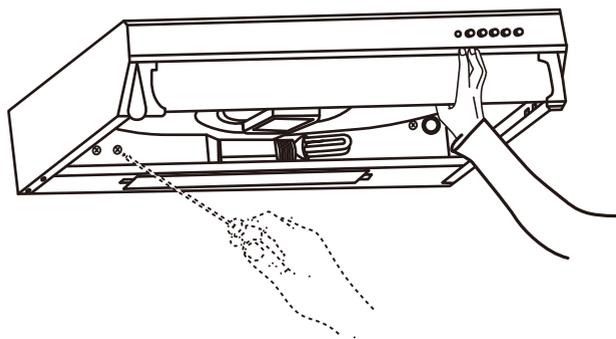


Whilst holding the hood, and tighten inside screws.

06

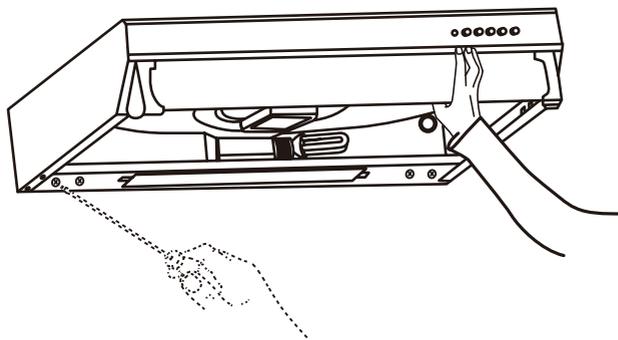

Tighten outer screws.

07

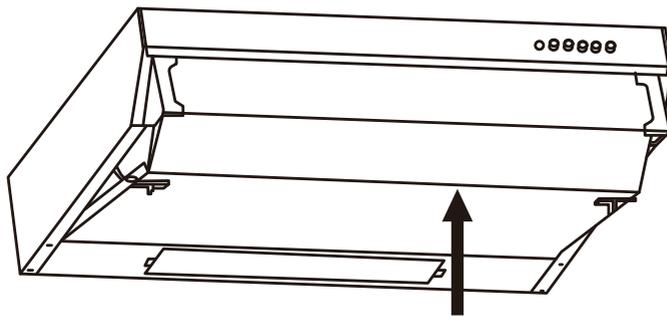


Clip the grill back in place.



[02]



x4

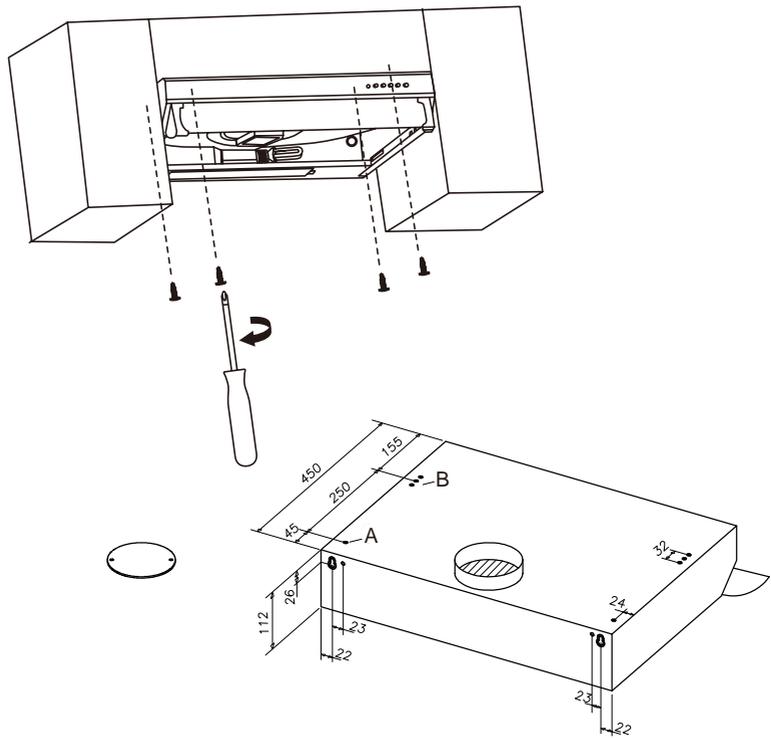

## MOUNTING THE HOOD UNDERNEATH A CUPBOARD

Both extraction and recirculation options can be used

### EXTRACTION

Cut a hole in the cupboard base to suit the position of the exhaust vent in the visor hood and size to suit the vent kit being used.

Connect collar [02] this is used to connect to vent kit.

Using 4 suitable length screws attach the cooker hood to the underside of the cupboard using the 2 hole position (A) and 2 hole position (B).

Connect vent kit as per manufacturers instructions

**Important:** The exhaust air must not be expelled through a smoke or waste gas chimney, which is in use, or through a shaft used for ventilating rooms or into the cavity of a wall.

### RECIRCULATION

Connect blanking plate (05) and secure it by 2 screws (6)

Using 4 suitable length screws attach the visor hood to the underside of the cupboard using the 2 hole position (A) and 2 hole position (B).

Ensure correct recirculation filters are fitted, please refer to **Care and maintenance** section

**Important:** If the room contains a fuel burning appliance, such as a gas, or oil fired, central heating boiler, which is not of the 'Balanced Flue' type, you should make sure that there is adequate air inlet into the room at all times so that fumes from the boiler are not drawn back into the room by the Cooker Hood.


For electrical connection see **Technical and legal information** section.



GB IE

# Appendix...

ErP Information of the bulb provided

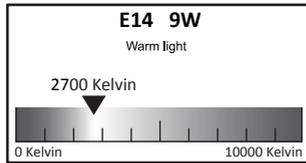

	Mercury  <2.5mg	<b>220-240 V</b>
<b>405</b> Lumen		9 Watt 8000 h

SFD Ltd BA228RT  
Tel. +44 (0)1935 414 100

**ENERG** Y IJA IE IA  
ενεργεια · ενεργεια

**ARROW** BMF09-1

A <sup>++</sup>	
A <sup>+</sup>	
<b>A</b>	
B	
C	
D	
E	

**9** kWh/1000h

220-240V ~ 50/60Hz

**(A) Information of the cooker Hood**

	Symbol	Value	Unit
Model identification		F-2060/B-P-1LE9-NP	
Annual Energy Consumption	$AEC_{hood}$	52.9	kWh/a
Time increase factor	f	1.8	
Fluid Dynamic Efficiency	$FDE_{hood}$	4.7	
Energy Efficiency Index	$EEl_{hood}$	90.6	
Measured air flow rate at best efficiency point	$Q_{BEP}$	86.0	m <sup>3</sup> /h
Measured air pressure at best efficiency point	$P_{BEP}$	137	Pa
Maximum air flow	$Q_{max}$	189.2	m <sup>3</sup> /h
Measured electric power input at best efficiency point	$W_{BEP}$	69.4	W
Nominal power of the lighting system	$W_L$	9.0	W
Average illumination of the lighting system on the cooking surface	$E_{middle}$	110	lux
Measured power consumption in standby mode	$P_s$	—	W
Measured power consumption off mode	$P_o$	0	W
Sound power level	$L_{WA}$	Max. 65 / Min. 63	dB

The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

**(B) The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process.**

- (1) Install the cooker hood in a proper place where there is efficient ventilation.
- (2) Clean the cooker hood regularly so as not to block the airway.
- (3) Remember to switch off the cooker hood light after cooking.
- (4) Remember to switch off the cooker hood after cooking.

**(C) Information for dismantling.**

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with you Local Authority or retainer for recycling advice.



