




Electric hob:UBES60SS2

Version:00

Date:2014-09-26

Product reference code: UBES60SS2

UBES60SS2 Exploded drawing

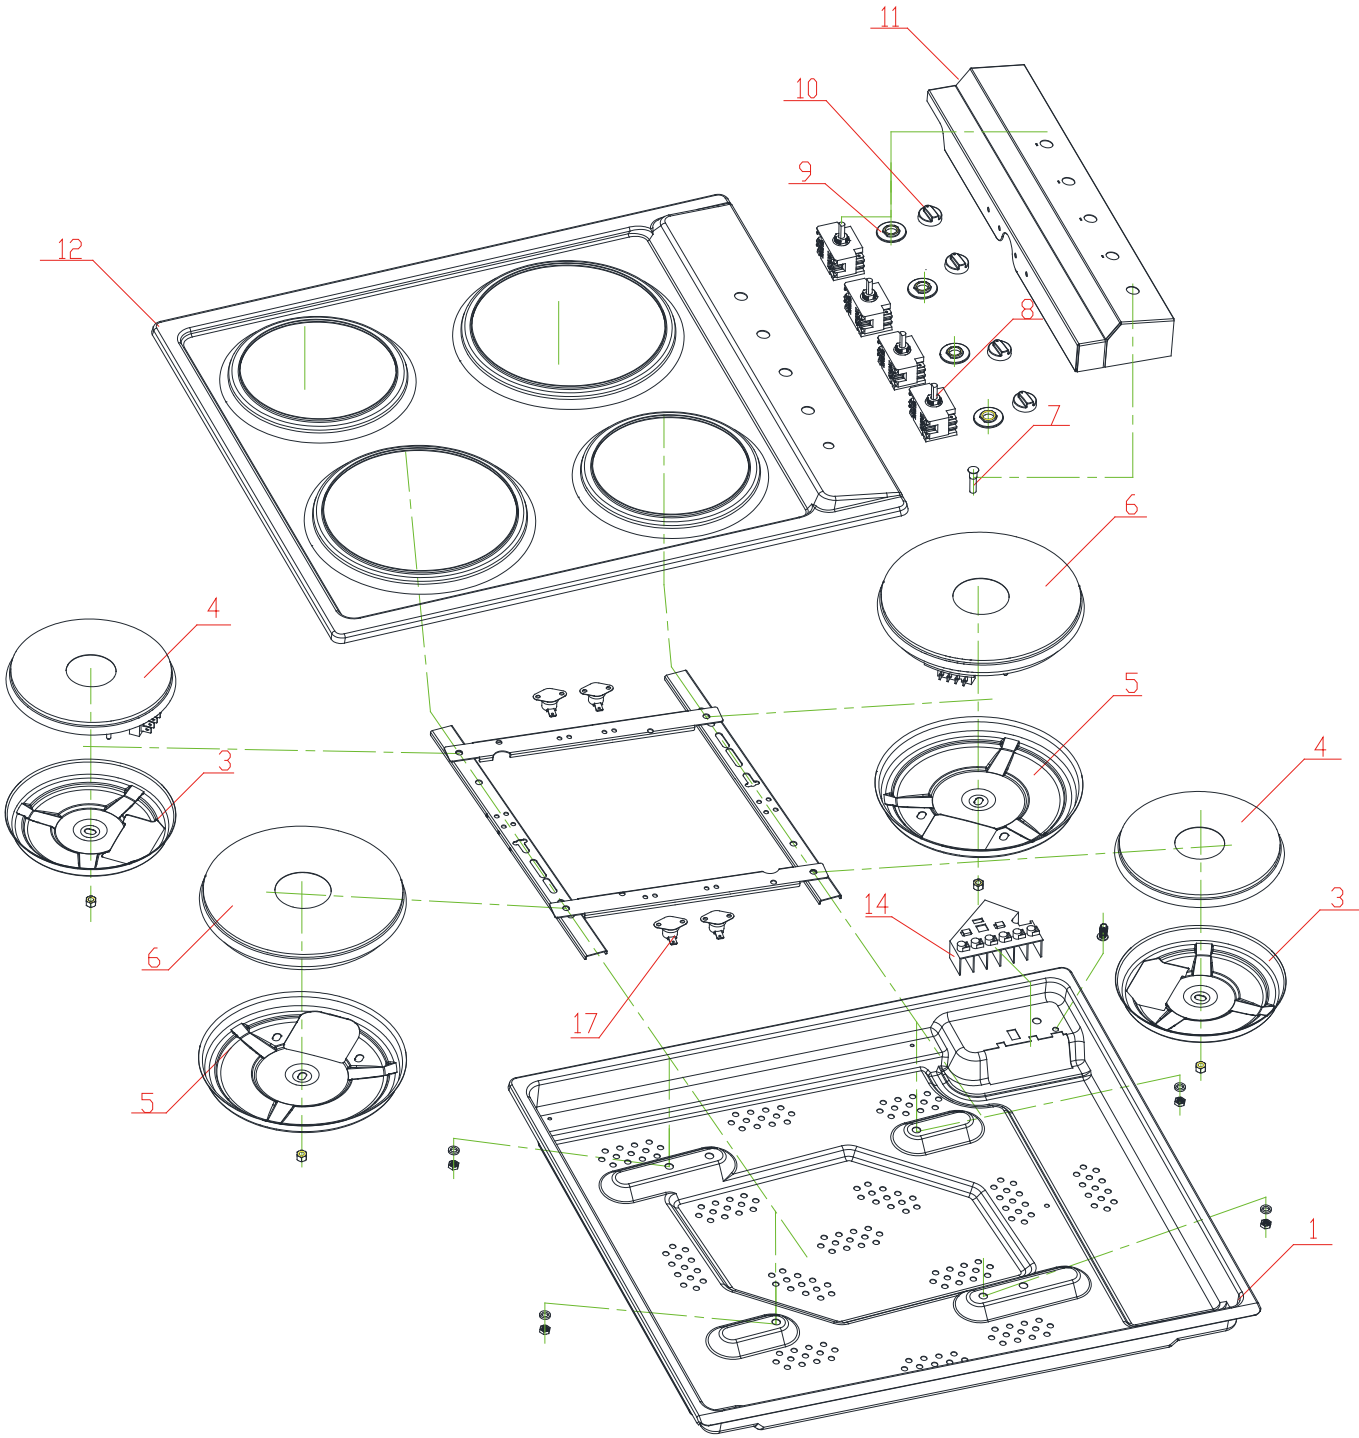


00	New document	Eason	2014. 9. 26
Index	Modify description	Modified by	Date

UBES60SS2 parts list

NO.	Ref code	Factory code	part description	Qty
1	25102515	12EH614	bottom plate-electric cooker-ES60SS	1
3	69402760	13EH145-1	Ø145hotplate basement-electric cooker-ES60SS	2
4	69402755	13HP-F145A	HP-145R-4 hotplate-electric cooker-ES60SS	2
5	69402770	13EH180-2	Ø180hotplate basement-electric cooker-ES60SS	2
6	69402765	13HP-F180A	HP-180R-4 hotplate-electric cooker-ES60SS	2
7	69402780	320001	INDICATION LIGHT-electric cooker-ES60SS	1
8	69402795	14FD107	switch for knob-electric cooker-ES60SS	4
9	69402790	14FD107-2	screw for knob-electric cooker-ES60SS	4
10	60701375	220006	knob-gas hob-PGI 31 PLUS/C	4
11	64700505	31EH614-I	switch for heat insulation plate-electric cooker-ES60	1
12	25102505	11EH614-I	PANEL-electric cooker-ES60SS	1
14	69402775	240004	electrical box-electric cooker-ES60SS	1
17	69405560	14EH614-1	thermostat-electric cooker-ES60SS2	4

UBES60SS2 Wiring diagram

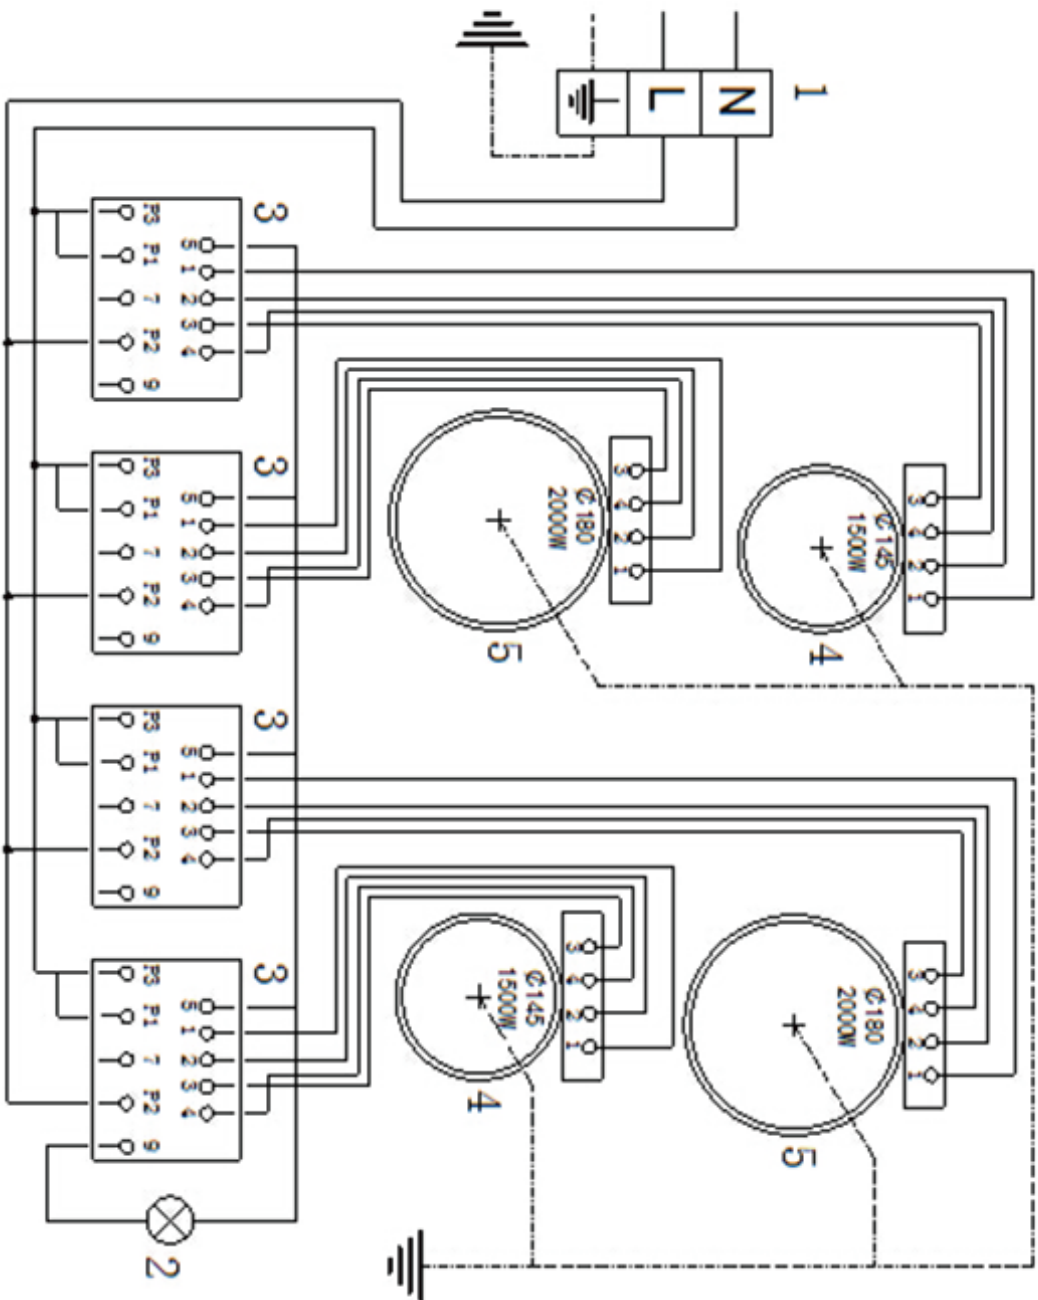

- 1 Wire conector
- 2 Indicator
- 3 Switch
- 4 $\phi 145$ hot plate
- 5 $\phi 180$ hot plate