




Double Oven: DIOV90CL

Version:04

Date:2015-06-25

Product reference code: 29398355

# DIOV90CL Exploded drawing

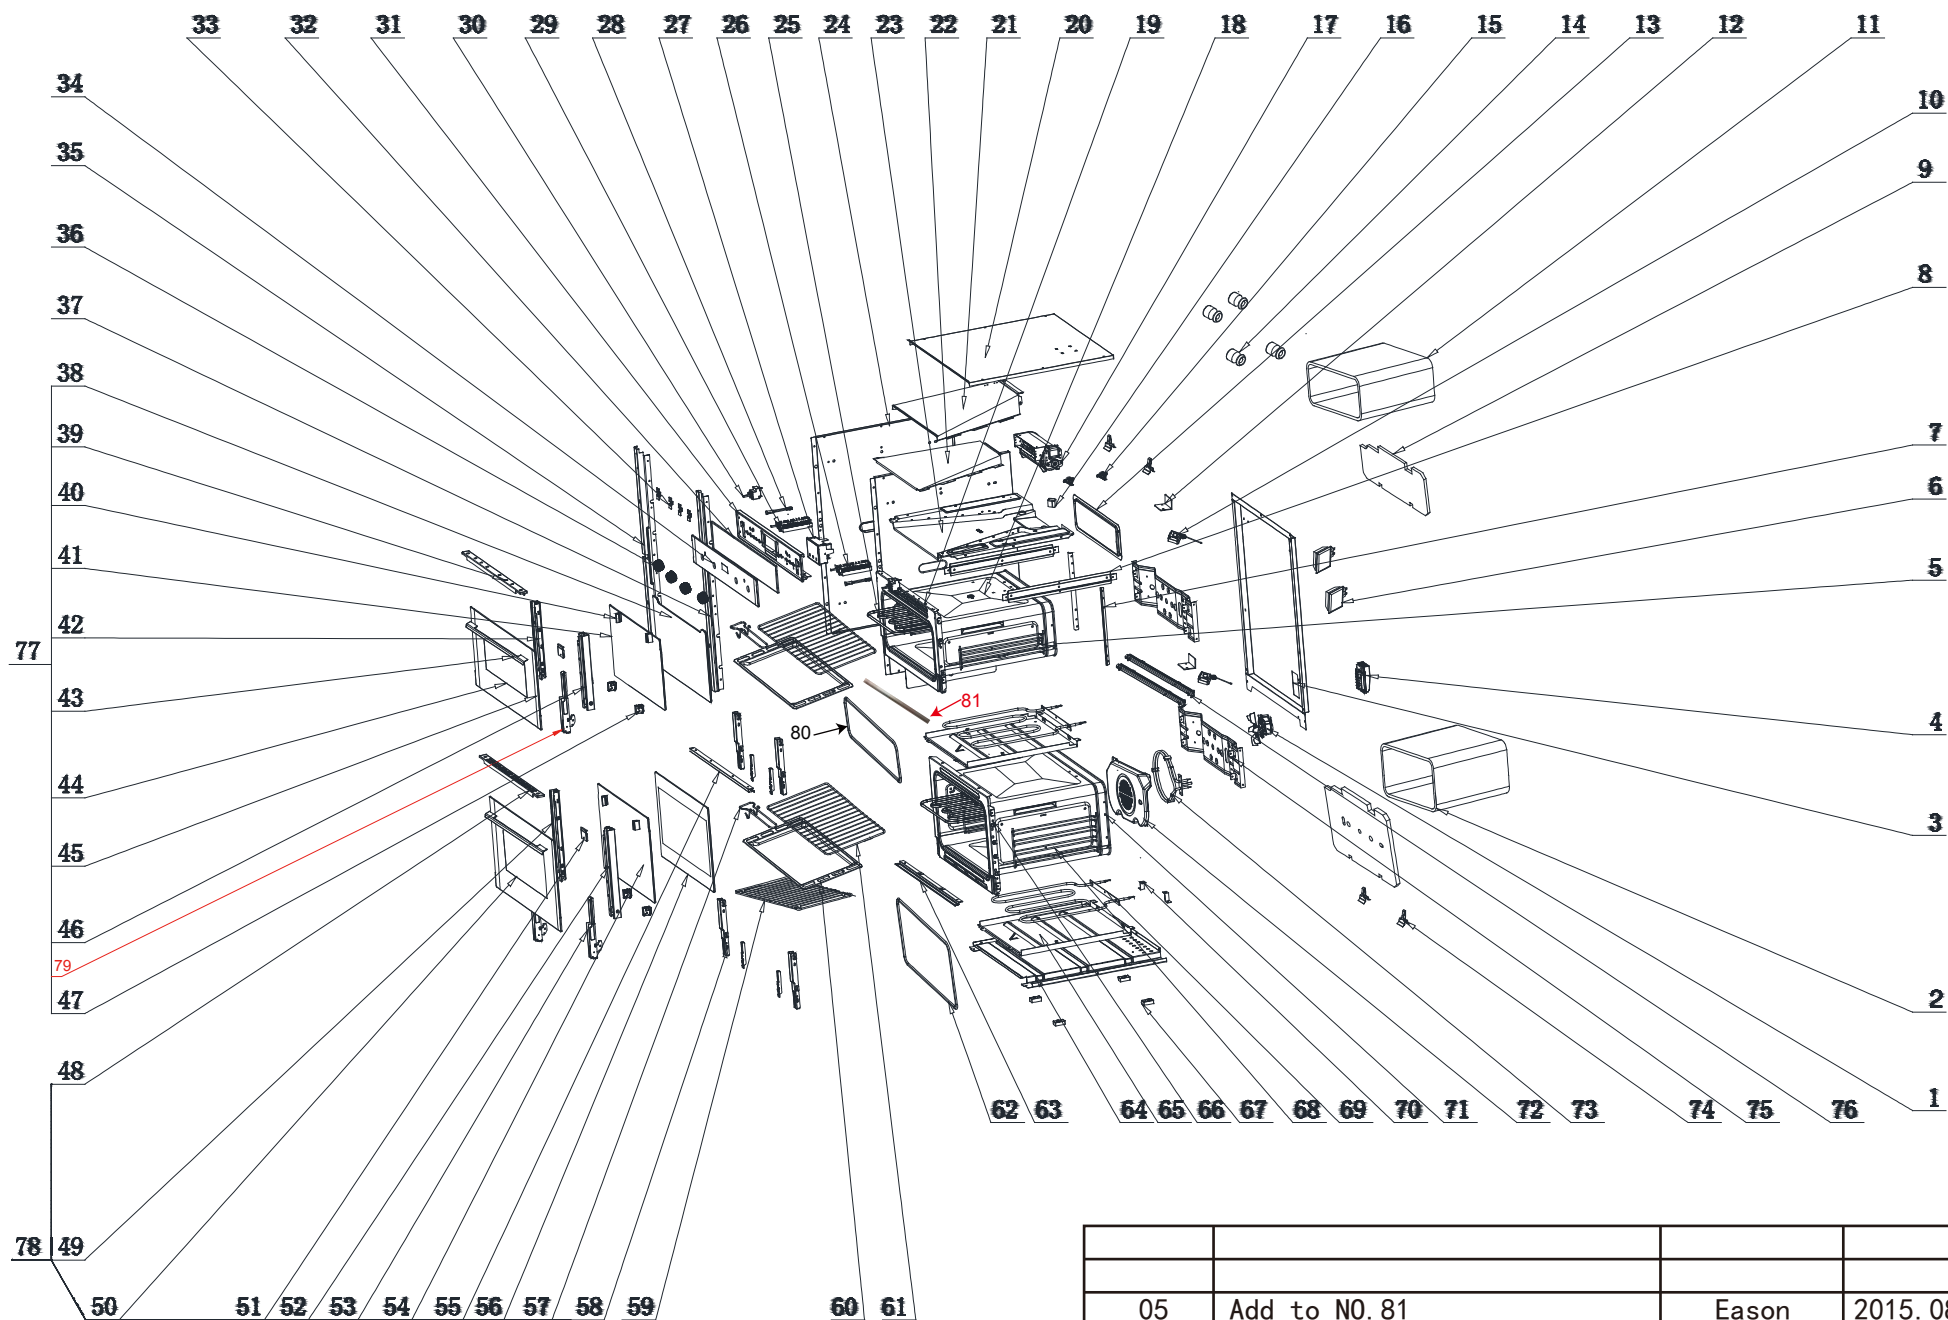

05	Add to NO.81	Eason	2015.08.05
Index	Modify description	Modified by	Date

Overheat Cut Out Thermostat			
Old Style (manual reset with capillary)	Top Oven	Part Number	33311013
	Bottom Oven	Part Number	33311013
New Style (self resetting "klixon" type)	Top Oven	Part Number	33308027
	Bottom Oven	Part Number	36154001

No.	Part code	Part description	Qty
1	33315002	rear fan assembly	1
2	33120002	heat preservation fibre	1
3	33030020	rear oven casing	1
4	33305016	connection box	1
5	33140011	Slider guide bracket	2
6	33317001	lamp assembly	3
7	33027012	side oven cavity bracket	2
8	33027014	cooling fan cover fixing board	2
10	33311013	overheat protector (290℃)	1
11	33120002	heat preservation fibre	1
12	33004010	overheat protector fixing bracket	2
13	33001040	rear heating element casing	1
14	33141002	fixed axis	4
15	33310003	cooling fan thermostat	2
16	33215013	exhausting pipe	1
17	33313030	cooling fan assembly	1
18	33058070	upper oven cavity	1
19	33018073	upper door frame	1
20	33031014	up oven casing	1
21	33028004	up fan cover casing	1
22	33026004	middle fan cover casing	1
23	33027002	bottom fan cover casing	1
24	33033016	side oven casing	2
25	33303006	top heating element	2
26	33301037	function selector	1
27	33300021	digital timer	1
28	33312001	indicator light	2
29	33301034	function selector	1
30	33311018	temperature selector	1
31	33018175	control panel base board	1
33	33006001	control panel fixing bracket	4
34	33101640	control panel	1
35	33014107	left oven bracket	1
36	32244049	42# knob	4
37	33014106	right oven bracket	1
38	33103045	upper inner door glass	1
39	33014105	up door bracket	1
40	33219006	middle glass sealing	1

41	33104024	middle glass	1
42	33014109	left door bracket	1
43	33190043	25# handle	2
44	33102444	glass door panel	1
45	33015283	door trim strip	2
46	33014108	right door fixing plate	1
47	33014050	right inner glass fixing bracket	1
48	33014110	up door bracket	1
49	33014103	left door fixing plate	1
50	33102451	glass door panel	1
51	33006012	handle fixing plate	2
52	33014104	right door bracket	1
53	33180009	3# hinge	2
54	33104031	middle glass	1
55	33027017	up door bracket	1
56	33103044	inner glass	1
57	33172001	tray holder	1
58	33005014	hinge receiver	4
59	33170003	tray grill	1
60	33224005	tray	2
61	33170001	grill	3
62	33218002	door sealing	1
63	33027018	bottom door frame bracket	1
64	33029015	bottom casing	1
65	33003002	bottom heater casing	2
66	33018176	door frame	1
67	33237030	bottom foot	4
68	33140001	slider guide bracket	2
69	33303002	bottom heating element	1
70	33237031	low er oven cavity support	2
71	33058072	low er oven cavity	1
72	33001040	rear heating element casing	1
73	33303004	rear heating element	1
74	33035001	temperature sw itch sensor clip	4
75	33016001	back oven cavity bracket	2
76	33318023	left slider guide	1
76	33318024	right slider guide	1
77	3313100524	upper door assembly	1
78	3313100523	low er door assembly	1
79	33180020	14# hinge	2
80	33803013	door sealing (up)	1
81	33803017	Seal assembly	1