



Double Oven:DOV720AR


Version:02

Date:2014-08-13

Product reference code: DOV720ARB

Complete Upper Door part number: DOV720ARXUDR

DOV720AR Exploded drawing

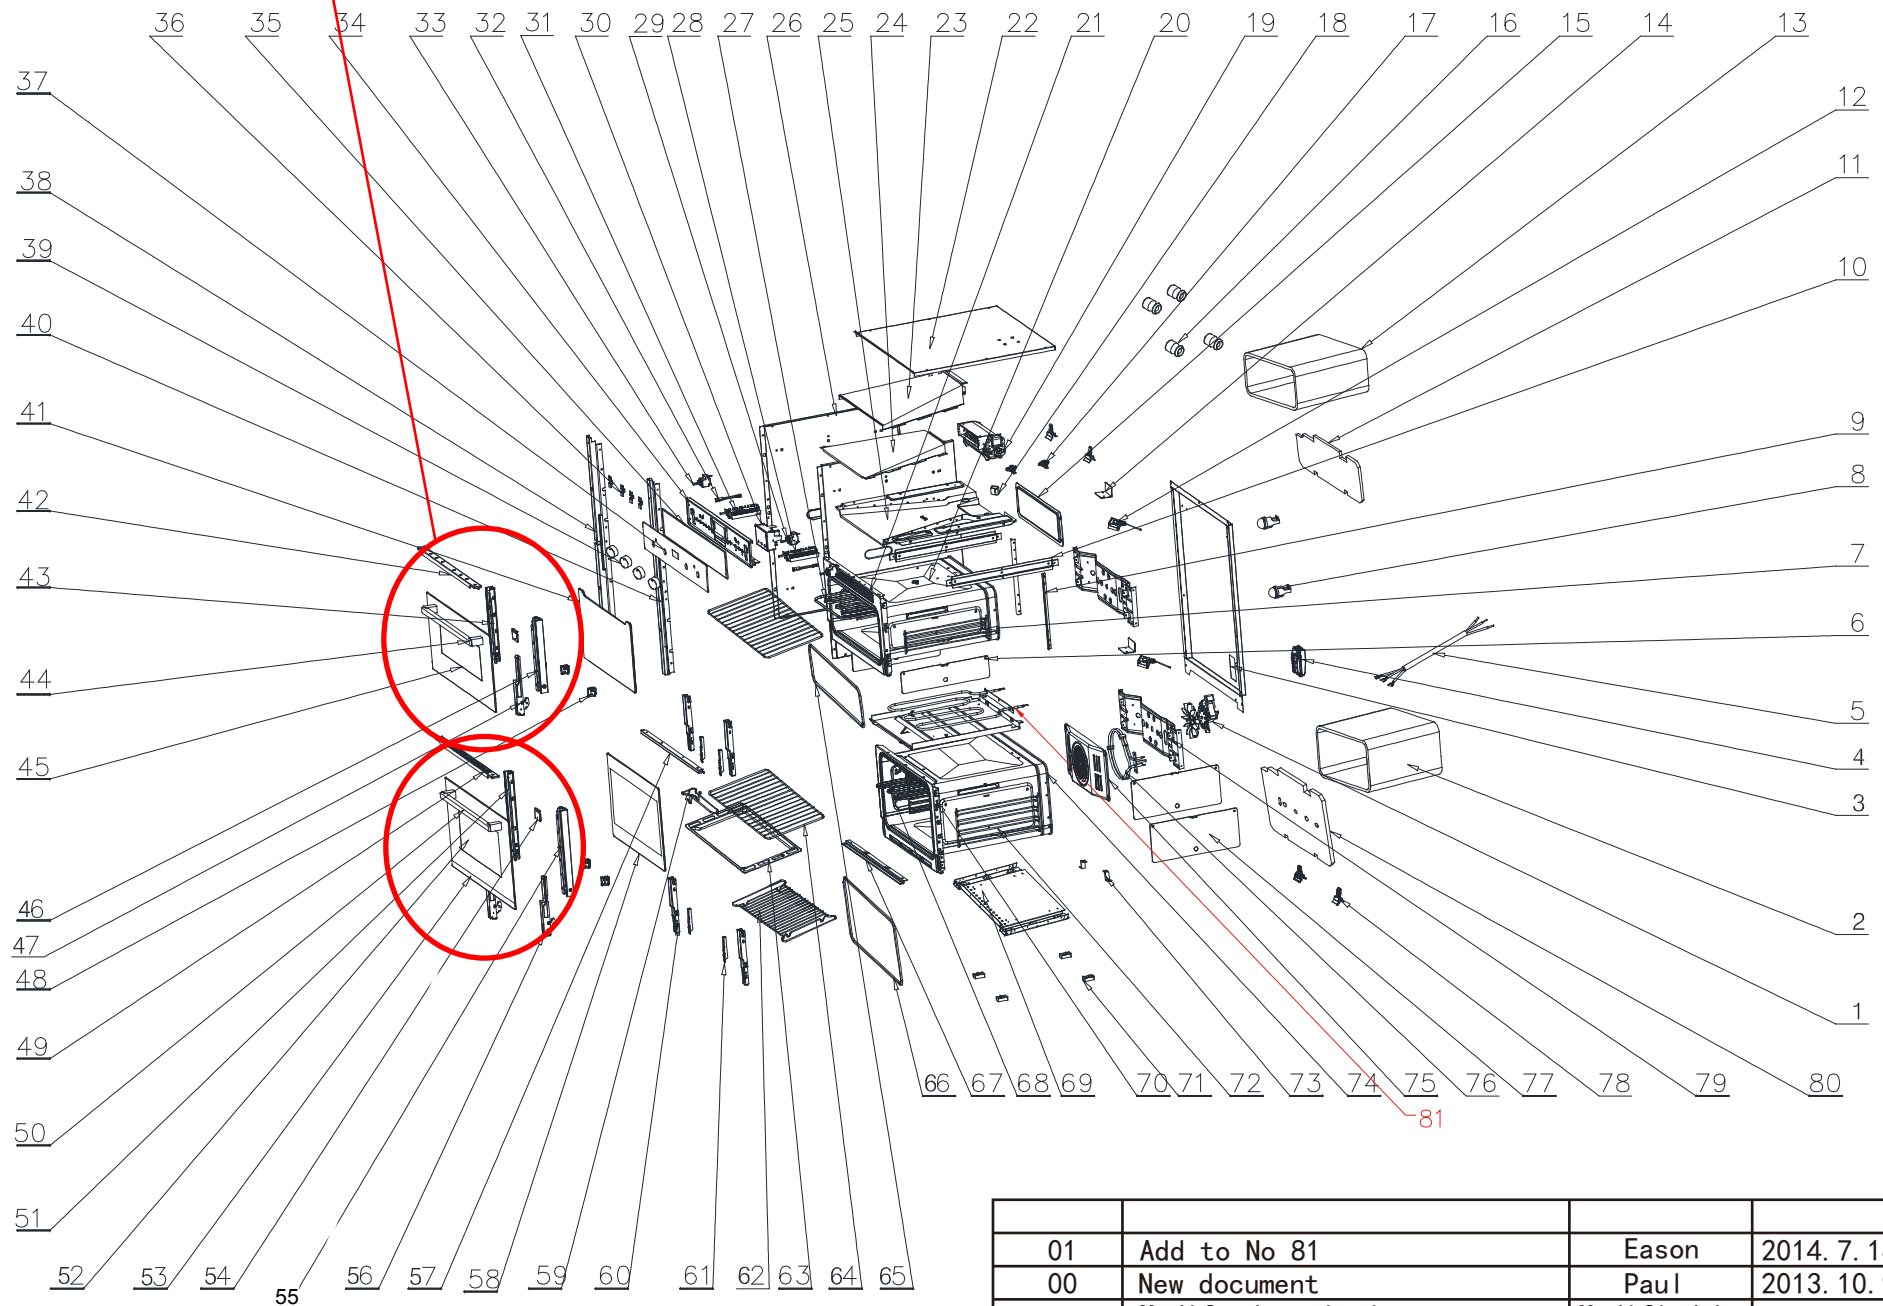

Complete Lower Door part number: DOV720ARXLDR

01	Add to No 81	Eason	2014. 7. 14
00	New document	Paul	2013. 10. 9
Index	Modify description	Modified by	Date

DOV720AR parts list

No	Parts code	Parts name	QTY
1	33315002	grill fan assembly	1
2	33120002	heat preservation fibre	1
3	33030021	back cover board	1
4	33305016	terminal box	1
5	32307016	power cord-European style	1
6	33039015	side rack panel	2
7	33140011	side rack	2
8	33302002	lamp	2
9	33027012	connect board for top and bottom cavity	2
10	33027014	fixing panel for exhausting pipe base board	2
11	33121002	heat preservation fibre	1
12	33311013	overheat protector	2
13	33120002	heat preservation fibre	1
14	33004010	fixing bracket for overheat protector	2
15	33001037	back catalytic line	1
16	33141002	guide rail bracket fixing axis	4
17	33310003	heat dissipation thermostat	2
18	33215013	exhausting pipe	1
19	33313020	cooling fan assembly	1
20	33058060	top cavity assembly	1
21	33018113	cavity panel	1
22	33031014	top cover plate	1
23	33028004	exhausting pipe top cover board	1
24	33026004	exhausting pipe middle cover board	1
25	33027002	exhausting pipe base board	1
26	33033017	side plate (left&right)	2
27	33303006	top heating element	1
28	33301035	function switch	1
29	33311018	temperature adjuster	1
30	33300011	sensor touch timer (3 button)	1
31	33301034	function switch	1
32	33312001	indicator light	2
33	33311008	temperature adjuster	1
34	33018148	fixing panel for switch	1
35	90134002	single adhesive tape	
36	33006001	connect board switch	4
37	33101382	control panel assembly	1
38	33014092	right bracket for out cover plate	1
39	32244031	knob.21	4
40	33014093	left bracket for out cover plate	1
41	33103023	inner glass(top door)	1
42	33014087	door frame top bracket	1
43	33014080	door frame left bracket	1
44	33190010	hanld H7	1
45	33102370	door panel	1
46	33014079	door frame right bracket	1
47	33180018	hinge 12 assembly	2
48	33014049	fixing panel for inner glass	2
	33014050	fixing panel for inner glass	2
49	33014250	top bracket for oven door	1
50	33190010	hanld H7	1
51	33014084	door frame left bracket	1
52	33102465	door panel	1
53	33015286	S.S trim for door panel	2
54	33006012	fixing board for handle	2
55	33014083	door frame right bracket	1
56	33180019	hinge 13 assembly	2
57	33027015	cavity panel connector	1
58	33103029	inner glass	1
59	33172001	handle for rack	2
60	33024006	side bracket for cavity(left&right)	2
61	33005014	fixing board for hinge	2
62	33170003	small grill rack for tray	1
63	33224003	baking tray	1
64	33170001	grill rack	2
65	33803013	door seal assembly	1
66	33803014	door seal assembly	1
67	33027016	bottom support for cavity panel	2
68	33303009	top heating element	1
69	33029015	bottom cover plate	1
70	33018149	cavity panel	1
71	33237030	the support for bottom cover plate	4
72	36038003	side rack	2
73	33006063	the bottom support for cavity	2
74	33058062	cavity assembly	1
75	33001022	the cover plate for back heating element	1
76	33303040	rear heating elements	1
77	33540001	side rack panel	2
78	33035001	thermostat switch sensor fixer	10
79	33016001	back bracket for cavity	2
80	33121002	heat preservation fibre	1
81	33303039	middle heating element	1