




Twin Oven:OVTC60CL

Version:01

Date:2014-10-15

Product reference code: 29398867

OVTC60CL Exploded drawing

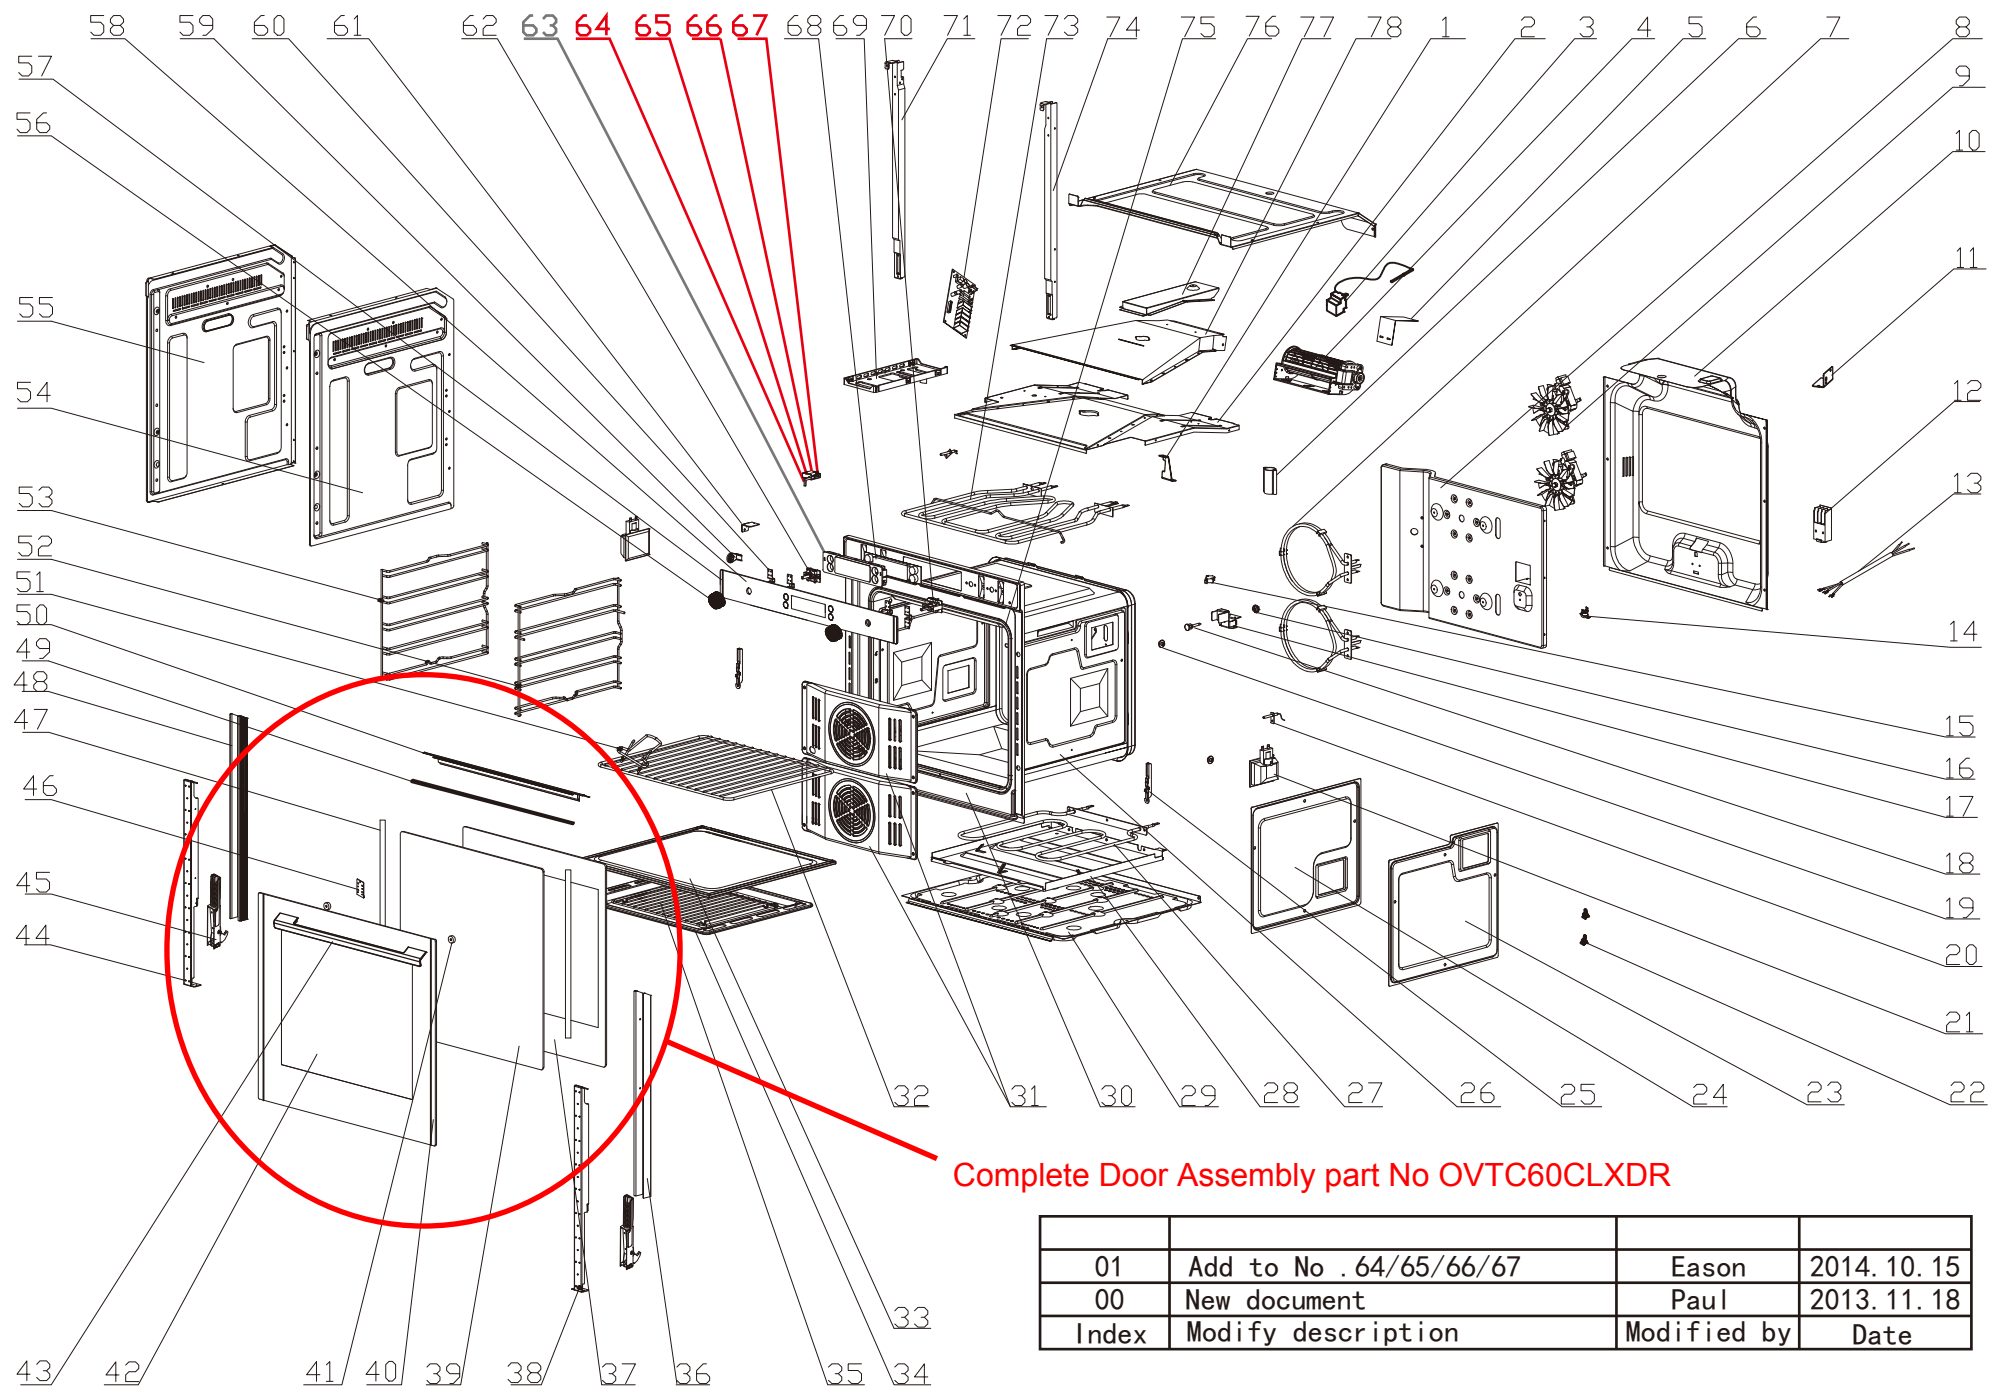

01	Add to No . 64/65/66/67	Eason	2014. 10. 15
00	New document	Paul	2013. 11. 18
Index	Modify description	Modified by	Date

OVTC60CL parts list

No.	part code	part name	Qty
1	33027008	exhausting pipe base board support	1
2	33027005	exhausting pipe base board	1
3	33311013	thermostat (290°)	1
4	33313019	cooling fan assembly	1
5	91127002	cooling fan insulation paper	1
6	33215007	exhausting pipe	1
7	33303040	rear heating element	2
8	33016002	back bracket	1
9	33315016	rear fan assembly	2
10	33030012	back casing	1
11	33004010	thermostat fixing board	1
12	33305008	connection wire fixer	1
13	32307016	power cord	1
14	34152001	thermostat (140°)	2
15	33301022	micro switch	1
16	33301024	top nut	1
17	33004008	micro switch bracket	1
18	33301023	micro switch mandril	1
19	33141005	rail guide fixing base	4
20	33323001	temperature switch sensor	2
21	33317001	lamp assembly	2
22	33035001	temperature switch sensor fixer	2
23	33039006	right rail guide board	1
24	33039007	left rail guide board	1
25	33005004	hinge fixing board	2
26	33058069	oven cavity assembly	1
27	33303039	bottom heating element	1
28	33003002	bottom heating element fixing board	1
29	33029009	bottom plate	1
30	33018171	door frame	1
31	33001039	rear heating element casing-2	1
32	33170001	grill	2
33	33316017	Diaphragm assembly	1
34	33224005	tray	1
35	33170003	spinning lever rack	1
36	33014122	left glass bracket	1
37	33103013	inner glass	1
38	33014010	left hinge support	1
39	33104010	middle glass	1
40	33015280	door decorative board	2
41	33214005	handle rubber pad	2
42	33102450	door panel	1
43	33190043	25# handle	1
44	33014019	right hinge support	1
45	33180008	hinge assembly	2
46	33014063	middle glass fixing bracket	1
47	33219004	middle glass saddle bar	1
48	33014121	right glass bracket	1
49	33219003	up door bracket pad	1
50	33014123	up door bracket	1
51	33172001	tray holder	1
52	33140008	right Lateral Grille	1
53	33140007	left Lateral Grille	1
54	33032002	right oven casing	1
55	33033002	left oven casing	1
56	32244049	42# knob	2
57	33007166	control panel decorative panel	2
58	33101245	control panel	1
59	33133003	socket assembly	1
60	33006006	control panel connection bracket	4
61	33004009	control panel fixing board	1
62	33316006	temperature selector	1
63	33322006	display board fixing box	1
64	33005006	Door switch slider	1
65	33005005	Door switch fixing board	1
66	33301020	door switch	1
67	33319002	Door switch spring	1
68	33321050	display board	1
69	33322007	display board fixing board	1
70	33316005	temperature selector	1
71	33024004	left oven cavity bracket	1
72	33321020	power PCB	1
73	33303041	top heating element	1
74	33025004	right oven cavity bracket	1
75	33803002	door sealing	1
76	33031009	top oven casing	1
77	33026007	exhausting pipe board	1
78	33028007	exhausting pipe casing	1