


COOKE™ &LEWIS

60CM BUILT IN MICROWAVE & GRILL

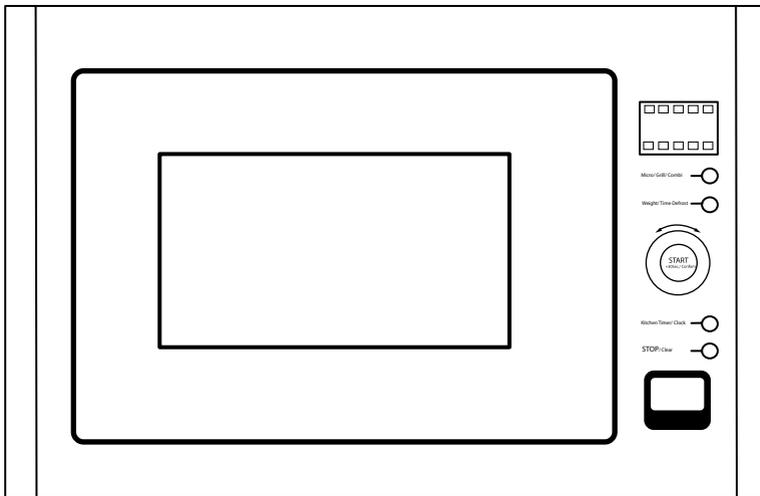


MG25CL - Version: 01




Built-in Microwave & Grill - Barcode: 5052931263653




WARNING: Read the instructions before using the appliance.

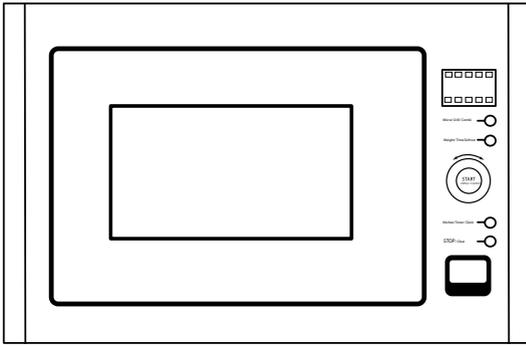


[01] x 1

 


[02] x 1

 

[03] x 1

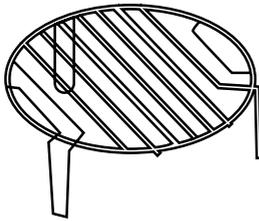

[04] x 1

 

[05] x 1



[06] x 1

1 : 1



[07] x 1 (4 x 32mm)



[08] x 2



[09] x 1

MG25CL Built-in Microwave & Grill

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.


	Getting started...	
	Your product	04
	Before you start	05
	Safety	06
	In more detail...	
	Operation	11
	Care and maintenance	16
	Troubleshooting	21
	Recycling and disposal	22
	Technical and legal information	23
	Guarantee	24
	CE Declaration of conformity	26
	Appendix...	
	Installation	27

Your product

**Note!**

This diagram may be slightly different from the layout of the appliance.


01. Control panel
02. Turntable shaft
03. Turntable ring assembly
04. Glass tray
05. Observation window
06. Door assembly
07. Safety interlock system

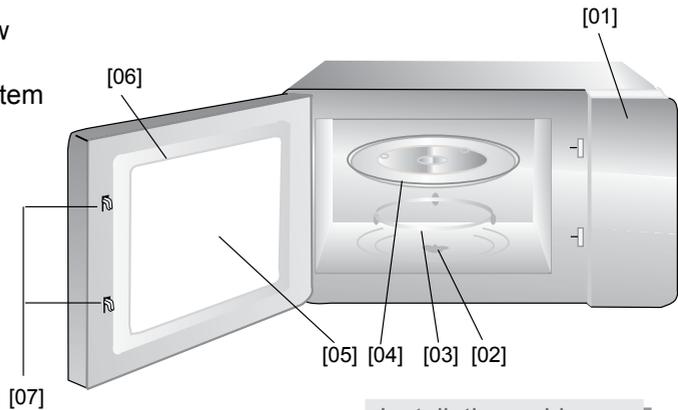

Installation guide
located at the end of
the guidebook

Turntable Installation


- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

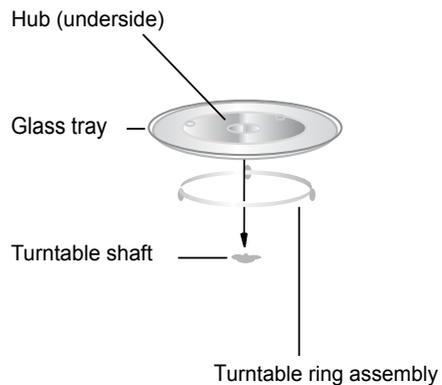

Things to check before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 014475261 (Ireland).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

You will need

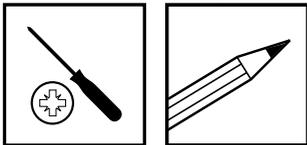

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- Do not allow the electric cables to touch the hot parts of the appliance.
- Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- Do not remove the plug in the presence of flammable gas.
- Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- Please dispose of the packing material carefully.
- Do not use flammable sprays in close vicinity to the appliance.

- ☑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- ☑ Keep the appliance and its cord out of reach of children less than 8 years.
- ☑ Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.
- ☑ A steam cleaner is not to be used.
- ☑ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ☑ The appliance is for domestic use only.
- ☑ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.

- ✓ **Danger of burns!** During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- ✓ **Warning!** Accessible parts may become hot during use. Children should be kept away.
- ✓ **Warning!** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- ✓ **Warning!** It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.
- ✓ **Warning!** Liquids or other food must not be heated in sealed containers since they are liable to explode.
- ✓ Utensils should be checked to ensure that they are suitable for use in microwave ovens.
- ✓ When heating food in plastic or paper containers, check the oven frequently due to the possibility of ignition.
- ✓ If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

- ☑ Microwave heating of beverages can result in delayed boiling; therefore care has to be taken when handling the container.
- ☑ The content of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
- ☑ Eggs in their shell and whole hard-boiled eggs shall not be heated in microwave ovens since they might explode even after microwave heating has ended.
- ☑ Use the appliance exclusively for the preparation of food. Do not use the appliance to dry clothing, paper or other objects.
- ☑ Do not operate the appliance without food in the cooking compartment. Operating without food can damage the appliance.
- ☑ Dishes can become hot due to the heated food. Therefore, always use oven gloves to take the food out of the appliance.
- ☑ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

- ☑ **Warning!** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- ☑ **Caution!** If the appliance operates in combination mode, it is recommended that children use the oven only under the supervision of adults because the temperature may be high.
- ☑ Only use utensils that are suitable for use in microwave ovens.
- ☑ The oven should be cleaned regularly and any food deposits removed.
- ☑ Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- ☑ The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

Precautions to avoid possible exposure to excessive microwave energy

- 

Do not attempt to operate this oven with the door open, as this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- 

Do not place any object between the front face of the oven and the door or allow dirt or cleaner residue to accumulate on sealing surfaces.
- 

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a qualified person.
- 

If the apparatus is not kept in a good state of cleanliness, its surface could be damaged and the lifespan of the apparatus affected, leading to a dangerous situation.
- 

Make sure the appliance is attended when in operation.

Operation keys

Description
Kitchen Timer/Clock
Microwave / Grill / Combi
Start / Confirm
Weight / Time defrost
Stop / Clear

Clock setting

When the microwave oven turns on, the oven will display "0:00", buzzer will sound once.

1. Press "**Kitchen Timer/Clock**" twice, the hour figures flash.
2. Turn  to adjust the hour figures, the input time should be within 0-23.
3. Press "**Kitchen Timer/Clock**", the minute figures will flash.
4. Turn  to adjust the minute figures, the input time should be within 0-59.
5. Press "**Kitchen Timer/Clock**" to finish clock setting. ":" will flash, the clock setting has been finished.



Note!

- 1) If the clock is not set, microwave will not function when powered.
- 2) During the process of clock setting, if you press "**STOP/Clear**", the oven will go back to the previous status automatically.

Microwave cooking

1. Press the "**Micro./Grill/Combi.**" key once, and "P100" will display.
2. Press "**Micro./Grill/Combi.**" for times or turn  to select the microwave power 100% to 10%. "P100", "P80", "P50", "P30", "P10" will display in order.
3. Press "**START/+30Sec./Confirm**" to confirm.
4. Turn  to select the cooking time (the time setting should be 0:05- 95:00).
5. Press "**START/+30Sec./Confirm**" to start cooking.

NOTE:The step quantities for the adjustment time of the cooking switch are as follows:

0-1 min	: 5 seconds
1-5 min	: 10 seconds
5-10 min	: 30 seconds
10-30 min	: 1 minute
30-95 min	: 5 minutes

Microwave power chart

Microwave power	100%	80%	50%	30%	10%
Display	P100	P80	P50	P30	P10

Quick start

1. In standby mode, press "**START**/_{+30Sec./Confirm}" key to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds. The maximum cooking time is 95 minutes.
2. During the microwave, grill, combination cooking and defrost by time, press "**START**/_{+30Sec./Confirm}" to increase the cooking time.
3. In standby mode, turn  anti-clockwise to set cooking time with 100% microwave power, then press "**START**/_{+30Sec./Confirm}" to start cooking.

 **Note!** Under the states of auto menu and defrost by weight, cooking time cannot be increased by pressing "**START**/_{+30Sec./Confirm}".

Grill or combi cooking

Press "**Micro./Grill/Combi.**" once the LCD will display "P100", and press "**Micro./Grill/Combi.**" or turn  to choose the power you want, and "G" "C-1" or "C-2" will display. Then press "**START**/_{+30Sec./Confirm}" to confirm, and turn to set cooking time from 0:05 to 95:00. Press "**START**/_{+30Sec./Confirm}" again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power (C-1) to cook for 10 minutes, you can operate the oven as the following steps.

4. Press "**Micro./Grill/Combi.**" once, the screen display "P100".
5. Continue to press "**Micro./Grill/Combi.**" until the screen displays "C-1".
6. Press "**START**/_{+30Sec./Confirm}" to confirm.
7. Turn  to adjust the cooking time until the oven displays "10:00".
8. Press "**START**/_{+30Sec./Confirm}" to start cooking.

Combination power instructions:

Program	Display	Microwave Power	Grill Power
Grill	G	0%	100%
Combi.1	C-1	55%	45%
Combi.2	C-2	36%	64%

 **Note!** Once half the grill time has passed, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the door, and then press "**START**/_{+30Sec./Confirm}" to continue cooking. If no operation, the oven will continue working.

Defrost by weight

1. Press **"Weight/Time Defrost"** once, the screen will display "dEF1".
2. Turn  to select the food weight. The range of weight is 100-2000g.
3. Press **"START/+30Sec./Confirm"** key to start defrosting.

Defrost by time

1. Press **"Weight/Time Defrost"** twice, the screen will display "dEF2".
2. Turn  to select the cooking time. The maximum time is 95 minutes.
3. Press **"START/+30Sec./Confirm"** key to start defrosting.

Lock-out function for children

Lock: In standby mode, press **"STOP/Clear"** for 3 seconds, there will be a long beep denoting entering the children-lock state and the current time will display if the time has been set, otherwise, the LCD will display "E : : J".

Lock quitting: In locked mode, press **"STOP/Clear"** for 3 seconds, there will be a long "beep" indicating that the lock is released.

Auto menu

4. In standby mode, turn  right to choose the menu from "A-1" to "A-8".
5. Press **"START/+30Sec./Confirm"** to confirm the menu you choose.
6. Turn  to choose the food weight.
7. Press **"START/+30Sec./Confirm"** to start cooking.
8. After cooking finishes, the buzzer sounds five times. The LCD displays "0:00". If the time has been set, current time will be displayed.

The menu chart:

Menu	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetable	200 g	200
	300 g	300
	400 g	400

Auto menu

Menu	Weight	Display
A-4 Pasta	50g (with 450 ml cold water)	50
	100g (with 800 ml cold water)	100
A-5 Potato	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverage	1 cup (120 ml)	1
	2 cups (240 ml)	2
	3 cups (360ml)	3
A-8 Popcorn	50 g	50
	100 g	100

Multi-section cooking

Two stages can be set to maximum. If one stage is defrosting, it should be put in the first stage. The buzzer will ring once after each stage and the next stage will begin.



Note!

Auto menu cannot be set as one of the multi-stage.

Example: if you want to defrost the food for 5 minutes, then to cook with 80% microwave power for 7 minutes. The steps are as following:

1. Press **"Weight/Time Defrost"** twice, the LCD display "dEF2".
2. Turn  to adjust the defrost time of 5 minutes.
3. Press **"Micro./Grill/Combi."** once, LCD will display "P100".
4. Turn  to choose microwave power till "P80" displays.
5. Press **"START"/+30Sec./Confirm"** to confirm, LCD will display "P80".
6. Turn  to adjust the cooking time of 7 minutes.
7. Press **"START"/+30Sec./Confirm"** to start cooking.

Kitchen timer

1. Press "**Kitchen/Timer/Clock**" once, LCD will display 00:00.
2. Turn  to enter the correct timer. (The maximum cooking time is 95 minutes).
3. Press "**START**/_{+30Sec./Confirm}" to confirm setting, timer indicator will be lighted.
4. When the kitchen time is reached, timer indicator will go out. The buzzer will ring 5 times. If the clock has been set (24-hour system), LCD will display the current time.



Note!

The kitchen Time is different from 24-hour system Kitchen Timer is a timer.

Query function

1. In microwave, grill and combination cooking mode, press "**Micro./Grill/Combi.**" the current power will be displayed for 2-3.
2. In cooking mode, press "**Kitchen/Timer/Clock**" to check the current time. It will be displayed for 2-3 seconds.

Other notes

1. "**START**/_{+30Sec./Confirm}" must be pressed to continue cooking if the door is opened during cooking.
2. Once the cooking programme has been set, "**START**/_{+30Sec./Confirm}" is not pressed in 1 minute. The current time will be displayed. The setting will be cancelled.
3. The buzzer sounds once by efficient press, inefficient press will be no response.

Care and maintenance



Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.



For indoor use only.

Care and maintenance



Note!

If the appliance is not in use for a long period of time, disconnect power, clean the inside parts, place the appliance in a dry area and leave the door slightly open.

Cleaning


- Be sure to unplug the appliance from the power supply.
- Clean the cavity of the oven after using with a slightly damp cloth.
- Clean the accessories in the usual way in soapy water.
- The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch:
Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes.
Wipe the oven clean using a soft, dry cloth.

Protection from moisture



Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services. Spraying the appliance with water is forbidden.

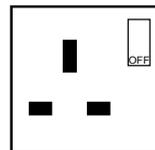

- Avoid placing the appliance in a place when heavy moisture is present in order to minimise the possibility of its metal parts becoming rusted.

Protection from heat

- The appliance should be kept away from any heat source or direct sunlight.

Materials you can use in microwave oven



Caution!

- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Do not overcook food.
- Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
- Eggs in their shells and whole hard-boiled eggs should not be heated in microwave ovens as they may explode, even after microwave heating is complete.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns.
- Microwave heating of beverages can result in delayed eruptive boiling. Therefore, care must be taken when handling the container.

Aluminium foil

- Cover only. Small, smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.

Browning dish

- Follow the manufacturer's instructions. The bottom of the browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.

Dinnerware

- Microwave-safe only. Follow the manufacturer's instructions. Do not use cracked or chipped dishes.

Glass jars

- Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.

Glassware

- Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.

Materials you can use in microwave oven

Oven cooking bags

- Follow the manufacturer's instructions. Do not close with metal tie. Pierce to allow steam to escape.

Paper plates and cups

- Use for short-term cooking/warming only. Do not leave oven unattended while cooking.

Paper towels

- Use to cover food for reheating and absorbing fat. Use supervised for short-term cooking only.

Parchment paper

- Use as a cover to prevent splattering or a wrap for steaming.

Plastic

- Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as indicated on the packaging.

Plastic wrap

- Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.

Thermometers

- Microwave-safe only (meat and sugar thermometers).

Wax paper

- Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Aluminium trays

- May cause arcing. Transfer food into a microwave-safe dish.

Food carton with metal handle

- May cause arcing. Transfer food into a microwave-safe dish.



Metal or metal-trimmed utensils

- Metal shields the food from microwave energy. Metal or metal trimmed utensils must not be placed in the microwave. In more.

Metal twist ties

- May cause arcing and could cause a fire in the oven.

Paper bags

- May cause a fire in the oven.

Plastic Foam

- Foam may melt or contaminate the liquid inside when exposed to high temperatures.

Wood


- Wood will dry out when used in the microwave oven and may split or crack.

Care and maintenance



Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

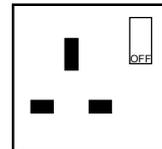

Caution

Do not use hot water, diluents, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc. for cleaning so as not to damage the enamel coating and plastic. The appliance must not be cleaned directly with water as this could cause rusting or render the insulation less efficient.

- The appliance should be cleaned after use.
- Wipe the inner and outer surface of the appliance and its accessories with a wet cloth.
- The door frame and seal and adjoining parts must be cleaned carefully with a damp cloth when dirty.

Troubleshooting

The following circumstances may not be a problem. Do not contact the customer services until the problem has been confirmed.

Fault	Cause	Solution
Microwave oven interference	Radio and TV reception interference may be noticed when the microwave oven operating. This is similar to the interference of small electrical appliances such as a mixer, vacuum cleaner or electric fan.	This does not indicate malfunctioning.
	Low-power microwave cooking.	This does not indicate malfunctioning.
Steam accumulating or hot air released out of vents	The steam given off from food will mostly be released through the vents, although some could accumulate on places such as the oven door.	This does not indicate malfunctioning. Please dry surfaces with condensation.
Oven started accidentally with no food inside	Human error.	Stop the appliance, this is very dangerous. It is forbidden to run the appliance with no food inside.
	Appliance error.	Contact the customer services.
Oven cannot be started	Power cord not plugged in properly.	Disconnect the plug and connect again after 10 seconds.
	Fuse blowing or circuit breaker tripping.	Switch off and replace the fuse.
	Trouble with socket.	Test socket with another electrical appliance.

Troubleshooting

Fault	Cause	Solution
Oven does not heat	Door not closed properly.	Close door properly.
Glass turntable makes a noise when microwave oven is operating	Dirty roller rest and oven bottom.	See <i>Care and maintenance</i> section.

If your appliance is still not functioning properly after making the above checks, please contact customer services.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical and legal information

Power supply	: 230 V~, 50 Hz
Rated input power (Microwave)	: 1450W
Rated output power (Microwave)	: 900W
Rated input power (Grill)	: 1000W
Oven capacity	: 25l
Turntable diameter	: 315mm
External dimensions (WxHxD)	: 595 x 388 x 400mm
Net weight	: 19kg

Legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Guarantee

This appliance is covered by a full manufacturer's 2 year parts and 2 year labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Extended parts only warranty

As testimony to our commitment to you as a valued customer of Cooke & Lewis, we will offer you an additional 3 years parts warranty absolutely free.

If during the extended parts warranty period the appliance fails and it is considered uneconomical to repair our Customer Service Department will offer you the opportunity to purchase the same or equivalent model at a discounted price.

All parts supplied free of charge under the extended warranty must be fitted by our approved engineers and will be subject to a call out charge to fit the part.

Guarantee

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland
Phone: 0844 800 1128
Email: uksupport@apelson.co.uk
Web: www.myspareparts.co.uk
Email: uksupport@apelson.co.uk

Republic of Ireland (Eire)
Phone: 014475261

CE Declaration of Conformity

CE

MANUFACTURER: CATA

ADDRESS: C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)

We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.

MACHINE APPLICATION: MG25CL

TYPE: Built-in Microwave & Grill

EC DIRECTIVES APPLIED: Comply with the European Directives 2006/95/CE: LVD and the 2004/108/CE: EMC

APPLIED HARMONIZED STANDARDS:

- EN 60335-2-25/A2:2006
- EN 60335-2-6/A2:2008
- EN 60335-1/A13:2008
- EN 62233:2008

APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS: ISO9001.2008

PLACE: Torelló

David Sala

Technical Manager

This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.


B&Q plc,
 Chandlers Ford, Hants,
 SO53 3LE United Kingdom
www.diy.com

Installation




Caution

Do not apply force to any external part when moving. Good ventilation is required around the appliance for easier dissipation of heat and low power consumption. Sufficient clearance is required around the appliance.

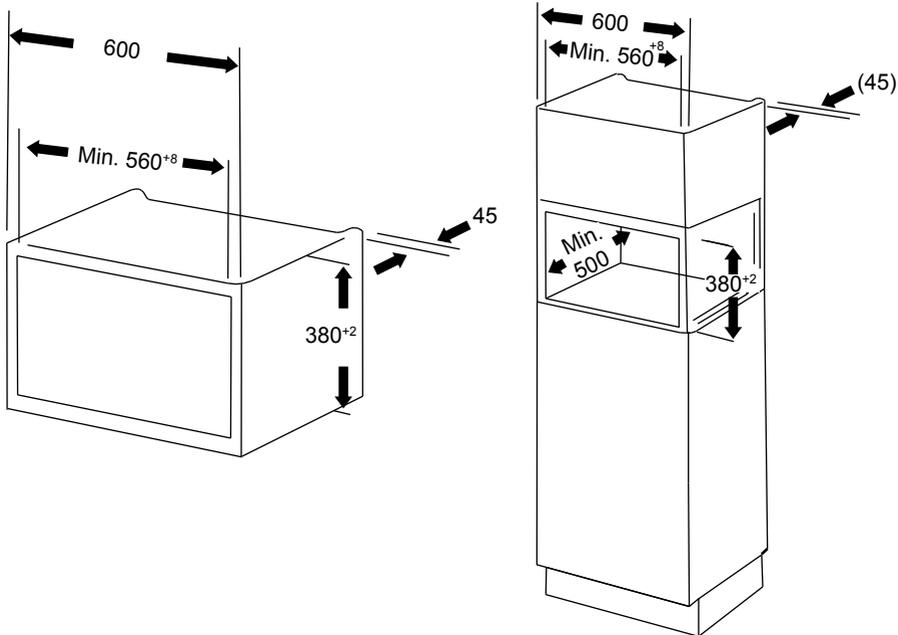


- This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cupboard.

Turntable installation


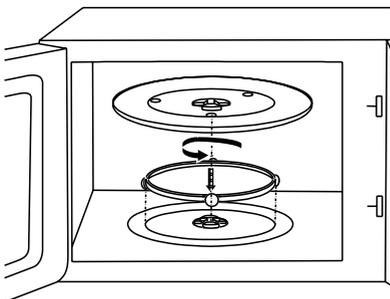


- Never place the glass tray upside down. The glass tray should never be restricted. Both the glass tray and the turntable ring assembly must always be used during cooking.
- All food and food containers must be placed on the glass tray for cooking.
- If the glass tray or turntable ring assembly cracks or breaks, contact customer services.

 01




[06] x 1

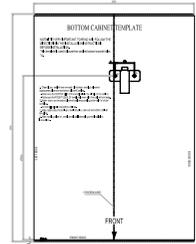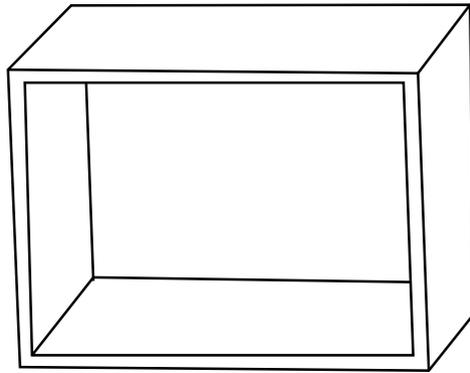

Read the instructions on the template [06], then put the template on the bottom of the cabinet.


02

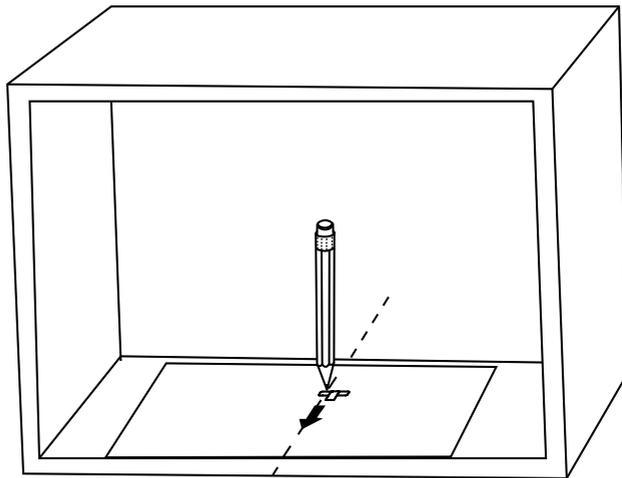

Centre line

Using a pencil mark two holes on the cabinet according to markings "a" on the template.

03

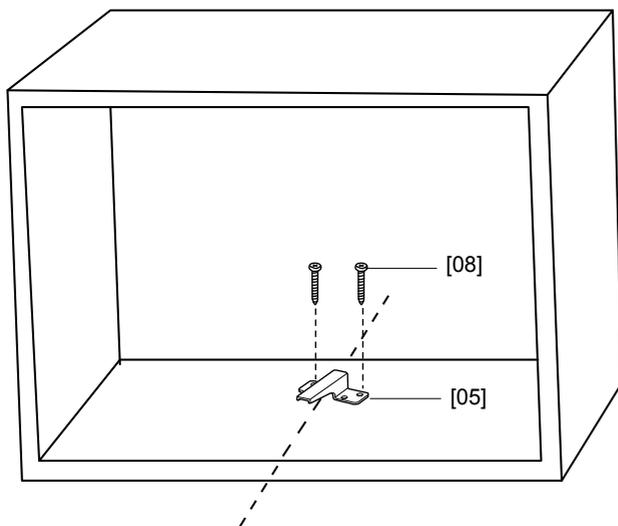


[05] x 1



[08] x 2

Remove the template and fix the bracket [05] using two screws [08].

04

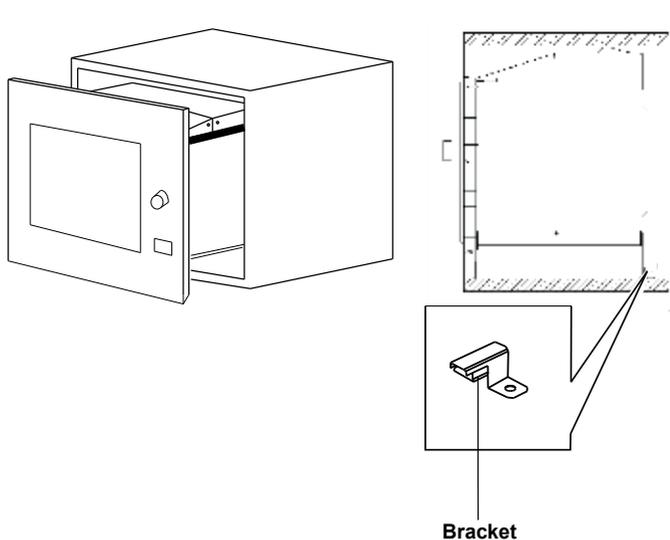

Place the oven inside the cabinet.

- Make sure the back of the oven is locked by the bracket.
- Do not trap or kink the power cord.


05



[07] x 1



[09] x 1

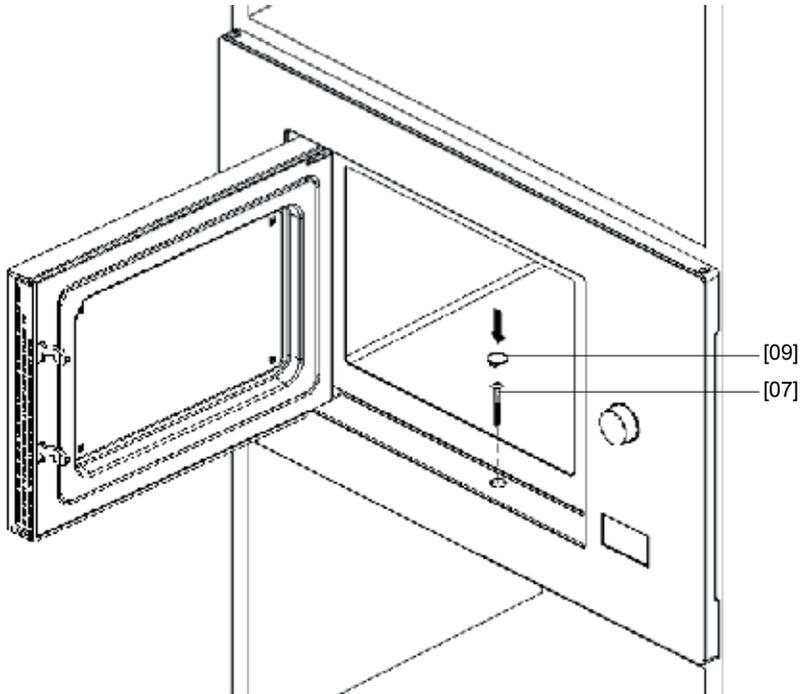

Open the door and fix the oven to the cabinet using one screw [07]. Now cover the screw with the plastic cover [09].

Appliance is now ready for use.



B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com
