


COOKETM
&LEWIS

Built-in Electric Oven

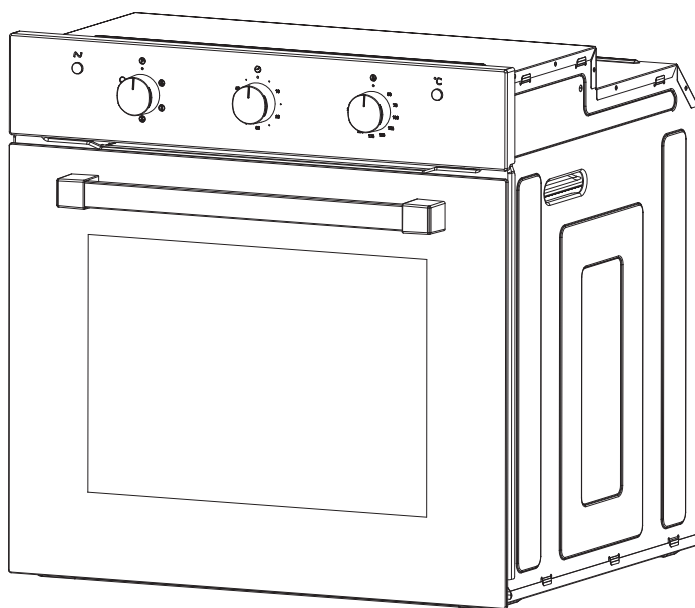

OVFO60 – V01 – 2016

OVFO60

5052931820665 / 5052931820658



Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting **started...** 03

Safety	03
Your product	05
Before you start	06



In more **detail...** 06

Operation	06
Care and maintenance	09
Troubleshooting	11
Recycling and disposal	12
Technical and legal information	13
Guarantee	14
Installation	16

THESE INSTRUCTIONS ARE FOR YOUR SAFETY. PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.

- ☑ **WARNING:** The appliance and its accessible parts become hot during use.

Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.

- ☑ Regularly check the power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- ☑ **Warning!** Accessible parts may become hot during use. Young children should be kept away.

- ☑ **Danger of burns!** During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- ☑ Means for full disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- ☑ Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- ☑ A steam cleaner is not to be used.
- ☑ Children less than 8 years of age shall be kept away unless continuously supervised.
- ☑ Regarding the details indicating the correct installation of the shelves, refer to section: *<Adjusting the shelf position>*.
- ☑ Regarding the details of installation, refer to section: *<Installation>*.
- ☑ Regarding precautions during user maintenance, refer to the section: *<Care and maintenance>*.
- ☑ The appliance must not be installed behind a decorative door in order to avoid overheating.
- ☑ **Warning!** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

Your Product



Note!

Diagrams are shown in the last section of this instruction manual.
The diagrams may be slightly different from the layout of the appliance.





Fig. 1

- | | |
|-------------------------|---------------------------------------|
| 1. Control panel | 6. Door handle (not visible) |
| 2. Fixing openings (4x) | 7. Power cable |
| 3. Oven lamp | 8. Side rails |
| 4. Shelf level markings | 9. Side handles for carrying the oven |
| 5. Door | |

Fig. 2

- | | |
|---------------------------|------------------|
| 10. Cooking mode knob | 15. Grill pan |
| 11. Alarm knob | 16. Oven shelf |
| 12. Temperature knob | 17. Spacer (4x) |
| 13. Temperature indicator | 18. Screw (4x) |
| 14. Power indicator | 19. Grill trivet |



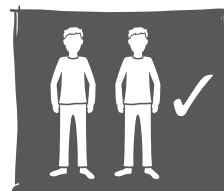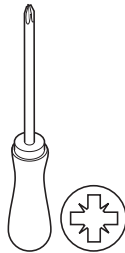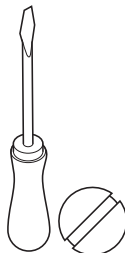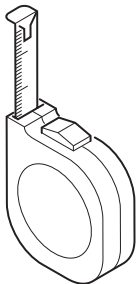


You Will Need (not supplied)



Advice!

Two people are recommended to install this appliance.

Things to Check Before You Start

-  To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services or retailer.
-  Check the package and make sure you have all of the parts listed.
-  Decide on the appropriate location for your product.
-  If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
-  If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

Introduction



Note! Before using the oven for the first time we recommend that the oven be switched on and set to its highest temperature. Keep the oven door closed and leave the appliance on for 1.5 hours with nothing in it. Ensure adequate ventilation during this process by opening doors and windows in the room. Any odours created during this operation are due to the evaporation of substances used to protect the appliance during storage prior to installation.

Initial Cleaning









Warning!

- Clean the oven thoroughly before using it for the first time.
- Do not use sharp or abrasive cleaning materials. These could damage the oven surface.

1. Open the door [5].
2. Clean all oven accessories with warm water or washing up liquid and polish dry with a soft clean cloth.
3. Clean the oven interior with a soft clean cloth.
4. Wipe the front of the appliance with a damp cloth.
5. Let the oven and all accessories dry well.

Product Functions

	Off switch	Switches the oven off.
	Oven light	The oven light will illuminate in the oven cavity. All other cooking modes are disabled. Note: Oven light also illuminates during all operation modes.
	Defrosting	Only the fan comes on and the food is thawed by ventilation without the heat.
	Convention with fan	The upper and bottom heating elements are both switched on, accompanied by the fan. An even temperature is produced on all shelves within the oven. It is recommended that the oven is preheated for 10-15 minutes before commencing cooking.
	Grill	Only top heating element switches on. Heat is distributed by natural convection and this means that the top half of the oven is warmer than the bottom half. Food should be placed on a higher shelf if the food is to be crisped. It is recommended that the oven is preheated for 10-15 minutes before commencing cooking.
	Bottom heating	Only bottom heating element switches on. This provides more concentrative heat to the base of food without browning.

Practical Cooking Advice

- Read the information of the food packaging for the cooking temperatures and times.
- Check that frozen food is completely thawed before cooking, unless indicated otherwise.

Operation





Note!

If preheating is required, we recommend a duration of 10-15 minutes before food should be placed inside the oven. Please remember the preheating time is in addition to the time required to thoroughly cook the food.

The following tips explain how to reduce total environmental impact (e.g. energy use) of the cooking process.


- Try not to open or close the oven door [5] frequently during cooking.
- Keep the oven door [5] clear so that you can look inside during cooking easily.
- If possible, defrost frozen food in a way which does not need any power consumption.
- It takes less time to cook food which has large surface area to volume ratio.

Switching On / Off

1. Rotate the timer knob (11) to a desired cooking time.
2. Rotate the cooking mode knob (10) to a desired cooking mode.
3. Rotate the temperature knob (12) to a desired cooking temperature.
4. The oven now switches on and starts operation.
The power indicator (14) and temperature indicator (13) light up.
5. Once the cooking time has been reached, the timer's buzzer emits a sound.
6. After cooking:
 - > Set the temperature knob (12) to  position.
 - > Set the cooking mode knob (10) to  position.



Note!

The temperature indicator  lights up from time to time during use. This indicates the oven is heating up to maintain set temperature.



Caution!


The appliance will not switch off automatically after use. Never leave the appliance unattended during use!

Care and Maintenance

Warning!



Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact Customer services or Stores.

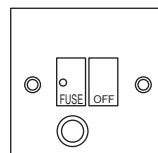

Caution!

Do not use hot water, diluents, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc. for cleaning so as not to damage the enamel coating and plastic. The appliance must not be cleaned directly with water as this could cause rusting or render the insulation less efficient.



Warning!

- Do not use excessive amounts of water when cleaning the product.
- Never use a steam cleaner to clean the inside of the oven.

How to Keep Your Oven in Good Condition

Before cleaning or performing maintenance, disconnect the oven from the power supply.

To extend the life of your oven, it must be cleaned frequently, keeping in mind that:

- The enamelled and stainless steel parts of the appliance should be wiped clean using a damp cloth using the minimum possible amount of soap and lukewarm water.
- Do not use abrasive powders or corrosive substances which could ruin the surfaces.
- Remember that stainless steel could tarnish the surface and restoring these surfaces can be difficult. Specialist stainless steel cleaners are available on the market.
- After cleaning, these surfaces should be wiped with a clean cloth and lukewarm water to remove any traces of detergent.

- The inside of the oven should preferably be cleaned immediately after use, when it is still warm, with hot water and soap. The soap should be rinsed away and the interior dried thoroughly. Avoid using abrasive detergents (for example cleaning powders, etc.) and abrasive sponges for dishes or acids (such as lime scale remover, etc.) as these could damage the enamel. If the grease spots and dirt are particularly tough to remove, use a special product for oven cleaning, following the instructions provided with the product.
- If the oven is in use for an extended period of time, condensation may form. Once the oven has cooled, remove the condensation using a dry cloth.
- There is a rubber seal surrounding the oven opening which creates a heat seal, guarantees its perfect functioning. Check the condition of this seal on a regular basis. If necessary, clean it and avoid using abrasive products or objects to do so. Should it become damaged, please contact your nearest After-Sales Service Centre or Store. We recommend you avoid using the oven until it has been repaired.
- Never put aluminium foil at the bottom of the oven, as the build up of heat could compromise cooking and even damage the enamel.
- Clean the glass door [5] using non-abrasive products or sponges and dry it with a soft cloth.

Replacing the Oven Light Bulb



Warning! Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

- Remove all pans and grills from inside the oven to easily access the bulb [3].
- The oven lamp [3] is situated at the rear of the oven cavity.
- Unscrew the glass cover and the old light bulb [3]. Dispose of it safely and ecologically (→ Fig. 3).
- Insert a new bulb of the same type (15 W or 25 W, 300 °C, type G09) in place. Make sure it is correctly inserted.
- Screw the glass cover back into place.

Removing the Rear Glass for Cleaning



- To simplify cleaning, the rear glass panel can be removed (→ Fig. 10).
- After loosening 2 screws fixing the side supports of the glass, remove the supports and then the glass panel. Handle with care!
- After cleaning, replace the glass panel in a reverse order.

Removing the Door From the Oven

To simplify cleaning interior of the oven, the door [5] can be removed (→ Fig. 9). Follow below steps to do so:

- Open the door [5] fully to position “A”.
- Lift the two mobile links of the hinges to position “B”.
- Close the door [5] to the half-way position.
- Lift the door [5] upwards and remove it by sliding them outwards. Hold the door [5] by the sides close to the hinges when doing this.
- After cleaning, replace the door [5] in a reverse order.

Troubleshooting

FAQ	Solution
What should I do if the oven does not heat up?	<p>Check to see if one of the following actions resolves the issue:</p> <ul style="list-style-type: none">• The oven may not be switched on. Switch on the oven (→ <i>Switching On / Off</i>).• Check to see if the required settings have been applied.• A household fuse may have blown or a circuit breaker may have tripped.• Replace the fuses or reset the circuit. If this happens repeatedly, call the Service Centre.
What should I do if, even though the oven function and temperature have been set, the oven does not heat up?	<p>There may be problems with the internal electrical components. Call the After-Sales Service Centre or the Store.</p>
What should I do if I cannot change the set temperature?	<p>Make sure to have used the temperature knob [12]  correctly.</p>
What should I do if the oven light does not illuminate?	<p>The oven light is faulty. Replace the oven light bulb (→ <i>Replacing the Oven Light Bulb</i>).</p>
The grill does not heat up properly?	<p>The grill power is set too low. Turn the temperature knob [12]  to a higher temperature.</p>

Recycling and Disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Information for Dismantling

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with your Local Authority or retailer for recycling advice.




Technical Data

Power supply: 220-240 V~, 50/60 Hz

Output power: 2000-2380 W

Legal Information

The manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Technical parameters (www.diy.com)			
Item	Symbol	Value Declared	Unit
Model identification	OVFO60		
Type of oven	Built-in Electric Oven		
Mass of the appliance	M	27.5	kg
Number of cavities		1	
Heat source per cavity (electricity or gas)	Electricity	0.91 (at position )	kWh/cycle
Volume per cavity	V	47	L
Energy consumption required to heat a standardised load in a cavity of an electric heated oven during a cycle in fan-forced mode per cavity (electric final energy)	EC _{electric cavity}	0.74	kWh/cycle
Energy Efficiency Index per cavity	EEI _{cavity}	Conventional (at position ): 121.8 Fan-forced (at position ): 99.0	--

The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

Guarantee

Guarantee

B&Q & Screwfix

At Cooke & Lewis, we meticulously select high quality and sustainable materials and apply rigorous manufacturing techniques to bring you a range of beautifully designed products that last. That is why we are able to offer a 2 year guarantee against manufacturing defects on our products.

Our guarantees are valid from the date of purchase only on products installed in accordance with our instructions and in normal domestic use. Proof of purchase required. This guarantee does not cover:

- normal wear and tear to the product
- products which are damaged or become defective due to failure to store, assemble, transport, install, use, connect to correct power input, care for or uninstall the products in accordance with the instructions
- damage caused by faulty installation
- damage caused by modification
- products that have been damaged during transportation
- damage or corrosion caused by cleaning with inappropriate materials
- damage caused by use of unsuitable or counterfeit accessories and/or spare parts
- consumable items such as carbon filters and bulbs
- Claims arising from non-domestic use or commercial environment

Guarantee

If the retailer determines that a claim under this guarantee is valid, the retailer will replace the affected product or part. If the retailer cannot supply you with the same product because it is no longer available, the retailer will provide you with the closest alternative in terms of quality and price.

All claims must be supported with the original receipt or other reasonable proof of purchase.

Should any person other than an authorised engineer modify or attempt to repair the appliance then the warranty will be invalid.

This guarantee is in addition to and does not affect your statutory rights as a consumer.

For residents of the UK, Ireland and France, to claim under this guarantee, please contact customer services in any of the following ways: UK & Northern Ireland

Phone: 03448001128

Email: uksupport@apelson.co.uk

Web: www.sparezone.co.uk

Republic of Ireland (Eire)

Phone: 014475261

Email: uksupport@apelson.co.uk

*local rates apply



This appliance must be installed correctly by a qualified person, strictly following the manufacturer's instructions.



Warning! Danger of electric shock!
The power supply to the appliance must be cut off before the appliance is installed completely.

Only a qualified person in compliance with the instructions provided can install the appliance. The manufacturer declines all responsibility for improper installation, which may harm persons and animals and damage property.

Installation of Built-in Ovens

For correct installation, this product can be fitted under the work surface in a built under housing unit (→ Fig. 4).

Ensuring Sufficient Ventilation (→ Fig. 5)

Figure 5 shows the air circulation requirements including a slot that should be cut into the plinth if fitted.

It is essential when installing your oven there is adequate air circulation around the appliance to ensure the correct operation of the appliance. Inadequate air circulation will greatly impair the performance of the appliance and can affect adjacent cabinets due to the rise in temperature. The panels of the kitchen unit that are next to the oven must be made of a heat resistant material. Ensure that the glues of units that are made of veneered wood can withstand temperatures of at least 120 °C. Remove the back of the kitchen unit to ensure an adequate current of air circulates around the oven.

Handling and Fixing the Oven

Connect to mains power supply ensuring the cable is not bent.

Lift the oven into housing unit using both side handles [9] at the sides of the appliance.
Do not lift it with the door handle [6], otherwise, the glass door [5] might shatter (→ Fig. 7).

Once the oven has been lifted into place inside the housing unit, use the 4 openings located within the sides of the metal casing of the oven to secure it. Secure with 4 spacers [17] and 4 screws [18] (→ Fig. 8).

Adjusting the Shelf Position

- To minimize the risk of burns when handling hot pans, grills or oven dishes, always place grill pan [15] and oven shelf [16] correctly between the side rails [8].



Note!

Shelf levels are numbered from the bottom up. Levels **4** and **5** are used mainly for the grill function. Please refer to the cooking guides provided throughout this manual to determine appropriate shelf levels for your dishes.




Caution!

When placing the grill pan [15] and oven shelf [16], slowly slide onto the side rails [8] and ensure it rests evenly and stably on the side rails [8].

- For better cooking, other tools, e.g. a rotisserie (not provided), can be used. The rotisserie works in combination with the grill element to heat the food equally.

Electrical Connection

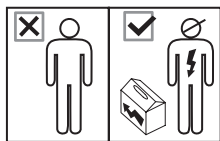

All installation work must be carried out by a competent person or qualified electrician.

Before connecting the mains supply, ensure that the mains voltage corresponds to the voltage on the rating plate on the appliance.



Warning!

This appliance must be earthed.

Mains Supply could be connected to the Mains Voltage by Direct Connection (→ Fig. 6).



Warning!

Make sure the fused spur outlet is located in an accessible position.

Direct Connection

- If the appliance is being connected directly to the mains, an omnipolar circuit-breaker must be installed with a minimum opening of 3 mm between contacts.
- If the cable is damaged or to be replaced, the operation must be carried out by a qualified electrician with dedicated tools to avoid any accidents.
- The installer must ensure that the correct electrical connection has been made and that it complies with wiring table below.
- The cable must not be bent or compressed.
- The cable must be checked regularly and replaced by authorized technicians only.

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate on the appliance.


The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3 mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 13 Amps.


The wires in the mains lead are coloured in accordance with the following code:

Brown	=	L - Live
Blue	=	N - Neutral
Green and Yellow	=	 - Earth


The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Disconnect the appliance from the mains supply before carrying out any kind of maintenance or cleaning.

1

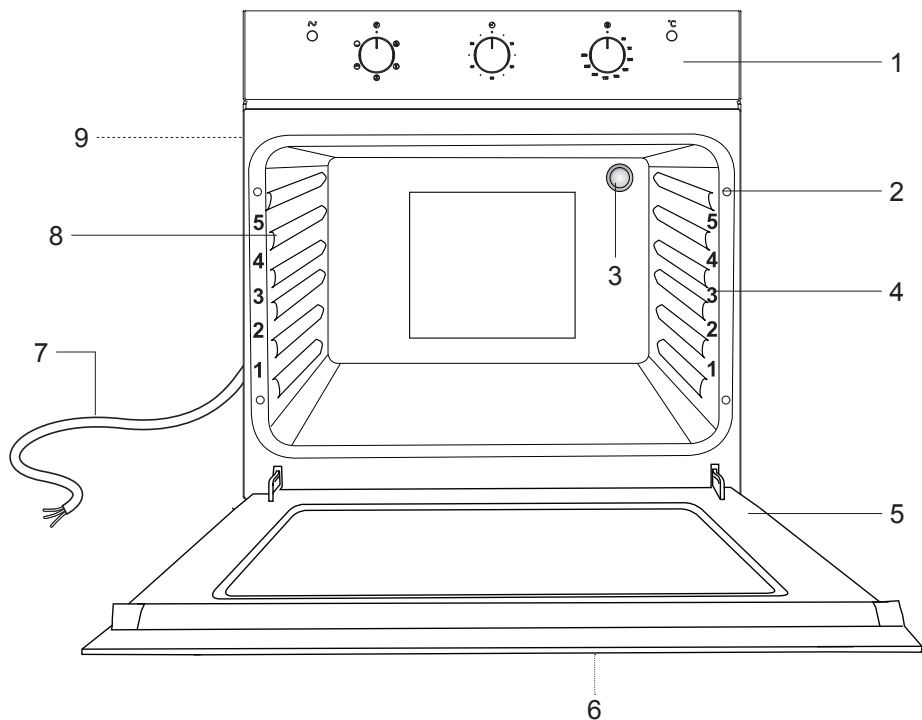


2

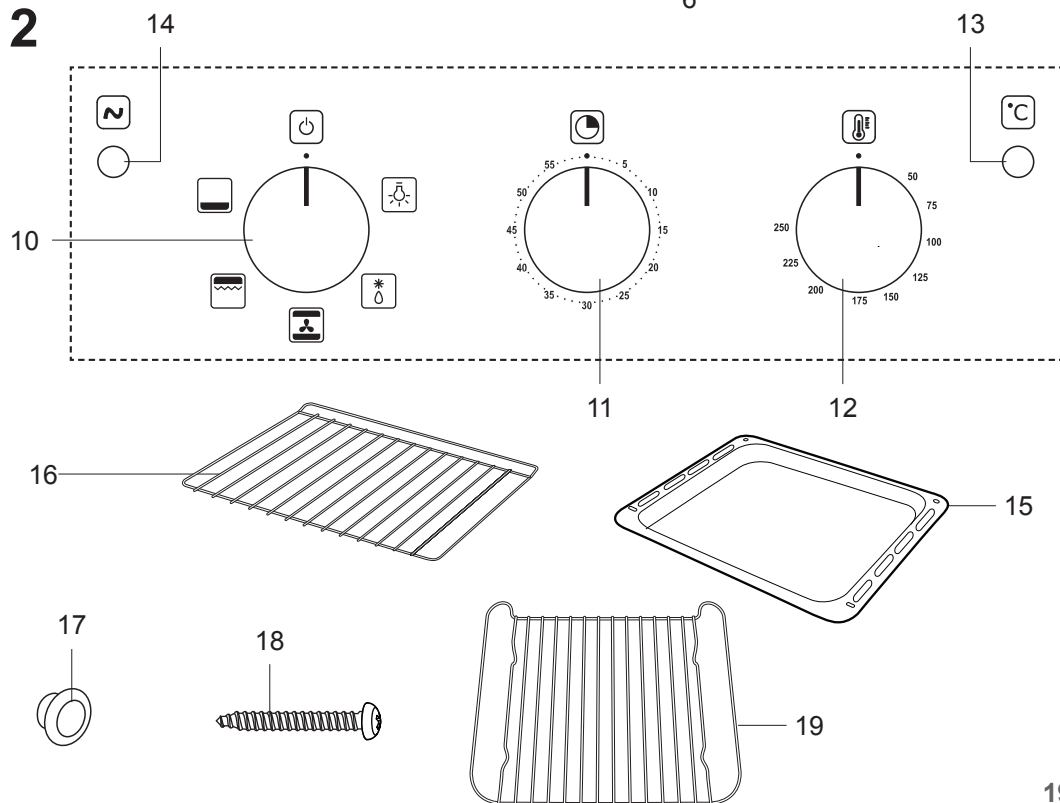


3


15 W or 25 W, 300 °C, type G09

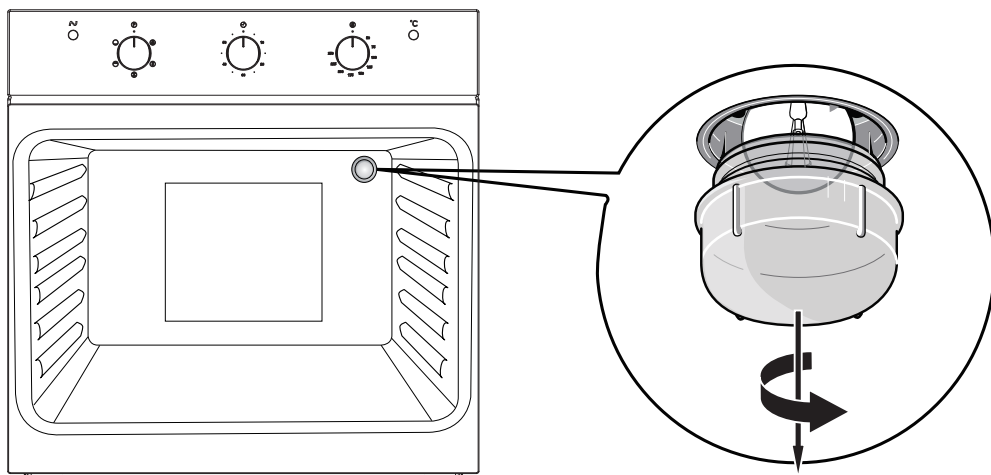


4

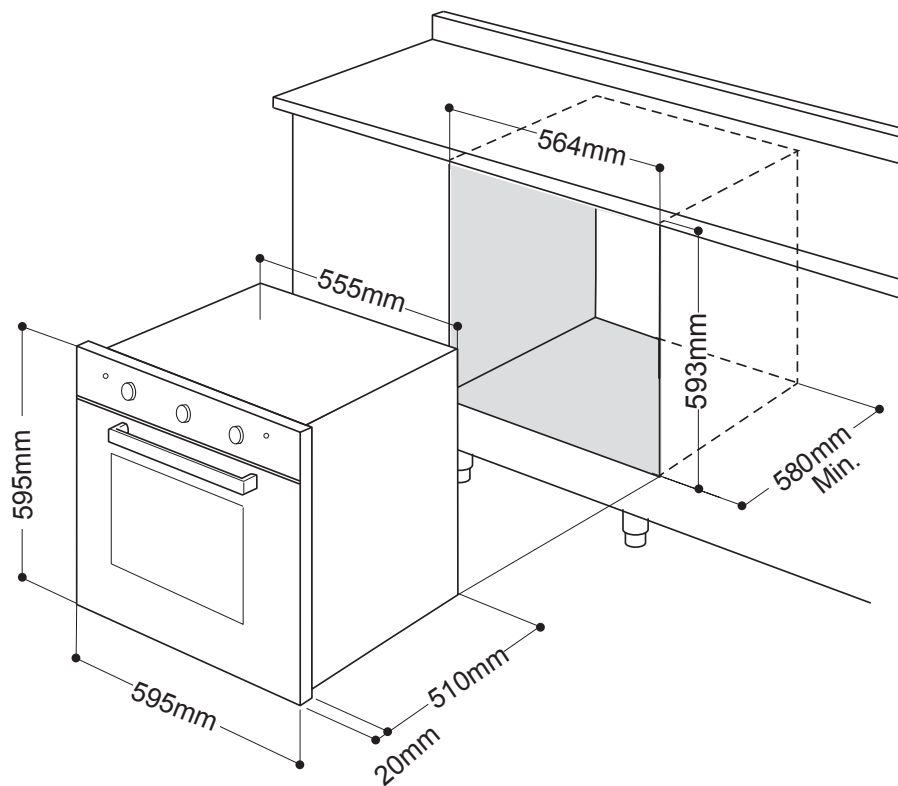


5

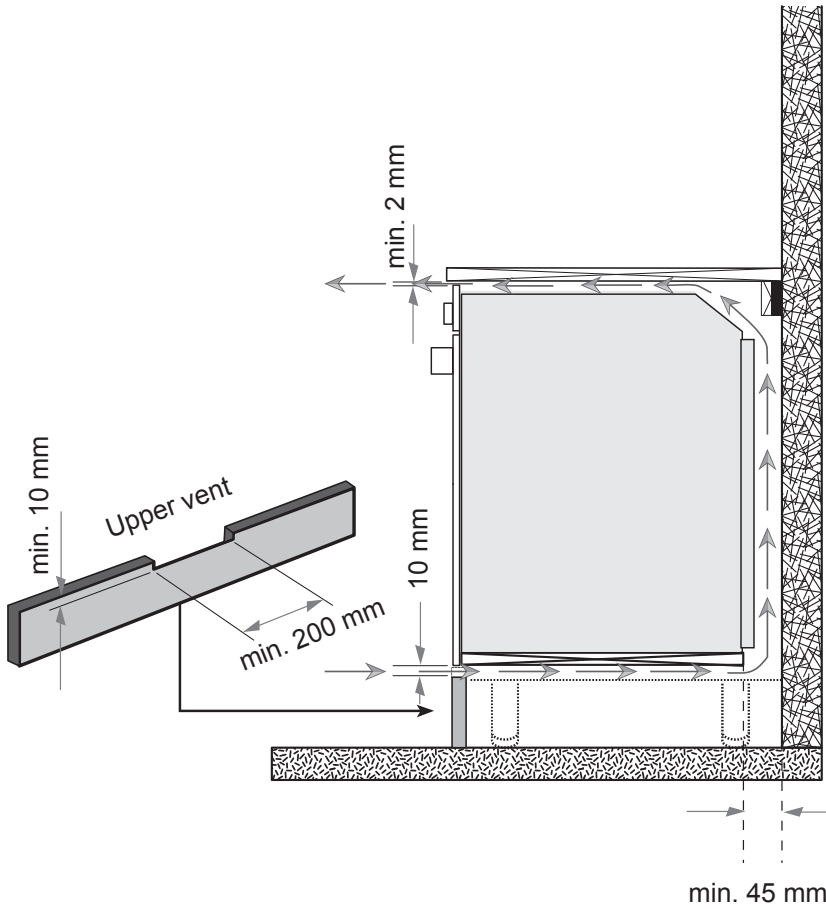


6

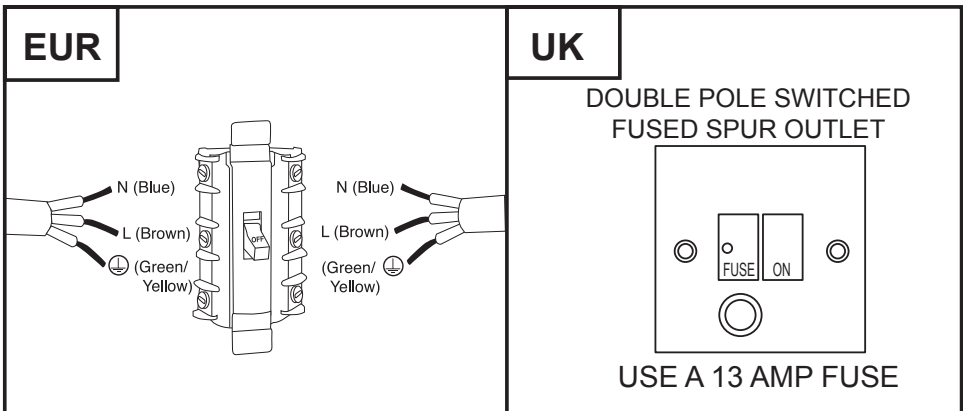


07

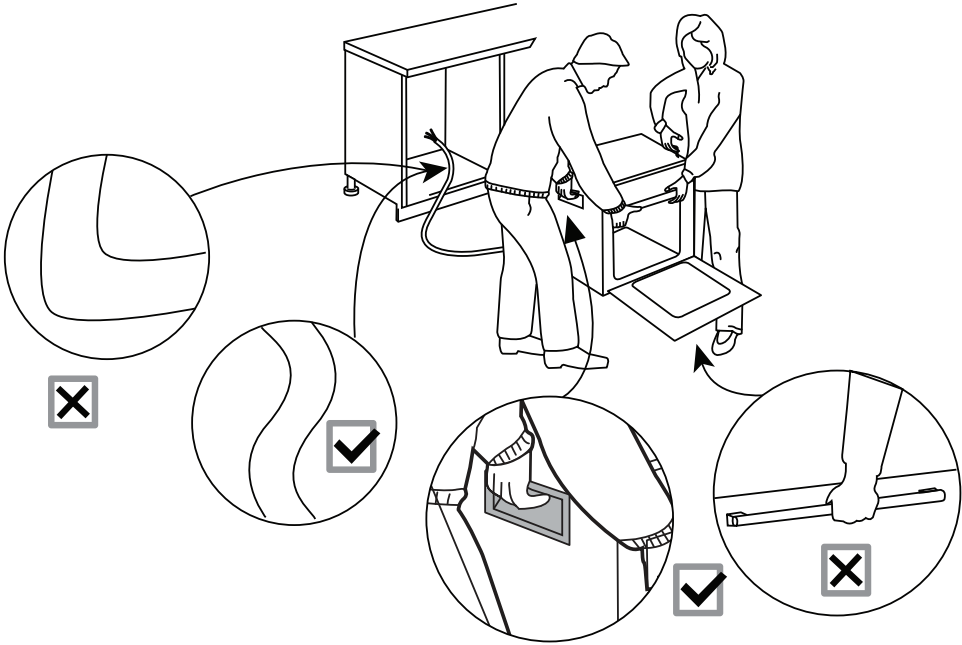


08

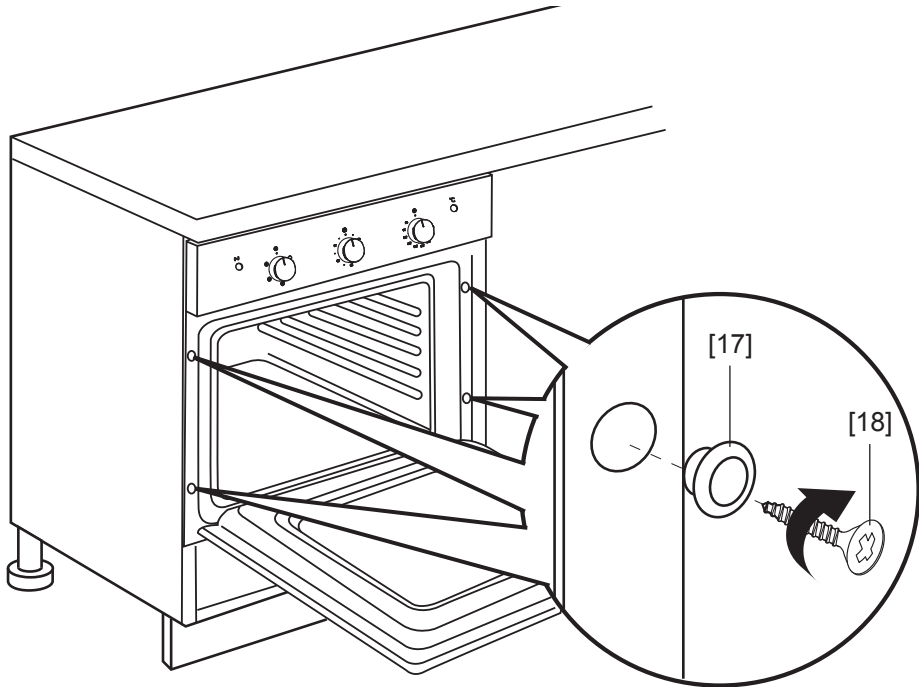


09

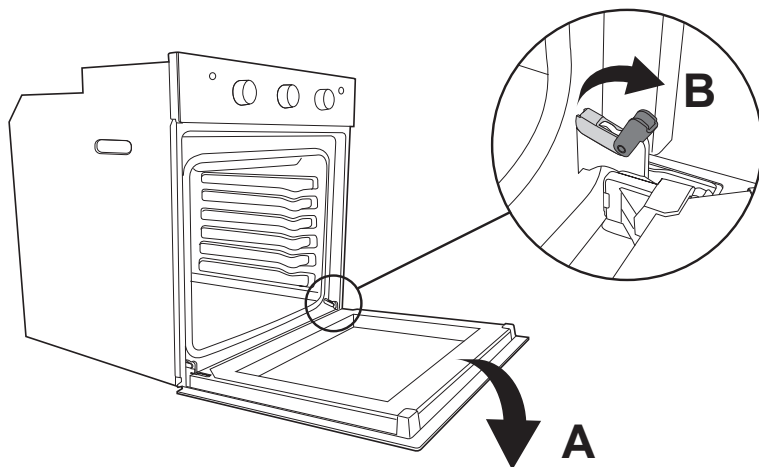

10

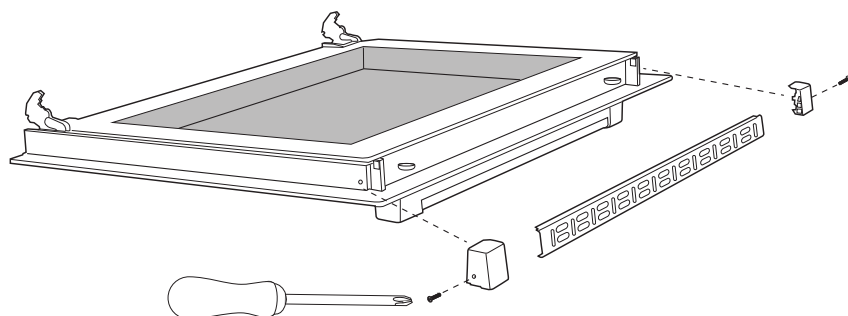

11

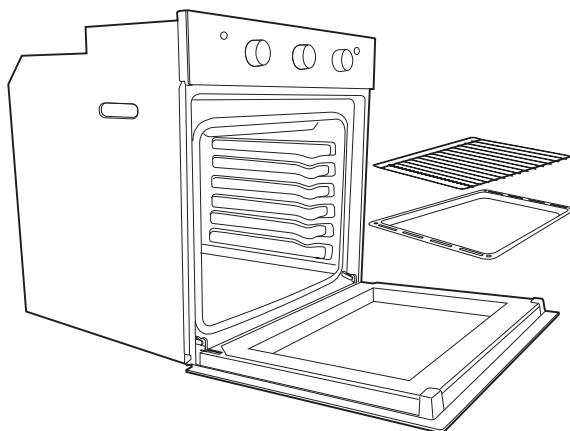

Manufacturer:

Kingfisher International Products Limited
3 Sheldon Square
London
W2 6PX
United Kingdom



Distributor: **B&Q plc**
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

SFD Limited
Trade House, Mead Avenue
Yeovil
BA22 8RT, UK