




single oven:UBPY603.1

Version:00

Date:2016-09-22

Product reference code:UBPY603.1

UBPY603.1 Exploded drawing

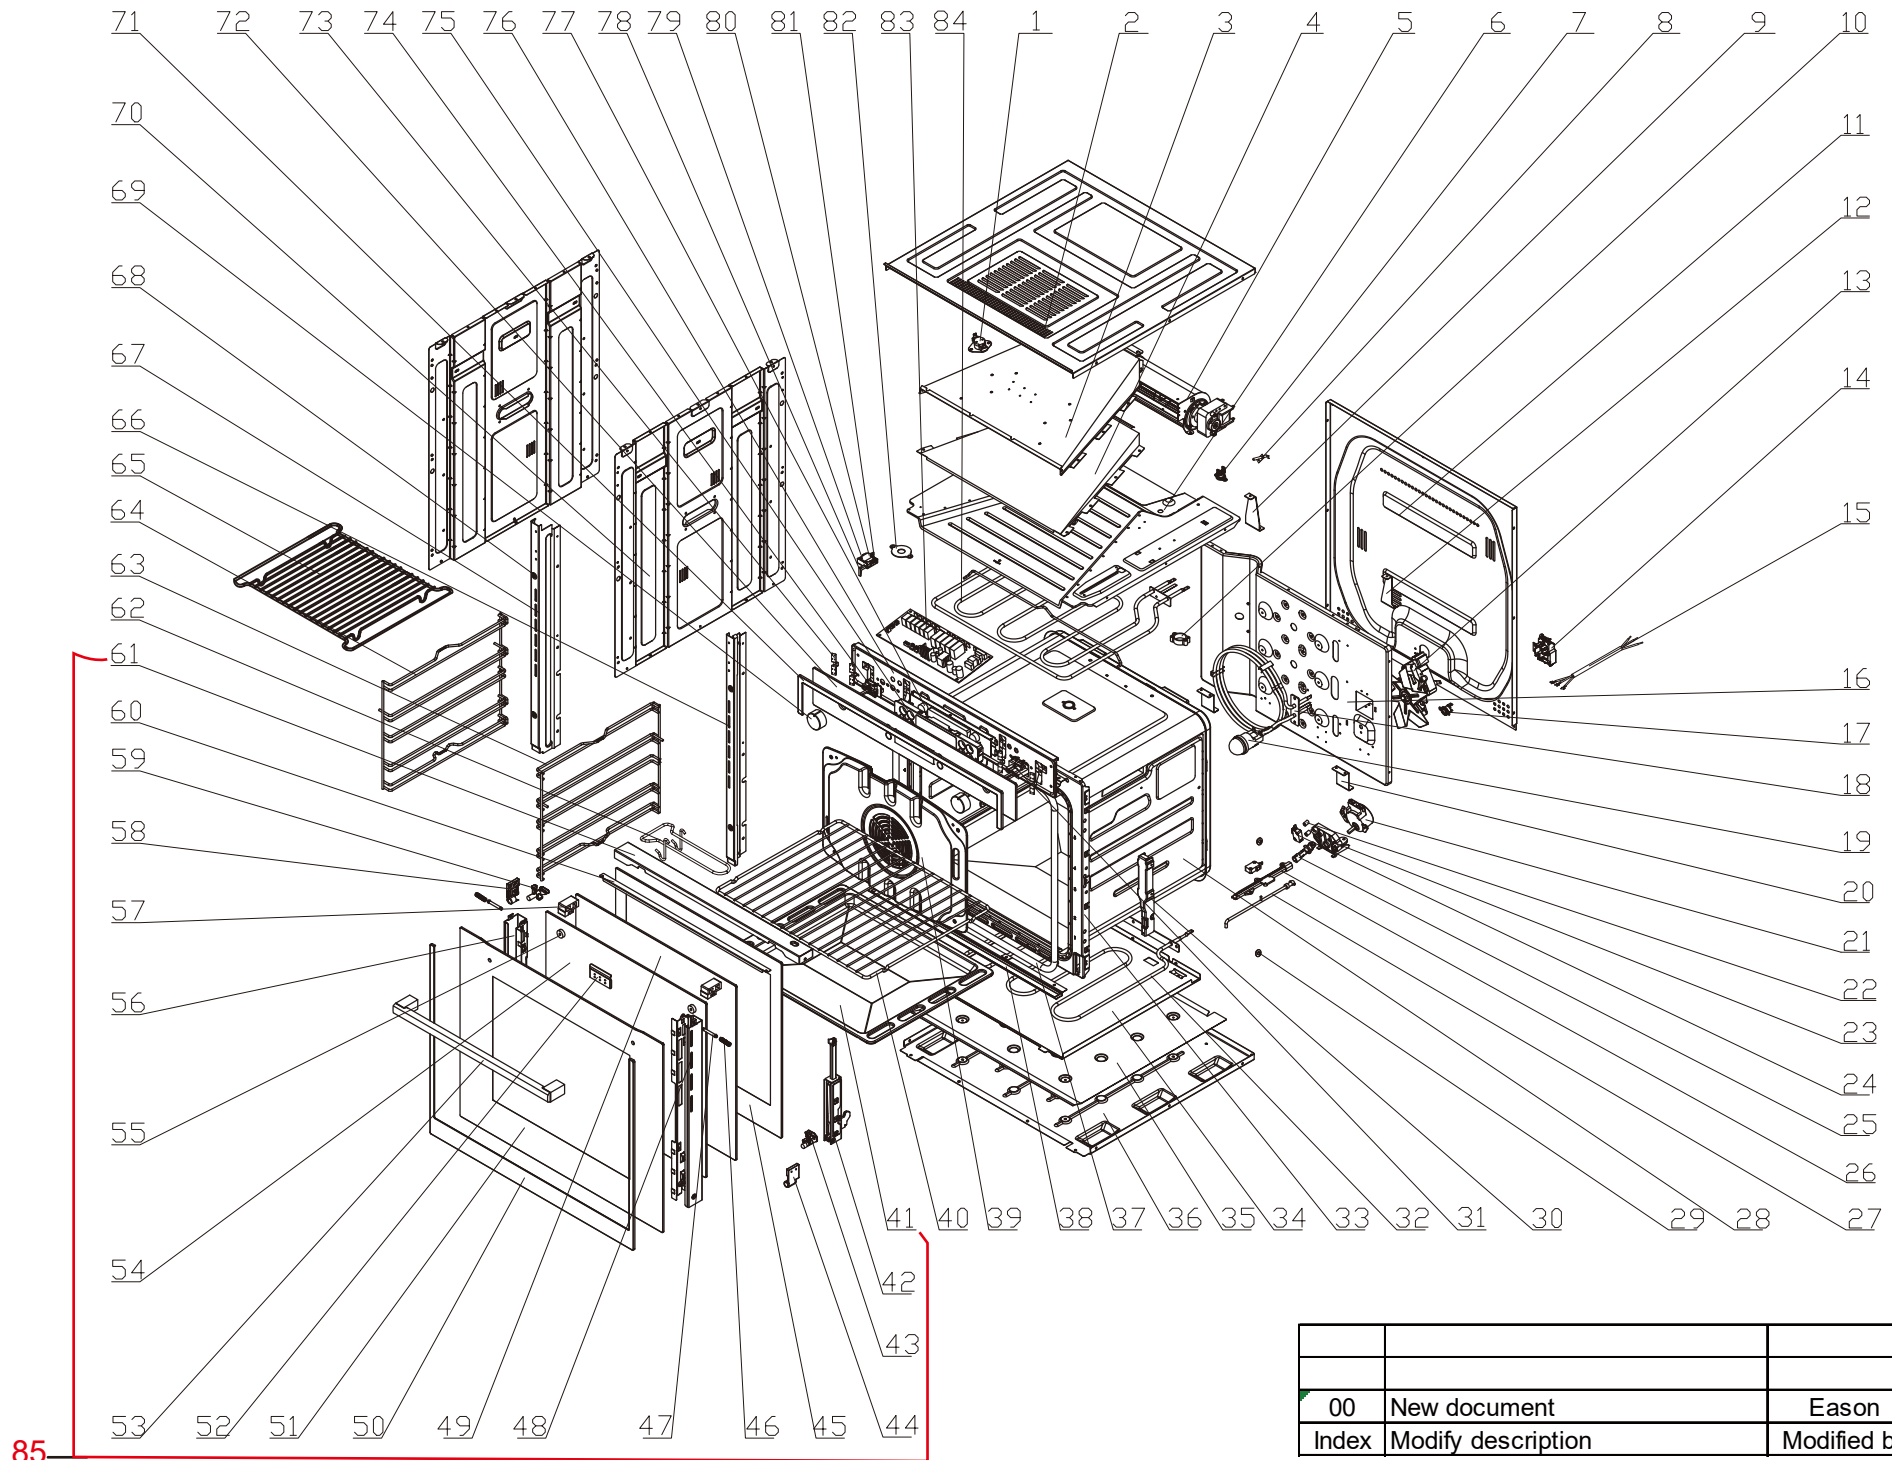

00	New document	Eason	2016.09.22
Index	Modify description	Modified by	Date

UBPY603.1 parts list

No.	part code	part name	Qty
1	33308025	Overheat protector	1
2	33031018	shell upper cover plate	1
3	33028004	Discharge flue upper cover plate	1
4	33026004	Discharge flue middle cover plate	1
5	33313038	Cooling fan assembly	1
6	33027002	Discharge flue baseboard	1
7	33310001	Cooling thermostat	1
8	33323013	Thermometer probe assembly	1
9	33027024	Discharge flue baseboard Support block (right)	1
10	33215019	Chimney	1
11	33030026	shell rear cover plate	1
12	33027023	Discharge flue baseboard Support block (left)	1
13	33315008	Circulating fan assembly	1
14	33305009	Junction box	1
15	33304077	Power cord	1
16	33016002	Cavity rear support	1
17	33308001	Overheat protector	1
18	33303027	Rear heating element	1
19	33302002	Lamp assembly	1
20	33027030	Shell baseboard connect block	2
21	33314004	Door lock motor assembly	1
22	33301021	Door lock micro switch block	2
23	33301012	Door lock motor fixed	1
24	33301013	Door lock micro switch	2
25	33301009	Micro switch block	1
26	33301011	Latch hook block	1
27	33301010	Latch hook block	1
28	33058102	Rail bracket bottom fixed seat	1
29	33141007	hinge fixed board	4
30	33005089	Cavity panel	2
31	33316005	Thermostat switch assembly	1
32	33303002	Bottom heating element	1
33	33018195	Cavity panel	1
34	33003005	Bottom heating element fixed board	1
35	33003006	Bottom insulation fibre heat shield	1
36	33029016	Shell baseboard	1
37	33803011	Door sealing assembly	1
38	33027032	Cavity panel under bracing	1
39	33001044	Rear heating element baffle	1
40	33170001	shelf	2
41	33224005	Tray	1
42	30400600024	Hinge assembly	2

43	33014141	Inner glass low right fixed block	1
44	33014139	Active shaft right fixed block	1
45	33103050	Inner glass	1
46	33005073	Up door bracket detent spring	2
47	33005072	Up door bracket detent	2
48	33014150	Door frame right bracket	1
49	33104054	Middle galss	1
50	33015277	Door panel decorating plate	1
51	33102656	Door panel	1
52	33006012	Handle fixed board	1
53	30400700002	Handle-H1	1
54	33104041	Middle glass	2
55	33214005	Handle fixed assembly	2
56	33014149	Door frame left bracket	1
57	33219020	Middle glass upper fixed block	2
58	33014138	Active shaft left fixed block	1
59	33014140	Inner glass low left fixed block	1
60	33014151	Glass baffle	1
61	33014148	Upper door bracket	1
62	33172001	Grasp	1
63	33140023	Right rail bracket	1
64	33140022	Left rail bracket	1
65	33170003	baking tray(shallow)	1
66	33014147	shell right bracket	1
67	33014146	shell left bracket	1
68	33239001	Oven fix assembly	4
69	30402500031	Metal knob -k21	2
70	32245003	Shell left and right side plate	2
71	34039003	Control panel decorate	1
72	33101624	Switch panel	1
73	33006001	Switch panel connect panel	4
74	33301048	11 function swithc assembly	1
75	33322008	Screen fixed box	1
76	33018197	Switch panel fixed board	1
77	33321121	Mechanical touch display board	1
78	33005006	Door switch slider	1
79	33005005	Door switch fixed board	1
80	33301020	Door switch	1
81	33319002	Door switch spring	1
82	33215025	Chimney baffle	1
83	33321009	Touch power board	1
84	33303098	Top heating element	1
85	3313101281	Complete Door Assembly	1