




Oven:UBMFTZ603.1

Version:00

Date:2016-10-11

Product reference code:UBMFTZ603.1

# UBMFTZ603.1 Exploded drawing

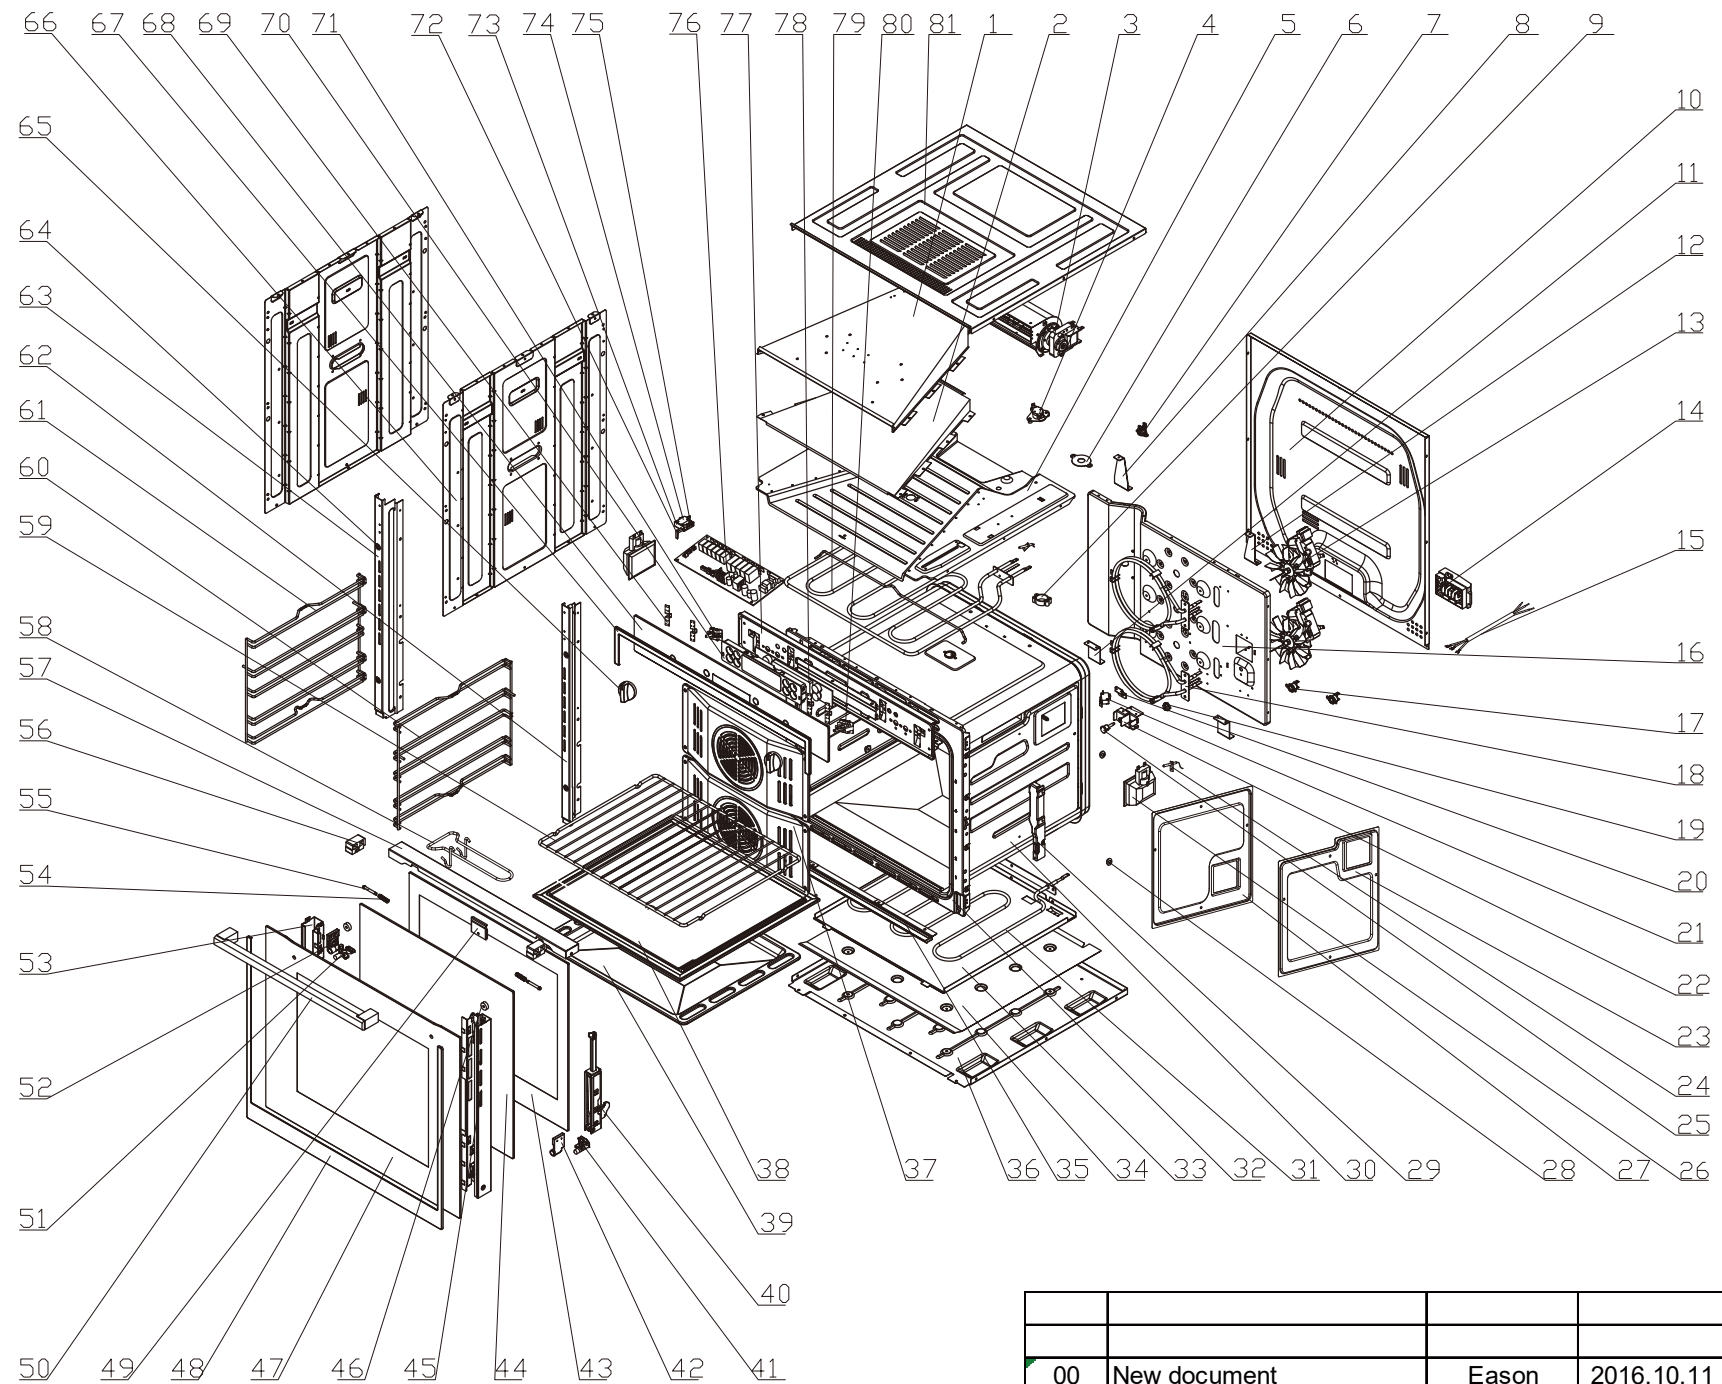

00	New document	Eason	2016.10.11
Index	Modify description	Modified by	Date

# UBMFTZ603.1 parts list

No.	part code	Part description	Qty	Remark
1	33028004	Discharge flue upper cover plate	1	
2	33026004	Discharge flue middle cover plate	1	
3	33313037	Cooling fan assembly	1	
4	33308006	Overheat protector	1	
5	33027002	Discharge flue baseboard	1	
6	33215025	Discharge flue baffle plate	1	
7	33310001	Cooling thermostat	1	
8	33027024	Discharge flue baseboard Support block (right)	1	
9	33215019	Chimney	1	
10	33030026	shell rear cover plate	1	
11	33027030	shell bottom cover connector block	2	
12	33027023	Discharge flue baseboard Support block (left)	1	
13	33315016	Circulating fan assembly	2	
14	33305008	Junction box	1	
15	32307016	Power cord	1	
16	33016002	Cavity rear support	1	
17	33308012	Overheat protector	2	
18	33303040	Rear heating element	2	
19	33301024	mandril nut	1	
20	33004022	clapboard switch bracket fixing block	1	
21	33301022	clapboard micro switch	1	
22	33004008	clapboard switch bracket	1	
23	33039005	right rail base plate	1	
24	33323001	Thermometer probe assembly	2	
25	33301023	clapboard micro switch mandril	1	
26	33317001	Lamp assembly	2	
27	33039004	left rail base plate	1	
28	33141005	rail rack fixing seat	4	
29	33005089	hinge fixed board	2	
30	33058038	cavity ring assem	1	
31	33303002	Bottom heating element	1	
32	33018226	Cavity panel	1	
33	33003005	Bottom heating element fixed board	1	
34	33003006	Bottom insulation fibre heat shield	1	
35	33027031	Cavity panel under bracing	1	
36	33029016	Shell baseboard	1	
37	33001022	Rear heating element baffle	2	
38	33316003	clapboard assembly	1	
39	33224003	Tray	1	
40	30400600025	Hinge assembly	2	
41	33014141	Inner glass low right fixed block	1	
42	33014139	Active shaft right fixed block	1	
43	33103050	Inner glass	1	
44	33104042	Middle galss	1	
53	33014134	Door frame left bracket	1	Please buy combination
45	33014135	Door frame right bracket	1	
47	33102656	Door panel	1	
48	33015277	Door panel decorating plate	1	
46	33214005	Handle fixed assembly	2	
49	33006012	Handle fixed board	1	
50	30400700002	Handle-H1	1	
51	33014140	inner glass left bottlm fixing board	1	
52	33014138	Active shaft left fixed block	1	
54	33005073	Up door bracket detent spring	2	
55	33005072	Up door bracket detent	2	
56	33219019	Middle glass upper fixed block	2	
57	33014129	Up door bracket	1	
58	33172001	Grasp	1	
59	33170001	shelf	1	
60	33140008	Right rail bracket	1	
61	33140007	Left rail bracket	1	
62	33014137	shell right bracket	1	
63	33014136	shell left bracket	1	
64	33239001	Oven fix assembly	4	
65	32245003	938 metal knob	2	
66	33032016	Shell left and right side plate	2	
67	34039003	Control panel decorate	1	Please buy combination
68	33101563	Switch panel	1	
69	33006001	Switch panel connect panel	4	
70	33322008	Screen fixed box	1	
71	33316006	4 clapboard switch assembly	1	
72	33005006	Door switch slider	1	
73	33005005	Door switch fixed board	1	
74	33301020	Door switch	1	
75	33319002	Door switch spring	1	
76	33321020	Touch power board	1	
77	33018200	Switch panel fixed board	1	
78	33321074	Mechanical touch display board	1	
79	33303094	Top heating element	1	
80	33316005	Thermostat switch assembly	1	
81	33031018	shell upper cover plate	1	