




single oven:UBMF601SS

Version:00

Date:2015-09-08

Product reference code:UBMF601SS

# UBMF601SS Exploded drawing

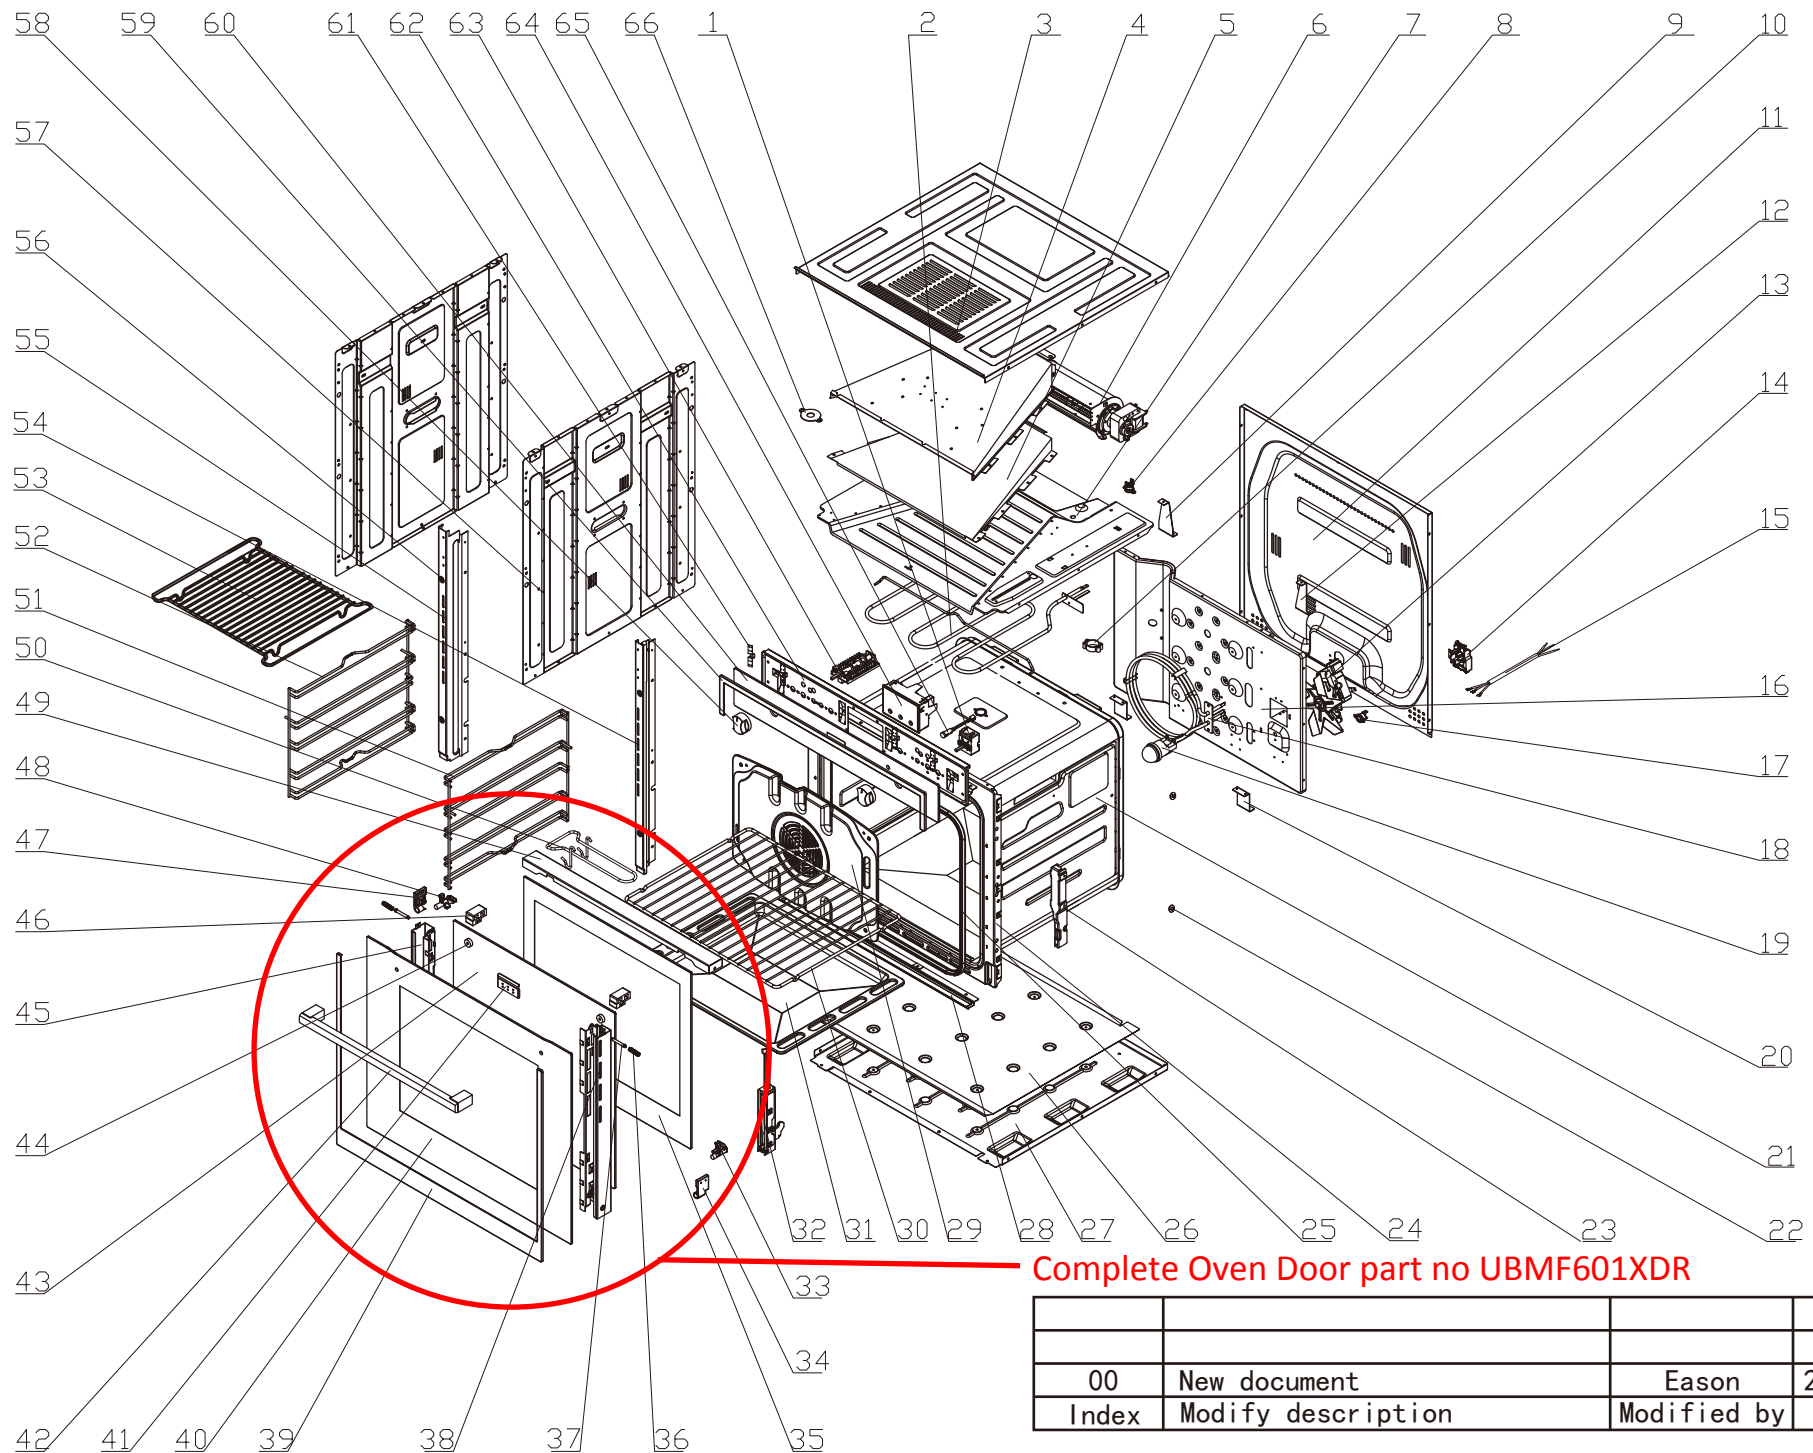

00	New document	Eason	2015.9.8
Index	Modify description	Modified by	Date

# UBMF601SS parts list

No.	part code	part name	Qty
1	33311001	Thermostat switch	1
2	33303101	Top heating element	1
3	33031018	shell upper cover plate	1
4	33028004	Discharge flue upper cover plate	1
5	33026004	Discharge flue middle cover plate	1
6	33313037	Cooling fan assembly	1
7	33027002	Discharge flue baseboard	1
8	33310001	Cooling thermostat	1
9	33027024	Discharge flue baseboard Support block (right)	1
10	33215019	Chimney	1
11	33030026	shell rear cover plate	1
12	33027023	Discharge flue baseboard Support block (left)	1
13	33315002	Circulating fan assembly	1
14	33305009	Junction box	1
15	33304077	Power cord	1
16	33016002	Cavity rear support	1
17	33308012	Overheat protector	1
18	33303027	Rear heating element	1
19	33302002	Lamp assembly	1
20	33027030	Shell baseboard connect block	2
21	33058064	Cavity circleassembly	1
22	33141007	Rail bracket bottom fixed seat	4
23	33005089	hinge fixed board	2
24	33018193	Cavity panel	1
25	33003006	Bottom insulation fibre heat shield	1
26	33029016	Shell baseboard	1
27	33803016	Door sealing assembly	1
28	33027031	Cavity panel under bracing	1
29	33001029	Rear heating element baffle	1
30	33170002	shelf	2
31	33224003	Tray	1
32	33180023	Hinge assembly-17	2
33	33014141	Inner glass low right fixed block	1
34	33014139	Active shaft right fixed block	1
35	33103051	Inner glass	1
36	33005073	Up door bracket detent spring	2
37	33005072	Up door bracket detent	2
38	33014135	Door frame right bracket	1
39	33015277	Door panel decorating plate	1
40	33102656	Door panel	1
41	33006012	Handle fixed board	1
42	33190004	Handle-4	1
43	33104042	Middle glass	1
44	33214005	Handle fixed assembly	2
45	33014134	Door frame left bracket	1
46	33219019	Middle glass upper fixed block	2
47	33014138	Active shaft left fixed block	1
48	33014140	Inner glass low left fixed block	1
49	33014129	Up door bracket	1
50	33172001	grasp	1
51	33140023	Right rail bracket	1
52	33140022	Left rail bracket	1
53	33170003	baking tray(shallow)	1
54	33014137	shell right bracket	1
55	33014136	shell left bracket	1
56	33239001	Oven fix assembly	4
57	33032016	Shell left and right side plate	2
58	32245003	Metal knob	2
59	34039003	Control panel decorate	1
60	33101623	Switch panel	1
61	33006001	Switch panel connect panel	4
62	33018217	Switch panel fixed board	1
63	33301060	Function switch	1
64	33300054	Timer	1
65	33312001	Indicator light	1
66	33215025	Chimney baffle	1

# UBMF601SS Wiring diagram

