



cata


FSFRW

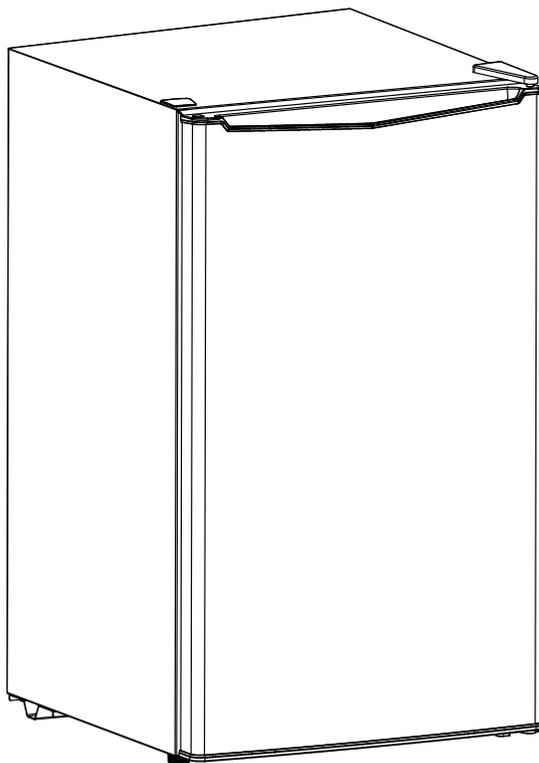

Barcode 8422248608817

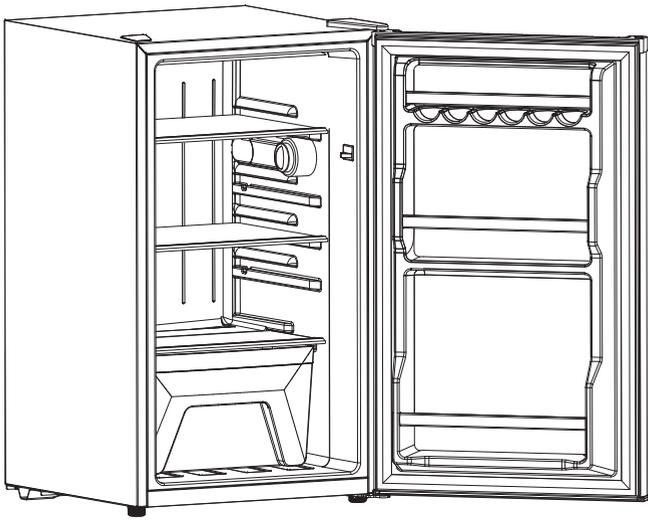

 
[01] x 1



[02] x 2



[03] x 1

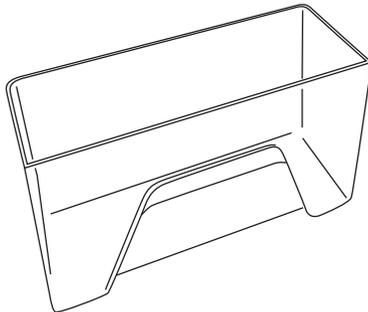

[04] x 1



FSFRW

GB **IE** Freestanding Refrigerator

04

Installation

20

Let's get started...



Getting started...

05

Before you start
Safety

06
07

In more detail...

10

Operation
Care and maintenance
Troubleshooting
Recycling and disposal
Technical and legal information
Guarantee
CE Declaration of conformity

11
13
15
16
16
17
19

Appendix

Installation

20




Getting Started...

Before you start

06

Safety


07

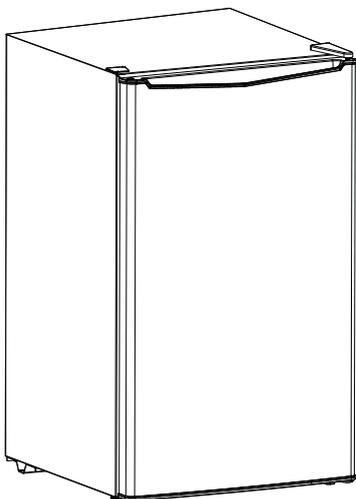

Before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0344 800 1128 (UK), 014475261 (Ireland) and 01 56 48 02 60 (France).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

 You will need



These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- Therefore, the Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- Do not allow the electric cables to touch the hot parts of the appliance.
- Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- Do not remove the plug in the presence of flammable gas.

- Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- Please dispose of the packing material carefully.
- Do not use flammable sprays in close vicinity to the appliance.
- We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- A steam cleaner is not to be used.
- The appliance is not intended to be operated by means of external timer or separate remote-control system.
- The appliance is for domestic use only.
- The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- Caution:** The refrigerator cannot be inclined to more than 45° when it is fixed or moved. Do not place the refrigerator directly on a carpet or close to a wall or furniture.
- Caution:** Do not apply force to any external part such as the pipe, condenser, door or handle when moving.
- Caution:** Good ventilation is required around the refrigerator for easier dissipation of heat, high freezing efficiency and low power consumption. Sufficient clearance is required around the refrigerator. The refrigerator should not be placed near anything that may echo.
- Caution:** The floor on which the refrigerator is to be placed must be flat and solid. It should not be placed on soft material such as foam-backed vinyl, etc.
- Connect the refrigerator to the power supply (220 to 240 V~/50 Hz).

- Warning:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Warning:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Warning:** Do not damage the refrigerant circuit.
- Warning:** Do not use electrical appliances inside the food storage compartments of the appliance
- Warning:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is designed for domestic household use only!**



Caution: The cord should be neither lengthened nor coiled up during operation. Moreover, the cord must not be stored close to the compressor at the back of the refrigerator.




In more detail...

Operation	11
Care and maintenance	13
Troubleshooting	15
Recycling and disposal	16
Technical and legal information	16
Guarantee	17
CE Declaration of conformity	19

Operation

Temperature regulator
(thermostat)

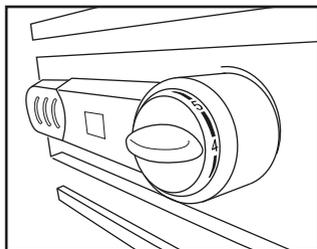

Defrosting

 
The temperature of refrigerator can be controlled manually by the knob. However, the number shown on the knob does not directly represent the temperature. Instead, the larger the number is, the lower the interior temperature will be. 0 stands for off. Turn the knob to state 4 when it is normal used, turn it to the state during 4-7 if a lower interior temperature is required; contrarily, to the state during 4-1, when a higher one is needed.



Warning: Always switch off the electricity supply and unplug before performing maintenance work. In the event of a fault, contact customer services.




Caution: The refrigerator chamber should not be directly heated using hot water or a hair dryer while defrosting to avoid deformation of the inner casing.



NOTE: Water contained inside or air getting into the refrigerator when the door is opened forms a layer of frost inside.


Thick frost will make the refrigerator less efficient. Frost that is more than 5 mm thick should be defrosted.

1. Before defrosting, take the food and the shelf separately from cold chamber -A-.
2. Defrosting in the refrigerator chamber is operated manually. Set the temperature regulator to position "0".
3. Leave the unit door open.
4. Keep removing water from the base to avoid spillages.

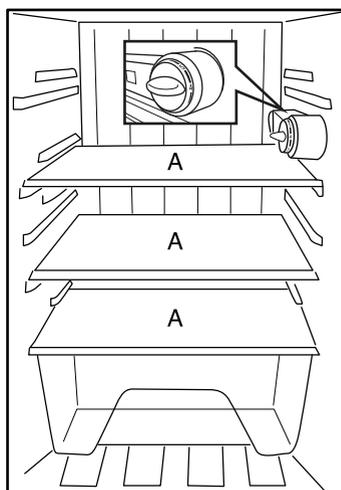

NOTE: The compressor will stop running and ice and frost will dissolve completely and fall to the bottom of the refrigerator chamber.

5. Wipe off the water with soft cloth in order to speed up defrosting.
6. You may put a bowl of warm water (about 50 °C) into the refrigerator chamber. Remember to set the temperature regulator to its original position after defrosting.
7. So as not damage the inner casing or the surface of the evaporator, ice and frost should not be scraped off and food should not be separated from containers that have been frozen together using sharp instruments.

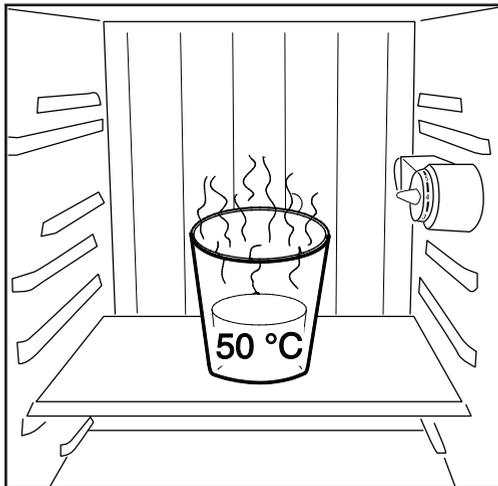

Care



Damaged power cables must be replaced by a competent person or qualified electrician.



For domestic use only.

Protection from moisture

- Avoid placing the refrigerator in a place when heavy moisture is present in order to minimise the possibility of its metal parts becoming rusted.

Protection from heat

- The refrigerator should be kept away from any heat source or direct sunlight.

Maintenance


Machine cleanliness



Warning: Always switch off the electricity supply and unplug before performing maintenance work. In the event of a fault, contact customer services.



Caution: Do not use hot water, dilutant, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc. for cleaning so as not to damage the enamel coating and plastic. Refrigerators must not be cleaned directly with water as this could cause rusting or render the insulation less efficient.


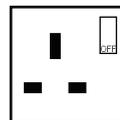


- The refrigerator should be cleaned and maintained once a month.
- Wipe the inner and outer surface of the refrigerator and its accessories with wet cloth. If they are too dirty, scrub them with a neutral detergent and then clean with water and dry with a clean cloth.
- Be careful to check the rubber seals on the doors, as they should remain clean.

Bulb replacement



Warning: Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact an official distributor or authorised dealer.

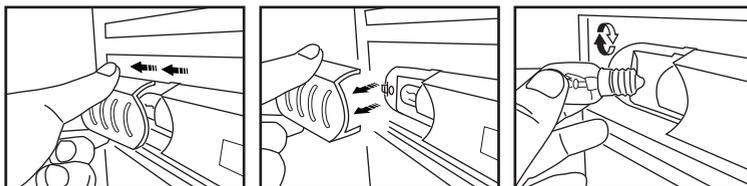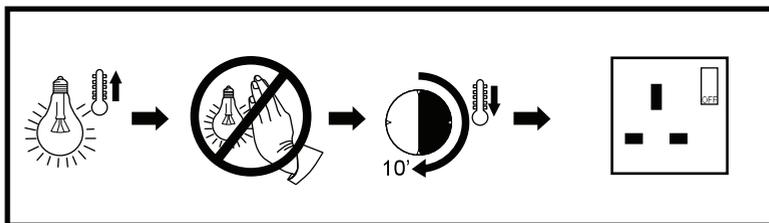

1. Slide gently the lid of the lighting cover 3-5mm.
2. Ensure the bulb has cooled before removing it.
3. Gently remove the bulb by unscrewing it in an clockwise direction.
4. Carefully replace the new bulb by screwing it in place.
Do not over-tighten the bulb.
5. Close the cover.



Periods without use: If the refrigerator is switched off and left un-used, the door must be left open to avoid the build up of odours in the appliance.

Troubleshooting

The following circumstances may not be a problem. Do not contact the customer services until the problem has been confirmed.

If your refrigerator is still not functioning properly after making the above checks, please contact customer services.

Fault	Cause	Solution
The refrigerator does not work	There is power failure	Check if there is power failure
	The power plug is not connected to the socket	Connect the plug to the socket
	The fuse has blown	Switch off and change the fuse in the plug
The refrigerator is cooling too much	The temperature control dial may be set too high	Set the temperature control properly
	You are placing food containing a lot of moisture directly under the cool air outlets	This does not indicate malfunctioning
The refrigerator is not cooling enough	The food may be packed together too tightly, which will block the flow of cool air	This does not a malfunction; relocate the food to a different location
	You may have placed something hot or a large quantity of food in the refrigerator	This does not indicate malfunctioning
	The door may not have been closed properly	Close the door properly
	The door seals may leak	Contact the customer services
	There may be insufficient clearance between the refrigerator and the surfaces immediately on both sides and above	Refer to read Installation
	The temperature control dial may not be set properly	Set temperature control properly

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Technical and legal information

Technical and legal information

Technical data

Power supply	:	220-240 V~/50 Hz
Rated current	:	0.75A
Refrigerant / Amount	:	R600a/15g
Climate class	:	SN/N/ST
Dimensions (W x H x D)	:	486x839x536mm
Net weight	:	28kg

Legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Manufacturer's Guarantee

This appliance is covered by a full manufacturer's 12 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland

T: 0344 800 1128 E: uksupport@apelson.co.uk
www.myspareparts.co.uk

Republic of Ireland

T: 014475261 E: uksupport@apelson.co.uk

France

T: 01 56 48 02 60 E: callcenter@sidepar.fr

CE Declaration of conformity

MANUFACTURER : CATA		
ADDRESS : C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)		
We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable including their modifications and the corresponding transpositions from the national law.		
MACHINE APPLICATION :	FSFRW	
TYPE :	Fridge	
EC DIRECTIVES APPLIED :	Comply with the essential requirements of the Low Voltage Directive (2006/95/EC) and Electromagnetic Compatibility Directive (2004 /108 /EC)	
APPLIED HARMONIZED STANDARDS :		
Standard EN 60335-1:2002+A11:2004+A12:2006+A13:2008		
Standard EN 60335-2-24:2003+A11:2004+A12:2005+A13:2007		
Standard EN 55014-1:2006		
Standard EN 55014-2:1997+A1:2001		
Standard EN 61000-3-2:2006		
Standard EN 61000-3-3:1995+A1:2001+A2:2005		
APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS :		
ISO 9001:2008		
PLACE : Torelló		<u>David Sala</u> Technical Manager

This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.


B&Q plc
Chandlers Ford, Hants
SO53 3LE United Kingdom
www.diy.com

Castorama
Parc d'Activités B.P.101
59175 Templemars - France
www.castorama.fr




Appendix...

Installation

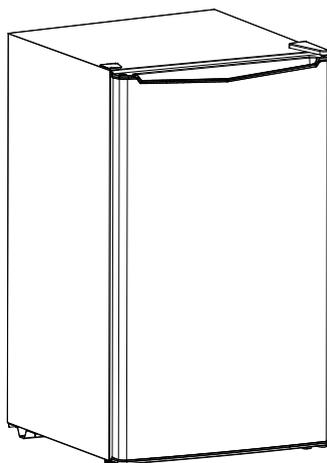


01


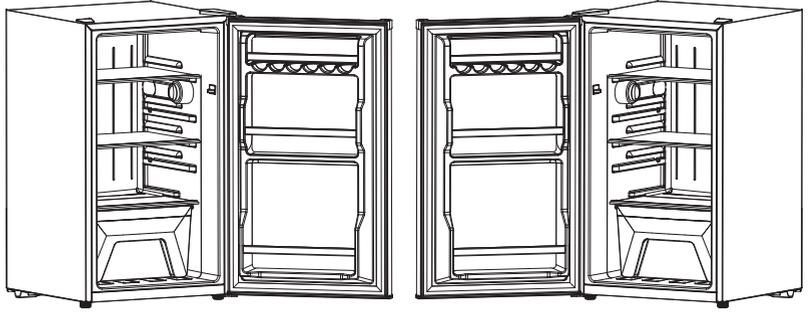


Choose which side you would like the door to open, right handed (standard) or left handed (optional).

02

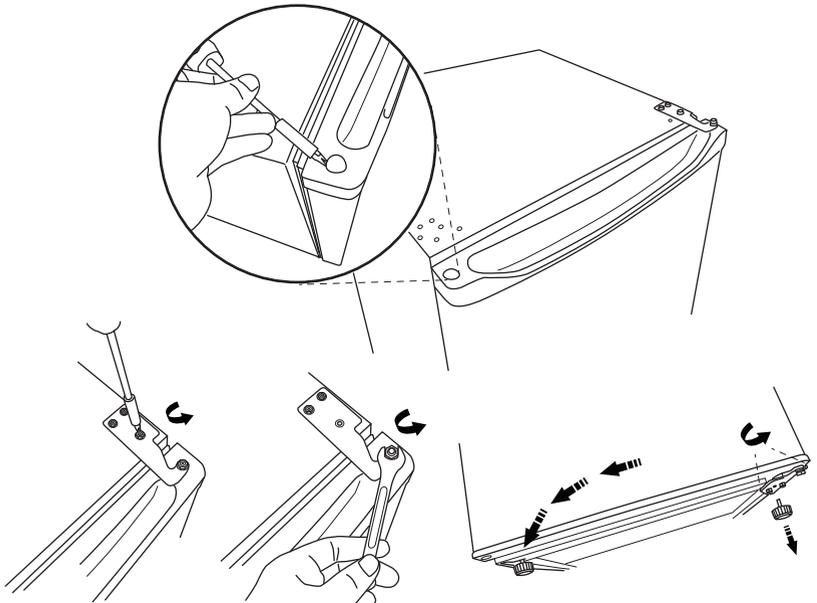

Remove the three screws and the nuts from metal plates located on the top and bottom of the appliance. Reposition the metal plate, fixing screws and nuts on the opposite side.

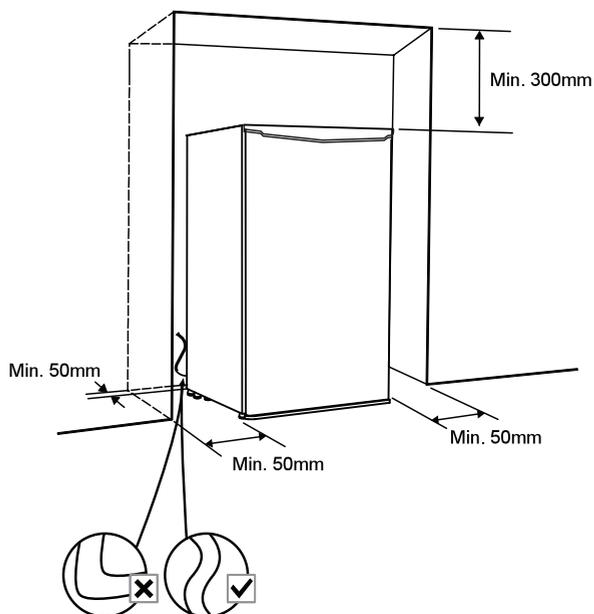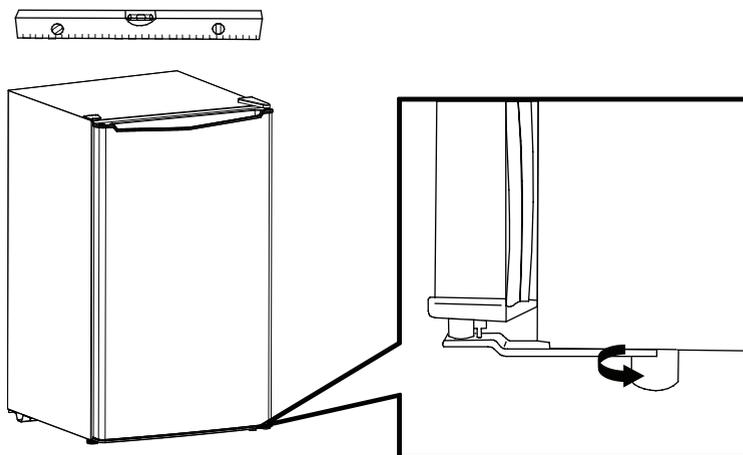

Note: For electrical connection see **Technical and legal information** section.



B&Q plc
Chandlers Ford, Hants
SO53 3LE United Kingdom
www.diy.com



Castorama
Parc d'Activités B.P.101
59175 Templemars - France
0 810 104 104
www.castorama.fr
