




COOKETM &LEWIS

72CM BUILT-UNDER ELECTRIC DOUBLE OVEN

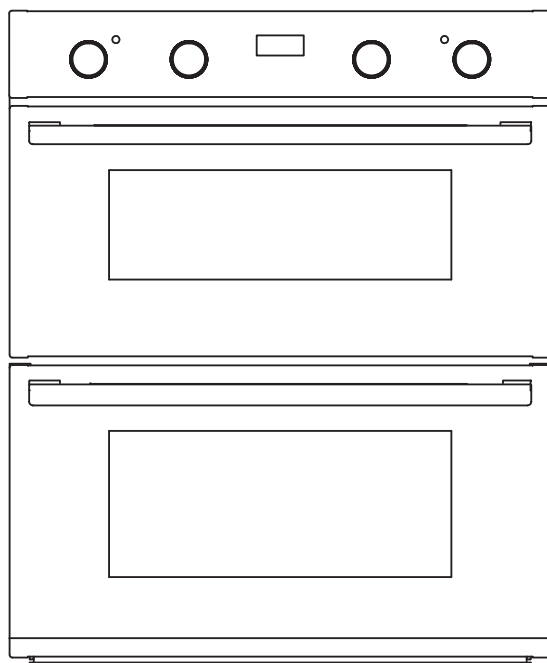


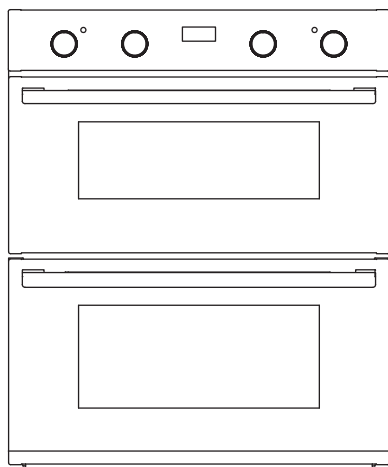

 
[01] x 1




[02] x 1

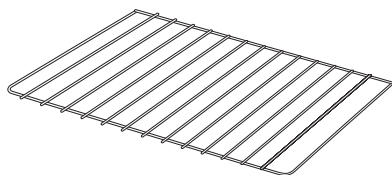


[03] x 2

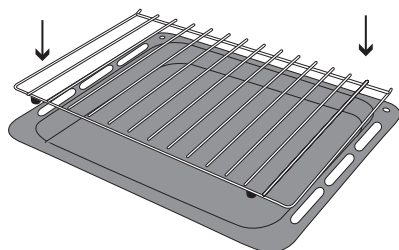

[04] x 1

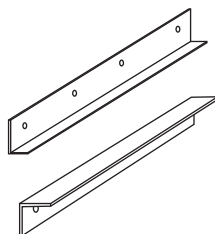


[05] x 2

 


[06] x 4

 1 : 1



[07] x 12
(Ø4mm x 25mm)

 

[08] x 8
(Ø4mm x 10mm)

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.



Getting **started**...

Your product	04
Before you start	05
Safety	06



In more **detail**...

Operation	12
Care and maintenance	23
Troubleshooting	28
Recycling and disposal	28
Technical and legal information	29
Guarantee	30
CE Declaration of conformity	32



Appendix...

Installation	33
---------------------	----

Your product

Your product



Note!

This diagram may be slightly different from the layout of the appliance.



- A. Control panel
- B. Cooking mode selection knob
- C. Cooking temperature selection knob
- D. Electronic programmer - allows you to programme the desired cooking by selecting the cooking time and the end cooking time. It can also be used as a timer.
- E. Oven indication light
When lit, it indicates the ovens are heating up to the temperature set
- F. Grill pan set
- G. Oven shelf
- H. Shelf guides

1. Timer


2. Cooking time setting

3. End cooking time setting

4. Clock

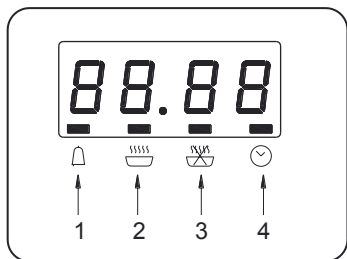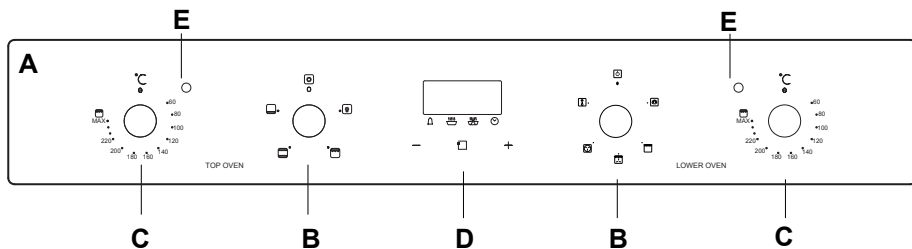

Installation guide
located at the end of
the guidebook

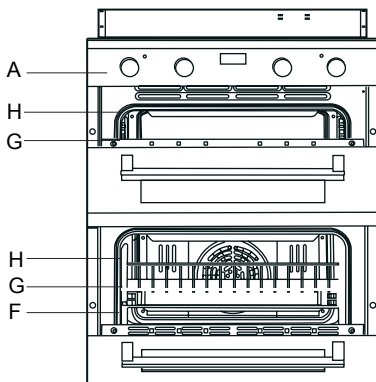

Things to check before you start

-  To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0344 800 1128 (UK), 0144 75261 (Ireland).
-  Check the package and make sure you have all of the parts listed.
-  Decide on the appropriate location for your product.
-  If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
-  The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
-  If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

You will need



We advise when installing this appliance two people are recommended.

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☒ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☒ Do not allow the electric cables to touch the hot parts of the appliance.
- ☒ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ☒ Do not remove the plug in the presence of flammable gas.

- ☑ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☑ Please dispose of the packing material carefully.
- ☑ Do not use flammable sprays in close vicinity to the appliance.
- ☑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- ☑ Cleaning and user maintenance shall not be made by children without supervision.
- ☑ Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ☑ A steam cleaner is not to be used.

- ✓ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ✓ The appliance is for domestic use only.
- ✓ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ✓ **Danger of burns!** During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- ✓ **Warning!** Accessible parts may become hot during use. Children should be kept away.
- ✓ **Warning!** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- ✓ Do not lean on the door or place any objects on the door of the appliance. This can damage the door hinges.
- ✓ The oven should be cleaned regularly and any food deposits removed.
- ✓ **Warning!** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- ✓ The oven must be installed in accordance with installation instructions and all dimensions must be followed.

- ☑ Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.
- ☑ Never use a damaged appliance! Disconnect the appliance from the electrical outlet and contact your retailer if it is damaged.
- ☑ **Danger of electric shock!** Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
- ☑ To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- ☑ Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.
- ☑ Keep the appliance and its cord out of reach of children.
- ☑ If an extension cord is used, its capacity needs to be suitable for the power consumed by the appliance.
- ☑ Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.

Safety

- ☑ Connect the power plug to an easily reachable electrical outlet so that in case of an emergency the appliance can be unplugged immediately. Pull the power plug out of the electrical outlet to completely switch off the appliance. Use the power plug as the disconnection device.
- ☑ Disconnect the power plug from the electrical outlet when not in use and before cleaning.
- ☑ Always turn the appliance off before disconnecting the power plug.
- ☑ This appliance is classified as protection class I and must be connected to a protective ground (Earth).
- ☑ Means for full disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. To achieve this install an appropriate circuit breaker (CB) and residual current device (RCD). It should be installed in an easily reachable place so that in case of emergency the appliance can be disconnected from power immediately.
- ☑ The fixed wiring must be protected against heat surfaces.
- ☑ Do not hang an objects to the handle of the oven door.

- ☑ Do not cover the bottom of the oven with aluminium foil or other objects. Caution: Risk of fire!
- ☑ Do not allow aluminium foil, plastic, paper or fabric contact with heating elements.
- ☑ Never leave the appliance unattended during use, especially when cooking with flammable substances (e.g. hot oil, fat, etc.).
- ☑ Do not store or never use harsh chemicals, sprays, flammable or non-food in or near the oven. Oven is designed specifically for heating or cooking food. The use of corrosive chemicals in heating or cleaning will damage the unit and may cause injury.
- ☑ Should any food inside the oven catch fire, keep the door closed. Switch the oven off and disconnect the power supply.
- ☑ Always exercise caution when opening the door. Move to side, open the door slowly to vent the hot air and/or steam. Make sure your face is away from the opening and make sure there are no children or pets near the oven.
- ☑ Only use utensils that are suitable for use in this type of oven.
- ☑ Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Introduction

**Note:**

This multifunction oven combines the advantages of traditional conventional oven with those of the more modern fan oven model in a single appliance.

It is an extremely versatile appliance that allows you to choose easily and safely between different cooking modes. The various features offered by the oven are selected by means of selector knob "B" and thermostat "C" situated on the control panel.

**Note:**





Before using the oven for the first time we recommend that the oven be switched on and set to it's highest temperature. Keep the oven door closed and leave the appliance on for 30 minutes with nothing in it. Ensure adequate ventilation during this process by opening any doors and windows in the room. Any odours created during this operation will be due to the evaporation of substances used to protect the appliance during storage prior to installation.

**Note:**






Place the grill pan provided on the bottom shelf of the oven when cooking fatty foods to prevent grease droplets forming on the base of the oven. For all types of cooking never place anything on the bottom of the oven when it is in operation because this could damage the enamel. Place your cookware (dishes, aluminium foil, etc. etc.) on the shelves provided.

Product functions

- The oven is controlled by a thermostat between 60°C and 250°C, depending on the temperature required.
- The thermostat light turns on and off to indicate the temperature control during use.
- The required cooking mode is selected using the cooking mode selection dial (A). The functions that may be selected are:

TOP OVEN		
	Oven Light	Turning cooking mode selection dial to this setting, the oven light will illuminate in the oven cavity, and will operate on all selected functions.
	Grill	Grill element comes on and is dispersed by radiant heat.
	Conventional	Upper and lower heating element come on. Heat is distributed by natural convection and this means the top half of the oven is warmer than the bottom half, food should be placed on a higher shelf if the food is to be crisped. It is recommended that the oven is pre-heated for 10-15 minutes before commencing cooking.
	Lower heat	Lower element comes on, heat radiates by natural convection from the base of the oven.

Product functions

MAIN OVEN		
	Oven Light	Turning cooking mode selection dial to this setting, the oven light will illuminate in the oven cavity, and will operate on all selected functions.
	Grill	Grill element comes on and is dispersed by radiant heat.
	Fan Assisted Grill	Grill element comes on and is dispersed by the rear fan. Even distribution of heat is attained in the cavity.
	True Fan	The circular rear element and fan come on together and the heat is dispersed by force convection. The oven does not require pre-heating.
	Defrost	Only the fan comes on and the food is thawed by ventilation without heat.

- Read the information of the food packaging for the cooking temperatures and times. Once familiar with the performance of the appliance, the temperatures and times may be varied to adapt them to your personal tastes.
- Check that frozen food is completely thawed before cooking, unless indicated otherwise.

Recommended cooking times



Note!


The information given in the following charts is intended only as a guide. Select the lowest temperature quoted and check the food at the end of the shortest duration quoted.

	CONVENTIONAL		
Cakes/Biscuits	Temperature °C	Shelf Position (Recommended) from the bottom	Cooking Time in min.
Cake Mixture Desserts in Moulds			
Sponge cake	150 – 170	1	60 – 70
Marble, nut cake (tin)	150 – 170	1	60 – 80
Fresh fruit cake (tray)	170 – 190	2	45 – 50
Flan base	170 – 190	1	20 – 25
Biscuits (tray)	170 – 190	2	20 – 20
Sponge cake (3 to 6 eggs)	170 – 190	1	20 – 35
Swiss roll	180 – 200	1	12 – 16
Short Pastry Dessert in Moulds			
Tart / flan base	170 – 190	2	15 – 20
Streusel cake	170 – 190	2	45 – 55
Cheesecake	170 – 190	2	10 – 20
Apple pie	170 – 190	1	90 – 90
Apricot tart with topping	170 – 190	1	55 – 75
Raised Dough Dessert in Moulds			
Streusel cake	170 – 190	1	35 – 45
White bread	180 – 200	1	40 – 50
Pizza (tray)	190 – 210	1	35 – 45
Onion tart	180 – 200	1	25 – 35
Apple turnovers	160 – 180	2	25 – 30
Choux pastry, Eclairs	180 – 200	2	25 – 35
Puff Pastry	190 – 210	2	15 – 25
Meringues, Macaroons	120 – 140	2	25 – 50

> Pre-heat the oven for 10 mins.


Operation

Recommended cooking times

	CONVENTIONAL		
Food	Temperature °C	Recommended shelf level from the bottom	Time in min.
Roast beef, approx. 1 kg	190 – 210	1	100 – 120
Beef fillet, approx. 1 kg	200 – 220	1	45 – 55
Venison, approx. 1 kg	190 – 210	1	90 – 120
Pork joint, approx. 1 kg	200 – 220	1	100 – 120
Pork joint, approx. 2 kg	180 – 200	1	120 – 150
Ham joint, approx. 1 kg	200 – 220	1	60 – 70
Meat loaf, approx. 1 kg	190 – 210	1	70 – 80
Veal, approx. 1.5 kg	190 – 210	1	100 – 120
Leg of lamb, approx. 1.5 kg	220 – 220	1	90 – 120
Rack of lamb, approx. 1.5	190 – 210	1	50 – 60
Poultry, 0.8 – 1 kg	190 – 210	1	60 – 70
Poultry, approx. 2 kg	190 – 210	1	90 – 110
Poultry, approx. 4 kg	180 – 200	1	150 – 180
Fish, whole, approx. 1.5 kg	190 – 210	1	35 – 55

> Pre-heat the oven for 10 mins.



Recommended cooking times

	TRUE FAN MODE		
Cakes / biscuits	Temperature (°C)	Shelf Position (Recommended) from the bottom	Cooking Time in min.
Cake Mixture Desserts in Moulds			
Sponge cake	150-170	1	60-70
Marble, nut cake (tin)	150-170	1	60-80
Fresh fruit cake (tray)	150-170	1	45-50
Flan base	150-170	1	20-25
Biscuits (tray)	150-170	1, 3	20-25
Sponge cake (3 to 6 eggs)	160-180	1	25-35
Swiss roll	160-180	1	20-25
Short Pastry Desserts in Moulds			
Tart / flan base	150-170	1	25-25
Streusel cake	150-170	1	45-55
Cheesecake	150-170	1	70-90
Apple pie	150-170	1	50-70
Apricot tart with topping	150-170	1	55-75
Raised Dough Desserts in Moulds			
Streusel cake	150-170	1	35-45
White bread	160-180	1	40-50
Pizza (tray)	170-190	1	35-45
Onion tart	170-190	1	35-45
Apple turnovers	150-170	1, 3	25-30
Choux pastry, Eclairs	160-180	1, 3	30-40
Puff pastry	170-190	1, 3	20-25
Meringues, Macaroons	120-140	1, 3	25-50
Poultry, approx. 4 kg	160-180	1	150-180
Fish, whole, approx. 1.5 kg	160-180	1	35-55

1) Pre-heat the oven.

2) Unless otherwise stated, the times given are for an oven which has not been pre-heated.

Recommended cooking times

Food to be grilled	Recom- mended shelf level from the bottom	GRILL		FAN GRILL	
		Temperature setting	Total grilling Time in min.	Temperature setting	Total grilling Time in min.
Thin cuts					
Steak	3 or 4	maximum	10-16	maximum	20-25
Chicken kebabs	3	maximum	20-25	maximum	23-27
Liver	3 or 4	maximum	8-12	maximum	12-15
Burgers	3 or 4	maximum	14-20	maximum	18-22
Sausages	3 or 4	maximum	10-15	maximum	9-13
Fish fillet	3 or 4	maximum	12-16	maximum	13-18
Trout	3 or 4	maximum	16-20	maximum	20-25
Cheese toast	3 or 4	maximum	7-9	maximum	5-8
Thicker cuts					
Chicken (approx. 1 kg)	1	maximum	50-60	maximum	60-85
Pork (approx. 1 kg)	1	maximum	100-120	maximum	95-100

- 1) Turn half way through the grilling time.
- 2) Select the appropriate shelf level for the thickness of the food.
- 3) Use the 2nd shelf level from the bottom for "Fan grill".


3-key timer procedure cooking mode

Adjust the clock after switch on

Once it connected with electrical power, the display will show “12:00” with the square symbol above “⏰”.

Press the + or - button will increase or decrease the number until it reaches the right time. After 5 seconds it will start automatically.

Function button

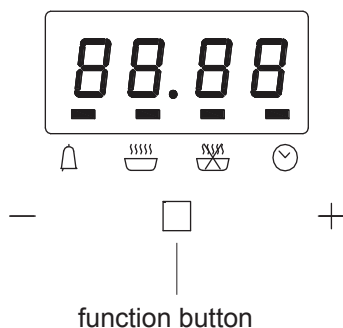

Note

The time should be set before any operation of the oven which is controlled by the electrical control.

If you want to change the time, press the function button repeatedly until the square symbol above the flash. Then you can adjust the time.

Automatic setting for bottom oven only (set the time of full automatic starting and ending)

1. Press the function button repeatedly until the square symbol above the “⏰” flashes, and press + or - button to set the required cooking time eg 45mins.
2. Press the function button repeatedly until the square symbol above the “🔥” flashes, and press + or - button to set the time e.g 14:00 to switch off.
3. Adjusting the baking method (thermostat, oven operation setting).


When the time is up, the alarm will sound, press any button to cancel the alarm.

Remark: The maximum between current time and off time is 23 hours 59 minutes.


For example: If the food is required to bake for 45 minutes, and it is supposed to stop at 14:00.

Semi-automatic setting

Setting the required time frame for baking (10 hours maximum)

- Press the function button repeatedly until the square symbol above “”, and set the required time using the + and - buttons.
- Adjusting the baking method (thermostat, oven operation).
- When the baking is done, the alarm will sound. To cancel the alarm press any button.


Timer

- The longest time frame can be set is 23 hours and 59 minutes. For setting time, press the function button repeatedly until the square symbol above “” flashes, and press “+ or - button until the desired time shows on the display. The time countdown begins to work. When it reaches the set time, the alarm sounds. To cancel the alarm press any button.



Note!

Once a function has been selected, setting the time needs to be started within 5 seconds. If the power fails unexpectedly all programmes and the set time will be cancelled.

Once power has been restored “12:00” and the square symbol above “” will show on the display. You will need to reset the time and any programmes required.

 
Cooling ventilation

- In order to cool down the exterior of the appliance, this model is equipped with a cooling fan, which comes on automatically when the oven is hot.
- When the fan is on, a normal flow of air can be felt exiting between the oven door and the control panel.

Practical cooking advice

- The oven offers a wide range of alternatives which allow you to cook any type of food in the best possible way. With time you will learn to make the best use of this versatile cooking appliance and the following directions are only a guideline which may be varied according to your own personal experience.

Using the oven light

Set knob "B" to the " " symbol to turn it on. It lights the oven and stays on when any of the electrical heating elements in the oven come on.

Using the conventional oven

This is traditional convection cooking using the top and bottom elements and the heat is diffused by natural convection. This mode is recommended for foods that require the same temperature both internal and external such as roast.

Using the grill

To use the grill ensure that your food is located in the centre of the oven cavity and adjust the height of the grill pan to control the browning.

Using the fan assisted grill

Use the grill in the same way as the standard grill but ensure the door is closed. This mode is recommend for quick browning on the outside but keeping the juices in. Ideal for chops and burgers.

Using the true fan mode

The rear circular element and the fan come on and the heat is dispersed by forced convection. This mode is suitable for roast joints when you want it well cooked on the outside and tender in the middle. The oven does not need any pre-heating when using this mode.

Using the lower heating element

Use this setting for browning the base of a variety of dishes.

Using the defrost mode

In this mode only the oven fan comes on. This mode is suitable for the quick thawing of frozen foods. Thawing times vary depending on the quantity and type of food to be defrosted.



Note!

When cooking is done, the fan stays on until the oven cools down sufficiently.

The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process).


1. Try not to open or close the oven door frequently during cooking. =
2. Keep the oven door clear so that you can look in during cooking easily.
3. If possible, defrost frozen food in a way which does not need any power consumption.
4. It takes less time to cook food which has large surface area to volume ratio.

Care and maintenance



Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

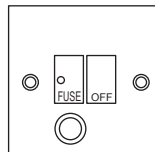

Caution

Do not use hot water, diluents, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc. for cleaning so as not to damage the enamel coating and plastic. The appliance must not be cleaned directly with water as this could cause rusting or render the insulation less efficient.

- The enamelled and stainless steel parts of the appliance should be wiped clean using a damp cloth using the minimum possible amount of soap and lukewarm water. Do not use abrasive powders or corrosive substances which could ruin the surfaces. Remember stainless steel could tarnish and restoring these surfaces can be difficult. Specialist stainless steel cleaners are available from major supermarkets. After cleaning these surfaces should be wiped with a clean cloth and lukewarm water to remove any traces of detergent.
- The inside of the oven should ideally be cleaned when the oven is still warm using a damp cloth and the minimum possible amount of soap and hot water. After cleaning the soap should be removed using a clean damp cloth and hot water. Dry the interior of the oven with a soft dry cloth after cleaning.
- Do not use abrasive powders, cleaners, sponges or acids (lime scale remover) to clean the interior as these can damage the enamel. If the interior is very difficult to clean use a specialist oven cleaner. Follow closely the instructions provided on the packaging.



Warning!

DO NOT USE EXCESSIVE AMOUNTS OF WATER WHEN CLEANING THE PRODUCT AND NEVER USE A STEAM CLEANER TO CLEAN THE INSIDE OF THE OVEN.

- If the oven is in use for an extended length of time condensation may form. Once the oven has cooled remove the condensation using a dry cloth.

How to keep your oven in good condition

Before cleaning your oven, or performing maintenance, disconnect it from the power supply.

To extend the life of your oven, it must be cleaned frequently, keeping in mind that:

- The enamelled or stainless steel parts should be washed with lukewarm water without using any abrasive powders or corrosive substances which could ruin them. Stainless steel could get stained. If these stains are difficult to remove, use special products available on the market. After cleaning, it is advisable to rinse thoroughly and dry.
- The inside of the oven should preferably be cleaned immediately after use, when it is still warm, with hot water and soap. The soap should be rinsed away and the interior dried thoroughly. Avoid using abrasive detergents (for example cleaning powders, etc.) and abrasive sponges for dishes or acids (such as lime scale remover, etc.) as these could damage the enamel. If the grease spots and dirt are particularly tough to remove, use a special product for oven cleaning, following the instructions provided on the packet.



Warning!



NEVER USE A STEAM CLEANER TO CLEAN THE INSIDE OF THE OVEN.

- If you use your oven for an extended period of time, condensation may form. Dry it using a soft cloth.
- There is a rubber seal surrounding the oven opening which guarantees its perfect functioning. Check the condition of this seal on a regular basis. If necessary, clean it and avoid using abrasive products or objects to do so. Should it become damaged, please contact your nearest After-Sales Service Centre. We recommend you avoid using the oven until it has been repaired.
- Never line the oven bottom with aluminium foil, as the build up of heat could compromise cooking and even damage the enamel.
- Clean the glass door using non-abrasive products or sponges and dry it with a soft cloth.



How to remove the oven doors

For a more thorough clean, you can remove the oven door. To remove the oven door use the following instructions:


1. Open the door to the full extent.
2. Open the lever **A** completely on the left hand hinges.

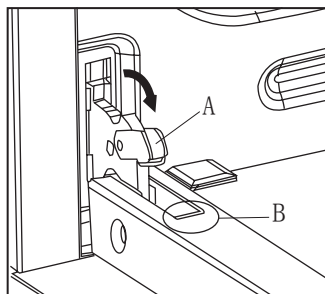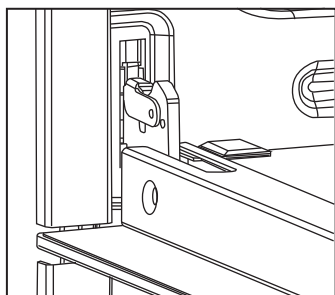

3. Open the door to angle as shown.
4. Close the door until the left & right hand levers **A** are hooked to part **B** of the door, as shown in diagram of step 2.

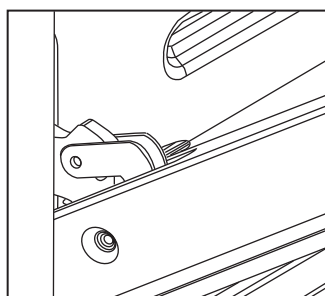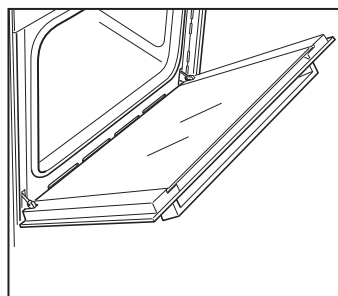


5. Withdraw the hinge hoods for there position following arrow **C**.

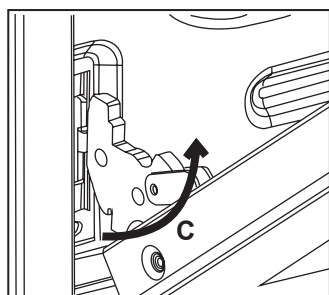


To replace the door, reverse the above procedure.

Removing the inner panel of glass

1. Remove the top plate by unscrewing the no. 2 screws (A).

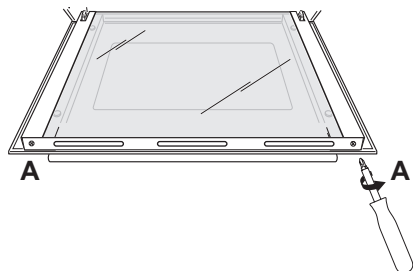

2. Gently pull out the inner panel of glass.

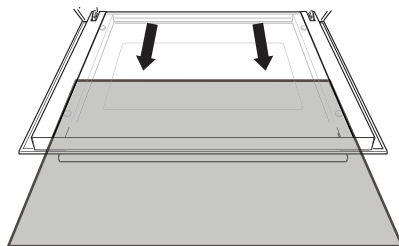

Clean the glass with an appropriate cleaner. Dry thoroughly, and place on a soft surface. Now you can also clean the inside of the outer glass.


To replace the glass reverse the procedure above.

Replacing the oven lamp




Warning!

Disconnect the appliance from the electricity supply, open the oven door and remove the oven shelves. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

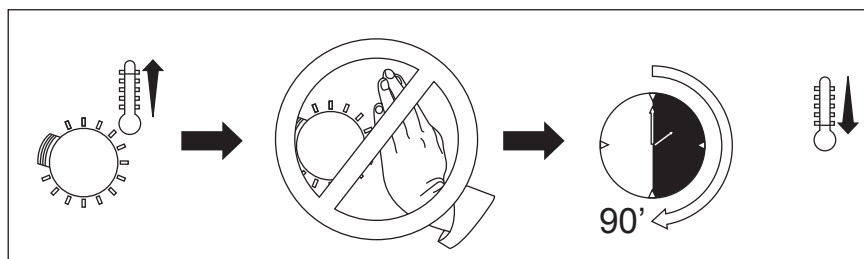

Remove the glass cover that protects the light bulb by turning it anticlockwise.

Unscrew the old light bulb and dispose of it safely and ecologically, change it for one as specified in the “*Technical and legal information section*” and replace the cover.

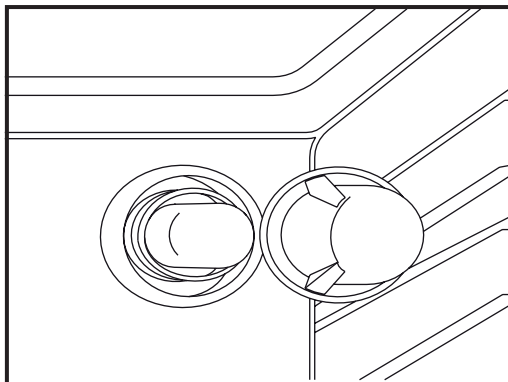

Troubleshooting Recycling and disposal

Troubleshooting

What should I do if the oven doesn't heat up?

Check to see if one of the following actions resolves the issue:

- The oven may not be switched on. Switch the oven on.
- The clock may not be set. Set the clock (see section "Setting the clock").
- Check to see if the required settings have been applied.
- A household fuse may have blown or a circuit breaker may have tripped. Replace the fuses or reset the circuit. If this happens repeatedly, call the Service Centre.

What should I do if, even though the oven function and temperature have been set, the oven does not heat up?

There may be problems with the internal electrical connections. Call your the Service Centre.

What should I do if the time display is blinking?

There was a power failure. Set the clock (see section "Setting the clock").

What should I do if the oven light does not illuminate?

The oven light is faulty. Replace the oven light bulb (see section "Changing the lamp").

What should I do if the oven's fan is running without having been set?

Following use, the oven's fan runs until the oven has cooled down. Call your local service centre if the fan continues to run after the oven has cooled down.

The grill does not heat up properly?

The grill power is set to low, turn the temperature control knob to maximum.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical and legal information

Technical information:

Power supply	:	220-240V~, 50/60Hz
Power consumption	:	4200-5100W

Legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Information for dismantling

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with you Local Authority or retainer for recycling advice.

Guarantee

Guarantee

This appliance is covered by a full manufacturer's 2 year parts and 2 year labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Extended parts only warranty

As testimony to our commitment to you as a valued customer of Cooke & Lewis, we will offer you an additional 3 years parts warranty absolutely free.

If during the extended parts warranty period the appliance fails and it is considered uneconomical to repair our Customer Service Department will offer you the opportunity to purchase the same or equivalent model at a discounted price.

All parts supplied free of charge under the extended warranty must be fitted by our approved engineers and will be subject to a call out charge to fit the part.

Guarantee

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland
Phone: 0344 800 1128*
Email: uksupport@apelson.co.uk
Web: www.spareszone.co.uk
***Local call rates apply**

Republic of Ireland (Eire)
Phone: 014475261

CE Declaration of Conformity



MANUFACTURER: CATA

ADDRESS: C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)

We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.

MACHINE APPLICATION: DMF72CL

TYPE : Double oven

EC DIRECTIVES APPLIED: Comply with the European Directives 2006/95/EC: LVD and the 2004/108/EC: EMC

APPLIED HARMONIZED STANDARDS:

EN 60335-2-6

EN 60335-1

EN 62233


APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS: ISO9001.2008

PLACE: Torelló

David Sala
Technical Manager

This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.


Electrical connection

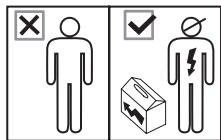

All installation work must be carried out by a competent person or qualified electrician.
Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

WARNING: THIS APPLIANCE MUST BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

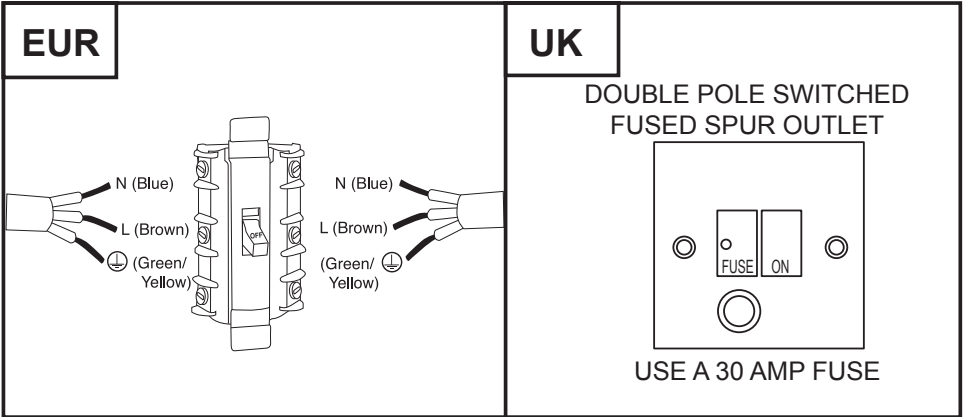

Warning

- Make sure the fused spur outlet is located in an accessible position.

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuitbreaker must be installed with a minimum opening of 3mm between contacts.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

Electrical connection

Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.

WARNING: THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 30 Amps.

The wires in the mains lead are coloured in accordance with the following code:

Brown = L - Live

Blue = N - Neutral

Green and Yellow =  - Earth

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Disconnect the appliance from the mains supply before carrying out any kind of maintenance or cleaning.

Only a qualified person in compliance with the instructions provided must install the appliance. The manufacturer declines all responsibility for improper installation, which may harm persons and animals and damage property.




Caution

- The power supply to the appliance must be switched off before any adjustments or maintenance work is undertaken.

Installation of Built-under Double Oven


This product can only be fitted under the work surface and to ensure that the built-in appliance functions correctly it should be installed using one of the four methods shown:

Installation method 1

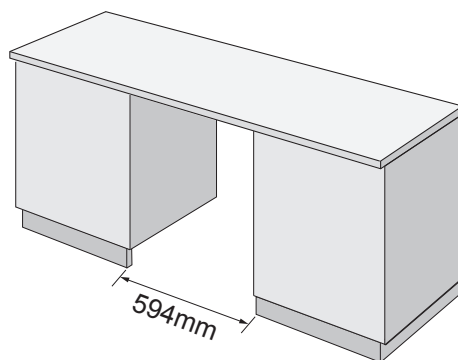


Fitting under the worktop, between two units, a 594mm wide gap is required for this installation.

Installation method 2

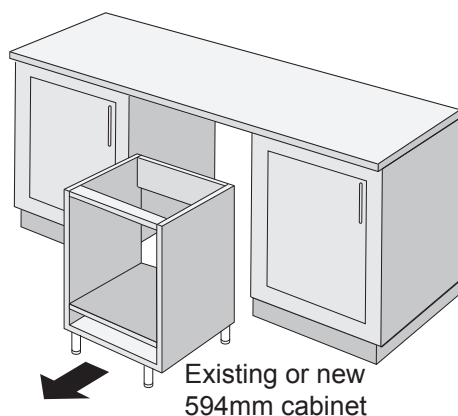


Fitting under the worktop in a new or existing oven housing unit. Modifications to this unit will be required.

Installation method 3

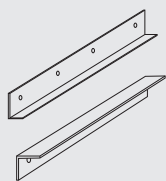

[05] x 2

 


[07] x 8





[08] x 8

- Fix the two support rails [05] using 8x screws [07] provided, ensuring that they are level with the base of the adjoining end panel.
- Prepare two uprights (A) (not supplied) from MFC/MDF material, dimensions need to be W: 30-50mm, L: 650mm, D: 18mm.
- Fix the two support rails [05] using 8x screws [08] provided, mounted on both sides of the oven.

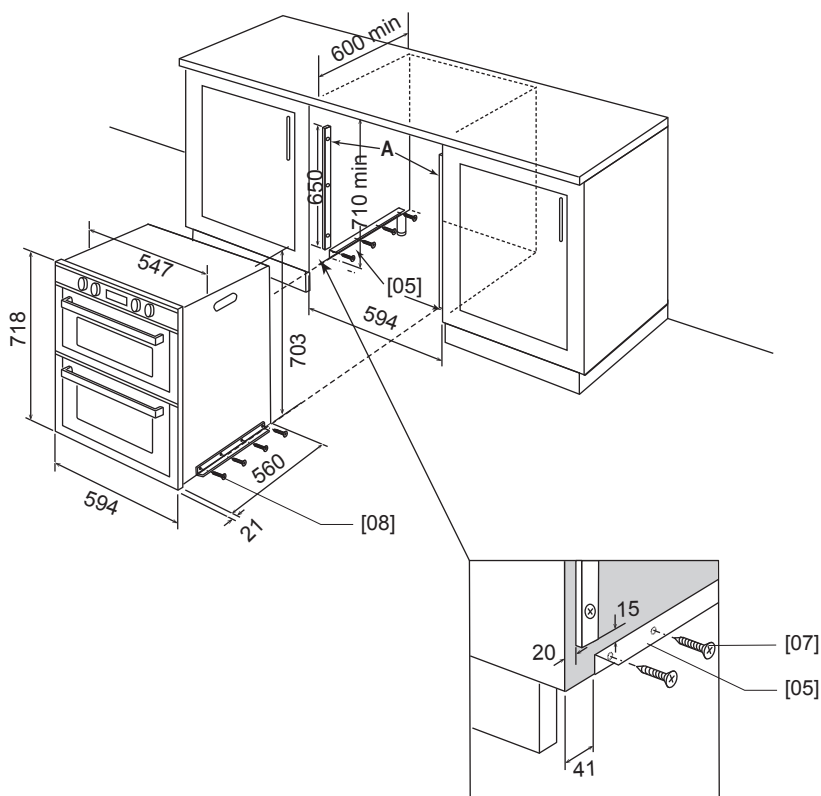


Note!

- The panels of the adjacent cabinets must be made of heat-resistant material. In particular the adhesive that bonds the plastic laminate to the furniture must be able to withstand temperatures of not less than 150°C to avoid delamination. The appliance must be housed in heat-resistant cabinets.

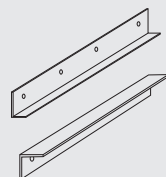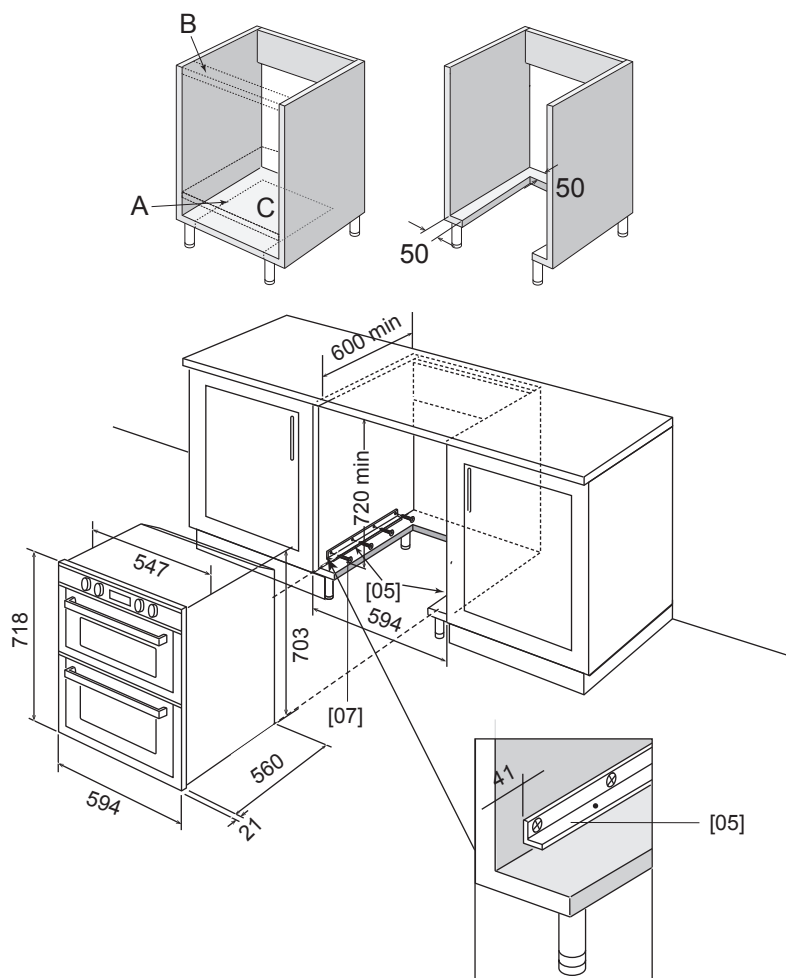


[05] x 1

 

[07] x 8

- Remove the both upper shelf (A) and cross member support (B) on the oven housing unit.
- Cut the bottom panel (C) of the oven housing as shown.
- If required use support rail provided [05] and screw onto side of cabinet using 8x screws [07] provided.

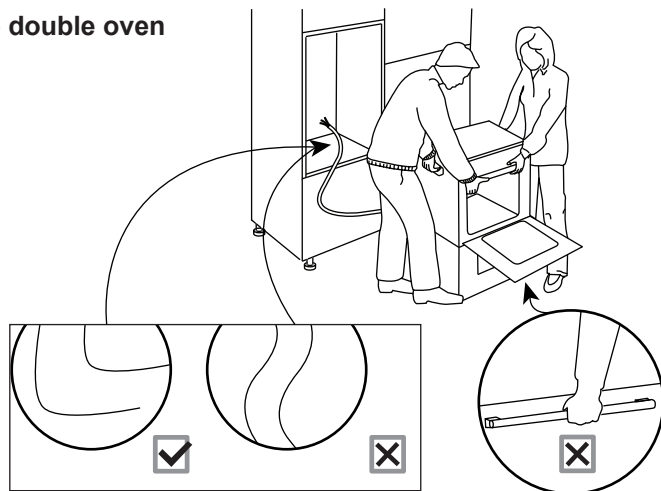

Connect to mains power supply ensuring the cable is not bent.

Place the oven on the metal support rails by lifting the appliance with the handles located on the side of the oven and slide into place.




Note: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



[06] x 4




[07] x 4

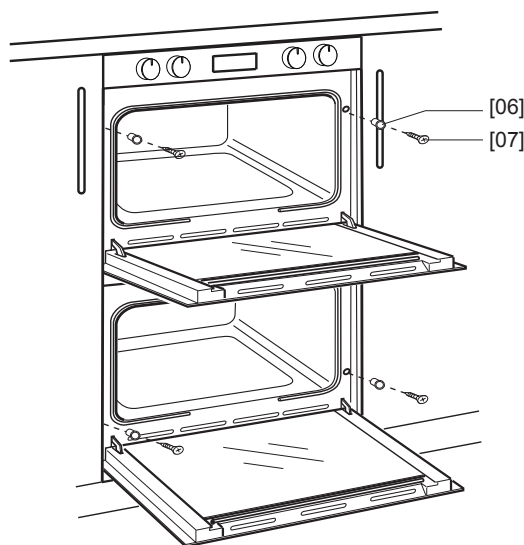


Once the oven has been lifted into place insert the 4x plastic washers [06] into the holes located within the sides of the metal casing of the oven as shown and secure with 4x screws [07] [Ø4mm x 25mm].

Also ensure that you adjust the furniture doors adjacent to the sides of the oven so there is a 5 - 7mm gap between them, otherwise heat displaced from the oven might damage the furniture door.

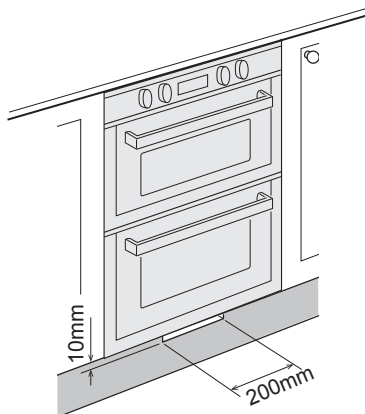**Note!**


- Keep clear of upper vent location as hot air escapes and can cause burns.

An air circulation slot that should be cut into the plinth if fitted. See below for air circulation requirements.

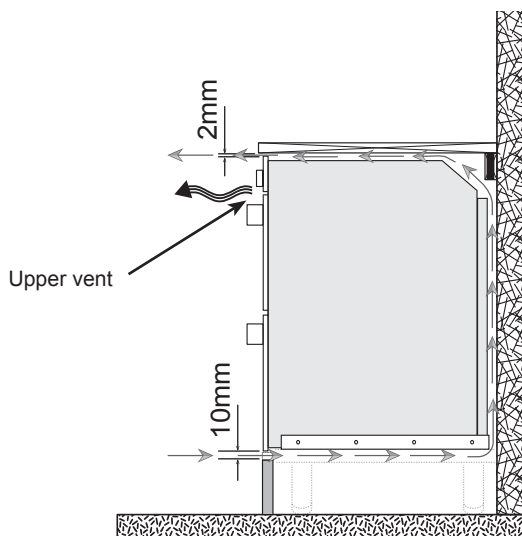

It is essential when installing your oven there is adequate air circulation around the appliance to ensure the correct operation of the appliance. Inadequate air circulation will greatly impair the operation of the appliance and can affect surround cabinets due to the rise in temperature.

The appliance is now ready to use.

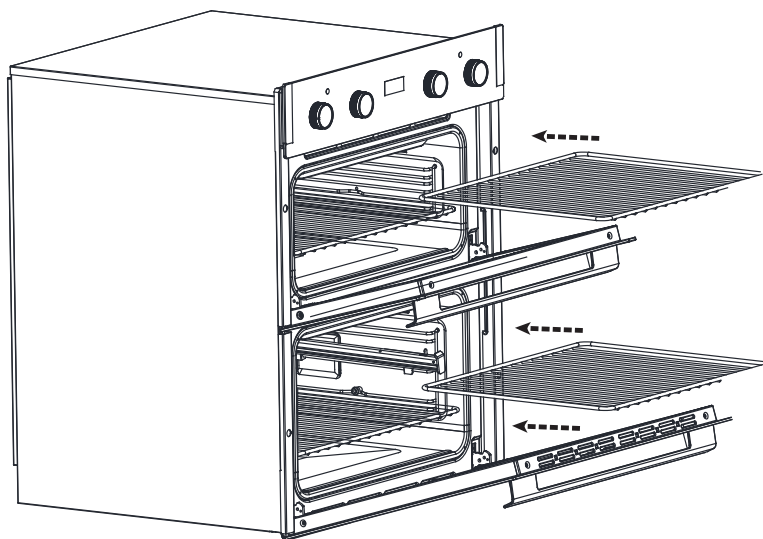

Adjusting the shelf position.

Information for domestic ovens(www.diy.com)

-	Symbol	Value	Unit
Model identification	-	DMF72CL	-
Type of oven	-	Built-in electric oven	-
Mass of the appliance	M	48	Kg
Number of cavities	-	2	-
Heat source per cavity (electricity or gas)	Electricity	-	-
Volume per cavity	V	Top oven: 31 bottom oven: 43	L
Energy consumption (electricity) required to heat a standardised load in a cavity of an electric heated oven during a cycle in conventional mode per cavity (electric final energy)	EC electric cavity	Top oven: 0.58 bottom oven: N/A	kWh/cycle
Energy consumption required to heat a standardised load in a cavity of an electric heated oven during a cycle in fan-forced mode per cavity (electric final energy)	EC electric cavity	Top oven: N/A bottom oven: 0.70	kWh/cycle
Energy Efficiency Index per cavity	EEI cavity	Top oven: 85.3 bottom oven: 95.9	-
Energy efficiency class	-	Top oven: A bottom oven: A	-
1kWh/cycle= 3.6MJ/cycle			

The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]



B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com
