



Double Oven:UBMFTC72SS


Overheat Cut Out Thermostat			
Old Style (manual reset with capillary)	Top Oven	Part Number	33311013
	Bottom Oven	Part Number	33311013
New Style (self resetting "klixon" type)	Top Oven	Part Number	33308027
	Bottom Oven	Part Number	36154001

Version:00

Date:2014-10-29

Product reference code: UBMFTC72SS

Upper Door Complete UBMFTC72XUDR UBMFTC72SS Exploded drawing

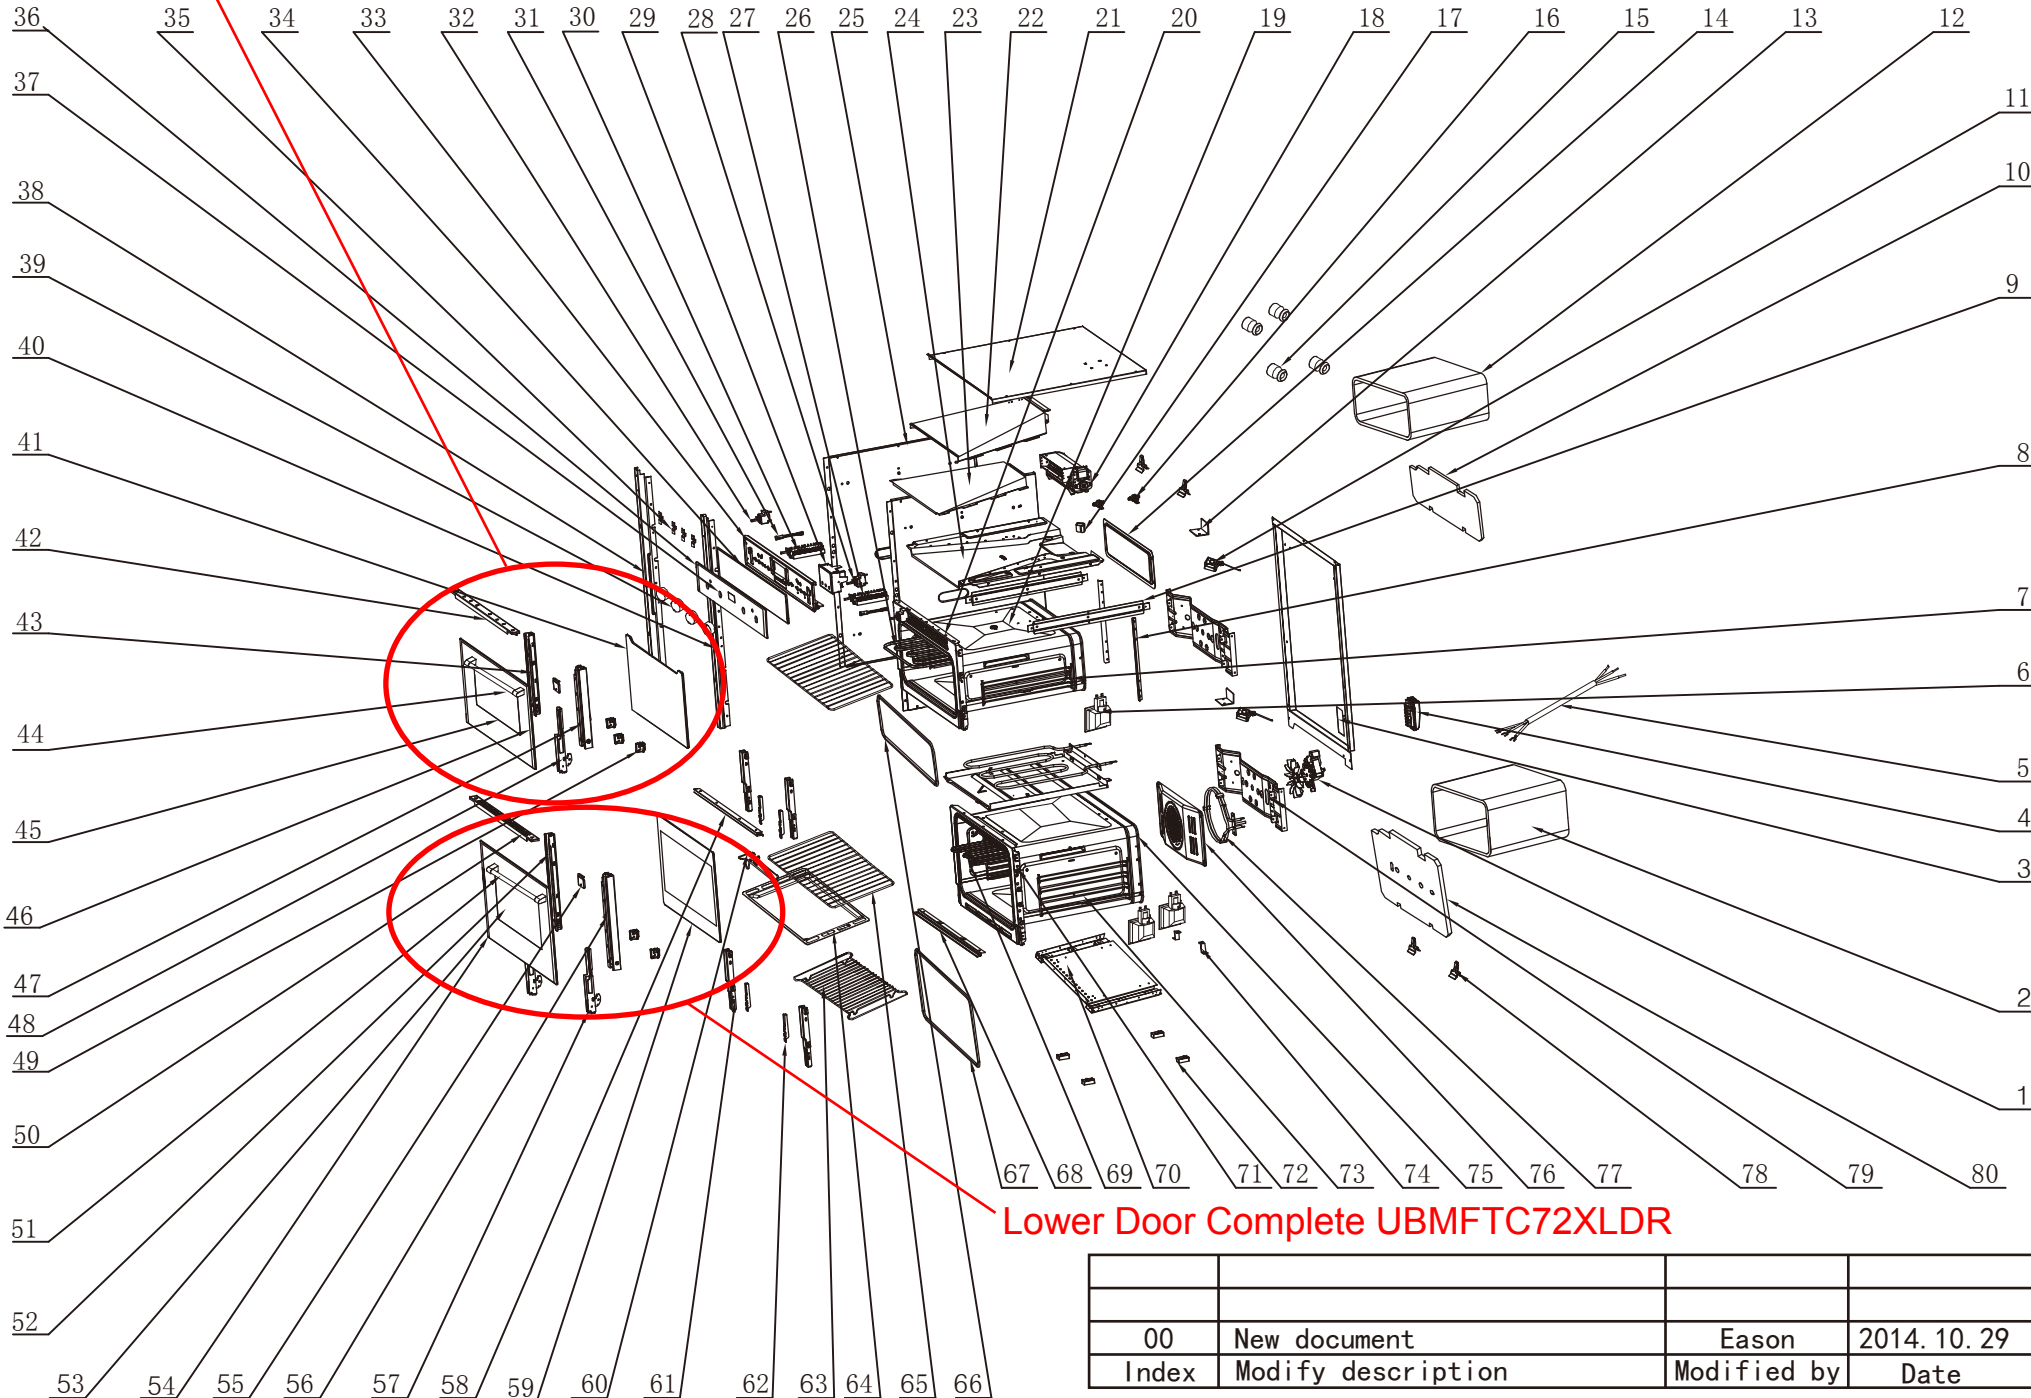

00	New document	Eason	2014. 10. 29
Index	Modify description	Modified by	Date

UBMFTC72SS parts list

NO.	Part code	Part description	QTY
1	33315002	grill fan assembly	1
2	33120002	heat preservation fibre	1
3	33030021	back cover board	1
4	33005016	terminal box	1
5	32307016	power cord--European style	1
6	33317001	Square lamp assembly	3
7	33140011	side rack	2
8	33027012	connect board for top and bottom cavity	2
9	33027014	fixing panel for exhausting pipe base board	2
10	33121002	heat preservation fibre	1
11	33311013	overheat protector	2
12	33120002	heat preservation fibre	1
13	33004010	fixing bracket for overheat protector	2
14	33001037	back catalytic line	1
15	33141002	guide rail bracket fixing axis	4
16	33310003	heat dissipation thermostat	2
17	33215013	exhausting pipe	1
18	33313020	cooling fan assembly	1
19	33058091	top cavity assembly	1
20	33018113	cavity panel	1
21	33031014	top cover plate	1
22	33028004	exhausting pipe top cover board	1
23	33026004	exhausting pipe middle cover board	1
24	33027002	exhausting pipe base board	1
25	33033017	side plate (left&right)	2
26	33303006	top heating element	1
27	33301037	function switch	1
28	33311018	temperature adjuster	1
29	33300016	sensor touch timer (3 button)	1
30	33301034	function switch	1
31	33312001	indicator light	2
32	33311008	temperature adjuster	1
33	33018148	fixing panel for switch	1
34	90134002	single adhesive tape	1
35	33006001	connect board switch	4
36	34039003	the S.S trim for control panel	1
37	33101364	control panel assembly	1
38	33014092	right bracket for out cover plate	1
39	32245003	938 metal knob	4
40	33014093	left bracket for out cover plate	1
41	33103045	inner glass(top door)	1
42	33014087	door frame top bracket	1
43	33014080	door frame left bracket	1
44	33190004	hanld H4	1
45	33102520	door panel	1
46	33015297	S.S trim for door panel	1
47	33014079	door frame right bracket	1
48	33180020	hing 14 assembly	2
49	33014049	fixing panel for inner glass	2
	33014050	fixing panel for inner glass	2
	33014142	fixing panel for inner glass	1
50	33014250	top bracket for oven door	1
51	33190004	hanld H4	1
52	33014084	door frame left bracket	1
53	33102521	door panel	1
54	33015296	S.S trim for door panel	1
55	33006012	fixing board for handle	2
56	33014083	door frame right bracket	1
57	33180021	hinge 15 assembly	2
58	33027015	cavity panel connector	1
59	33103046	inner glass	1
60	33172001	handle for rack	1
61	33024006	side bracket for cavity(left&right)	2
62	33005014	fixing board for hinge	4
63	33170003	grill rack for baking tray	1
64	33224003	baking tray	1
65	33170001	grill rack	2
66	33803013	door seal assembly	1
67	33803014	door seal assembly	1
68	33027016	bottom support for cavity panel	2
69	33303006	top heating element	1
70	33029015	bottom cover plate	1
71	33018149	cavity panel	1
72	33237030	the support for bottom cover plate	4
73	36038003	side rack	2
74	33006063	the bottom support for cavity	2
75	33058092	cavity assembly	1
76	33001022	the cover plate for back heating element	1
77	33303040	rear heating element	1
78	33035001	thermostat switch sensor fixer	10
79	33016001	back bracket for cavity	2
80	33121002	heat preservation fibre	1

Please see note on lead page regarding cut out thermostat.