



Double Oven:AMFTC90SS

Overheat Cut Out Thermostat			
Old Style (manual reset with capillary)	Top Oven	Part Number	33311013
	Bottom Oven	Part Number	33311013
New Style (self resetting "klixon" type)	Top Oven	Part Number	33308027
	Bottom Oven	Part Number	36154001


Version:00

Date:2014-08-13

Product reference code: AMFTC90SS

Complete Upper Door Assy
Part Number AMFTC90SXUDR

AMFTC90SS Exploded drawing

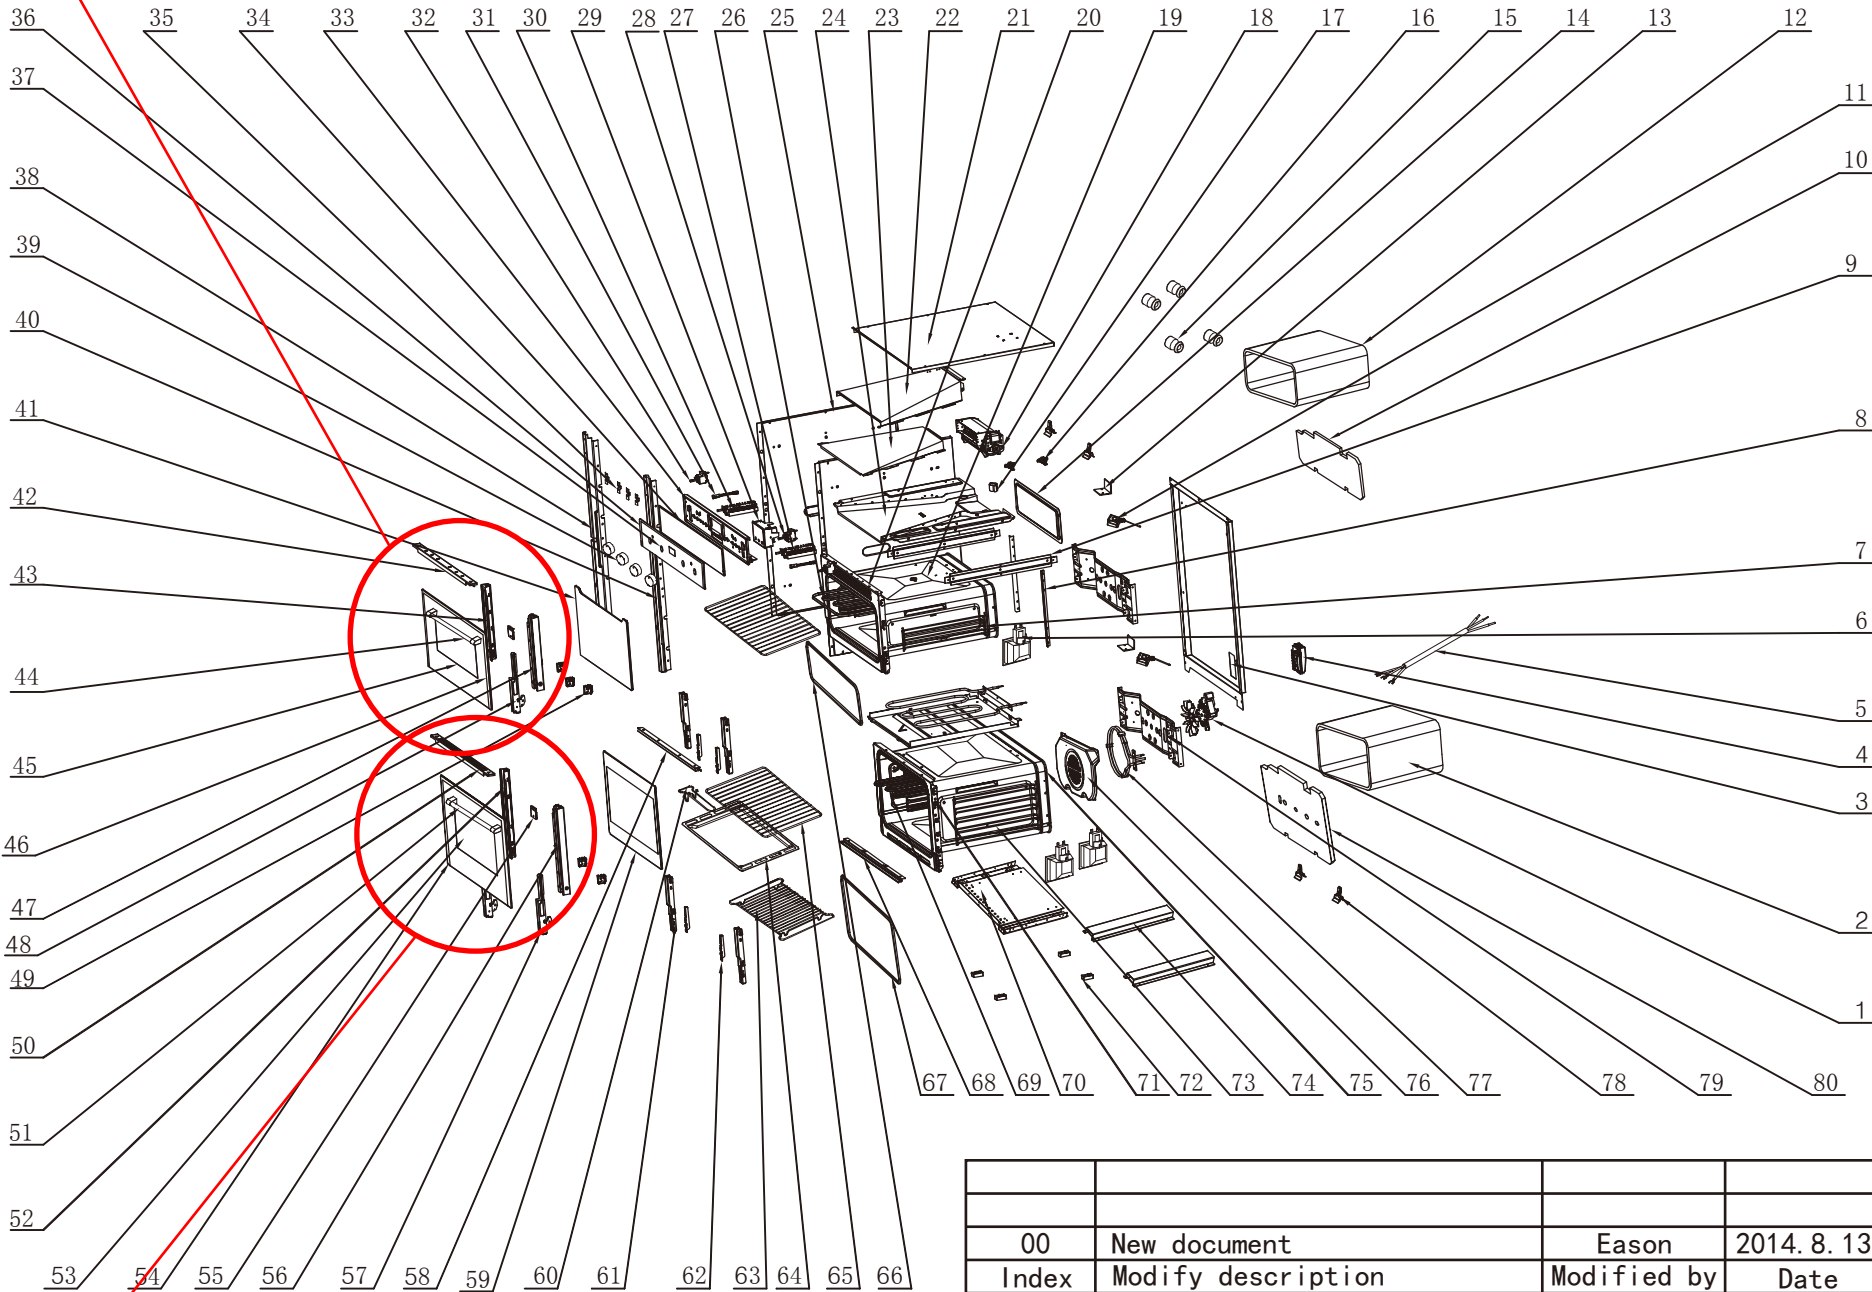

00	New document	Eason	2014. 8. 13
Index	Modify description	Modified by	Date

Complete Lower Door Assy Part Number AMFTC90XLDR

TAMFTC90SS parts list

No.	Part code	Part description	QTY
1	33315002	grill fan assembly	1
2	33120002	heat preservation fibre	1
3	33030020	back cover board	1
4	33305016	terminal box	1
5	32307016	power cord-European style	1
6	33317001	square lamp assembly	3
7	33140011	side rack	2
8	33027012	connect board for top and bottom cavity	2
9	33027014	fixing panel for exhausting pipe base board	2
10	33121002	heat preservation fibre	1
11	33311013	overheat protector	2
12	33120002	heat preservation fibre	1
13	33004010	fixing bracket for overheat protector	2
14	33001037	back catalytic line	1
15	33141002	guide rail bracket fixing axis	4
16	33310003	heat dissipation thermostat	2
17	33215013	exhausting pipe	1
18	33313020	cooling fan assembly	1
19	33058091	top cavity assembly	1
20	33018113	cavity panel	1
21	33031014	top cover plate	1
22	33028004	exhausting pipe top cover board	1
23	33026004	exhausting pipe middle cover board	1
24	33027002	exhausting pipe base board	1
25	33033016	side plate (left&right)	2
26	33303006	top heating element	1
27	33301037	function switch	1
28	33311018	temperature adjuster	1
29	33300016	sensor touch timer (3 button)	1
30	33301034	function switch	1
31	33312001	indicator light	2
32	33311008	temperature adjuster	1
33	33018115	fixing panel for switch	1
34	90134002	single adhesive tape	1
35	33006001	connect board switch	4
36	33007110	S.S trim for control panel	1
37	33101366	control panel assembly	1
38	33014088	right bracket for out cover plate	1
39	32244031	knob.21	4
40	33014089	left bracket for out cover plate	1
41	33103045	inner glass(top door)	1
42	33014087	door frame top bracket	1
43	33014080	door frame left bracket	1
44	33190007	hanld H1	1
45	33102370	door panel	1
46	33015297	S.S trim for door panel	2
47	33014079	door frame right bracket	1
48	33180020	hinge 14 assembly	2
49	33014049	fixing panel for inner glass	2
	33014050	fixing panel for inner glass	2
	33014142	fixing panel for inner glass	1
50	33014043	top bracket for oven door	1
51	33190007	hanld H1	1
52	33014082	door frame left bracket	1
53	33102207	door panel	1
54	33015298	S.S trim for door panel	1
55	33006012	fixing board for handle	2
56	33014081	door frame right bracket	1
57	33180009	hinge 3 assembly	2
58	33027015	cavity panel connector	1
59	33103044	inner glass	1
60	33172001	handle for rack	2
61	33024006	side bracket for cavity(left&right)	2
62	33005014	fixing board for hinge	2
63	33170003	grill rack for baking tray	1
64	33224003	baking tray	1
65	33170001	grill rack	2
66	33803013	door seal assembly	1
67	33803002	door seal assembly	1
68	33027016	bottom support for cavity panel	2
69	33303006	top heating element	1
70	33029015	bottom cover plate	1
71	33018111	cavity panel	1
72	33237030	the support for bottom cover plate	4
73	33140001	side rack	2
74	33237031	the bottom support for cavity	2
75	33058093	cavity assembly	1
76	33001002	the cover plate for back heating element	1
77	33303004	rear heating element	1
78	33035001	thermostat switch sensor fixer	10
79	33016001	back bracket for cavity	2
80	33121002	heat preservation fibre	1

Please see note on the lead page regarding the cut out thermostat.