




## **Electric Multifunction Fan Oven:KC567MFTZ**

**Version: 00**

**Date: 2014-04-10**

## KC567MFTZ Exploded drawing

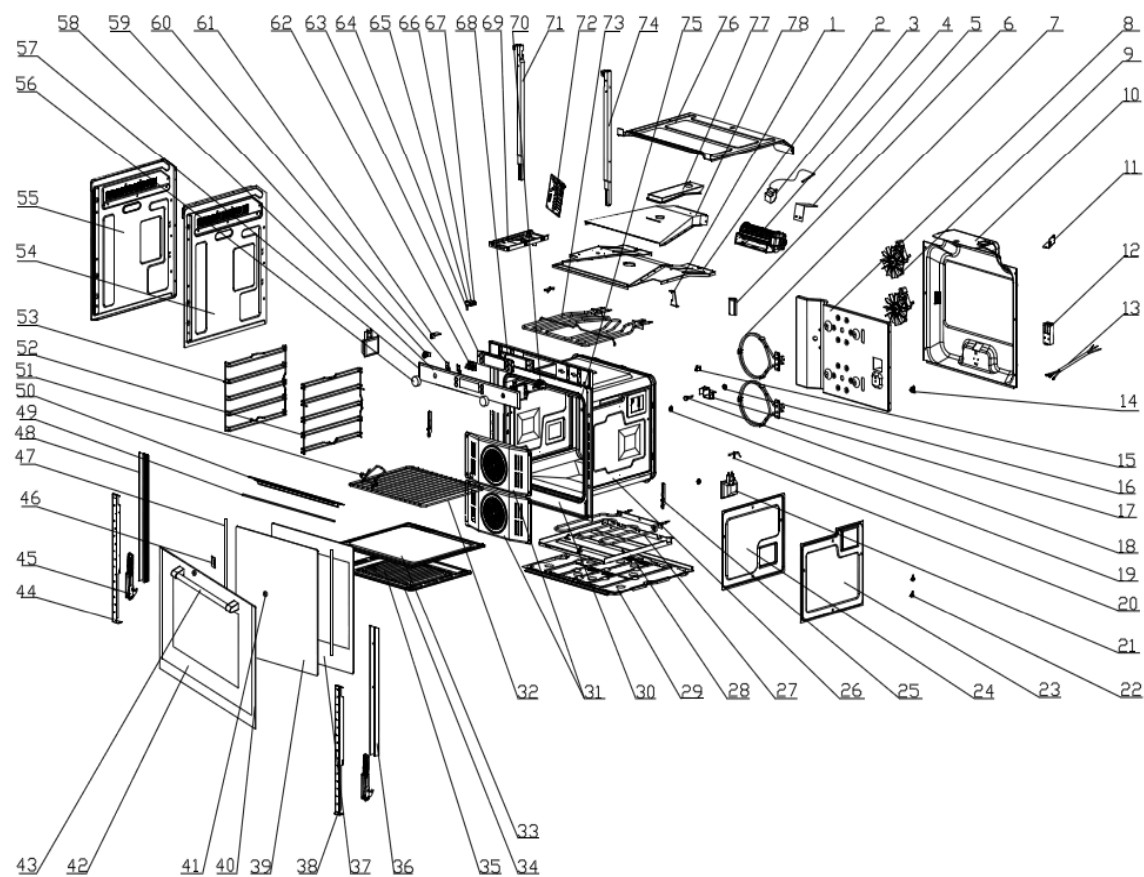

00	New document	Paul	2014-4-10
Index	Modify description	Modified by	Date

# KC567MFTZ Parts list

No.	Part code	Part description	Quantity
1	33027008	bottom plate for cooling fan	1
2	33027005	bottom cooling fan casing	1
3	33311013	cut out thermostat (290°)	1
4	33313019	cooling fan assembly	1
5	91127002	insulating paper	1
6	33215007	exhaust pipe	1
7	33303040	rear grill	2
8	33016002	back cavity bracket	1
9	33315016	convection fan assembly	2
10	33030012	back oven casing	1
11	33004010	thermostat base	1
12	33305008	power box	1
13	32307016	power cord	1
14	34152001	thermostat (140°)	2
15	33301022	microswitch	1
16	33301024	nut	1
17	33004008	switch bracket	1
18	33301023	plunger for microswitch	1
19	33141005	guide rail base	4
20	33323001	temperature sensor	2
21	33317001	lamp assembly	2
22	33035001	temperature sensor clip	2
23	33039005	right guide rail casing	1
24	33039004	left guide rail casing	1
25	33005004	hinge receiver	2
26	33058059	cavity	1
27	33303039	bottom grill (1100W)	1
28	33003002	bottom grill casing	1
29	33029009	bottom oven casing	1
30	33018093	door frame	1
31	33001022	rear grill casing	1
32	33170001	shelf	2
33	33316003	Dividing Shelf	1
34	33224003	tray	1
35	33170003	shelf in tray	1
36	33014014	left glass bracket	1
37	33103013	inner glass	1
38	33014010	left hinge support	1
39	33104010	middle glass	1
40	33015227	metal panel	2
41	33214005	handle washer	2
42	33102321	door glass panel	1
43	33190007	handle	1
44	33014019	right hinge support	1
45	33180008	hinge assembly	2
46	33014063	middle glass fixing borad	1
47	33219004	middle glass strip seal	1
48	33014015	right glass bracket	1
49	33219003	up door bracket seal	1
50	33014020	up door bracket	1
51	33172001	rack handle	1
52	33140008	right rack	1
53	33140007	left rack	1
54	33032002	right oven casing	1
55	33033002	left oven casing	1
56	32244031	knob	2
57	33007111	control panel decorative board	2
58	33101363	facia panel	1
59	33133003	socket	1
60	33006006	control panel fixing bracket	4
61	33004009	door switch fixing board	1
62	33316006	function switch	1
63	33322006	display PCBA box	1
64	33005006	door switch base	1
65	33005005	door switch borad	1
66	33301020	microswitch	1
67	33319002	spring	1
68	33321021	display PCBA	1
69	33322007	power pcb box	1
70	33316005	temperature switch	1
71	33024004	left bracket for cavity	1
72	33321020	power PCBA	1
73	33303041	top grill	1
74	33025004	right bracket for cavity	1
75	33803002	door seal	1
76	33031009	up oven casing	1
77	33026007	exhaust pipe casing	1
78	33028007	up exhaust pipe casing	1