



OVEN:OVPY60

Version:02


Date:2015-03-18

Product reference code: OVPY60A

OVPY60 Exploded drawing



34

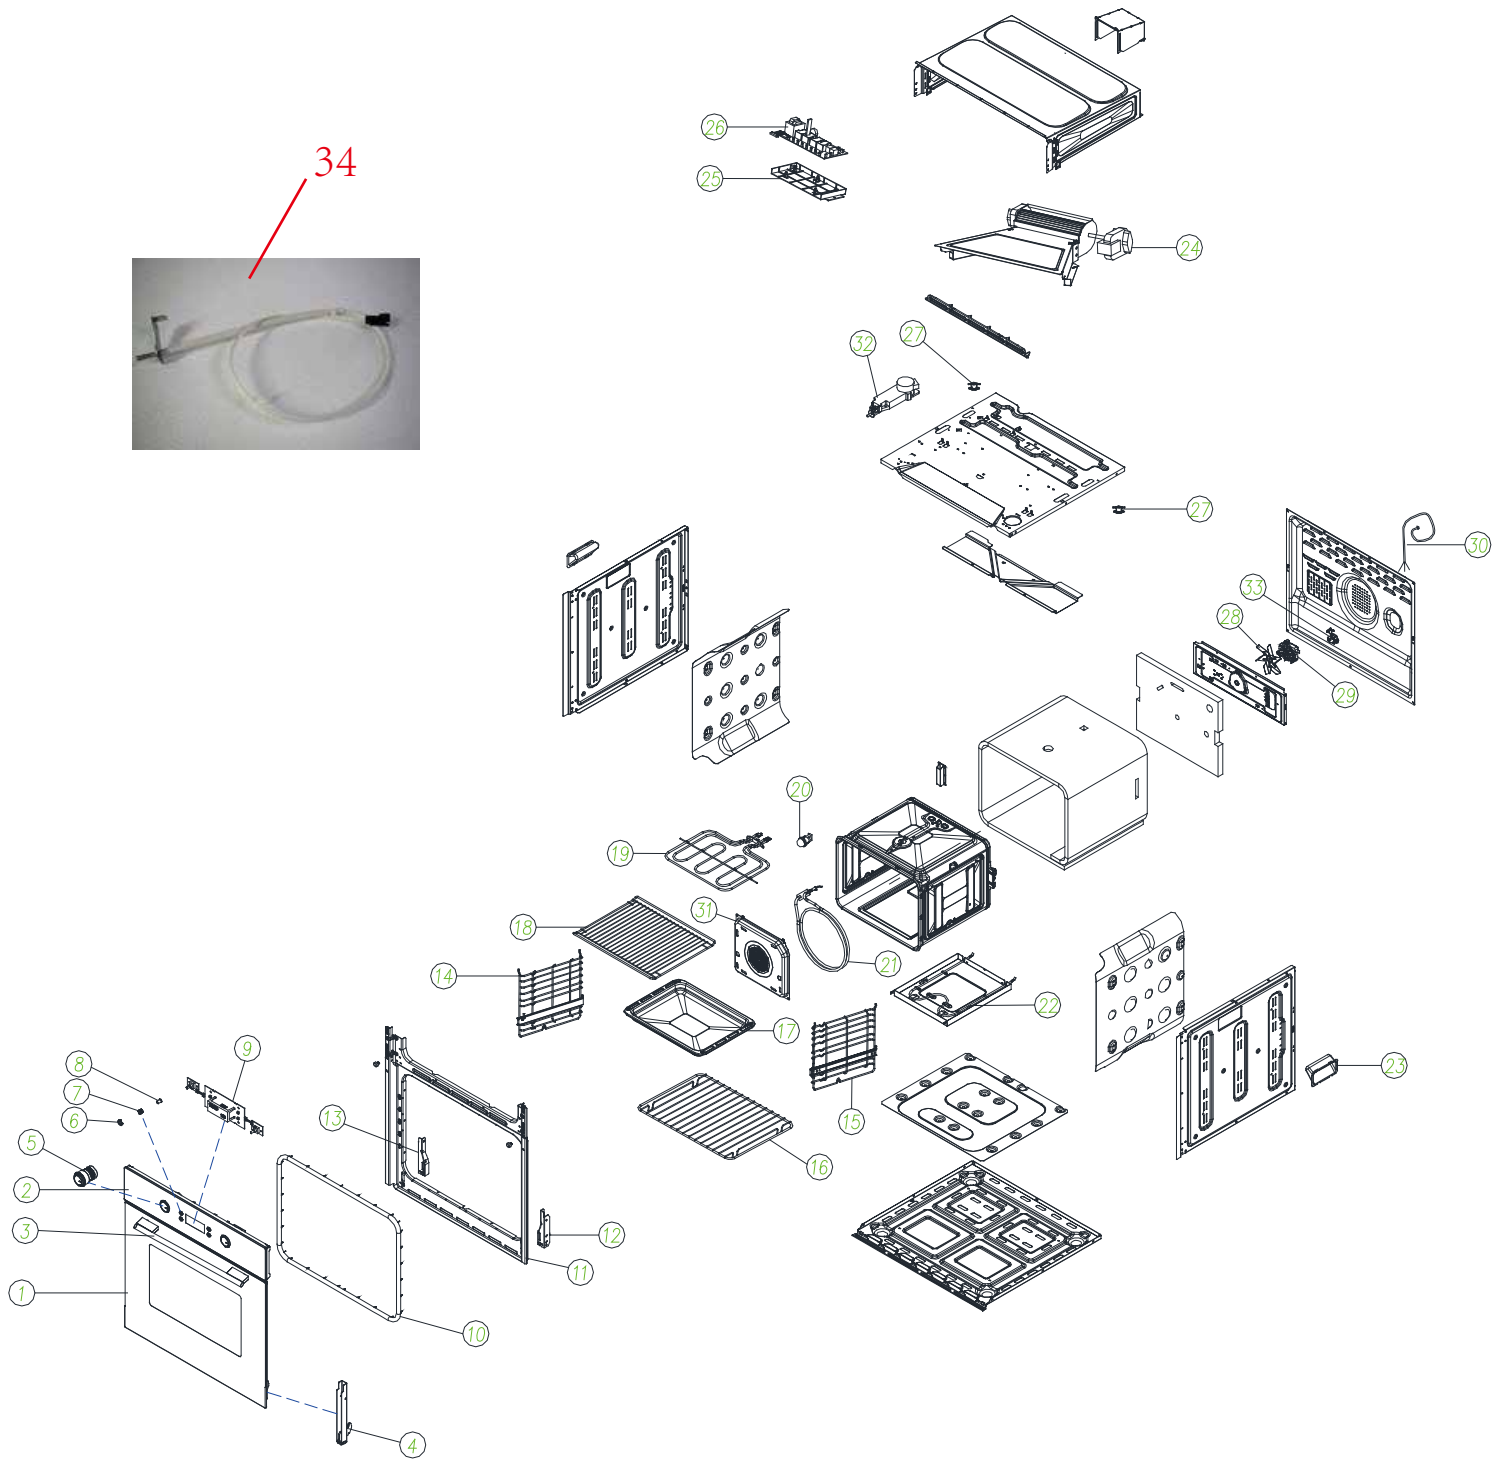

02	add part No. 34	Eason	2015. 3. 18
Index	Modify description	Modified by	Date

OVPY60 parts list

N	Part code	Part name	Quantity
1	293600105181	door assembly	1
2	293600105206	control panel assembly	1
3	261509400902	handle assembly	1
4	261566702300	hinge	2
5	291301000068	knob	2
6	261312505500	button gasket cramp	4
7	261312501700	button gasket	4
8	261358502000	button	4
9	291400100005	display PCB assembly	1
10	262101400122	door sealing	1
11	261500616701	door frame	1
12	261504501200	right hinge base	1
13	261504501100	left hinge base	1
14	291504200021	left lateral grill	1
15	291504200020	right lateral grill	1
16	261568901401	tray grill	1
17	291501400002	tray	1
18	291501300007	grill	1
19	291200800014	top heating element	1
20	261257700038	lamp	1
21	261201702190	rear heating element	1
22	291200800008	bottom heating element	1
23	261331200201	handle box	2
24	291201300004	cooling fan	1
25	251352703718	power PCB box	1
26	261450400099	power PCB	1
27	261201301110	thermostat	2
28	261508200600	convection fan blade	1
29	261204100130	convection motor	1
30	261201002601	power cord	1
31	261562000402	convection motor cover	1
32	261200300160	door lock	1
33	261257100050	wire connector	1
34	263004100027	temperature sensor	1