


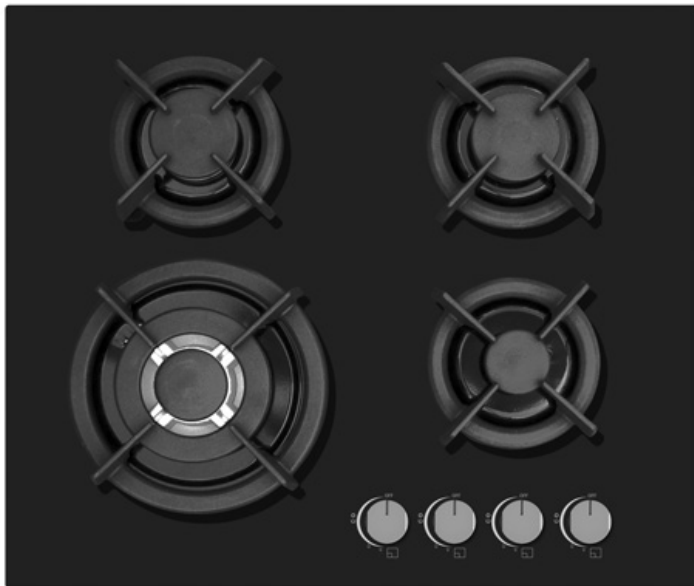


TPGHGD60

4x 60cm Burner Gas on Glass Hob



Barcode 8422248606103

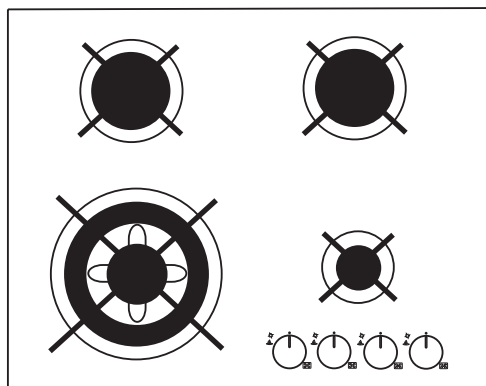

[01] x 1



[02] x 2



[04] x 1



[03] x 1



[05] x 1

 


[06] x 1



[07] x 4

[08] x 4



[\$-] x 4



[%\$] x 1





# TPGHGD60



Built-in Gas on Glass Hob

05

**Installation**

25

# Let's get started...



## Getting **started**...

05

Before you start  
Safety

06  
07



## In more **detail**...

09

Product functions  
Operation  
Care and maintenance  
Troubleshooting  
Recycling and disposal  
Technical and legal information  
Guarantee  
CE Declaration of conformity

10  
10  
13  
15  
16  
16  
22  
24



## Appendix

Installation

25




# Getting started...





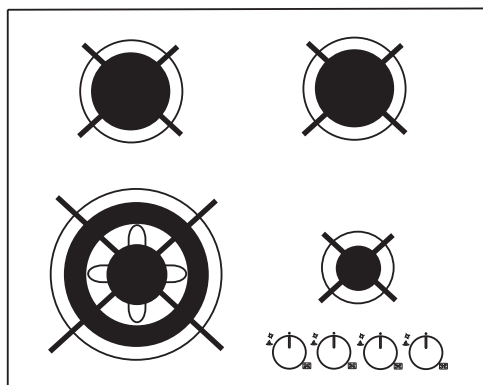

**Before you start  
Safety**

06


07



## Before you start

-  To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 1 800 535542 (Ireland) and 01 56 48 02 60 (France).
-  Check the package and make sure you have all of the parts listed.
-  Decide on the appropriate location for your product.
-  If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
-  The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
-  If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

## Tools required

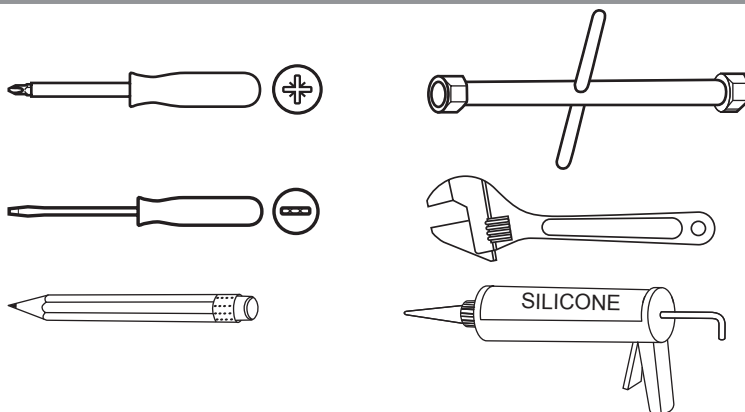

**These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.**



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☒ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☒ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- ☒ The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ☒ Children should be supervised to ensure that they do not play with the appliance.
- ☒ This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- ☒ Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.
- ☒ Damaged power cables should be replaced by a competent person or qualified electrician.
- ☒ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ☒ Do not allow the electric cables to touch the hot parts of the appliance.
- ☒ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☒ Please dispose of the packing material carefully.
- ☒ Do not use flammable sprays in close vicinity to the appliance.

- ☒ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ☒ A steam cleaner is not to be used.
- ☒ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ☒ The appliance is for domestic use only.
- ☒ When a cooking zone has been on for a long time, the surface remains hot for some time afterwards so do not touch the metal surface.
- ☒ Do not store detergents or flammable materials beneath the hob.
- ☒ Do not leave hot oils or fats unattended as they may catch light.
- ☒ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.





## In more detail...



<b>Product functions</b>	10
<b>Operation</b>	10
<b>Care and maintenance</b>	13
<b>Troubleshooting</b>	15
<b>Recycling and disposal</b>	16
<b>Technical and legal information</b>	16
<b>Guarantee</b>	22
<b>CE Declaration of conformity</b>	24

## Operation

### Product functions

- 4 x Burners: Four zones of cooking.
- Flame safety device (FSD): Stops the gas supply to the gas hob when the flame goes out.
- Auto - ignition
- LPG conversion kit supplied.

### Control elements

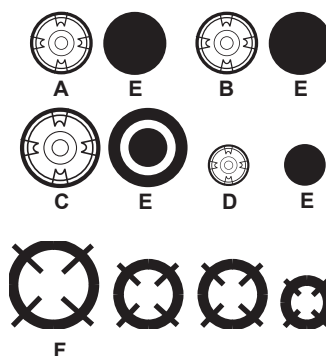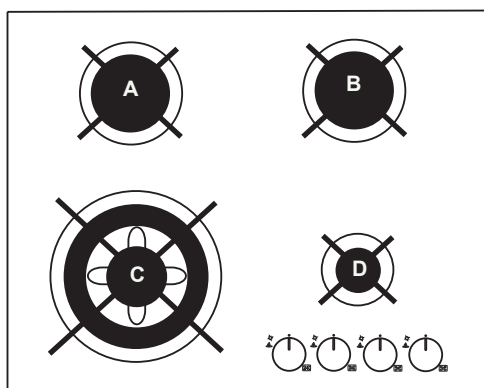

Reference	Description	Qty	Reference	Description	Qty
A	Semi rapid burner	1	E	Burner caps	4
B	Semi rapid burner	1	F	Pan Support	3
C	Wok burner	1			
D	Auxiliary burner	1			

**Caution:** This diagram may be slightly different from the layout of the appliance.

## Operation

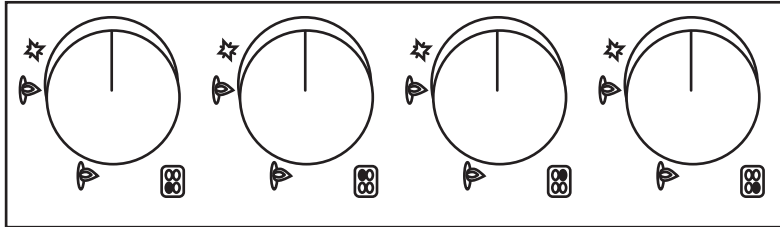


fig. 4

### Use of the burners



#### Caution

- If there is no electric current you can light the burners with piezo electric spark gas ignitor.
- The burners can only be lit with safety thermocouples when the knob is on **MAXIMUM**.

On the control panel (fig. 4) to the right every knob there is a diagram to indicate the burner to which the knob in question refers. The burners can be switched on in several ways, according to the type of appliance and its individual features.

> Manual "ON" switch (this is always possible even if the electric current is off):

- Turn the knob (fig. 5) corresponding to the selected burner in a counter-clockwise direction so that the knob is at MAXIMUM (this corresponds to a large flame).
- Use a piezo electric spark gas ignitor.

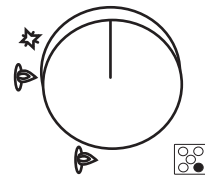


fig. 5

> Automatic electric "ON" switch for burners with safety device (thermocouples):

- Turn the knob (fig. 5) corresponding to the selected burner in a counter-clockwise direction so that the knob is at MAXIMUM.
- Once the burner is lit, keep the knob pressed in for about 10 seconds in order to allow the flame to heat up the thermocouple. If the burner goes out when the knob is let go, repeat the operation.

## Operation

### NOTE:

- > The use of a gas cooking appliance produces heat and humidity in the place where it is installed.
- > Therefore, you need to ensure the place is well ventilated, keeping the natural ventilation openings clear and using a mechanical ventilation device/ flue or electric fan.
- > Intensive or prolonged use of the appliance may require additional ventilation, such as opening a nearby window or increased ventilation efficiency obtained by increasing the power of the mechanical ventilators, where applicable.

Advice for the best use of the burner:

- > When boiling point is reached, turn the knob to MINIMUM.
- > Always use pans with a lid.


Burner	Recommended pan diameters (cm)
Auxiliary	12-14
Semi-rapid	14-26
Wok - rapid	18-26

## Appliance cleanliness



### Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

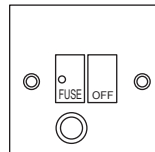

### Caution

- Use soapy water and a cloth for cleaning. Never use abrasive powders.
- Avoid banging pots and pans down on the hob.
- Do not leave any empty pan on the heating zone.

- > The appliance should be cleaned after use.
- > Wipe the inner and outer surface of the appliance and its accessories with wet cloth.
- > Any liquid overflowing from the pan must always be removed with a cloth.
- > The surface of the hob may be easily cleaned as follows:

### Cleaning of enamel parts:

To maintain the features of the enamel parts, wash frequently with soapy water.

Never use abrasive powders. Avoid leaving acid or alkaline substances on the enamel parts (vinegar, lemon juice, salt, tomato juice, etc.) and washing the enamel parts while they are still warm.


### Cleaning of stainless steel parts:

Wash these parts with soapy water and then dry them with a soft cloth. The shine is maintained by regularly cleaning them with special products normally commercially available. Never use abrasive powders.

### Cleaning of burner flame dividers:

Given that they are not fixed, the flame dividers can be cleaned by simply removing them and washing them with soapy water. After drying them well and checking that the holes are not blocked, put them back into their correct position.

## Replacement of parts

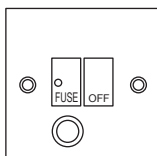**Warning**

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

## Troubleshooting

The following circumstances may not be a problem. Do not contact the customer services until the problem has been confirmed.

If your appliance is still not functioning properly after making the above checks, please contact customer services.

1. Check that the mains supply has not been switched off.
2. Check that the fuse in the spur has not blown.
3. Ensure that the burner components are not excessively soiled as this can lead to ignition problems.

Do not take the appliance apart yourself, as you may damage the hob.

Before calling After Sales Service, please do the following:

1. Check that the appliance is correctly connected.
2. Read the failure text above. If you are still unable to solve the problem, switch off the appliance, do not try to take it apart and call customer services.

In more detail...

## Recycling and disposal

### Recycling and disposal

#### Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

 
On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

## Technical and legal information

### Technical data

Power supply	V / Hz	220-240 V~/ 50 Hz
Gas pressure	Type / mbar / kW	G20 / 20 / 7.16 G30 / 28 / 8.06
External dimensions (WxHxD)	mm	600 x 90 x 510
Net weight	kg	10.5






All installation work must be carried out by a competent person or qualified electrician. Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

**Warning: THIS APPLIANCE MUST BE EARTHED.**

Mains Supply could be connected to the Mains Voltage by Direct Connection

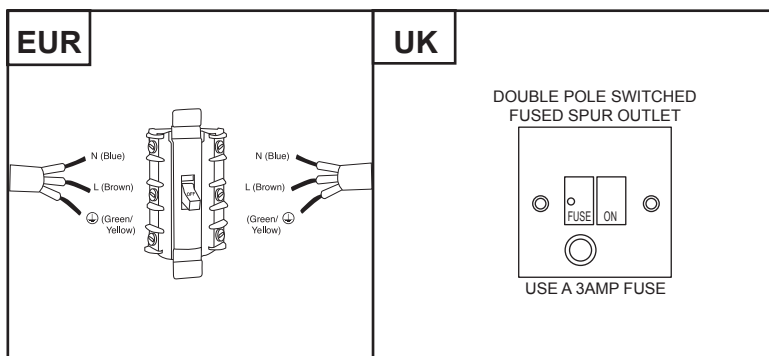

## Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

If the cable is damaged or to be replaced, the operation must be carried out by a qualified electrician with dedicated tools to avoid any accidents.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

The cable must be checked regularly and replaced by authorized technicians only.

In more detail...

## Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

## Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.

### **WARNING: THIS APPLIANCE MUST BE EARTHED**

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only  
A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

**The fuse must be rated at 3 Amps.**

The wires in the mains lead are coloured in accordance with the following code:

**Brown = L - Live**

**Blue = N - Neutral**

**Green/Yellow =  - Earth**

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

**Disconnect the appliance from the mains supply before carrying out any kind of maintenance or cleaning.**

## Installation Guidelines

### Gas Supply Requirements (UK and ROI)

This installation must comply with the Gas Safety Regulations 1984.

The connection to the gas supply must comply with all current regulations in force.

We are not legally able to offer advice on the installation of gas appliances to non Gas Safe registered personnel.

#### Ventilation

All rooms require a window or equivalent (e.g. a door) which can be opened. Some rooms require a permanent vent or extractor in addition to a window (see below).

This unit must not be used in a room which is less than 5m<sup>3</sup>.

The following table details the requirements based on the kitchen volume (L x W x H) in m<sup>3</sup>.

The above requirements also allow use of a gas oven and grill but if there are any other fuel burning appliances in the same room, consult the relevant British Standard (BS5440) or Gas Safe manual.

Room Volume (m <sup>3</sup> )	Air vent required (cm <sup>3</sup> )
5	100
6 to 10	50
6 to 11	No permanent vent required if a door opens to the outside
11 or more	None required


The above requirements also allow use of a gas oven and grill but if there are any other fuel burning appliances in the same room, consult the relevant British Standard (BS440) or Gas Safe document.

### What you should do if you smell gas?

Switch off the gas supply  
Open doors and windows  
Call Transco 0800 111 999

## Gas connection

01

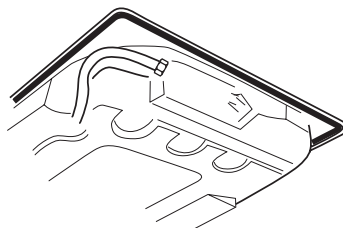

### Changing the nozzles





#### Caution

The hob installation and burner changes must be carried out by a competent person, ie a Gas Safe registered fitter.

NOTE: The LPG nozzles are provided in a separate bag marked "LPG" and if they are changed and the natural gas jets retained then the label should be changed to "NATURAL".

02

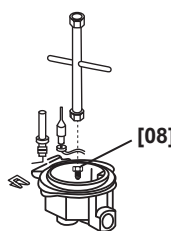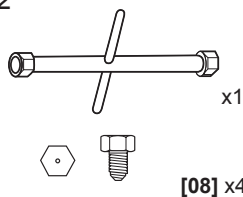


Lift up the burners and unscrew the nozzle using an dedicated tool and replace the nozzles with those designed for LPG gas supply.

## Regulation of burners



### Caution

The regulation described can only be carried out with burners that use methane gas and city gas (where available), whereas the screw must be fully tightened in a clockwise direction on burners using liquid gas.

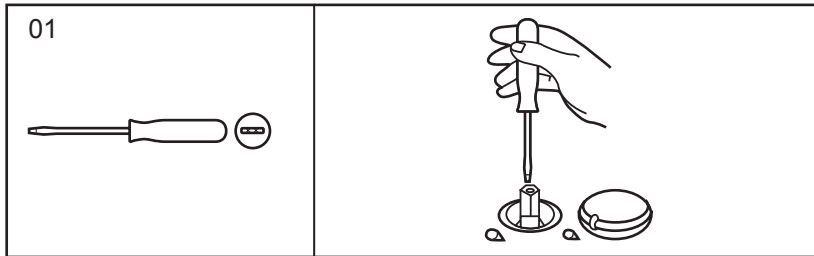

Regulation of the "MINIMUM" position on the burners.

To regulate the minimum position on the burners, follow the procedure below:

1. Turn on the burner and turn the knob to its MINIMUM position (small flame).
2. Remove the knob from the tap set for standard pressure. The knob is found on the bar of the tap itself.
3. Place the tap bar on the work top, use a small screwdriver that fits the (gold) screws located at the lower part of the tap and turn the fixing screw to the right or left until the flame of the burner is regulated in the most suitable manner to MINIMUM.
4. Make sure that the flame does not go out when changing the position quickly from MAXIMUM to MINIMUM position.

In more detail...

## Manufacturer's Guarantee

---

This appliance is covered by a full manufacturer's 2 year labour and 2 year parts guarantee. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

### Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

### Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

### This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,  
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

## Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

#### UK and N.Ireland


T: 0844 8001128 E: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)  
[www.myspareparts.co.uk](http://www.myspareparts.co.uk)

#### Republic of Ireland

T: 014475261 E: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)


#### France

T: 01 56 48 02 60 E: [callcenter@sidepar.fr](mailto:callcenter@sidepar.fr)

<b>MANUFACTURER:</b> CATA		
<b>ADDRESS:</b> C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)		
<p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p>		
<b>MACHINE APPLICATION:</b>	TPGHGD60	
<b>TYPE:</b>	Gas Hob	
<b>EC DIRECTIVES APPLIED:</b>	Comply with the essential requirements of the "Gas appliances" directive 90/396 EEC (12/06/1990)	
<b>APPLIED HARMONIZED STANDARDS:</b>		
Standard EN 60335-2-102:2006		
Standard EN 60335-1:2002 + A1:2004 + A12:2006 + A2:2006		
Standard EN 50366:2003 + A1:2006		
<b>APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:</b>		
ISO9001:2008		
<b>PLACE:</b> Torelló	<div style="text-align: right;">             David Sala              _____              Technical Manager           </div>	

This appliance respects laws of the suppression of radio-interference.  
 The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.



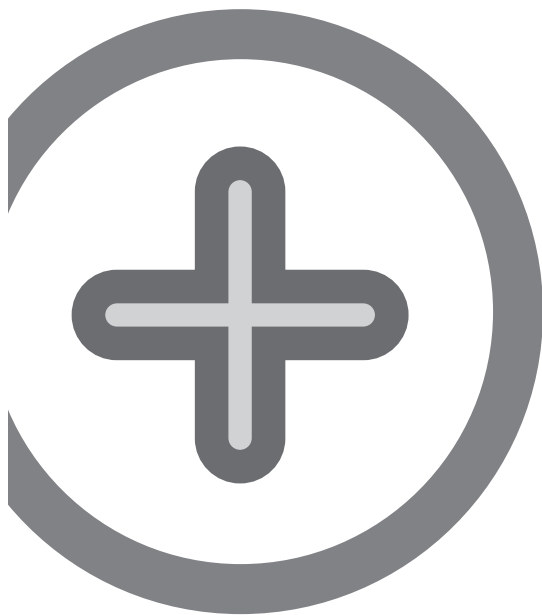

# Appendix...

## Installation



Appendix...

## Clearance




### Warning

Good ventilation is required around the appliance for easier dissipation of heat and low power consumption. Sufficient clearance is required around the appliance. The gap between the hob and any cupboard above it should be at least 750mm.

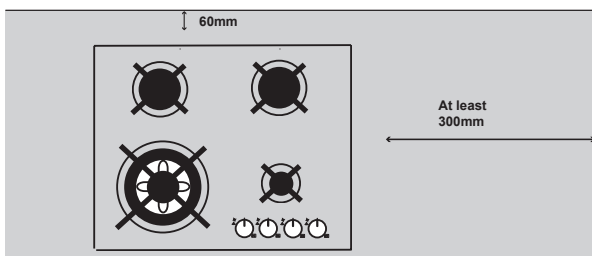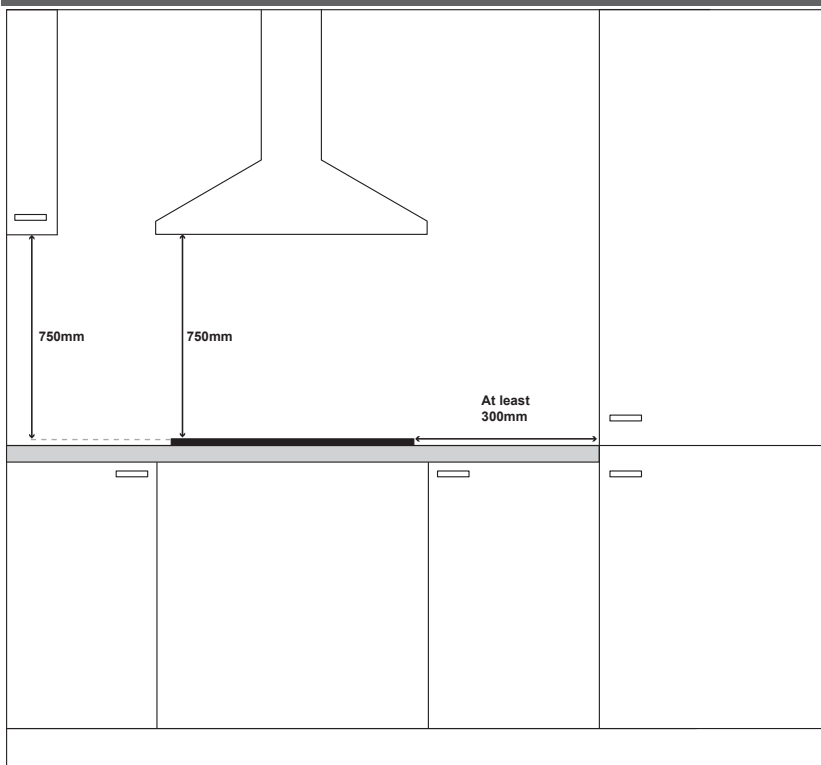

## 01

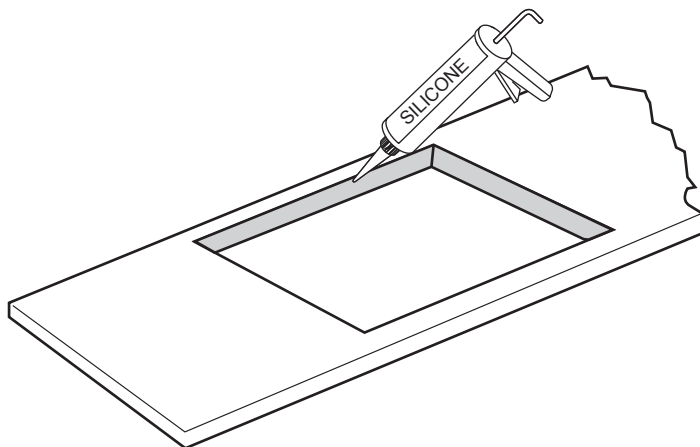


[10] x 1



Cut out worktop to the template dimensions with suitable equipment and seal the cut edge with appropriate sealant.


## 02

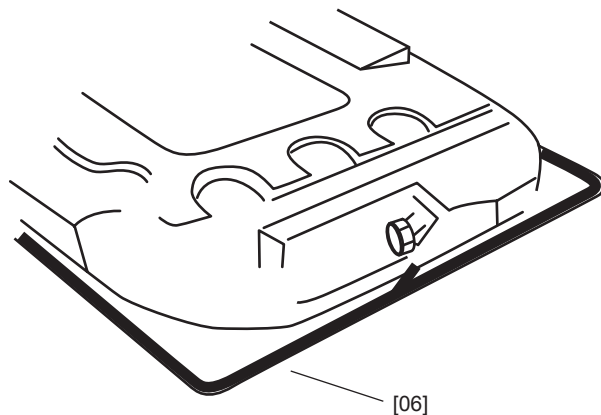

[06] x 1

Stretch out the supplied seal along the underside edge of the hob, ensuring the ends overlap.

## 03

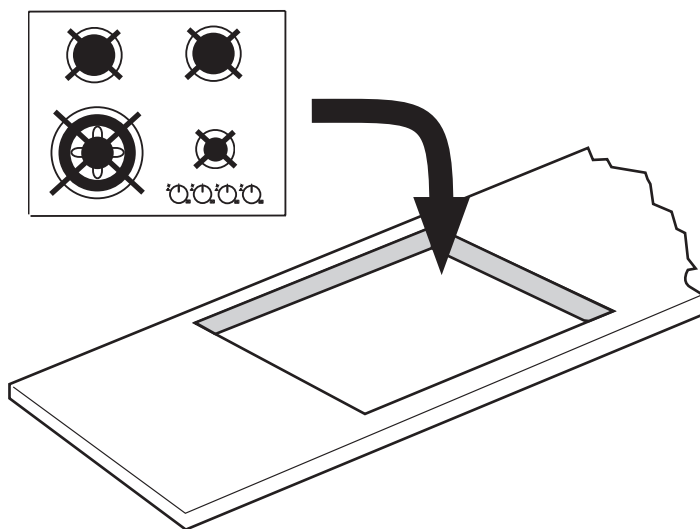




## 04



[07] x 4



[09] x 4

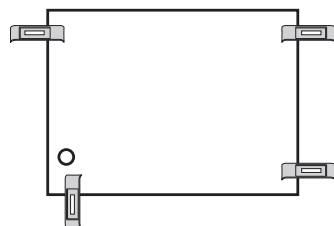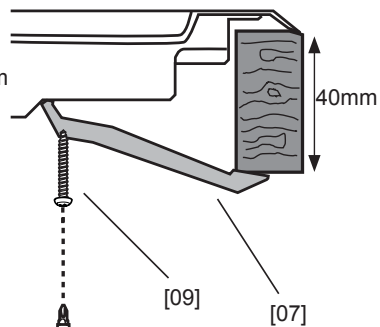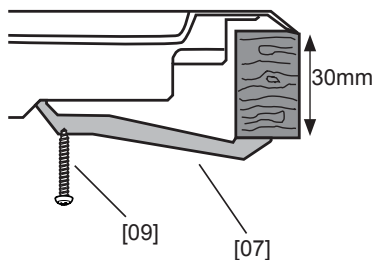

## Notes

[illegible]

## Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## Notes

[illegible]



CNA Trading U.K. Ltd  
Hillbrow House  
Hillbrow Road  
Esher  
Surrey KT10 9NW

---