


Cooker Hood  
Model Number  
CLCHS110  
Parts Manual

# Exploded Drawing

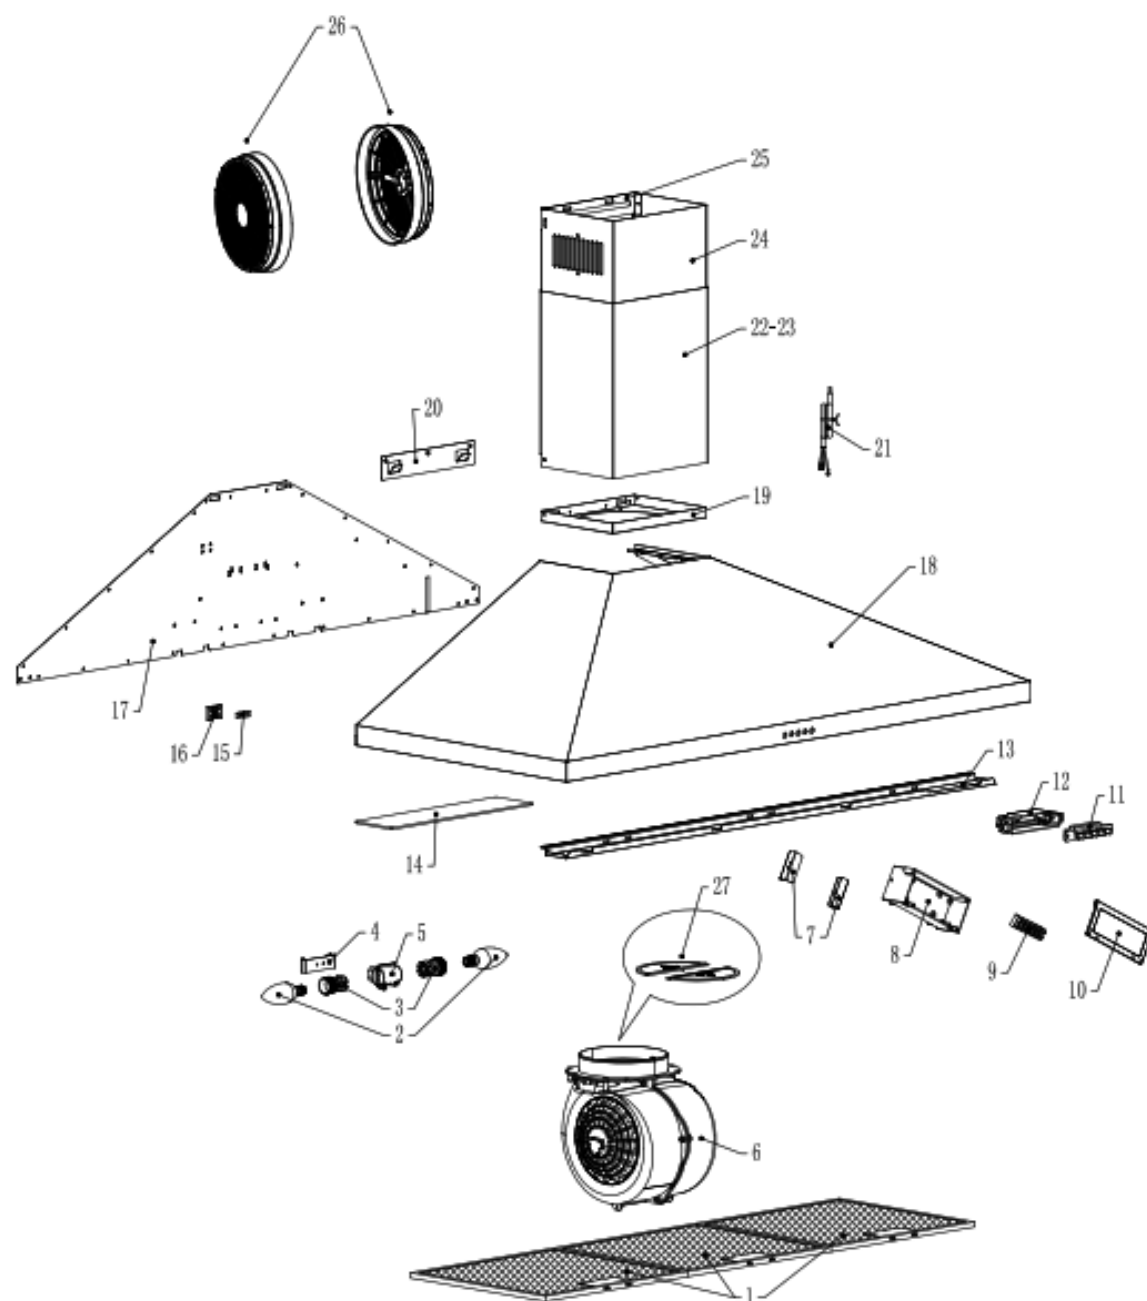

## Parts List

ID No	Old Part Number	New Part Number	Part Description
1	10314-0162	1.03.12.0063	ALUMINIUM FILTER
2	10103-0061	1.01.03.0024	LED BULB
3	10110-0007	1.01.10.0003	LAMP HOLDER
4	20214-0335	2.01.06.0224	LAMP HOLDER RACK
5	10422-0004	1.04.21.0002	LAMP HOLDER BOX
6	20304-0065	2.03.06.0063	MOTOR ASSY
7	20214-0256	2.01.06.0162	TERMINAL BOX RACK
8	10403-0030	1.04.03.0021	TERMINAL BOX
9	10104-0001	1.01.04.0001	BINDING POST
10	10403-0031	1.04.03.0022	TERMINAL BOX COVER
11	10107-0001	1.01.07.0001	PUSH BUTTON
12	10404-0001	1.04.04.0001	PUSH BUTTON BOX
13	20224-0055	2.01.03.0084	LAMP PANEL
14	10501-0037	1.05.01.0011	GLASS
15	10413-0005	1.04.12.0005	CRIMPING PLATE 1
16	10413-0004	1.04.12.0004	CRIMPING PLATE 2
17	20203-0040	2.01.03.0022	REAR PANEL
18	20208-0283	2.03.01.0183	BODY
19	20201-0021	2.01.01.0010	TOP RACK
20	10901-0003	1.09.01.0003	BRACKET
21	10213-0011	1.02.12.0007	POWER CORD WITHOUT PLUG
22	20213-0005	2.01.10.0005	EXTERIOR CHIMNEY
23	20214-0143	2.01.06.0107	EXTERIOR CHIMNEY RACK
24	20213-0064	2.01.10.0043	INTERIOR CHIMNEY
25	20214-0152	2.01.06.0109	INTERIOR CHIMNEY RACK