


Cooker Hood
Model Number
UBSCH110BK
Parts Manual

Exploded Drawing

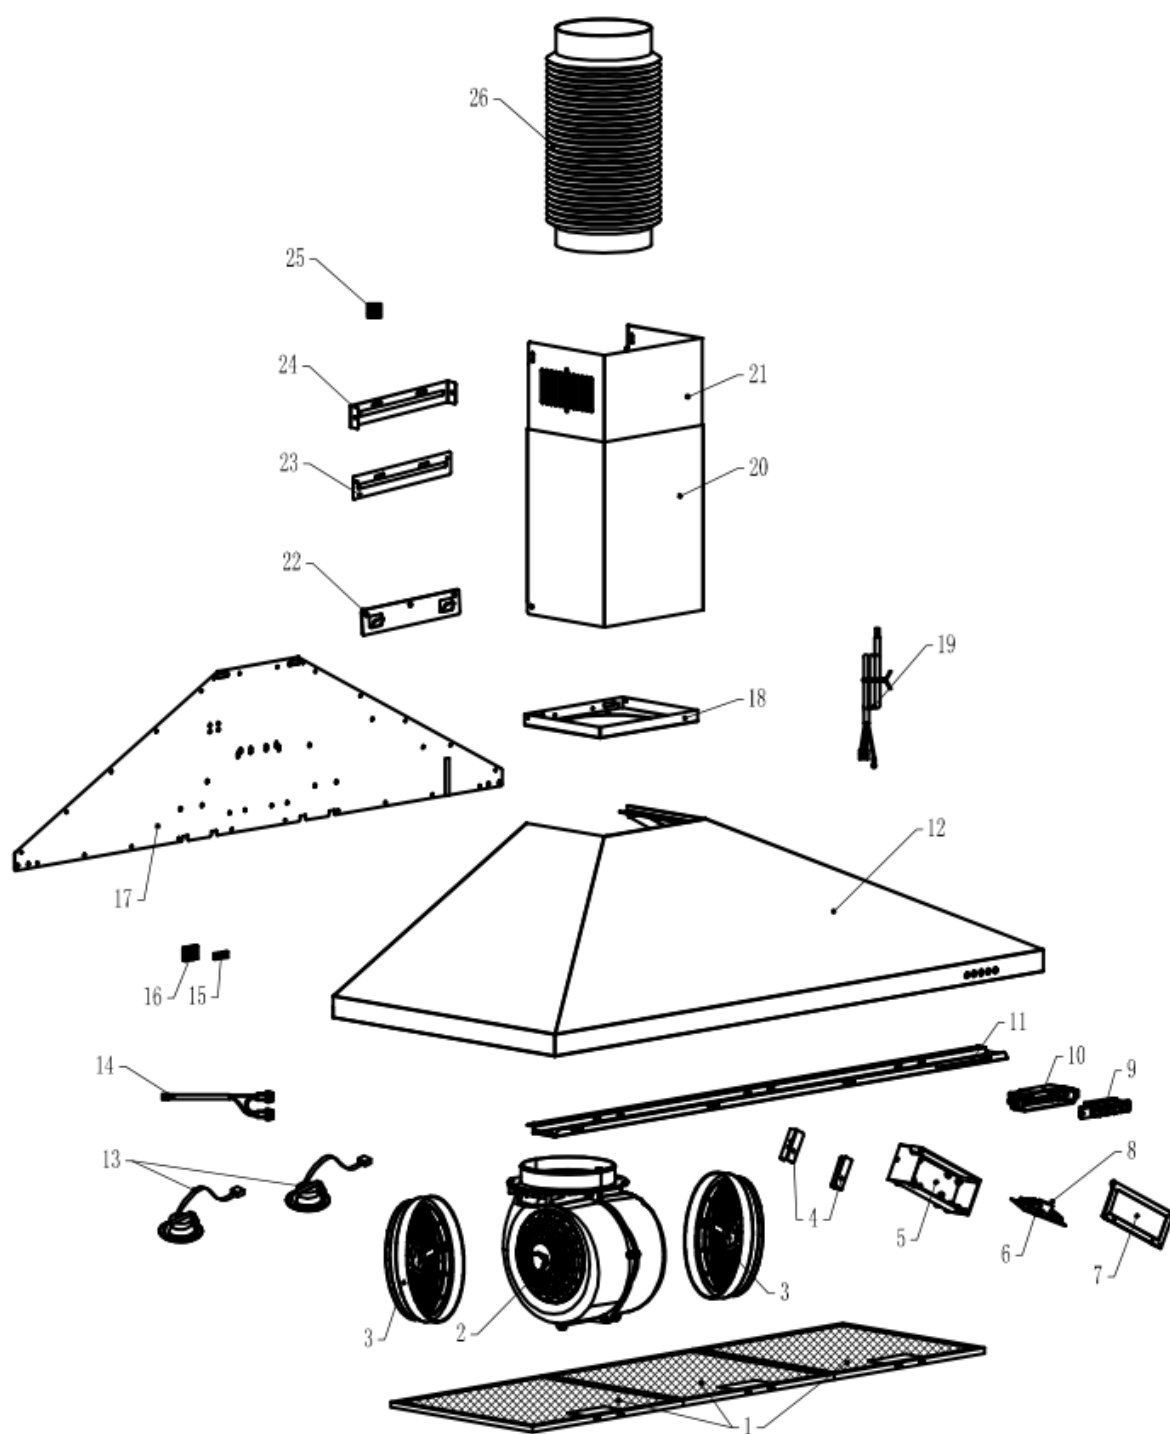

Parts List

ID No	Part Number	Part Description	QTY
26	1.04.07.0001	FLEXIBLE PIPE FOR OPTIONAL	1
25	2.03.13.0005	SCREW BAG	1
24	2.01.06.0109	INNER CHIMNEY BRACKET	1
23	2.01.06.0107	OUTER CHIMNEY BRACKET	1
22	1.09.01.0003	HOOK	1
21	1.08.11.0011	INNER CHIMNEY	1
20	1.08.11.0010	OUTER CHIMNEY	1
19	2.03.09.0054	POWER CORD ASSEMBLY (WITHOUT PLUG)	1
18	2.01.01.0010	TOP BOARD	1
17	2.03.01.0420	REAR BOARD	1
16	1.04.12.0004	CRIMPING SEAT	1
15	1.04.12.0005	CRIMPING BOARD	1
14	1.02.10.0002	LIGHT WIRE	1
13	1.01.03.0013	LED LIGHT	2
12	1.08.01.0189	HOUSING ASSEMBLY	1
11	1.08.04.0117	FRONT PANEL	1
10	1.04.04.0001	PUSH SWITCH BOX	1
9	1.01.07.0001	PUSH SWITCH	1
8	2.03.10.0004	CAPACITOR	1
7	1.04.03.0022	ELECTRICAL BOX COVER	1
6	1.01.01.0039	POWER BOARD	1
5	1.04.03.0021	ELECTRICAL BOX	1
4	2.01.06.0162	ELECTRICAL BOX HOLDER	2
3	1.11.01.0004	CARBON FILTER FOR OPTIONAL	2
2	2.03.06.0003	M3A MOTOR ASSEMBLY	1
1	1.03.12.0063	ALUMINIUM FILTER	3