


Cooker Hood
Model Number
UBSDVH60SS
Parts Manual

Exploded Drawing

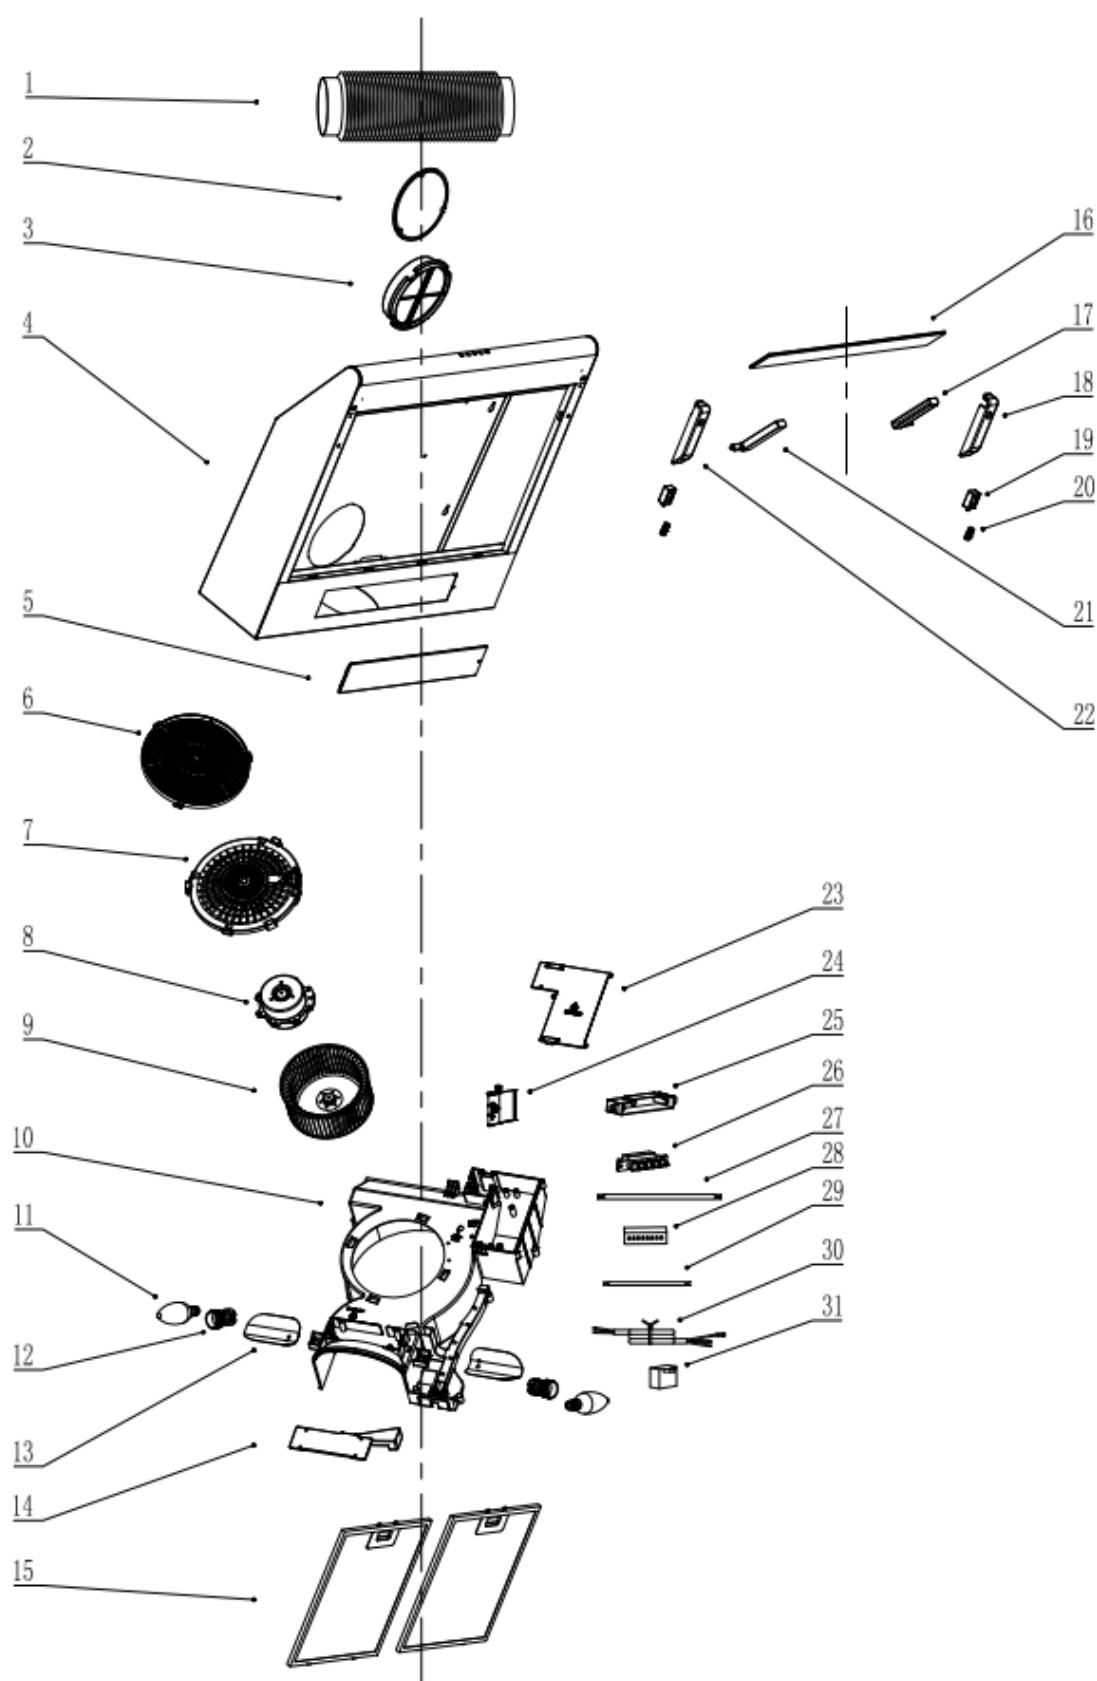

Parts List

ID No	Part Number	Part Description	Qty
31	1.01.02.0016	CAPACITOR	1
30	2.03.09.0059	POWER CORD ASSEMBLY (WITHOUT PLUG)	1
29	1.02.10.0033	LAMP WIRE	1
28	1.01.04.0001	TERMINAL	1
27	1.02.07.0008	PUSH SWITCH WIRE	1
26	1.01.07.0001	PUSH SWITCH	1
25	1.04.04.0024	PUSH SWITCH BOX	1
24	1.04.17.0022	WINDWARD PANELS	1
23	1.04.03.0032	ELECTRICAL BOX COVER	1
22	1.04.23.0005	LEFT GLASS BRACKET BASE	1
21	1.04.23.0001	LEFT GLASS BRACKET	1
20	1.03.17.0004	SPRING	2
19	1.04.18.0001	SLIDE BLOCK	2
18	1.04.23.0006	RIGHT GLASS BRACKET BASE	1
17	1.04.23.0002	RIGHT GLASS BRACKET	1
16	1.05.01.0015	GLASS	1
15	1.03.12.0090	ALUMNIUM FILTER	2
14	1.04.21.0009	LAMP BOX COVER	1
13	2.01.18.0010	INSULATOR BOARD	2
12	1.01.10.0003	LAMP HOLDER	2
11	1.01.03.0030	LED BULB	2
10	1.04.01.0018	PLASTIC BLOWER	1
9	1.04.02.0002	IMPELLER ASSEMBLY	1
8	2.03.08.0091	BLOWER ASSEMBLY	1
7	1.04.16.0009	MOTOR COVER	1
6	1.11.01.0007	CARBON FILTER	1
5	1.04.20.0001	LAMP COVER GLASS	1
4	2.03.01.0656	CASING ASSEMBLY	1
3	2.03.04.0004	OUTLET ASSEMBLY	1
2	1.04.10.0010	OUTLET COVER	1
1	1.04.07.0002	PIPE TUBE	1