


Cooker Hood

Model Number ICON60SS

Parts Manual

Exploded Drawing

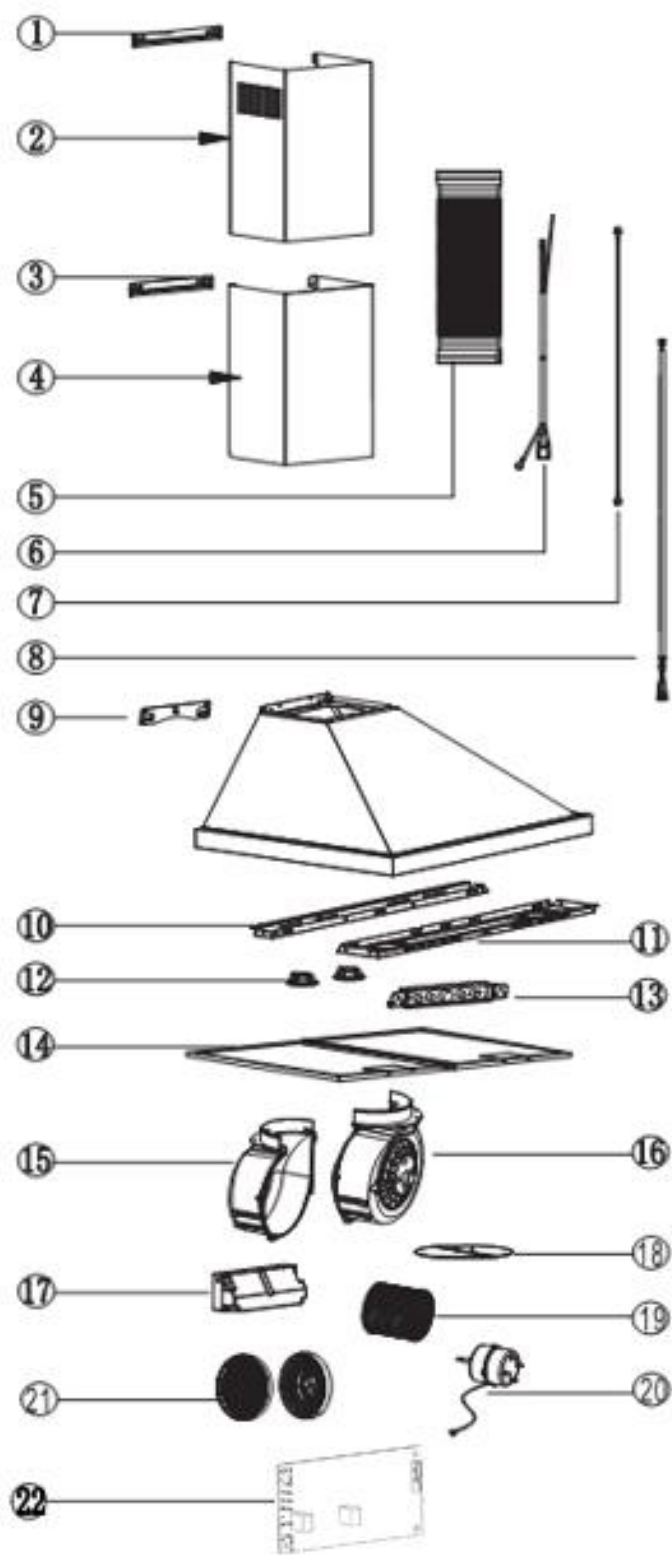

02			
01			
00			
Index	Modify description	Modified by	Date

Parts List

S/N	Ref.	Description	QTY	REMARK
1	B23-TD08-006-PX	TD INNER CHIMNEY BRACKET	1	
2	B20-TD08-008-PX	TD INNER CHIMNEY	1	
3	B23-TD08-005-PX	TD OUTER CHIMNEY BRACKET	1	
4	B20-TD08-007-PX	TD OUTER CHIMNEY	1	
5	B36-TT03-018-XG	Φ150 SMOKE TUBE	1	Optional
6	B67-TY04-005-XB	WIRE ONLY, WITHOUT PLUG	1	
7	B67-TY03-280-XX	SWITCH WIRE	1	
8	B67-TY03-266-XB	LIGHT WIRE	1	
9	B23-TG18-027-PX	WALL BRACKET	1	
10	B20-TD07-017-PX	FRONT DECORATIVE PLATE	1	
11	B20-TD08-037-PX	REAR LAMPSHADE	1	
12	B62-TY01-016-XX	LED LAMP	1	
13	B63-TY07-265-XX	SWITCH-T10	1	
14	B35-TG01-036-XX	5 LAYERS ALUMINIUM FILTER	2	
15	B30-TD01-017-JB	HOUSING D -LEFT PART	1	
16	B30-TV05-019-JB	HOUSING D -RIGHT PART	1	
17	B30-TG18-017-JB	ELECTRIC CONTROL BOX	1	
	B30-TG18-016-JB	ELECTRIC CONTROL BOX	1	
18	B30-TG18-015-JB	Φ150 VALVE	1	
19	B30-TT03-012-JB	FAN	1	
20	B61-TY02-029-XX	HOUSING D MOTOR	1	
21	B15-TF08-097-JB	CHARCOAL FILTER	2	Optional
22	B63-TY07-015-XX	PCB	1	