



REFRIGERATOR  
INSTRUCTION MANUAL

Model No: ART29303  
ART29305

 
To ensure proper use of this appliance and your safety, please read the instruction manual completely before operating this appliance.

## CONTENTS

Names of the parts .....	1
Safety warnings .....	2
Installation instructions .....	3
Operation instructions.....	3
Packing and moving.....	4
Maintenance.....	4
Defrost.....	5
Disconnecting the appliance.....	5
User notifications.....	5
Troubleshooting tips.....	6
Specifications and parameters.....	7
Packing list.....	8

- Thank for purchasing our products and thank you for placing your confidence in us.
- Please read this manual carefully before using. Follow instructions and keep it for future reference.
- Please follow the operating instructions and safety notices in the manual.
- If any trouble arise, do not fix it yourself or hand it to the after sales service center which has not been authorized. Please contact the local authorized service center.

## NAMES OF THE PARTS

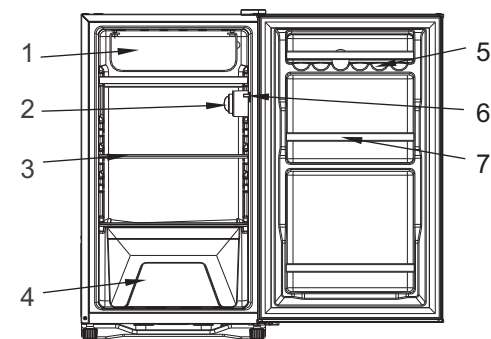


1. Ice-making compartment
2. Lamp and temperature control knob
3. Shelf
4. Vegetable crisper
5. Egg tray
6. Lamp switch
7. Rod

- The refrigerator you purchased may be improved, which maybe not completely consistent with the manual, However the functions and operating methods will not change. Please feel free to use!
- If you use the refrigerator for the first time, remove the adhesive tapes of the drawers, balconies, egg tray, and the drain tube plug.
- Do not pull or push the drawers and balconies fiercely during use in case of damage.
- Adjusted the temperature control as higher as you could accept, which will save the energy consumption of the refrigerator and your money;
- Don't open the refrigerator door continually if it is in the normal working situation.
- Keep the combination of drawers, baskets and shelves of the refrigerator is consistent with its original standard.


## INSTRUCTION FOR USAGE

 The temperature of refrigerator can be controlled manually by the knob. However, the number shown on the knob does not directly represent the temperature. Instead, the larger the number is, the lower the interior temperature will be. 0 stands for off. Turn the knob to state 4 when it is normal used, turn it to the state during 4-7 if a lower interior temperature is required; contrarily, to the state during 4-1, when a higher one is needed.

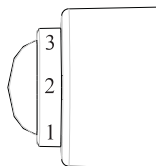

## PACKING AND MOVING

 1. Unpack , repack and carry  
Please memorize the position of each accessory of the appliance when unpack it, repack the product and check it carefully before transportation.
2. Do not lift or pull the door or the door handle during transportation.
3. When moving, the appliance can not be sloped over 45 degrees (the angle to the vertical direction). Please avoid strong vibration and hit.


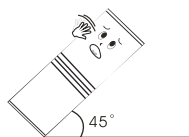


## MAINTENANCE


The appliance should be maintained and cleaned frequently. For your safety, do please pull the plug out of the socket before the cleaning.

1. Interior maintenance  
Clean the interior of the appliance with clean water or neutral abluent. Scour it with clean water and wipe it with a piece of dry cloth.
2. Maintenance of door gasket  
It is easy to damage if the door gaskets are polluted by the stain like oil, sauce and etc., so it is better to clean them carefully.
3. Outer maintenance  
Wipe the dusty with a piece of dry cloth ,clean it with neutral abluent if necessary.
4. The displacement of interior light  
Uninstall the cover and replace the light with a screwing light (E14 , 220V/10W), Consult the following pictures:

  - 1) Move the lampshade 3~5mm according to arrow point direction.
- 2) Take out the lamp shade.



 - 3) Rotate and take out the bulb in counterclockwise direction.



## DEFROST

The heavy frost will influence the refrigerating of the appliance and increase the energy consumption. Thus, defrosting is needed as the frost is as thick as 5 mm. Processes of the manual defrost are listed as following: take all the food out of the compartment; uninstall the drawers and shelves; unplug the electronic power cord; open the doors and wait for the thaw; wipe up the water with dry cloth.



Do not use any other equipment or method to push the defrost process. It may destroy the cooling system.

## DISCONNECTING THE APPLIANCE

After power failure, even in summer, the refrigerator can store food normally in several hours.

1. Discontinuation during power failure  
After power failure, do not put additional food in the appliance and reduce the frequency of door opening. Make several ices in a container if know the power failure beforehand, and put it in the top of the fridge.
2. Discontinuation during vacation  
Please fetch out the easy-rot food and the food in fridge before shot vacation. After confirmation, close the door firmly. If have a long vacation, please fetch out all the food and cut off the power. After defrosting, clean up the liner of the appliance and wipe it dry, and leave the door open.
3. Stop using  
If the refrigerator may be stopped using for a long time, please unplug the outlet and clean up the appliance. The door should be kept open in order to prevent unpleasant smell caused by food leavings.



Attention

In a general condition, do not stop the appliance in case of affecting its life. After unplugging the power, please leave at least 5 minutes before resumption.

## USER NOTIFICATIONS

1. Do not splash water on the refrigerator, as it will cause oxidation and malfunction. Electronic component such as on/off button should be wiped dryly.
2. Cleansers such as soap powder, abrasive cleaning powder, alkali cleansers, chemical cloth, thinner, alcohol, acid petroleum product and hot water should not be used to clean the refrigerator as they may damage the painted cover and plastics.
3. Smear can damage the interior plastic component, so wipe it as soon as possible.

4. Please check the points below after maintenance:
  - (1) Is there any damage or loss of the electronic wire ?
  - (2) Can the plug be put in the socket reliably and smoothly?
  - (3) Is the plug heating unconventionally?



**Warning** Please get rid of the gasket of the door before the disposal. The disposed apparatus should be handled by professional staff, as it may be harmful to the environment.

## TROUBLESHOOTING TIPS

1. The refrigerator does not work  
It may not be connected to the power supply(plug, power cut or fuse); Voltage is too low.
2. The refrigerator does not work efficiently as expected  
It may be caused by heavy frost, or by warm temperature setting, or by frequently door operating.
3. It makes unusual noise  
It may be caused by an imbalance or loose ground locating the appliance, or by resonation between the appliance and other ambient objects.
4. The compressor keeps working for a long period  
The environment temperature may be too high. The doors may be opened frequently or even they are left open. The temperature control knob setting in (4-7) state may increase the working time of compressor.
5. Disgusting odour happens  
Food with strong odour should be packed tightly before being put inside the appliance. Please check whether there is any deteriorated item or whether the liners are left dirty for a long time.
6. Water leaks from the bottom of the refrigerator  
The drain tube is jammed. Please use a proper tool to solve it.
7. Heavy frost occurs on the rear of the appliance  
Putting humid or hot food into the appliance may cause this problem. Or it may be caused by the heavy environment moisture.

### The follow cases are not malfunction

1. Moisture may form dew on the outside of the product during the humid season, remove the moisture with a dry cloth.
2. The flow of refrigerant through the pipeline coil can cause a bicker.
3. It is normal that the sides of product get warm as a result of the cooling pipeline working.

4. The frame of the appliance will be warm during working by the defrost pipeline inside it.

**Please check the points above first.**

**If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**

## SPECIFICATIONS AND PARAMETERS

Climate class		SN/N/ST
Electric shock protection type		I
Capacity (L)	Freezer	\
	Refrigerator	97
Voltage (V)		220-240
Frequency (Hz)		50
Current (A)		0.75
Voice [dB(A)]		≤ 42
Energy consumption (kW.h/24h)		0.30
Refrigerant		R600a/25g
Weight (Kg)		23.5
Interior temperature (°C)	Freezer	\
	Refrigerator	0~8
Dimension (mm)	Width	486
	Depth	536
	Height	835

## SAFETY WARNINGS

For ensure your personal safety, please follow the points below:

1. The circuitry for refrigerator must be isolated. The area of cross section of wire must be larger than  $0.75\text{mm}^2$ . The power plug should have its own socket, the socket must be ground as adapter may cause the socket to overheat.
2. The voltage and frequency of this product should be 220-240V;50Hz. Contact the service department or the retailer if the mains cable is damaged.
3. Do stop the power only by pulling the power plug out of the socket directly but not by the wire.
4. Do not damage the refrigerant circuit.
5. This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Keep ventilation opening, in the appliance enclosure or in the built in structure, clear of obstruction.
8. Before you throw away your old refrigerator or freezer.
  - Take off the doors;
  - Leave the shelves in place so that children may not easily climb inside.
9. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. This appliance is intended for domestic household use only.
10. Do not use electrical appliance inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacture.
11. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## NOTICE:

1. When gas leaks from its container, don't pull the plug, out or in, for it may arouse sparks and fire calamities.
2. Don't splash water on the rear of the appliance, for it may cause malfunction or electric shock.
3. Don't stor inflammabe materials such as ether, benzene, LP gas and glue etc in the refrigerator.

4. It is better not place object on the top of appliance which is magnetic, heavy, or be filled with water. Electronic components may not work steadily if water gets inside. Do not store object which is costly or impressible to temperature and , e.g. serum, bacterin and so on.

 
 
5. The refrigerant of this product is R600a, which is inflammable. So, make sure not to damage the cooling system during the transportation and installation.

6. DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



## INSTALLATION INSTRUCTIONS

1. The refrigerator should be located in a completely flat surface, Leave 5~10 cm between each side of the appliance and the wall, and leave 30 cm between the top of the appliance and the ceiling.
2. Choose a location which is not exposed to sunlight, high temperature or humid, as humidity may cause stain.
3. Pulled out the bottom panel before installation.
4. The appliance can be adjusted by rolling its two legs in front the bottom when it is unstable. Rolling in clockwise can rise up the machine.
5. The location should be firm and flat. An un-securely position may cause noise and vibration:
  - (a) The noise may be increased if the floor is not firm.
  - (b) Put a sheet under the appliance for solving the heat emission if you need to locate it onto a carpet.
6. Make sure the adjustable legs are clung to the floor, and set the appliance slope backward slightly for keeping the doors closed tightly.

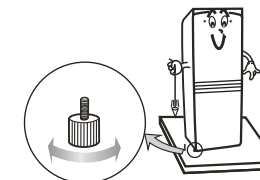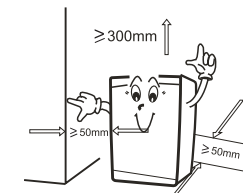

## OPERATION INSTRUCTIONS

### PLACEMENT OF FOOD

1. There should always be some space between items inside for air circulation.
2. Food should be kept in sealed package to avoid becoming dry or with odour.
3. Hot food should be cooled down before placing into the appliance. Otherwise, interior temperature and electronic consumption will increase.
4. Reduce the frequency of door opening can efficiently low down the electronic consumption.



Warning Do not use any electronic equipment inside the appliance.

## PACKING LIST

---

Parts	Number
Vagetable crisper	1pcs
Shelf	2pcs
Rod	3pcs
Owner's manual	1copy

**Note:** Products are subject to improve from time to time, any changes in parts without further notice.

# GUARANTEE

---

This appliance is covered by a full manufacturer's 2 year parts and 2 year labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by Apelson Appliances UK Ltd then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at Apelson Appliances UK Ltd sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the Apelson Appliances UK Ltd guarantee will be valid and any further call outs during this prescribed period will be covered by Apelson Appliances UK Ltd on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland and Ireland but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product.

The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

## EXTENDED PARTS ONLY WARRANTY

As testimony to our commitment to you as a valued customer of Apelson Appliances UK Ltd, we will offer you an additional 3 years parts warranty absolutely free.

If during the extended parts warranty period the

appliance fails and it is considered uneconomical to repair our Customer Service Department will offer you the opportunity to purchase the same or equivalent model at a discounted price.

All parts supplied free of charge under the extended warranty must be fitted by our approved engineers and will be subject to a call out charge to fit the part.

## EXCLUSIONS TO THE GUARANTEE

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - Apelson Appliances UK Ltd will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then Apelson Appliances UK Ltd reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

This guarantee is offered by Apelson Appliances UK Ltd

Unit 3 Normandy Landings, Pope Street, Castleford, WF6 2AG

## **Customer Service**

To arrange an in guarantee service call, please contact customer services on the following numbers.

**UK and N.Ireland – myappliances Customer Care Centre**  
**T: 0344 8001128 E: [enquiries@myappliances.co.uk](mailto:enquiries@myappliances.co.uk)**  
**[www.myspareparts.co.uk](http://www.myspareparts.co.uk)**

**Republic of Ireland (ROI) – myappliances Customer Care Centre**  
**T: 1-800 535542 E: [enquiries@myappliances.co.uk](mailto:enquiries@myappliances.co.uk)**

**In more detail...**





---

MYAPPLIANCES  
Unit 3 Normandy Landings,  
3 Pope Street  
NORMANTON  
West Yorkshire  
WF6 2AG

---