


# COOKE™ &LEWIS

## Built under freezer

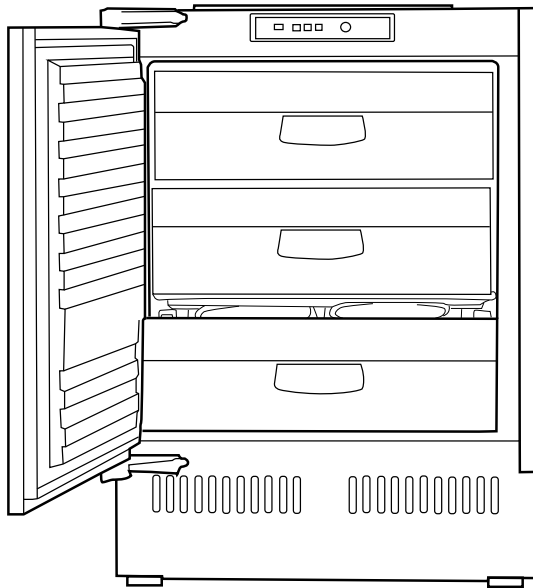


BFZ60CL - Version: 01




Built under freezer - Barcode: 5052931258505




**WARNING:** Read the instructions before using the appliance.

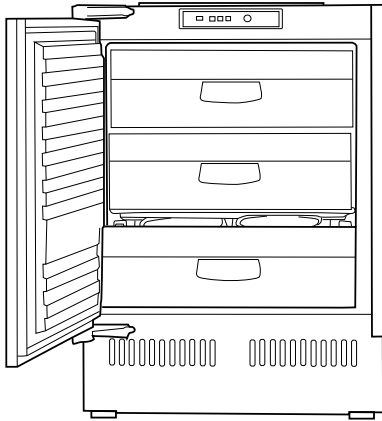


[01] x 1

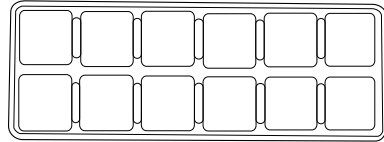


[02] x 1

 

[03] x 2

 

[04] x 2

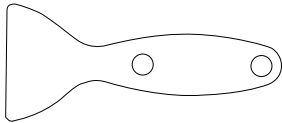

[05] x 1



[06] x 2

 
1 : 1



[07] x 27 (3 x 12mm)  
(2 for spare use)






[08] x 4 (4 x 18mm)



[09] x 2 (5 x 16mm)


# Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

	<b>Getting started...</b>	<b>04</b>
	<b>Your product</b>	04
	<b>Before you start</b>	05
	<b>Safety</b>	06
	<b>In more detail...</b>	<b>09</b>
	<b>Operation</b>	09
	<b>Care and maintenance</b>	15
	<b>Troubleshooting</b>	16
	<b>Recycling and disposal</b>	18
	<b>Technical and legal information</b>	18
	<b>Guarantee</b>	19
	<b>CE Declaration of conformity</b>	21
	<b>Appendix...</b>	
	<b>Installation</b>	<b>22</b>

## Your product

01. Thermostat control dial
02. Frozen food drawers
03. Ventilation grills
04. Leveling feet
05. Ice scraper

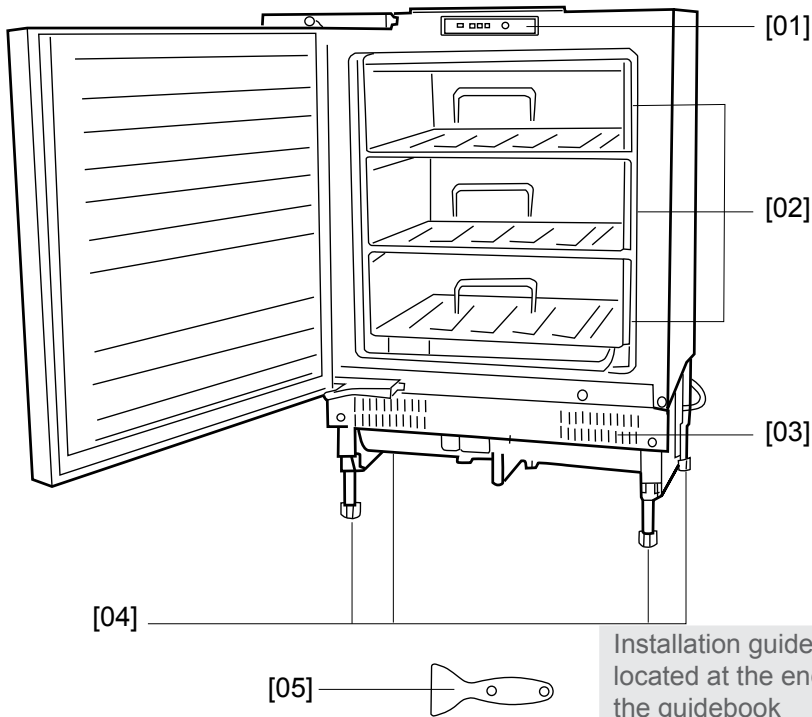**Thermostat control dial**

- Allows you to adjust the internal temperature of the appliance.

**Frozen food drawers**

- Pull out drawers for storage and easy access to frozen food.


**Note**

It is important that none of the drawers are over loaded. Over loading can break the drawers and reduce the appliances performance due to poor air circulation

## Things to check before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK) and 01 4475261 (Ireland).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specification plate located on the appliance displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you pass on this manual so that the new owner can become familiar with the appliance and its safety warnings

## You will need

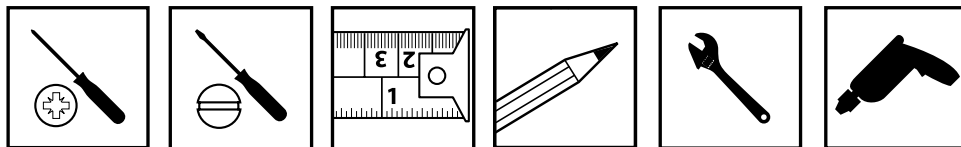

**These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.**



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- Your appliance is only designed to be used in the home. It is suitable for freezing and storing frozen food. If it is used for any other purpose or it is not used correctly, then manufacturer will accept no liability for any damage that might be caused.
- Altering the specification of the appliance must not be attempted for reasons of safety.
- Check the appliance for any signs of transport damage. If you notice any damage, then you should not connect your appliance to your mains supply and should contact your supplier.
- Your appliance contains R600a refrigerant, which is a natural gas that does not contain CFCs that can damage the environment. However it is a flammable substance, therefore care should be taken:

- During the transportation and installation of the appliance, make sure that the refrigeration pipework does not get damaged.
- If it does become damaged then sources of ignition and open flames should be avoided. Also the room that the appliance is situated in should be thoroughly ventilated.
- ☑ Do not place any objects on top of the appliance, as this may damage the table top.
- ☑ Packaging material should be kept away from children.
- ☑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ☑ Do not pull on the power supply cable to remove the plug from your mains supply socket.
- ☑ Do not pull out or insert the plug with wet hands.

- ✓ Do not attempt to use your appliance outdoors or any place where it is likely to come into contact with the elements.
- ✓ Before cleaning the appliance or performing maintenance work, ensure that the appliance has been disconnected from your mains supply.
- ✓ Never allow the back coils of the appliance to come into contact with the wall surface.
- ✓ Always ensure that the location where you are installing your appliance is free of stored items such as papers and other flammable materials.
- ✓ Never block the ventilation openings of the appliance, either on the inside or its exterior.
- ✓ It is vital to keep your appliance well ventilated, so that there is proper air flow between the bottom of the unit and the plinth/kick plate which it is sitting on.
- ✓ Do not place electrical devices inside of the appliance, such as mixers and electric ice cream makers.

## Service

You should not attempt to repair the appliance yourself, as this could cause injury or a more serious malfunction. If you require a service call then please contact Customer Services on 0844 800 1128 (UK), 014475261 (Ireland).

## Product functions


### Before switching on

- Make sure that it has been installed by a suitably qualified person, as per the information contained in installation instructions.
- After delivery, wait for eight hours before connecting the appliance to your mains supply. This will allow any refrigerant gasses that may have been disturbed during the transportation process to settle.
- The outside of the appliance and the removable accessories contained within it, should be cleaned with a solution of liquid detergent and water.
- The interior of the appliance should be cleaned with a solution of sodium bicarbonate dissolved in lukewarm water. The interior and accessories should be thoroughly dried, after the cleaning process has been completed.
- There can be an odour when you first switch on the appliance. It will lessen as the appliance starts to cool.

### Before first use

- You should set the thermostat dial to its maximum setting for 24 hours after switching on the appliance for the first time.
- When you first switch on the appliance, the compressor will run continuously until the freezer reaches a cool enough temperature.
- During this period of time, you should try not to open the door frequently or place a large amount of food within the appliance.
- You should then adjust the thermostat dial down to its normal operating position.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the appliance..

### Switching on the appliance and setting the thermostat

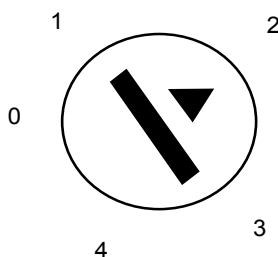

You switch on your appliance by connecting it to your mains supply and setting the thermostat. The thermostat control knob is located at the top of the appliance.

## Product functions

- The thermostat automatically regulates the temperature inside the freezer, depending on what number you have turned the thermostat control knob to:

**Position <0>** means that the appliance is off and all indicator lights are off.

**Position <1>** provides highest temperature inside the freezer.

**Position <4>** provides lowest temperature inside the freezer.

Ideally the thermostat should be set to a position between <2> to <3>.

The freezer can cool down to -18°C and lower.


### Note



The ambient temperature of the room, the temperature of food and the amount of food that has been placed in the appliance and how often the door is opened, will all affect the temperature being maintained by the appliance.

- On the maximum setting (position <4>), your freezer will work harder to maintain a lower temperature. There is no need to run your appliance on this setting for prolonged periods and you should return the thermostat knob to between <2> to <3>.

## Control panel

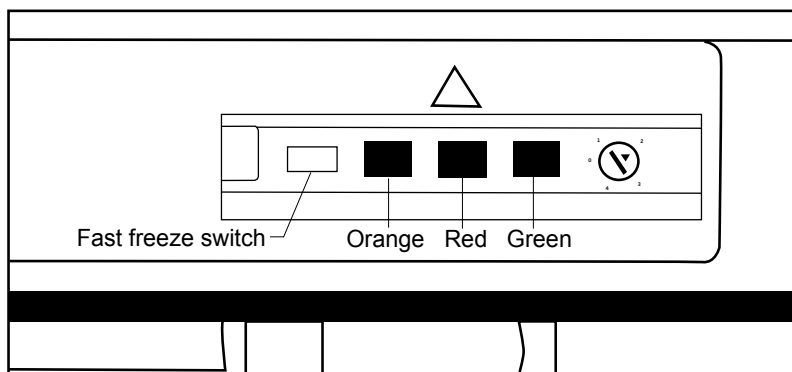

- **Fast freeze light (Orange)** - will light up when the fast freeze switch has been activated.
- **Temperature rise warning light (Red)** - will light up when the appliance detects a rise in temperature that could affect the contents of your freezer.
- **Power light (Green)** - will light up as soon as the appliance is connected to your mains supply.

## The freezer compartment



### Note

The freezer compartment is suitable for storing and freezing food.

- The freezer compartment temperature must have already reached  $-18^{\circ}\text{C}$  (or lower) before you attempt to store food that is already frozen or freezing fresh food.
- The freezer compartment is only able to freeze a certain quantity of food at one time. You should not attempt to freeze more than 9 kilograms of fresh food within a 24 hour period.
- Warm food should be allowed to cool down before you attempt to freeze it. If you place warm food in the freezer, then the increased humidity will cause quicker ice formation and increase the amount of power that the appliance uses.
- The guidance of the food manufacturer should be followed, in regard to the maximum storage time.
- Thawed foods must not be frozen for a second time.

## The freezer compartment

### Freezing fresh food

- To freeze the maximum quantity of fresh food specified on previous page, you should turn the thermostat knob to position <4>, 24 hours prior to attempting freezing.
- For smaller quantities of fresh food, you should turn the thermostat knob to position <4>, approximately 6 hours prior to attempting freezing.
- Alternatively you can use the fast freeze option (See *Freezing with fast freeze* section).
- Fresh food should be packed into airtight containers or packaging. This will help to make sure that the food doesn't dry out or lose its flavour. It will also ensure that flavour does not transfer to/from other foods.
- Do not allow fresh food to touch items that are already frozen.
- After 24 hours you should check that the fresh food is satisfactorily frozen. If it is then the thermostat should be turned down to its normal setting (between <3> and <4>).

### Tips on freezing

- Freezer bags, polythene wraps, aluminium foil (extra thick) and special cans for frozen foods are suitable packaging for storing frozen goods in.
- Tape, rubber bands or plastic clips are suitable for sealing bags and wrappings.
- Before sealing a suitable bag, you should compress the air out of it, as this will help the food to freeze more easily.
- Flat packages freeze more easily.
- If you are freezing liquid, then do not fill the container to the brim. Liquids will expand when being frozen.


#### Note




Do not place bottles (glass or tin) containing liquids (especially sparkling liquids) into the freezer as they could cause the bottle to burst during freezing.

## Making ice cubes

- Fill an ice cube tray with water and place it in the freezer compartment.
- After the water is completely frozen and turned to ice, you can twist the ice cube tray (as shown in the drawing below) to dispense the ice.

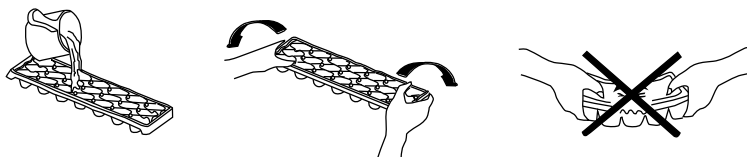

## Freezing with fast freeze

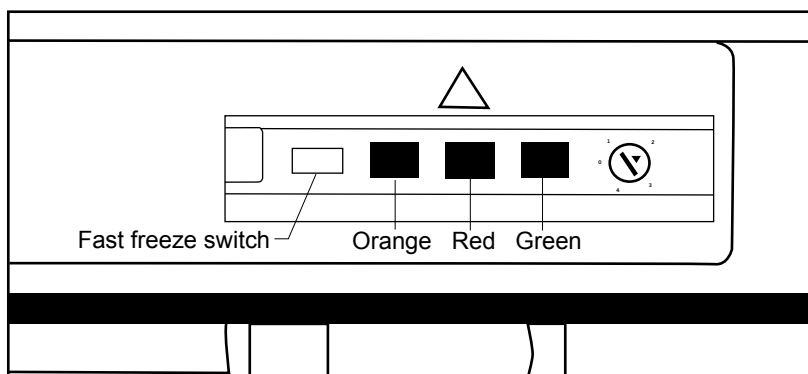

- Press the fast freeze switch and the freezer will start to run continuously at its maximum setting.
- The orange fast freeze light will come on when the fast freeze setting has been switched on. There is no need to adjust the thermostat knob.
- The freezer temperature will decrease and the appliance will get to its lowest temperature.
- Place the food that is to be frozen inside the freezer.
- Once the food is frozen, you should switch off the fast freeze setting.



### Note

Do not switch off the fast freeze setting until the food is fully frozen.

- The orange fast freeze light is off and your appliance will return to normal operation when the fast freeze function is off.



### Note

Do not leave the appliance running in fast freeze mode for longer than 24 hours at a time.

## Saving energy when using your freezer

---

### Installing

- Install the appliance in a cool position. If it is placed in direct sunlight or next to an oven or other heat source, the energy consumption can increase substantially.
- Ensure the appliance is installed with the correct ventilation requirements. Restricting ventilation can increase the energy consumption by 15%.

### Cleaning and maintenance

- Defrost the appliance regularly. A build up of thick ice decreases the efficiency of the appliance. You should defrost whenever the frost reaches 5mm thickness.
- Clean the door gasket with warm water or a neutral detergent that leaves no residue. A tight-sealing door gasket is critical to the efficiency of your appliance.

### Usage

- Do not open the door repeatedly or more frequently than you have to.
- Do not set the thermostat too low. A change of just one degree can effect the energy consumption by 5%. Use a thermometer to check the temperature.
- The freezer should operate at -15 to -18°C.
- Allow food to sufficiently cool before putting it in the appliance (but don't let it sit at room temperature for too long).
- In the freezer, food packages should be scattered and never grouped or stacked together until they are completely frozen.
- If you are going away for a long period of time, turn off the appliance, empty and clean it and leave the door ajar.
- If you have a second appliance that is not used, make sure that it is stored with the power off and the door left ajar until it is actually required.

### Disposal

- If you're going to throw out your old freezer, see if there's a chlorofluorocarbons (CFCs) recycler in your area. The government department which looks after the environment in your area may be able to help you.

## Care and maintenance



### Warning:

Please ensure that your appliance is disconnected from your mains supply before attempting to clean it.

- Do not clean the appliance by pouring water onto it or spraying water over it.
- The freezer compartment should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.
- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.
- Do not use abrasive products, detergents or soaps.
- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.
- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

### Defrosting the freezer compartment

The frost in the freezer compartment should be removed periodically. You can use a plastic scraper to keep down the amount of frost that builds.



### Note

The freezer should be defrosted at least twice a year. The number of times that you need to defrost it, will depend on the setting of your thermostat and how much food you freeze and store in the freezer.

- The day before you defrost, turn the thermostat dial to position <4>, this will make sure that the food contained in the freezer is frozen properly.
- Whilst defrosting the appliance, the food should be removed from the freezer and wrapped in several layers of paper and stored in a cool place. The foods rise in temperature will shorten its storage life and therefore the food should be used within a relatively short period of time.



### Note

Do not place food back in the freezer once it has started to thaw.

- Set the thermostat knob to position <0> and disconnect the appliance from your mains supply.
- Leave the door to the freezer open. You can place a bowl of warm water inside the freezer to speed up the defrost process.
- You can use a sponge to mop up the defrost water that will run into the bottom of the freezer.

## Care and maintenance

### Note



You should place some old towels on the flooring that is immediately in front of the appliance. In case any defrost water comes out of the freezer and onto the floor.

Once all the ice that has built up has melted, then the inside of the freezer should be dried thoroughly. Failure to do this will result in immediate ice build when the appliance is switched back on.

- With dry hands, reconnect your appliance to your mains supply. Set the thermostat knob to position <4> for a 24 hour period, before returning it to the normal setting of between <2> and <3>.

### Note



Do not defrost the appliance with other electrical devices (e.g. hair dryer). Do not use sharp metal objects to remove the ice on the freezer, as this could cause damage to the refrigerant system.

## Troubleshooting

### Note



If your freezer appears not to be operating properly, before contacting the Customer Services, please refer to the checklist below.

### **My freezer does not appear to be working/there is no power to my appliance**

- Check that the plug is fully inserted into the power socket.
- Check that there is power to your mains supply (e.g. that there hasn't been a power cut or that the fuse hasn't blown).
- Check that the thermostat inside the appliance has not been turned to the <0> position.
- Check that your mains supply voltage, corresponds to the voltage stated on the rating plate of your appliance.

### **My freezer appears to be performing poorly**

- Check that the appliance isn't overloaded and that food hasn't been packed too tightly into it.
- The thermostat setting is too low; you should turn the thermostat up higher.
- Ensure that the door is closing properly and that the door has not been opened for a prolonged period in error.
- Ensure that there is adequate ventilation for your appliance.

## Troubleshooting

### Ice is forming quickly inside my freezer

- Check that the door is closing properly and that the door seal is not crushed, twisted or torn.

#### Note



If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact Customer Services on 0844 800 1128 (UK), 014475261 (Ireland).



#### Warning:

Do not attempt to repair the appliance yourself.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

**The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.**

**This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by manufacturer has been completed.**

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance.

## Recycling and disposal

### Technical and legal information

BFZ60CL Built under freezer

## Recycling and disposal

### Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

## Technical specifications

Supply voltage	220-240V~, 50Hz
Rated current	0.5A
Dimensions (W x D x H)	596x550x818-868mm
Max. power consumption	100W
Net weight	32kg
Gross capacity	108 litres
Net capacity	97 litres
Energy class	A+

## Guarantee

---

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

### **Exclusions to the guarantee**

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

## Guarantee

---

### **Exclusions to the guarantee (continued)**

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

### **This Guarantee does not affect your statutory rights.**

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,  
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

### **Customer Service**

To arrange an in guarantee service call, please contact customer services on the following numbers.

#### **UK & Northern Ireland**

**Phone: 0844 800 1128**


**Email: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)**

**Web: [www.myspareparts.co.uk](http://www.myspareparts.co.uk)**

#### **Republic of Ireland (Eire)**

**Phone: 014475261**


## CE Declaration of Conformity

<b>MANUFACTURER: CATA</b>		
<b>ADDRESS:</b>	<b>C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)</b>	
We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions		
<b>MACHINE APPLICATION:</b>	<b>BFZ60CL</b>	
<b>TYPE:</b>	Built under freezer	
<b>EC DIRECTIVES APPLIED:</b>	Comply with the European Directives 2006/95/CE: LVD and the 2004/108/CE: EMC	
<b>APPLIED HARMONIZED STANDARDS:</b>		
Standard EN 60335-1 Safety of household and similar electrical appliances		
<b>APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:</b>		<b>ISO9001.2008</b>
<b>PLACE: Torelló</b>		David Sala _____ Technical Manager

This appliance respects laws of the suppression of radiointerference.  
As the Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

**B&Q plc,**  
Chandlers Ford, Hants,  
SO53 3LE United Kingdom  
[www.diy.com](http://www.diy.com)

01

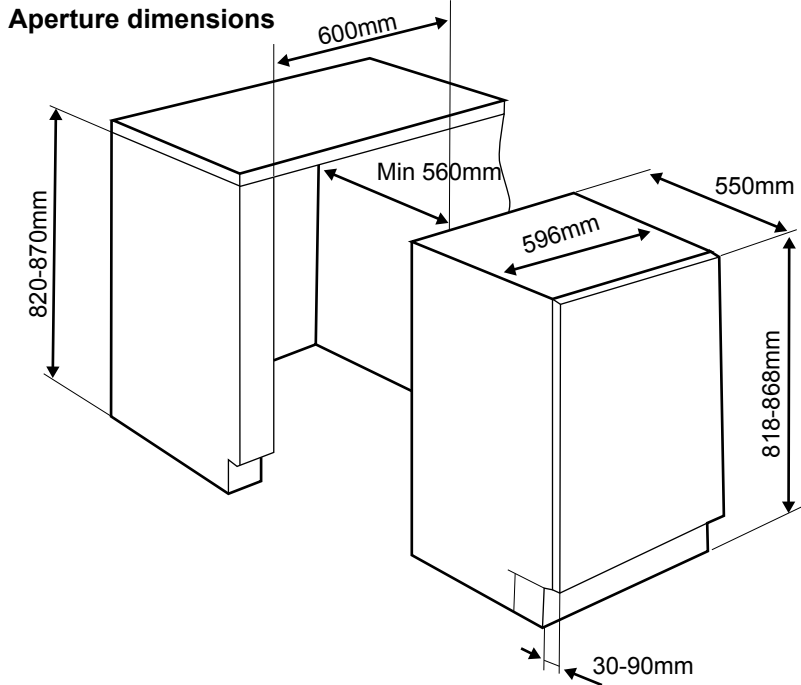

The appliance must be placed on a level floor. You can use the leveling feet to take into account any minor unevenness in the floor.

**Dimensions of appliance**

Height: 818-868mm

Width: 596mm

Depth: 550mm

**Dimensions of aperture\***

Height: 820-870mm

Width: 600mm

Depth: 560mm (min)

\* Please refer to the installation instructions for more specific information on the size of aperture that you will require.



**Warning:**

Do not damage the refrigerant circuit.



**Note**

When you install your appliance it is important to bear in mind its climatic rating.

In order to find out the climatic rating of your appliance, you should check the rating plate. The rating plate is located on the front left edge of the inside of the fridge. You will need to open the door of your appliance to be able to find it.

The rating plate will indicate the ambient temperature range that your appliance will function correctly within.



### Warning:

Before installation and usage read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found on the front left edge of the inside of the freezer.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

## Electrical connection



### Warning:

To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.



### Note

Your freezer is intended for fitted and permanent installation.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

- Your freezer comes supplied with a 13 amp plug fitted. If in future you need to change the fuse in this plug, then a 13 amp ASTA approved (BS 1362) fuse **must** be used.

The wiring in the mains lead is coloured as follows:

<b>Brown</b>	Live
<b>Blue</b>	Neutral
<b>Green and yellow</b>	Earth

- As the colours of the wires in the appliance's mains lead may not correspond with the coloured markings identifying the terminals in your spur box, please proceed as follows:

The **brown wire** must be connected to the terminal marked "L" (live), or coloured **red**.

The **blue wire** must be connected to the terminal marked "N" (neutral), or coloured **black**.

The **green and yellow wire** must be connected to the terminal marked "E" (earth), or by the earth symbol, or coloured **green and yellow**.

- When the connection is completed, no stray strands or cut wire should be present. The cord clamp must be secured over the outer sheath.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## Positioning

---

It is advisable that your appliance is only installed in a location where the ambient temperature of the room, corresponds with the climate classification that is stated on the rating plate of your appliance. Your appliance may not function correctly if the ambient temperature falls outside of the following ranges.

Climate classification	Appropriate ambient temperature
SN	+10 to +32 degrees centigrade
N	+16 to +32 degrees centigrade
ST	+16 to +38 degrees centigrade

- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler). The door should be able to open completely and freely.
- The appliance should be situated so you can easily access the food that is stored in it.
- You should check whether there is an electrical socket available, which will be accessible after your appliance is installed.

## Reversing the door


---

- This procedure **MUST** be completed before the furniture door is attached.
- Any parts that you remove from the appliance whilst reversing the door, should be retained for later use.



**Warning:**

Take care when opening the hinges, they are sprung loaded and there is the risk of injury if they close on your hand.

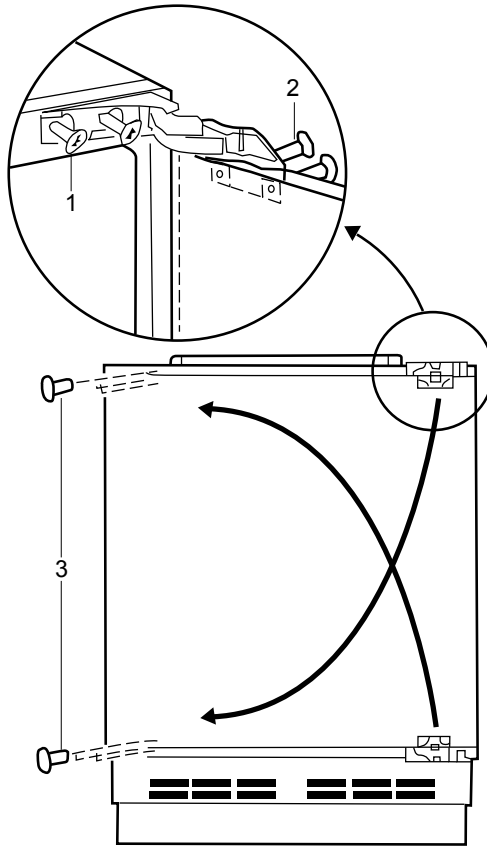

1. Slacken the retaining screws **(1)** on the appliance and then carefully remove the appliance door.
2. Place the appliance door on a cushioned surface, so that damage does not occur to it.
3. Lever off the cover caps **(3)**.
4. Insert the retaining screws **(1)** into the opposite side of the appliance from their original position. These screws should be partially tightened but not fully tightened.
5. Remove the door retaining screws **(2)** and then reverse the position of the top and bottom hinge (as shown in above diagram).
6. Reattach the appliance door and then fully re-tighten the retaining screws **(1)** and the door retaining screws **(2)**.
7. Insert the cover caps **(3)** into the holes that are now exposed on the right hand side of the cabinet.

### Note



Check that the door opens and shuts correctly, without fouling, after you have completed the door reversal process. After the door has been reversed, you should check the door seal of the appliance. The seal should not be creased or crushed; otherwise there will be a gap between it and the inside of the door.

- The seal must adhere properly all the way around the door.
- If the seal is not adhering to the cabinet properly, then you should either:

Use a warm damp cloth and manipulate the seal until it does adhere to the cabinet properly, all the way around the door.


### Note



Do not heat the door seal on anything but the lowest heat setting, or heat the seal for a long period of time. Otherwise damage may be caused to the door seal, which would not be rectified under the guarantee free of charge.


## 03

### Adjusting the plinth/kickboard

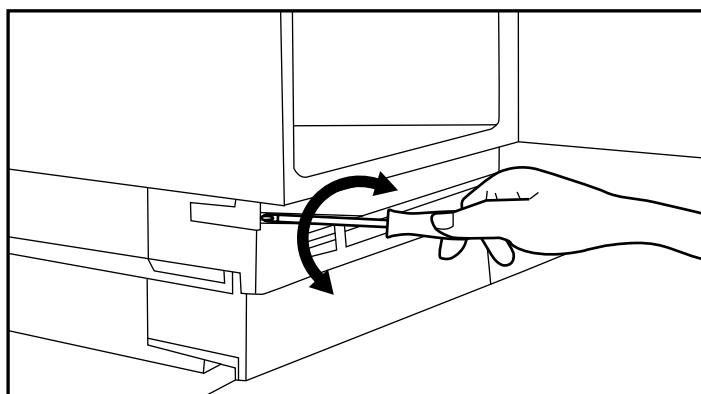

When the appliance has been placed underneath the worktop, you may decide to attach a plinth or kickboard to match your existing kitchen units.

Remove the grill on the base of the appliance by unscrewing the screws on each side of the grill and then pull the grill towards you.

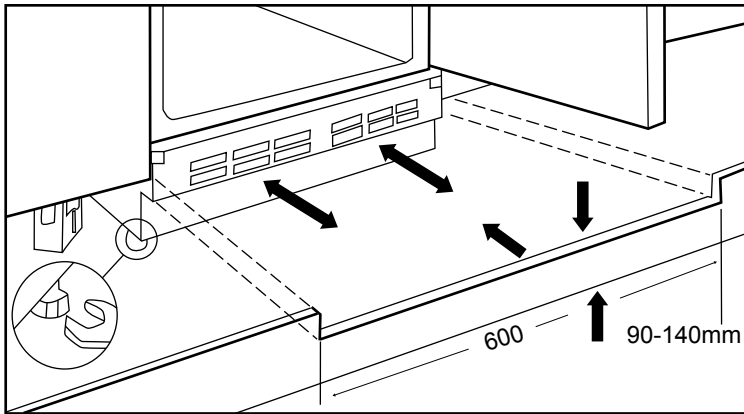

- Use a spanner to adjust the height of the adjustable feet.
- Adjust the feet to suit the height of the aperture, if additional height is required use packing blocks underneath the feet.
- The appliance should be flush with the underside of the worktop and be level.



### Note


If the appliance is not level, then the door and door seal may be affected.

- A cut out must be made in the plinth/kickboard for ventilation. The cut out should measure 600mm in width and 90-140mm in height.
- Insert the plinth/kickboard and then refit the grill in its original position to hold it in place.



### Note

Please note that as shown in the above drawing, an appropriately sized ventilation cut **MUST** be made in the furniture plinth/kickboard.

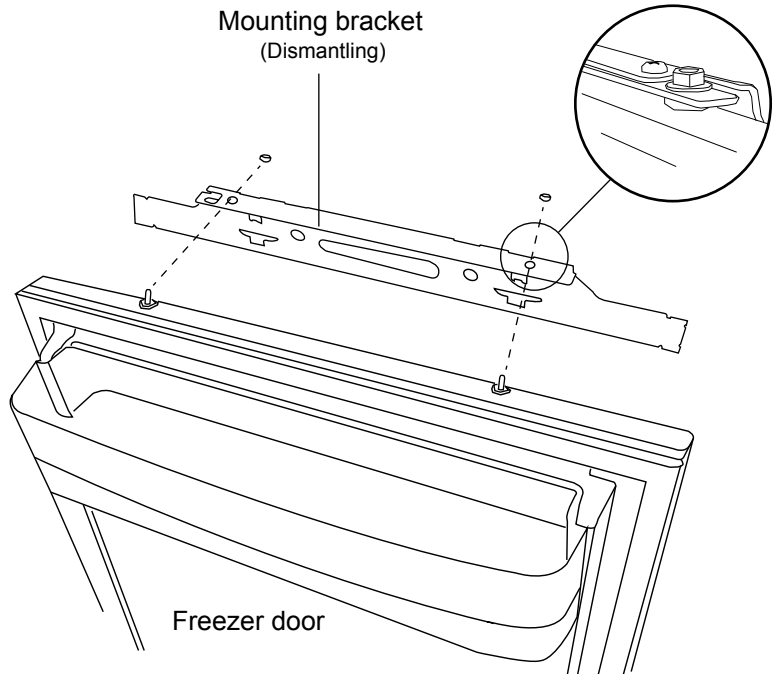


If you need the appliance door to open from the other side, then please reverse the door before commencing the installation process. (See Reversing the door section).

- a) Undo the hexagonal screws from the two adjusting bolts that are located on the top of the appliance door and then remove the mounting bracket.




[07] x 10 (3 x 12mm)

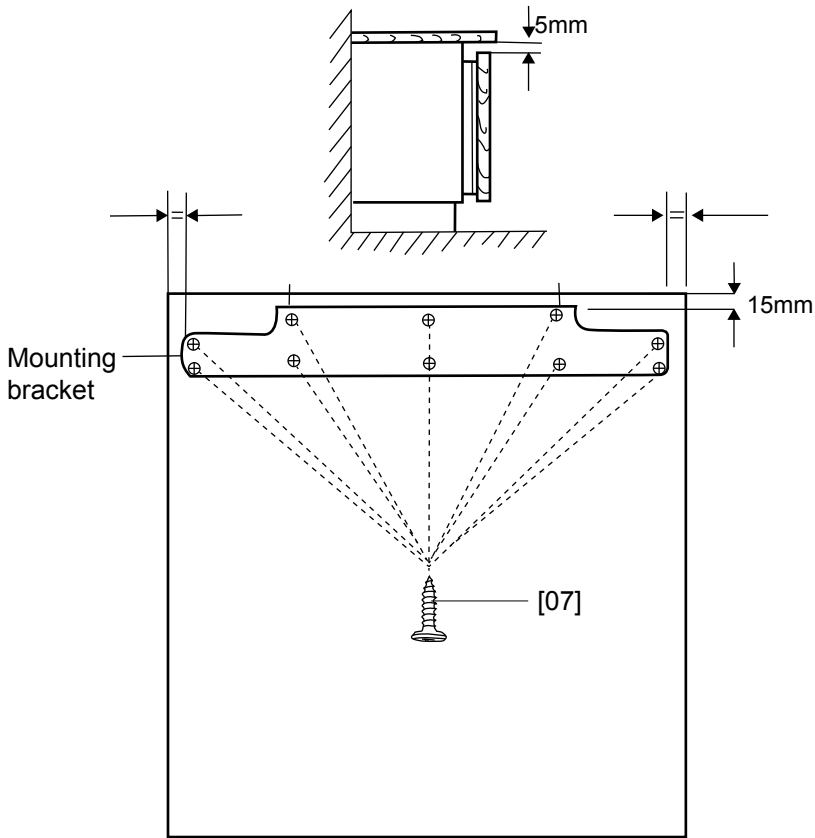

- b) Measure the width of the furniture door, at the halfway point mark a line vertically down the inner surface of the furniture door. You should draw the line from the top of the furniture door to approximately halfway down.
- Place the mounting bracket on the reverse of the furniture door.
  - The middle of the mounting bracket should be positioned on the line that you have just drawn. Please note the position of the mounting bracket in the above drawing, to ensure that you have the mounting bracket the correct way up.
  - The top of the mounting bracket should be positioned approximately 15mm from the top of the furniture door. This will allow you a 5mm gap from the top of the furniture door, to the underneath of your worktop.
  - Fix the mounting bracket to the furniture door using the screws [7] provided and a cross-head screwdriver. These screws should be fully tightened.

# 07

## Fitting the furniture door to the appliance

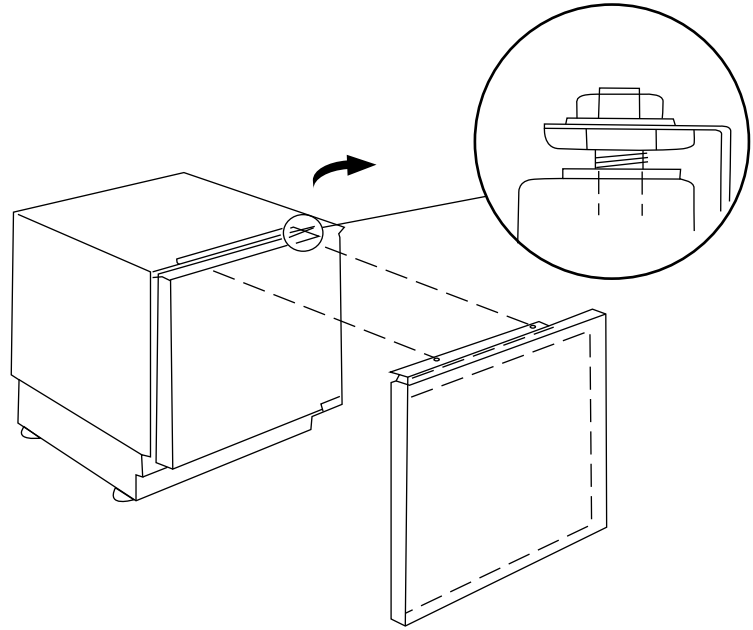

- c) Hang the furniture door onto the appliance door, making sure that the brackets on the mounting bracket locate over the adjusting bolts.


# 08



 
[04] x 2




[07] x 4 (3 x 12mm)



[09] x 2 (5 x 16mm)

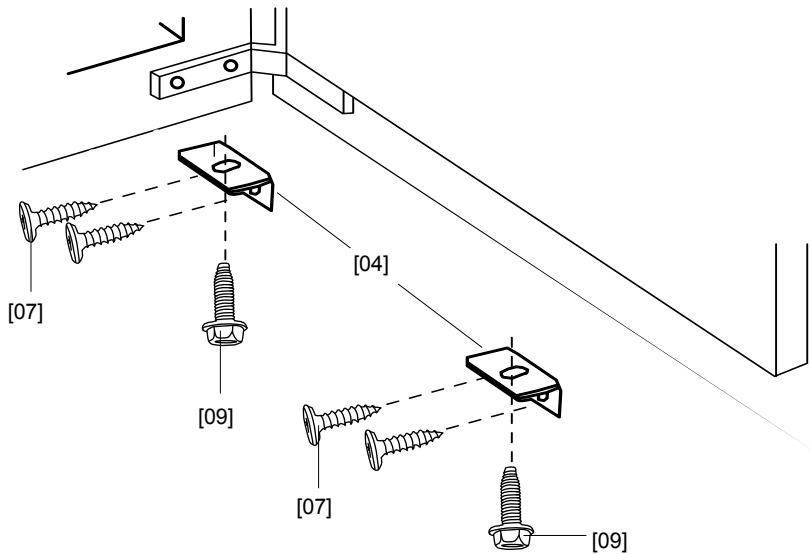

- d) Fix the two brackets [04] to the bottom of the furniture door and the underneath of the appliance door using screws [07] and [09].

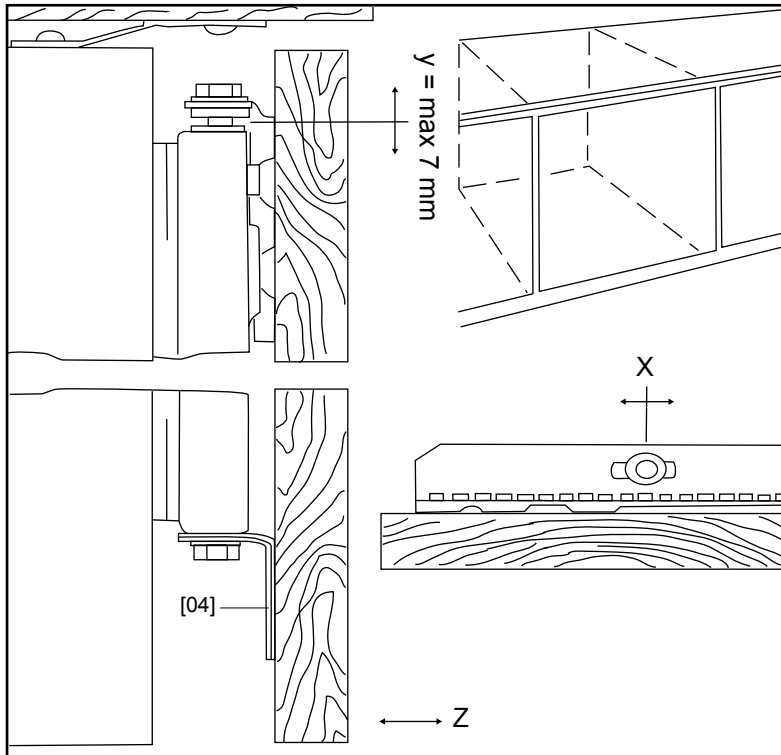


- e) Use a screwdriver to adjust the gap on the lower section of the adjusting bolts. The gap should be set to approximately 7mm.
- It is possible to make minor adjustments to the position of the furniture door using the screws on the top and the bottom of the appliance door. You should make these adjustments so that the furniture door is level.

# 10

## Fitting the furniture door to the appliance



[07] x 3 (3 x 12mm)

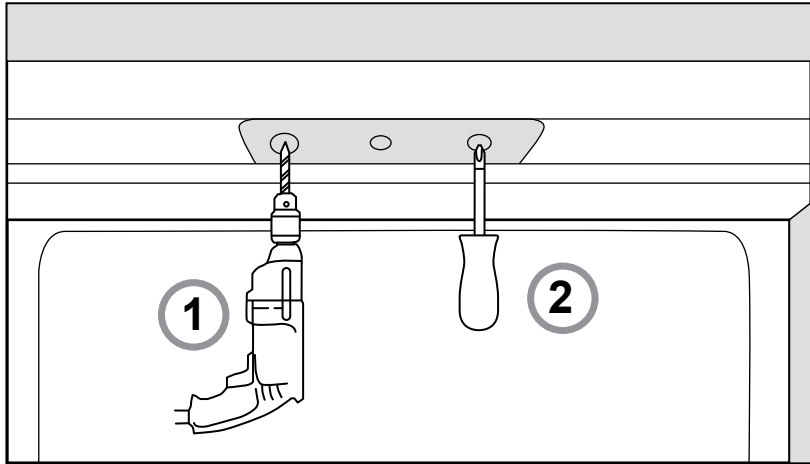

- f) Insert the cover plate to the top of the appliance; this will just clip into place.
- g) Open the appliance door.
- h) Use a suitably sized drill bit to drill through the three holes in the bracket, into the work top.



### Note

The drill bit should be appropriate for the material that your work top is made from.

 

- i) Secure the bracket to the underside of the worktop, using the screws [07] provided.



### Note

These screws should be fully tightened.

# 11

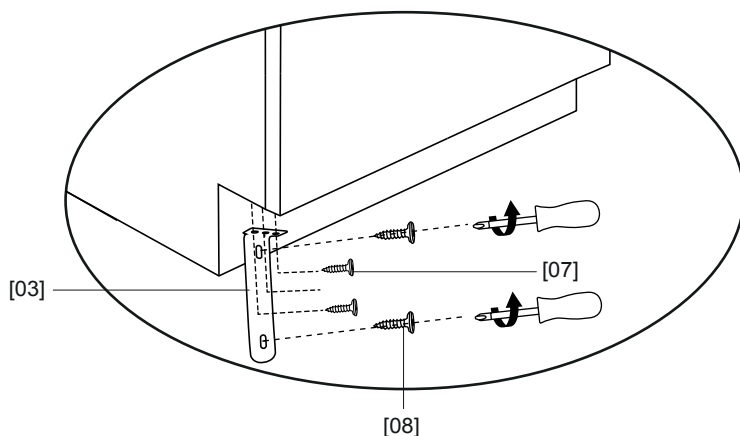

[03] x 2




[07] x 4 (3 x 12mm)



[08] x 4 (4 x 18mm)

If the appliance is being installed under a granite work top, use the L shaped brackets [03] provided to secure the fridge to the side of the cabinet. In this case, step 10 is not applicable. Use a suitably sized drill bit to drill through the three holes in the bracket into the cabinet side on the opposite side to the hinges.

# 12

 

[06] x 2



[07] x 4



[09] x 2

Rectangular iron plates [06] are spare parts, for better fitting between the appliance and the wooden door.

Check that the door opens and shuts without snagging, as well as checking that the door is sealing correctly.

The appliance is now ready to be switched on.







**B&Q plc,**  
Chandlers Ford, Hants,  
SO53 3LE United Kingdom  
[www.diy.com](http://www.diy.com)

---