


Electric Double Oven

Instruction Manual

UBDO90IX

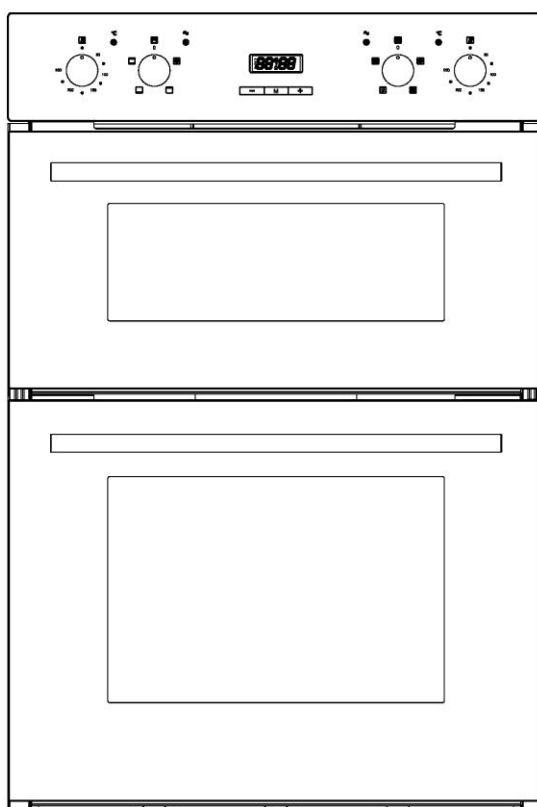

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

Content

1.....	Important safety information
2.....	Installation
3.....	Specifications
4.....	Setting and using the oven programmer/timer
5.....	Selecting a cooking function and temperature
6.....	Troubleshooting
7.....	Maintenance and cleaning
8.....	Environmental note

Important safety information

Your safety is of the utmost importance to our company. Please make sure that you read this instruction booklet before attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Technical Department.

General Information

- This appliance is designed for domestic household use and can be built into a standard kitchen cabinet or housing unit.
- **IMPORTANT:** The adjacent furniture or housing and all materials used in the installation must be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.
- Certain types of vinyl or laminate kitchen furniture are particularly prone to heat damage or discolouration at temperatures below the guidelines given above.
- Any damage caused by the appliance being installed in contravention of this temperature limit, or by placing adjacent cabinet materials closer than 4mm to the appliance, will be the liability of the owner.
- For use in leisure accommodation vehicles, please refer to the appropriate information given in the installation instructions for this appliance.
- The use of this appliance for any other purpose or in any other environment without the express agreement of our company will invalidate any warranty or liability claim.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions that are noted in Conditions Of Guarantee. The foregoing does not affect your statutory rights.

- Repairs may only be carried out by Service Engineers or their authorized service agent.

Warning and safety instructions

- This appliance complies with all current European safety legislation. We do wish to emphasise that this compliance does not remove the fact that the appliance surfaces will become hot during use and retain heat after operation.
- **WARNING:** The appliance and its accessible parts become hot during use.
- Care should be taken to avoid touching heating elements.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- During use the appliance becomes hot. Care should be taken to avoid touching

heating elements inside the oven. - A steam cleaner is not be used.

- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Child Safety

- We strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance at any time.
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.

General Safety

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not place heavy objects on the oven door or lean on the oven door when it is open, as this can cause damage to the oven door hinges.
- Do not leave heated oil or fat unattended, as this is a fire risk.
- Do not place pans or baking trays directly on the base of the oven cavity, or line it with aluminium foil.

- Do not allow electrical fittings or cables to come into contact with areas on the appliance that get hot.
- Do not use the appliance to heat the room it is located in or to dry clothing.
- Do not install the appliance next to curtains or soft furnishings.
- Do not attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.

Cleaning

- Cleaning of the oven should be carried out on a regular basis.
- Great care should be taken whilst using this appliance and when following the cleaning procedure.
- **IMPORTANT:** The appliance must be disconnected from the mains before following the cleaning procedure.

Installation

- This appliance must be correctly installed by a suitably qualified person, strictly in accordance with the manufacturer's instructions.
- We declines any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.
- Heat, steam and moisture will be created during use of the appliance, take care to avoid injury and ensure that the room is adequately ventilated. If the appliance is going to be used for prolonged periods of time, then additional ventilation may be required.
- Please consult with your qualified installer if you are in any doubt about the amount of ventilation that you will require.

Installation

Electrical connection

Before connecting the appliance, make sure that the supply voltage marked on the Rating Plate corresponds with your mains supply voltage.

WARNING: THIS APPLIANCE MUST BE EARTHED.


- ✧ This appliance should be wired into a 32A double pole switched spur outlet, having 3 mm contact separation and placed in an easily accessible position adjacent to the appliance. The spur outlet must still be accessible even when your oven is located in its housing to enable the appliance to be disconnected from the mains supply. The spur requires its own individual electrical supply. This supply must be protected by a 32A MCB.



- ✧ To connect the oven power cord, loosen and remove the cover on the terminal block, in order to gain access to the contacts inside. Make the connection, securing the cord in place with the cable clamp provided and then immediately close the terminal block cover again.
- ✧ If you have to change the oven power cord, the earthing (yellow/green) conductor must always be 10 mm longer than the line conductors.
- ✧ Care must be taken to ensure that the temperature of the mains supply cable does not exceed 50°C.
- ✧ If the mains supply cable is damaged, then it must be replaced by an appropriate replacement which can be obtained from Spares Department.
- ✧ Cable type: H05 V VF 3 core x 2.5 mm²

Connecting the mains supply cable

- ✧ The mains terminal block is located on the rear of the oven and the terminals are accessible by removing the terminal block cover. You should remove the cover screw to access this.
- ✧ The cable connections must be made in accordance with the diagram below: -1, 2 and 3 are the live connection, 4 and 5 are the neutral connection and the remaining one is the earth connection.

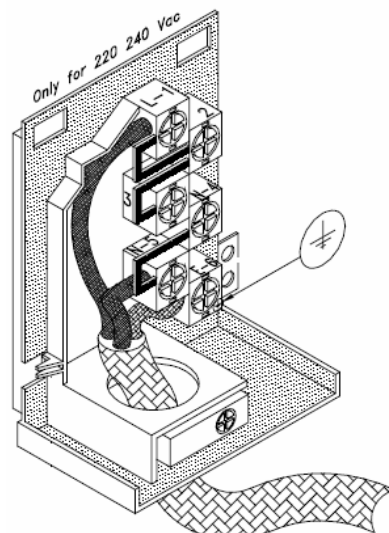

- ✧ The live wire **MUST** be placed in connection number 1. The neutral wire **MUST** be placed in connection number 4.
- ✧ The earth wire **MUST** be placed in the connection marked with the symbol.
- ✧ The brass links must be positioned as marked in the diagram above and once established **ALL** terminal screws must be tightened down firmly.
- ✧ If when the oven is first switched on, it does not function correctly, you should recheck that the terminal screws are all fully tightened between the links. This should be done before contacting our Service Department.

IMPORTANT: The appliance must **NOT** be connected to the mains supply by means of a 30A plug and socket. The cable can be looped if necessary, but make sure that is not kinked or trapped when the oven is in position. Care must be taken to avoid the cable being in contact with hot parts of the appliance.


Replacing the mains supply cable

If the mains supply cable is damaged, then it must be replaced with a suitable replacement.

The mains supply cable should be replaced in accordance with the following instructions:

- Switch the appliance off at the control switch.
- Open the terminal block on the back of the oven.
- Unscrew the terminal screws fixing the cable
- Replace the cable with one of the same length and in accordance with the specification.
- The “green-yellow” earth wire must be connected to the terminal marked  . It must be about 10 mm longer than the live and neutral wires.
- The “blue” neutral wire must be connected to the terminal marked with letter (N) - the live wire must be connected to the terminal marked with letter (L).

The connection cable must be secured in a strain-relief clamp.


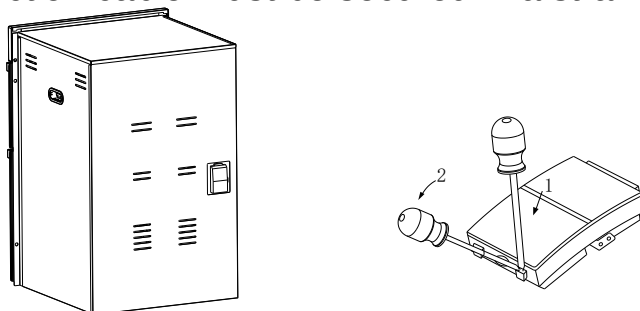


Warning!

Remember to connect the safety circuit to the connection box terminal marked with  . The electricity supply for the oven must have a safety switch which enables the power to be cut off in case of emergency. The distance between the working contacts of the safety switch must be at least 3mm.

Installing the oven into the kitchen cabinet


The kitchen area should be dry and aired and equipped with efficient ventilation. When installing the oven, easy access to all control elements should be ensured.

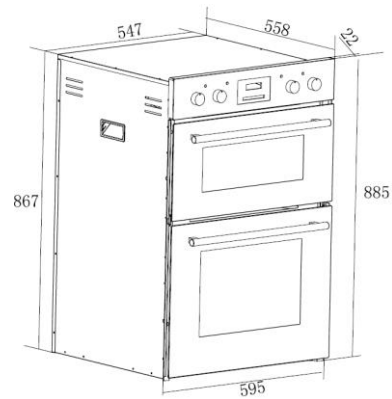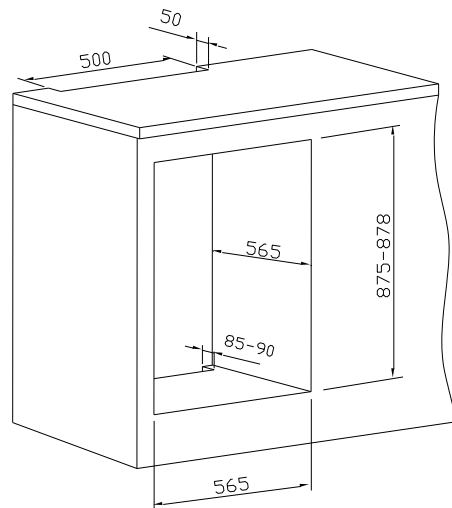


Positioning the appliance

- Ensure that the aperture that you will be fitting the oven into is of the size given in the above diagram.
- The oven must be fitted into an oven housing with the ventilation cut-outs shown in the “Ventilation requirements” section on the next page.
- Ensure that the rear panel of the furniture housing unit has been removed.

Ventilation requirements

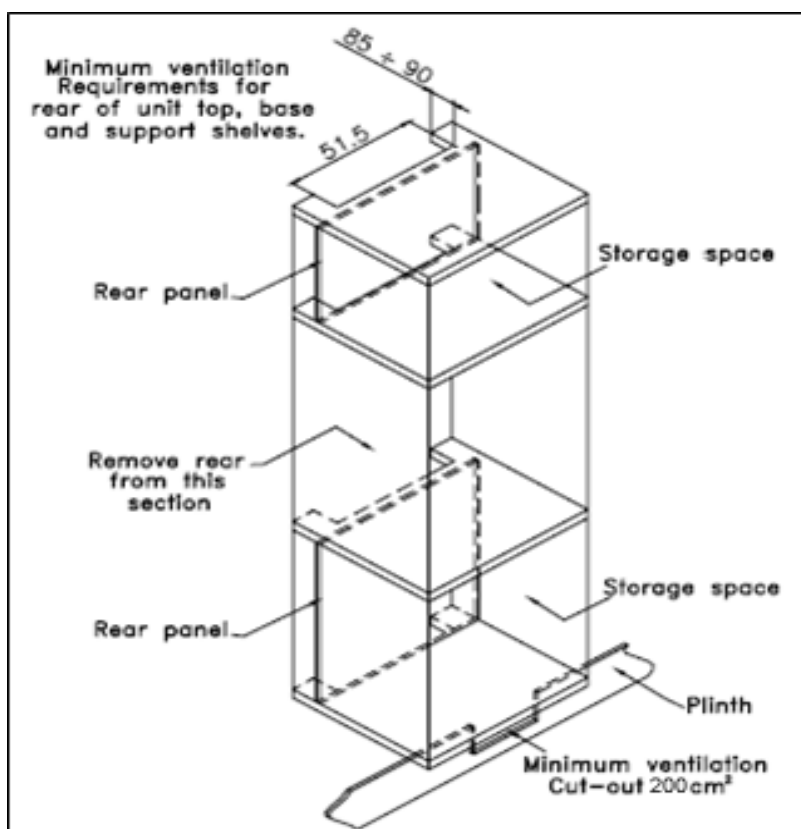


(Figure shows the ventilation and cut-out requirements for the installation of the appliance into a tall housing unit).

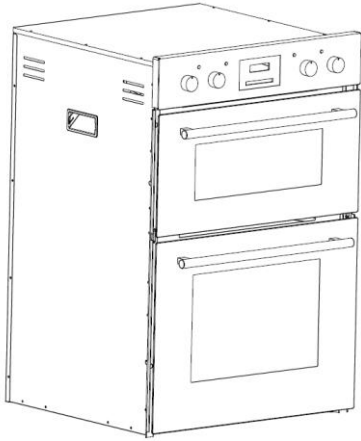

Ensure that the oven has been securely fixed into the housing unit. The fixing of the oven into the housing is made by using four screws. These should be screwed through the oven cabinet and into the housing unit.

Specifications

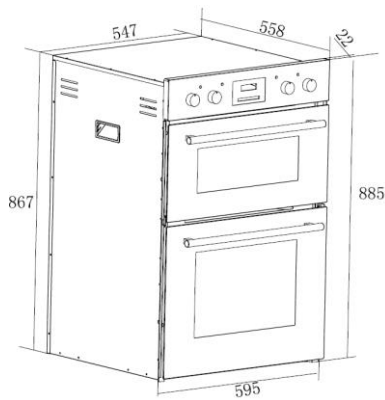

Product Dimensions

Height: 885 mm
Width: 595 mm
Depth: 558 mm

Product specifications:

- Energy efficiency class: A
- LED full programmer
- 2 x Cooling fans
- Thermostatically controlled grills

Main oven: multifunction oven

- 4 functions
- Capacity: 60 litres

Top oven: static oven and grill

- 4 functions
- Capacity: 36 litres

Standard accessories:

- 1 x Oven pan
- 2 x Oven rack
- 2 x Removable side racks
- 1 x Lift handle
- 1 x grill trivet

Electrical details

Rated Voltage:

230 Vac 50 Hz


Supply Connection:

21A


Max Rated Inputs:

4.675 kW

Control Panel

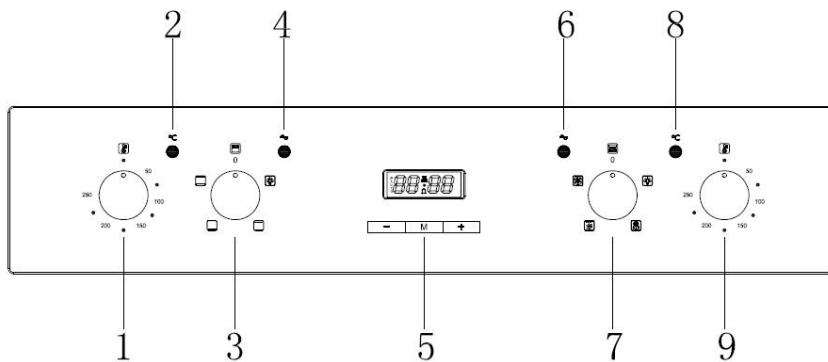

- 1) Top oven thermostat knob
- 2) Top oven operating light
- 3) Top oven function selection knob
- 4) Top oven power indicator light
- 5) Oven programmer/timer
- 6) Main oven power indicator light
- 7) Main oven function selection knob
- 8) Main oven operating light
- 9) Main oven thermostat knob

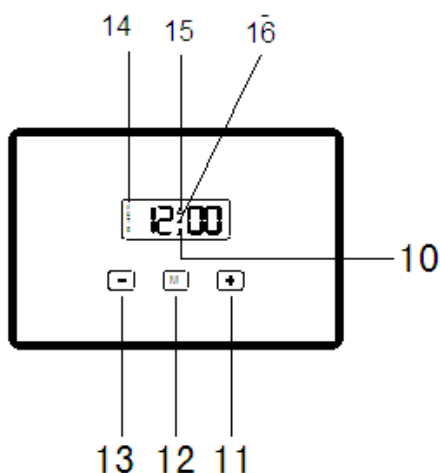

- 10) Reminder symbol
- 11) + button
- 12) "M" : Manual button
- 13) - button
- 14) Automatic cooking symbol
- 15) Oven in use symbol
- 16) Decimal point symbol

Setting and using the oven programmer/timer

Selecting manual operation mode

After your appliance is connected to the mains supply for the first time, the numbers on the timer display will flash. Before you can select a cooking function or set a temperature, you must set the appliance into manual operation mode.

- ✧ To select manual operation mode, press the manual operation button(12) on the control panel.

Setting the time of day

After setting your oven for manual operation, you should also set the time of day.

- ✧ Use the minus button (13) and plus button (11) to adjust the time that appears in the display. After getting the display to the correct time, release the minus and plus buttons. After 5 seconds the time will set on the display and you will be able to use your oven.
- ✧ The manual operation symbol will light on the oven timer display.

Before first use

- ✧ To remove any residue from the oven cavities that may have been left from the manufacturing process, you should select the fan oven function for the main oven and the conventional oven function for the top oven. Separately set each oven to its maximum temperature setting.
- ✧ It is perfectly normal for a smell to be produced during this process.
- ✧ You should make sure that any windows in the room are left open during this process.
- ✧ It is advisable for you not to remain in the room whilst the burning off process is taking place.
- ✧ You should leave each oven on maximum setting for 30 – 40 minutes.
-  **IMPORTANT:** You should not burn off both ovens simultaneously.

The reminder function (main oven and top oven)

The reminder function is to set a cooking time you want the oven to cook and it will remind you the cooking has been done.

-  **IMPORTANT:** The oven WILL NOT switch off at the end of the countdown time; You have to turn off the oven manually by turning “Oven function selector knob” and the “Temperature control knob” to their OFF positions.

When the oven reached the cooking time, an audible sound can be heard:

- ✧ Press the “M” button(12)” twice. The “Decimal point symbol(16)” will starts to flash and the “Reminder symbol (10)” will flashed and the LED display show “00:00”.
- ✧ Use the “+ button (11)” or “- button (13)” to set the cooking time that you require.
- ✧ The maximum cooking time that can be set is 23 hours and 59 minutes.
- ✧ When the correct cooking time appears on the LED display, release the “+ and - buttons” and it will start to countdown cooking time immediately.
- ✧ The “Reminder symbol (10)” will stop flashing to show that a cooking time has been set.
- ✧ After a few seconds the LED display will return to show the time of day.
- ✧ At the end of the cooking time, an audible sound can be heard and it will sound for 7 minutes before silence off or you can silence it by pressing the “M” button (12)” once.

The auto-turn off cooking function

This function will allow you to set how long you want the oven to cook and it is similar to the reminder function; however, in this mode, oven will be turn off at the end of the cooking time.

- ✧ Place the food that you want to cook inside of the oven and close the door.
 - ✧ Select an oven function by using the “Oven function selector knob” and cooking temperature by using the “Temperature control knob”.
 - ✧ Press the “M” button (12)” three times. The “Decimal point (16)”, the “Oven in use symbol (15)” and the “”AUTO” Automatic cooking symbol (14)” and “00:00” will flash on the LED display.
 - ✧ Use the “+ (11) or - (13) buttons” to set the cooking time that you require.
 - ✧ The maximum cooking time that can be set is 10 hours.
 - ✧ When the correct cooking time appears on the LED display, release the “+ (11) or - (13) buttons”. Cooking will begin immediately and the timer will start to countdown after a few seconds.
 - ✧ At the end of the cooking time the oven will turn off and an audible sound can be heard. The “AUTO Automatic cooking symbol (14)” and the “Reminder symbol (10)” will flash on the LED display.
 - ✧ You can silence the sound by pressing the “M” button (12)” once.
 - ✧ To reset the oven, pressed and hold “M” button (12)” until “AUTO Automatic cooking symbol (14)” has been turn off; then press and hold again the “M button” until “Oven in used symbol (15)” appear on the LED screen.
-  **IMPORTANT:** If you do not turned the “Oven function selector knob and “Temperature control knob” to their OFF positions, when you reset the oven it will still continue to heat up.

The cooking end time function


This function is similar to the auto-turn off cooking function, however instead of setting a cooking time, you select the time of day that you want the oven to turn off at (cooking end time), for example, you can set the oven to turn off at 16:00pm on a particular day. Place the food that you want to cook inside of the oven and close the door.

- ✧ Select an oven function by using the “Oven function selector knob” and cooking temperature by using the “Temperature control knob”.
- ✧ Press the “M” button (12)” three times. The decimal point starts to flash, and the “Oven in use symbol (15)” and the “AUTO Automatic cooking symbol (14)” will beam on the LED display.
- ✧ The display will show the current time of day which will flash. Use the “+ (11) or - (13) buttons” to set the cooking end time that you want the oven to turn off.
- ✧ The maximum cooking end time that can be set is 10 hours in advance.
- ✧ When the correct cooking end time appears on the LED display, set the time by using “+ (11) or - (13) buttons” and cooking will begin immediately after you have set the cooking end time.
- ✧ At the end of the cooking end time, the oven will turn off and an audible sound can be heard. The “AUTO Automatic cooking symbol (14)” and the “Reminder symbol (10)” will flash on the LED display.
- ✧ You can silence the sound by pressing the “M” button (12)” once.
- ✧ To reset the oven, pressed and hold “M” button (12)” until “AUTO Automatic cooking symbol (14)” has been turn off; then press and hold again the “M button” until “Oven in used symbol (15)” appear on the LED screen.

- ✚ **IMPORTANT:** If you do not turn the “Oven function selector knob (1)” and “Temperature control knob (5)” to their OFF positions, when you reset the oven it will still continue to heat.

Selecting a cooking function and temperature

Selecting a main oven function

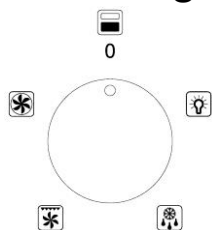

The oven function selector knob should be used to select the particular mode of cooking that you require. The appliance will utilise different elements within the oven cavity, depending on the oven function that you select. When a function is selected, the power indicator light will come on.

Main oven functions



OVEN LIGHT: Separate light control which allows the light to be switched on, even when the oven is not cooking.



DEFROST: The fan runs without heat to reduce the defrosting time of frozen foods. The time required to defrost the food will depend on the room temperature, the quantity and type of food.




FAN AND GRILL: This method of cooking utilises the top element in conjunction with the fan, which helps to provide a quick circulation of heat. This function is suitable where quick browning is required and “sealing” the juices in, such as steaks, hamburgers, some vegetables etc.



FAN OVEN: This method of cooking uses the circular element while the heat is distributed by the fan. This results in a faster and more economical cooking process. The fan oven allows food to be cooked simultaneously on different shelves, preventing the transmission of smells and tastes from one dish onto another.

Main oven thermostat control knob

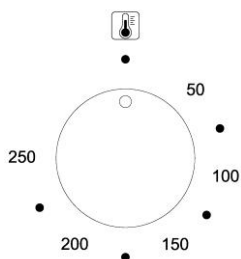


The oven thermostat control knob sets the required temperature of the oven. It is possible to regulate the temperature within a range of 50 - 250°C.

Turn the control knob clockwise.

Oven operating light (main and secondary oven)


°C

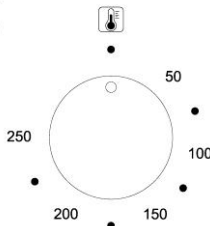

This light will come on to indicate that the oven’s heating elements are in operation. The light will turn off when the temperature set on the thermostat control knob has been reached. It will cycle on and off throughout the cooking time.

You should not place food inside the cavity, until the correct cooking temperature has been reached.

Selecting a secondary oven function and temperature

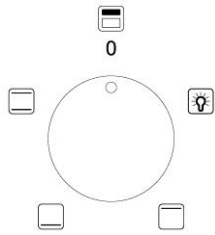

The secondary oven function selection knob should be used to select the particular mode of cooking that you require. The appliance will utilise different elements within the oven cavity, depending on the oven function that you select. When a function is selected, the secondary oven power indicator light will come on.

Secondary oven functions



OVEN LIGHT: Separate light control which allows the light to be switched on, even when the oven not cooking.



FULL GRILL: This method of cooking utilises the inner and outer parts of the top element, which directs heat downwards onto the food. This function is suitable for grilling medium or large portions of sausages, bacon, steaks, fish etc




LOWER ELEMENT: This method of cooking uses the lower element to direct heat upward to the food. For slow-cooking recipes or for warming up meals.



CONVENTIONAL OVEN (top and lower element): This method of cooking provides traditional cooking, with heat from the top and lower elements. This function is suitable for roasting and baking on one shelf only.

Secondary oven thermostat control knob

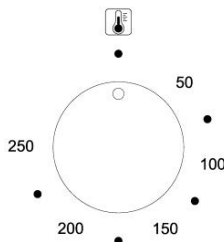

The oven thermostat control knob sets the required temperature of the oven. It is possible to regulate the temperature within a range of 50 - 250°C.

Turn the control knob clockwise.

Cooking guidelines

- Please refer to the information given on food packaging for guidance on cooking temperatures and times. Once familiar with the performance of your appliance, temperatures and times can be varied to suit personal preference.
- If you are using the fan oven function, then you should follow the information given on the food packaging for this particular mode of cooking.
- Make sure that frozen foods are thoroughly thawed before cooking, unless the instructions on the food packaging advise that you can “cook from frozen”.
- You should pre-heat the oven and not place food inside of it until the oven operating light has gone off. You can choose not to pre-heat when using the fan

oven mode; however you should extend the cooking time given on the food packaging by at least ten minutes.

- Before cooking, check that any accessories that are not required are removed from the oven.
- Place cooking trays in the centre of the oven and leave gaps between the trays to allow air to circulate.
- Try to open the door as little as possible to view the dishes.
- The oven light will remain on during cooking.

Warnings

- Keep the oven door closed when using *any* of the cooking functions, *including* the grill functions.
- Do not use aluminium foil to cover the enamelled baking tray or heat items wrapped in aluminium foil under the grill. The high reflectivity of the foil could potentially damage the grill element.
- You should also never line the base of your oven with aluminium foil.
- During cooking, never place pans or cookware directly onto the bottom of your oven. They should always be placed on the shelves provided.
- The grill heating element and other internal components of the oven become extremely hot during operation, avoid touching them inadvertently when handling the food which you are grilling.
- *Important: Be careful when opening the door, to avoid contact with hot parts of the oven and steam.*
- The drip tray handle should only be used to reposition the drip tray and NOT for removing it from the oven cavity. When removing the drip tray, you should ALWAYS use an oven glove.
- The drip tray handle should not be left in position when the appliance is switched on.
- A steam cleaner is not to be used.
- *Warning: Accessible parts may become hot during use. Young children should be kept well away from the oven when it is in use.*
- Do not use harsh abrasive cleaners or metal scrapers to clean the oven door glass as this can scratch the surface, which may result in the oven glass shattering.

Troubleshooting

- ***The ovens aren't coming on.***
 - * Check that the oven is in manual operation mode.
 - * Check that you have selected a cooking function and a cooking temperature.
- ***There appears to be no power to the ovens and grill.***
 - * Check that the appliance has been connected to the electrical mains supply correctly.
 - * Check that the mains fuses are in working order.
 - * Check that the operating instructions for setting the time of day and putting the appliance into manual operation mode have been followed.
- ***The grill function works but the main oven does not.***

- * Check that you have selected the correct cooking function.
- ***The grill and top oven element is not working, or cuts out for long periods of time during use.***
 - * Allow the oven to cool for approximately 2 hours. Once cool, check whether the appliance is again working properly.
- ***My food is not cooking properly.***
 - * Ensure that you are selecting the correct temperature and the correct cooking function for the food that you are cooking. It may be appropriate to adjust your cooking temperature by plus or minus 10°C, to achieve the best cooking results.
- ***My food is not cooking evenly.***
 - * Check that the oven has been installed correctly and is level.
 - * Check that the correct temperatures and shelf positions are being used.
- ***The oven light is not working***
 - * Refer to the “Replacing the oven bulb” section.
- ***I am getting condensation in my oven***
 - * Steam and condensation is a natural by product of cooking any food with high water content, such as frozen food, chicken etc.
 - * You may get condensation in the oven cavity and forming between the oven door glasses. This is not necessarily a sign that the oven is not working correctly.
 - * Do not leave food in the oven to cool after it has been cooked and the oven has been switched off.
 - * Use a covered container, where practical, when cooking to reduce the amount of condensation that forms.



IMPORTANT: If your appliance appears not to be operating correctly, please contact the dealer.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

- The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.
- This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinth, or any installation other than the one specified has been completed.

Maintenance and cleaning



Cleaning operations must only be carried out when the oven is cool.

The appliance should be disconnected from your mains supply before commencing any cleaning process.


- The oven should be thoroughly cleaned before it is operated for the first time and after each use. This will avoid residual food stuffs becoming baked on the oven cavity. After residues have been baked on several times, they are far more difficult to remove.
- Never clean the oven surfaces by steam cleaning.
- The oven cavity should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- Any stains that may appear on the bottom of the oven will have originated from food splashes or spilt food, these splashes occur during the cooking process. These could possibly be a result of the food being cooked at an excessively high temperature or being placed in cookware that is too small.
- You should select a cooking temperature and function that is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and that you use the drip tray where appropriate.
- Outer parts of the oven should only be cleaned with warm soapy water, using either a sponge or soft cloth. No abrasive cleaners should be used.
- If you use any form of oven cleaner on your appliance, then you must check with the manufacturer of the cleaner that it is suitable for use on your appliance.
- ✚ Any damage that is caused to the appliance by a cleaning product will not be fixed by our company free of charge, even if the appliance is within the guarantee period.

Replacing the oven bulb




IMPORTANT: The oven must be disconnected from your mains supply before you attempt to either remove or replace the oven bulb.

- Remove all oven shelves, the drip tray and the side rack that is on the same side as the oven light.
- Using a screwdriver, remove the lamp cover (1).
- Unscrew the bulb (2) clockwise remove it from its holder
- Replace the bulb with a 25W/300°C, screw type pigmy
- Do not use any other type of bulb
- Place the lamp cover back into position. There is a curve on one side of the cover; this should be on the right hand side as the cover goes back into place.

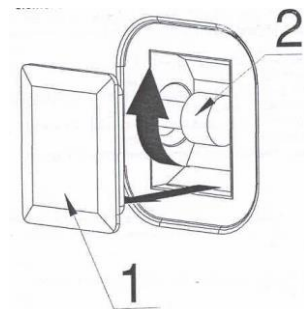

Door removal


In order to obtain easier access to the oven chamber for cleaning, it is possible to remove the door. To do this, tilt the safety catch part of the hinge upwards. Close the door lightly, lift and pull it

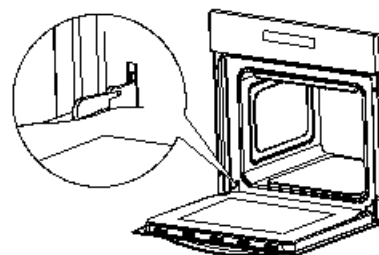

out towards you .In order to fit the door back on to the cooker , do the inverse. When fitting, ensure that the notch of the hinge holder. After the door is fitted to the oven, the safety catch should be carefully lowered down again. If the safety catch is not set it may cause damage to the hinge when closing the door.As shown figure 1

Removal of the internal glass panel

Unscrew and unfasten the bracket latch that is in the corner at the top of the door .Next take out the glass from the second blocking mechanism and remove. After cleaning, insert and block the glass panel, and screw in the blocking mechanism.As shown figure 2

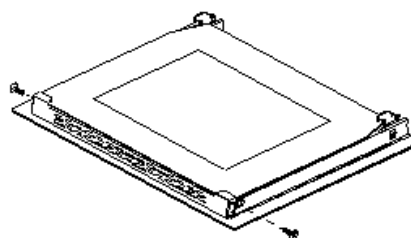

- Take care not to dislodge the hinge locking system when removing the door, as the hinge mechanism has a strong spring.
- Do not immerse the door in water at any time.

Environmental note

Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person.

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product or on the documents accompanying the product

indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local city office or local waste management office.

The packaging materials that we use are environmentally friendly and can be recycled. Please discard all packaging material with due regard for the environment.

