


COOke™
&LEWIS


CLDW451W-C

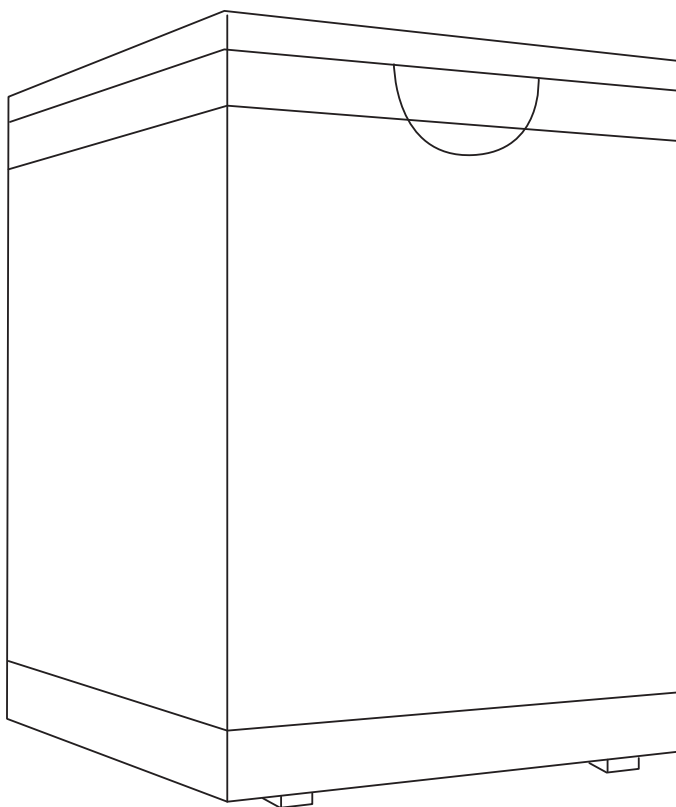


Barcode 5052931055623

CLDW451W-C Free Standing 45cm Dishwasher 9 Place Settings Version: 05




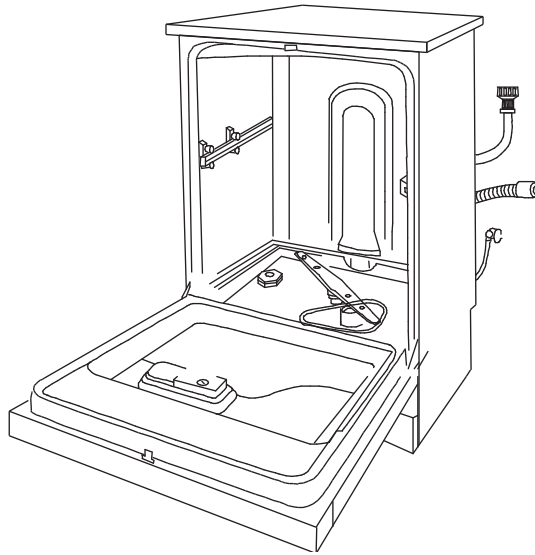

[01] x 1

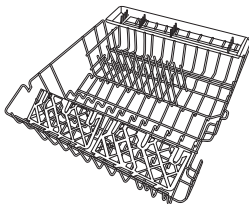


[02] x 1

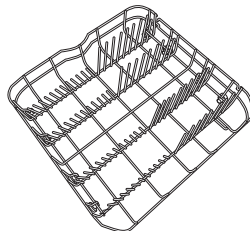

[03] x 1




[04] x 1

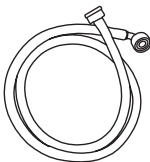

[05] x 1



 [06] x 1




[07] x 1

Parts not supplied



 x 1



x 1

COOke™
&LEWIS

CLDW451W-C



Freestanding 45cm Dishwasher

04

Installation

36

Let's get started...



Getting started...

05

Before you start
Safety

06
08

In more detail...

10

Product functions
Operation
Care and maintenance
Troubleshooting
Recycling and disposal
Technical and legal information
Guarantee
CE Declaration of conformity

11
13
19
26
31
32
33
35

Appendix

Installation

36



Getting Started...


Getting started...

Before you start

06

Safety

08

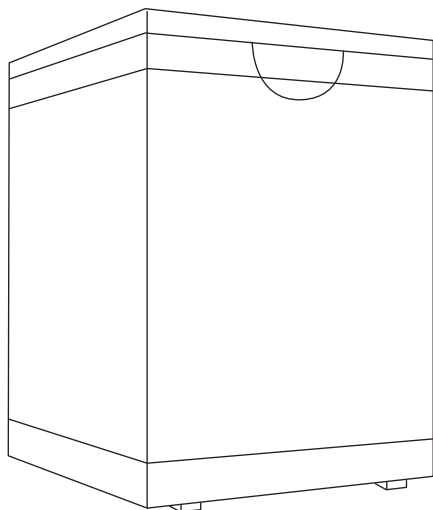


Before you start

Before you start

- ☒ To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 1 800 535542 (Ireland) and 01 56 48 02 60 (France).
- ☒ Check the package and make sure you have all of the parts listed.
- ☒ Decide on the appropriate location for your product.
- ☒ If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- ☒ The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- ☒ If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.


Your product

- | | |
|-----------------------|---------------------------------------|
| 1. Upper rack | 8. Drain hose |
| 2. Top spray arm | 9. Power supply cord |
| 3. Lower rack | 10. Washing filter |
| 4. Cutlery basket | 11. Detergent and rinse aid dispenser |
| 5. Bottom spray arm | 12. Plastic funnel |
| 6. Salt container cap | 13. Drain hose bracket |
| 7. Water inlet hose | |

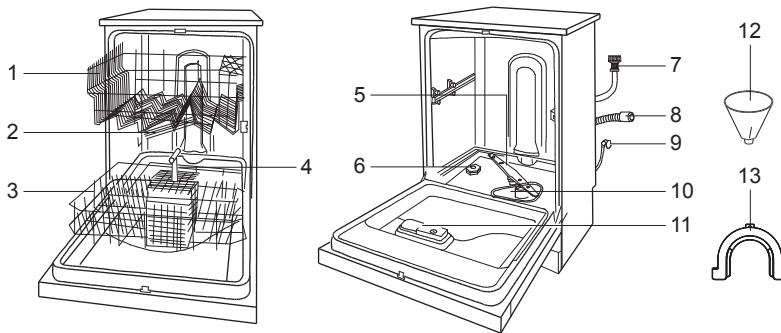

Caution: This diagram may be slightly different from the layout of the machine you have just purchased due to technical improvements.

You will need

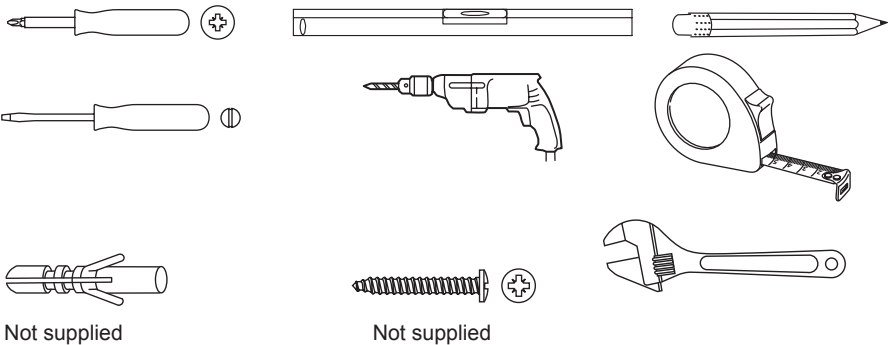

Getting started...

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

- ☒ This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
- ☒ Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance (e.g hob, cooker).
- ☒ Therefore, the Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
- ☒ Children should be supervised to ensure that they do not play with the appliance.
- ☒ This appliance is not intended for use by persons (including children) with reduced physical sensory, or mental capabilities, or by those who lack experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- ☒ Do not allow the electric cables to touch the hot parts of the appliance.
- ☒ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ☒ Do not remove the plug in the presence of flammable gas.
- ☒ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☒ Please dispose of the packing material carefully.
- ☒ Do not use flammable sprays in close vicinity to the appliance.

- ☒ We also recommend that great care be taken during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.
- ☒ A steam cleaner is not to be used.
- ☒ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ☒ The appliance is for domestic use only.
- ☒ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ☒ Keep away from heat sources and direct sun light to prevent plastic and rubber components from ageing.
- ☒ The water inside the dishwasher is not suitable for drinking.
- ☒ **Warning:** Before connecting to the power supply, check: The dishwasher must not be connected to the electricity supply while installation is being carried out. The mains electricity supply must conform to the details shown on the dishwasher nameplate. The socket is adequate for the maximum power of the dishwasher. The voltage meets requirements. The socket is able to accept the appliance plug. The machine is connected to an earthed socket. Do not connect the dishwasher to the electricity supply via an extension cable. After the appliance has been installed, the mains plug should still be easily accessible. During installation, the power supply cord must not be excessively or dangerously bent or flattened.
- ☒ **Warning:** If the supply cord is damaged. It must be replaced by the manufacturer. Its service agent or similarly qualified persons in order to avoid a hazard. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.

In more detail...




Product functions	11
Operation	13
Care and maintenance	19
Troubleshooting	26
Recycling and disposal	31
Technical and legal information	32
Guarantee	33
CE Declaration of conformity	35

Product functions



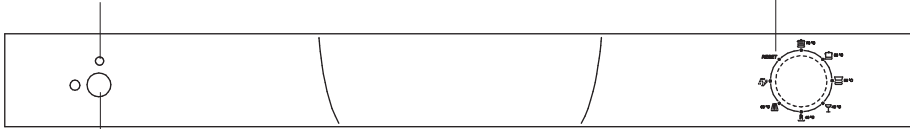


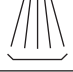 

ON / OFF indicator

Knob for selecting cycle



ON / OFF button

Programme overview

Wash Program	Type of crockery	Type of food remains	Amount of food remains	Condition of food remains	Description of cycle
Intensive Wash 	Non-delicate	Soups, casseroles, sauces, potatoes, pasts, rice, eggs, roast or fried food.	a lot	stuck on hard	Pre-wash with warm water. Extended wash at 70°C. Rinse with cold water. Rinse with hot water. Drying.
Normal Wash 					Pre-wash use cold water. Extended wash at 55°C. Rinse with cold water. Rinse with hot water. Drying.
Light Wash 	Mixed	Soups, potatoes, pasta, rice, eggs, roast or fried food.	a little	loosely attached	Pre-wash use cold water. Extended wash at 50°C. Rinse with cold water. Rinse with hot water. Drying.
Glass ware 		Coffee, cakes, milk, sausage, cold drinks, salads	Very little	loosely attached	Wash at 45°C. Rinse with warm water. Hot rinse. Drying.
Rapid wash 					Short wash at 40°C. Cold rinse.
Heat 		For dishes that need to be rinsed and dried only.			Hot rinse at 65°C. Drying.
Soak 		Rinse off if the dishes have been stacked for several days in the dishwasher prior to washing.			Short cold wash to prevent food residue from drying on the dishes.

In more detail...

Detergent		Rinse Aid
Prewash	Extended in Wash	
5 g	22 g	•
5 g	22 g	•
5 g	22 g	•
-	15 g	•
-	15 g	-
-	15 g	•
-	-	-


Laboratory measured value in
accordance with
European Standard EN50242

Duration in minutes	Energy consumption in kWh	Water consumption in litres
112	1.44	18
102	1.11	15
162	0.80	14
92	1.01	12
32	0.40	9
54	0.90	5.5
12	0.02	3

Operation



 Warning: If the appliance is not operating properly or maintenance must be performed, disconnect the appliance from the power supply.

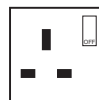

Arranging crockery, glasses, etc. in the dishwasher

Before placing the dishes in the dishwasher, remove larger food particles to prevent the filter from becoming clogged, which results in reduced performance.

If pots and pans have baked-on food that is extremely hard to remove, we recommend that they be soaked before washing. This will rule out the need for extra wash cycles.

Pull out the rack to load the dishwasher.


How to use the lower rack



Warning: knives and other utensils with sharp tips must be loaded into the basket with their tips pointing downwards or placed in a horizontal position.

We recommend that you place the most difficult to clean items on the bottom rack: pots, pans, lids, serving dishes and bowls.

Serving dishes and lids should be placed on the sides of the racks in order to avoid blocking the rotation of the top spray arm.

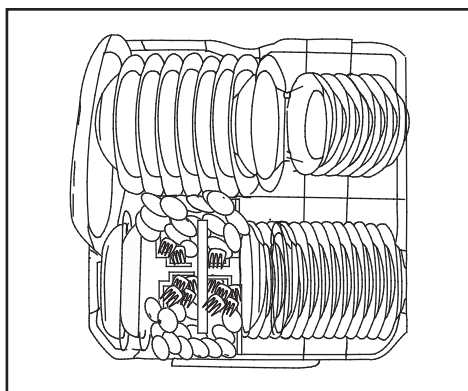


In more detail...

- Pots, serving bowls, etc. must always be placed face down.
- Deep pots should be slanted to allow the water to flow out.



How to use the upper rack


The upper rack is designed to hold more delicate and lighter objects, such as glasses, cups and saucers, plates, small bowls and shallow pans (provided they are not too dirty).

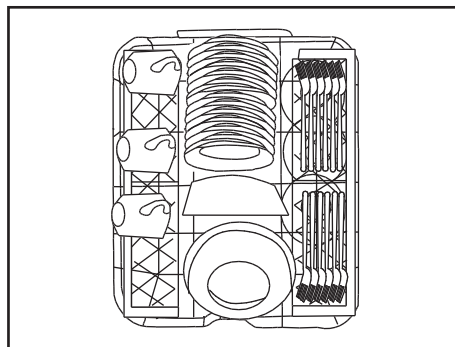

Position the dishes and cookware so that they do not get moved by the spray of water.

The upper rack can be height-adjusted using the knobs on both sides of the rack itself.

Adjust the upper basket to the higher level for more space to accommodate taller pans and trays in the lower basket.

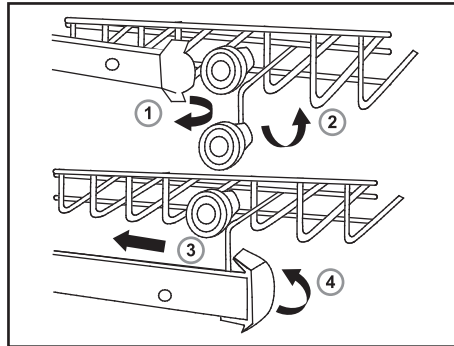


Shelf

Lean tall glasses and those with long stems against the shelf not against other items to be washed.

Place glasses, cups and small bowls on the additional cup rack.

The additional cup rack can be swivelled in or out as required.

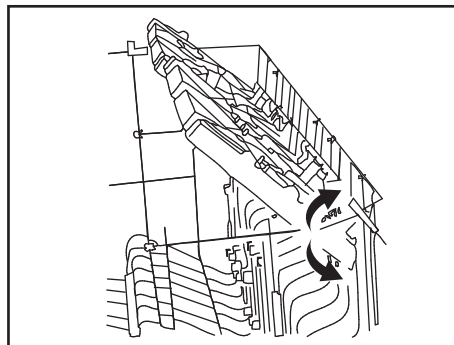

Program selection



Warning: When the dishwasher power is on, the program that the knob indicates cannot be performed. Rotate the knob to another program and then back to the one required.

The most appropriate program can be identified by comparing the type of crockery, cutlery, etc. and the amount and condition of food remains with the details contained in the wash cycle table.


The corresponding program sequence, duration and consumption details are shown in the right half of the overview.

For example, use the “normal” program for dishes and utensils with plenty of food remains stuck on hard.

Program data


The program data indicated is based on standard operating conditions. Values may vary considerably according to:

- Different amounts of dishes
- Temperature of mains water supply
- Pressure of mains water supply
- Room temperature
- Fluctuations in mains voltage
- Machine-related factors (e.g. temperature, water volume, etc.)

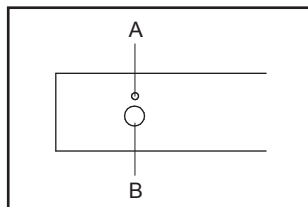

Switching the dishwasher ON

- Turn on the tap.
- Close the door after loading the appliance.
- Set the On-Off button “B” to “On”. The status indicator “A” will light up.
- Rotate the knob to select the program required. After 3 seconds, the appliance emits a short warning signal and the program starts. Status indicator “A” will flash.

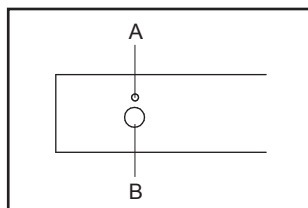

NOTE: After a washing program ends, the knob indicates the same position as the last washing program. To start another washing program, turn the knob to the reset position, then choose the next washing program.

End of program

Six beeps will indicate that the wash cycle has finished.

Switching the dishwasher OFF



Caution: When the appliance is already running, press button "B" for 3 seconds and all of the settings will be cancelled.

Several minutes after the program has ended:

- Set On-Off button to Off.
- Open the door.
- Turn the water tap off.
- Remove dishes, etc. when they have cooled down.

Interrupting the program



Caution: There is a risk of water being sprayed from inside the appliance. Do not open door fully until the spray arm has stopped rotating.

When you open the door, the dishwasher will beep two times every thirty seconds.

If the appliance has already heated up or if the hot water is switched ON and the appliance door then opened, leave the door ajar for several minutes and then close. Otherwise, the appliance door may open due to expansion.

Cancelling or modifying a cycle


A current cycle can be modified if it has only been running for a short time. Otherwise, the detergent may have already been used and the appliance may have already drained the washing water.

If this is the case, the detergent dispenser must be refilled (see the "Loading the detergent").

To modify a cycle that is already running, follow the instructions given in the "Reset drain function" and select the program required (see the "Switching the dishwasher ON").

Reset drain function

You can use the Reset drain function to stop the washing cycle running by turning the knob to -RESET- and the appliance will stop the drain phase after a few minutes.

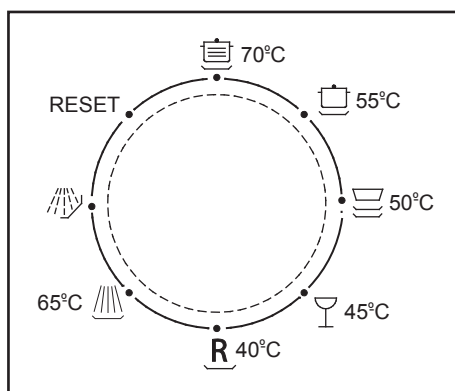**Care**

Damaged power cables must be replaced by a competent person or qualified electrician.



For indoor use only.

Tips for saving energy

If only a small number of dishes have been loaded into the dishwasher, selecting a program that operates at the next lowest temperature, as this should be sufficient.

Loading the salt




Caution: To prevent the formation of rust, load the salt just before you begin a wash cycle.

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits will form on the dishes and utensils.

The appliance is equipped with a special softener that uses a salt specifically designed to eliminate lime scale and minerals from the water.

Always use salt intended for use with dishwashers.


- Remove the lower rack and then unscrew and remove the cap from the salt container.
- If you are filling the container for the first time, fill it with water. Place the end of the funnel (supplied) into the hole and introduce about 2 kg of salt. It is normal for a small amount of water to come out of the salt container.
- Carefully screw the cap back on.

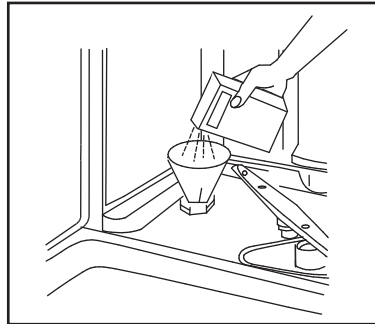

The dishwasher is designed to allow for the amount of salt consumed to be adjusted based on the hardness of the water used. This is intended to optimise and customise the level of salt consumption so that it remains at a minimum.

To adjust salt consumption, proceed as follows:

- Unscrew the cap from the salt container.
- There is a ring on the container with an arrow on it.
- If necessary, turn the ring in a counter-clockwise direction from the "-" setting towards the "+" sign, based on the hardness of the water being used.

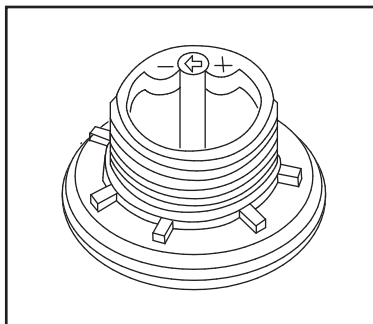

The default setting of the water softening system is -. If using multi-functional tablets, fill the salt dispenser and set the adjuster to -. If the hardness of the water is greater than 60°FH, set it to +.

Selector knob position	Salt consumption (grams / cycle)	Wash cycle (cycles / 2 kg)
Soft	20	60
Medium	40	40
Hard	60	25

Loading the rinse aid



Caution: Proper dosage of the rinse aid improves drying. If water droplets remain on the dishes or spotting occurs, the dosage adjuster should be turned to a higher setting. If the dishes have white streaks, turn the dosage adjuster to a lower setting.


This product makes dishes sparkle and helps them to dry without spotting.

The dispenser is located on the inside panel of the door.

When the low rinse aid indicator "H" on the control panel and the mechanical indicator "H1" on the dispenser light up, you must load rinse aid.

Regardless of the type of detergent dispenser installed in your appliance, you must proceed as indicated below when loading the rinse aid. To open the dispenser, turn cap -1- in a counter-clockwise direction and then pour in the rinse aid, making sure not to overfill.

The amount of rinse aid used for each cycle can be regulated by turning the dosage adjustor -2- located beneath cap -1- using a screwdriver. There are 6 different settings. The normal dosage setting is 3.

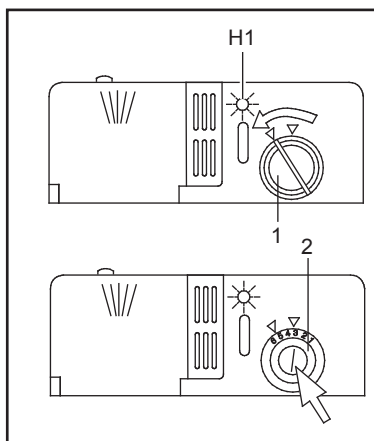

Loading the detergent




Caution: Remove any excess detergent on the edges of the dispenser for easier cover closure.

Detergent specifically intended for use with dishwashers must be used.

The dispenser must be refilled before the start of each wash cycle following the instructions provided in the "Program overview". The detergent dispenser is located on the inside panel of the door.

- To open cover -3- on the dispenser, press button -4-.
- The detergent for the wash cycle should be poured into compartment -5-.
- The detergent for the pre-wash cycle should be poured into compartment -6-.
- After the detergent has been placed in the dispenser, close the cover and press down until it clicks into place.

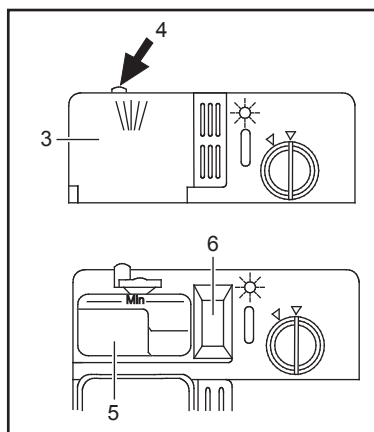

What you should not put into the dishwasher

Cutlery and tableware manufactured entirely or partly from wood. They become faded and unsightly.

Delicate decorative glassware and vases, special antiques or irreplaceable china.

The decorative patterns on these items are not dishwasher-proof.

Copper and pewter utensils are also not suitable.

Decorative patterns printed or painted onto the surface of crockery, glasses, etc., aluminium and silver items tend to become discoloured or faded if washed in the dishwasher. Some types of glass can become opaque in appearance after they have been washed many times in a dishwasher.

Our recommendation

Only purchase table or kitchenware that has been confirmed as being dishwasher-proof.

Damage to glassware and other dishes:

 
- Type of glass or manufacturing process
- Chemical composition of detergent
- Water temperature and duration of dishwasher program

Suggested remedy:

- Use glassware or porcelain dishes that have been marked 'dishwasher-proof' by the manufacture.
- Use a mild detergent that is described as 'kind to dishes'. If necessary, seek further information from detergent manufacturers.
- Select a program with a low temperature and as short a duration as possible.
- To prevent damage, take glass and cutlery out of the dishwasher as soon as possible after the program has ended.

Moving the appliance

Warning: Always switch off the electricity supply and unplug before performing maintenance work. In the event of a fault, contact customer services

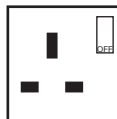

If the appliance must be moved, try to keep it in a vertical position. If absolutely necessary, it can be positioned on its back.

Long periods without use

When you go on holiday, run a wash cycle with the dishwasher empty and then remove the plug from the socket, the door of the appliance slightly ajar.

This will help the seals last longer and prevent odours from forming inside the appliance.

No solvents or abrasive cleaning products

Do not use solvents or abrasive cleaning products to clean the exterior and rubber parts of the dishwasher. Instead use only a soft cloth and warm soapy water and wipe dry with clean soft cloths.

 
To remove spots or stains from the interior surface, use a cloth dampened with water and a little white vinegar or a cleaning product made specifically for dishwashers.

Seals

One of the factors causing odours to form in the dishwasher is food that remains trapped in the seals. Regular cleaning with a damp sponge will prevent this from occurring.

Maintenance

Regular inspection and maintenance of your appliance helps to prevent problems. This saves time and aggravation. You should therefore carefully inspect the inside of your dishwasher from time to time.

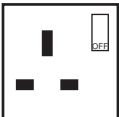Cleaning the appliance

Warning: Always switch off the electricity supply and unplug before performing maintenance work. In the event of a fault, contact customer services



Caution: Do not use solvents of any kind inside your dishwasher. They could cause an explosion danger.

Unplug the machine during cleaning and maintenance.


Check that no grease or scale has accumulated on the inside of the dishwasher. If you discovered any deposits clean the interior of the dishwasher thoroughly with a dishwasher detergent solution.

Use a soft cloth dampened with liquid soap to clean the machine casing and rubber components. Do not use organic chemicals or corrosive solvents.

Cleaning the filter



Caution: The filter must be in place or it may lead to leakage. Place a container under the drain pump filter to collect any excess water that may be released from the drain pump when the filter is removed.

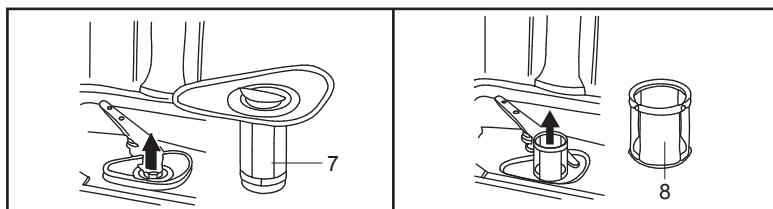


Filters -7- and -8- prevent larger particles of food in the water from reaching the pump. These particles may occasionally block the filters.

1. When the appliance has finished washing, check the filters for particles of food and, if required, clean.
2. After unscrewing the coarse micro-filter -7-, the filter unit -8- can be removed. Remove any particles of food and rinse the filters under running water.
3. Insert the filter unit -8- and tighten the coarse micro-filter.

Spray arms

Lime scale and remains of food in the washing water can block the nozzles in the spray arms -9- and -10- and the arm mountings.

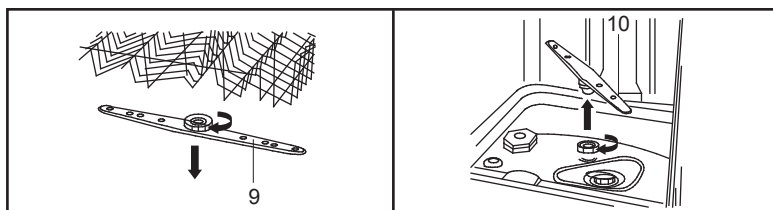

- Inspect the nozzles in the spray arms for holes blocked by remains of food.
- If necessary, pull the lower arm -10- upwards and lift it off.
- Unscrew the upper spray arm -9-.
- Clean both spray arms under running water.
- Refit the spray arms. Ensure that the lower arm is locked into place and the upper one is screwed tight.
- Ensure that the power supply is turned off prior to removal and cleaning of any internal parts.

Anti-Flooding protection

The dishwasher is equipped with a system that stops the supply of water in the event of a problem with the water supply hose or leaks within the unit, in order to prevent damage to your home.

If for any reason the box containing the electrical components happens to be damaged, turn off the power supply and immediately remove the plug for the appliance from the socket. In order to ensure the anti-flooding feature operates properly, box with the water supply hose must be attached to the water supply tap.

No other type of connection is acceptable.

The water supply hose must under no circumstances be cut, as it contains live electrical parts.

If the length of the hose is not adequate to make a proper connection, the hose must be replaced with one that is long enough.

This hose is available upon request from specialised retailers and approved service centres.

In more detail...

Troubleshooting

Experience has shown that you can resolve most problems that arise during normal daily usage yourself, without having to call out customer services. Not only does this save costs, but it also means that the appliance is available for use again that much sooner.

The following list of common occurrences and their remedies should help you identify the causes of most problems.

Fault	Cause	Solution
Appliance does not start up (when the appliance is switched on)	Fault with fuse in mains electricity supply	Disconnect from the mains and check the fuse
	Plug not inserted in wall socket	Plug appliance in and make sure switch is on
	Appliance door not closed properly	Close door correctly
	Program button has not been pressed	Make sure program button is pressed
	Water tap not turned on	Turn on water tap
	Blocked strainer in water intake hose	Refer to care and maintenance section
Unusual amount of foam is creased (during washing)	Normal washing up liquid has been poured into the rinse-aid container	Remove any spilled rinse aid with a cloth as it could otherwise lead to excessive foaming during the next washing cycle
Appliance stops suddenly while washing is taking place (during washing)	Cut off electricity supply to appliance	Check mains electricity supply
	Water supply has been interrupted	Check mains water supply. Make sure cold water fill pipe isn't obstructed
Knocking sound can be heard while washing is taking place (during washing)	A spray arm is knocking against the dishes inside the appliance	Reload the appliance

Fault	Cause	Solution
Rattling sound can be heard while washing is taking place (during washing)	Crockery has not been stacked properly inside the appliance	Reload the crockery
White stains are left on crockery, glasses have a milky appearance	Not enough detergent added to dispenser compartment	If you used a phosphate-free detergent, try a detergent containing phosphates and compare results
	Amount of rinse-aid set too low	Adjust rinse-aid to a higher setting
	Although water is quite hard, no salt has been put in appliance	Add salt to the correct level
	Lid on salt container not screwed tight	Make sure lid is secured firmly
Lower spray arm rotates with difficulty	Spray arm is blocked by small items or food remains	Clear the obstruction
Remains of food are stuck to the dishes, cutlery, etc.	Dishwasher not loaded properly. Water jets could not reach all parts of the dishes, etc. Too many items in rack	Reload the appliance
	Items in rack touching each other	Reload the appliance
	Not enough detergent added to dispenser	Add more detergent
	Selected wash program not intensive enough	Select the intensive wash program
	Filters blocked	Clear the obstruction
	Filters incorrectly fitted	Refer to care and maintenance section

Fault	Cause	Solution
Dishes, cutlry, etc. have not been dried	Amount of rinse-aid set too low	Alter the amount of rinse-aid
	Items removed from dishwasher too soon	Program must complete its cycle
Glasses have a dull appearance	Amount of rinse-aid set too low	Alter the amount of rinse-aid
Tea stains or traces of lipstick have not been completely removed	Detergent has insufficient bleaching effect	Use a more powerful detergent
	Washing temperature set too low	Set to a high temperature
Traces of rust on cutlery	Cutlery not sufficiently rustproof	Buy dishwasher safe cutlery
	Lid on salt container not screwed tight	Make sure the salt container lid is secure
	Too much salt spilt while filling container	Take care when filling the container
Smears left behind on glasses and cutlery; glasses have acquired a metallic appearance	Amount of rinse-aid set too high	Adjust the rinse-aid to a lower setting
Lid in detergent compartment cannot be closed	Detergent compartment has been overfilled	Empty, clean and refill
	Mechanism is clogged with remnants of detergent	Clean compartment

Fault	Cause	Solution
Remnants of detergent stuck inside dispenser	Compartment was damp when it was filled up with detergent. Compartment must be dry before detergent is added	Clean, dry and refill
Water remains inside appliance after programme has ended	Blockage or kink in drainage hose	Check drainage hose for blockage and reposition
	Filters are blocked	Refer to care and maintenance
	The programme is still running. Wait for the programme to end	Close door and wait for program to finish

Display codes show an error message.

NOTE: Error displays on the STOP light with it blinking all the time.

Display codes	Potential cause	Corrective action
When the buzzer emits 1 short warning signal every 30 seconds	The door is not closed properly	Close the door properly
When the buzzer emits 3 short warning signal every 30 seconds	The drain hose is too low	See installation
When the buzzer emits 4 short warning signal every 30 seconds	The drain hose is crimped or bent	See installation
	The drain hose is too high	

Display codes	Potential cause	Corrective action
When the buzzer emits 5 short warning signal every 30 seconds	The water is turned on and the hose is connected properly	See installation
	The water supply to the house is on and has sufficient pressure	
	The water supply hose is crimped or bent	
	The filter for the water supply hose is clogged	
	The drain hose is too low	
When the buzzer emits 2 or 6 short warning signals every 30 seconds		Contact the customer services

If you take all these checks and the dishwasher still does not function or your dishwasher have any other error display:

1. You can power the dishwasher OFF, and wait a few minutes.
2. You can power the dishwasher ON.
3. Try it again, if the dishwasher still does not function and/or the problem persists, contact the customer service center and provide them with the following information:
 - The nature of the problem.
 - The model type number (Mod...) and the serial number (S/N...), which are indicated on the plate located on the side of the inner part of the door.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

In more detail...

Technical and legal information

Technical data

Power supply	: 220-240 V~/50 Hz
Total absorbed power	: 1950W
Maximum current intensity	: 13A
Capacity	: 9 (Standard place settings)
Mains water pressure	: 0.03 – 1.0MPa
Dimensions (HxDxW)	: 850x600x450mm
Net weight	: 57 kg

Legal information


The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Information on comparability tests implemented in compliance with EN 50242

Appliance loaded in accordance with standard specifications.

Example of loaded dishwasher.

Capacity	: 9 place settings
Comparability programme	: Light wash
Rinse-aid setting	: 5
Detergent	: 5g+22 g

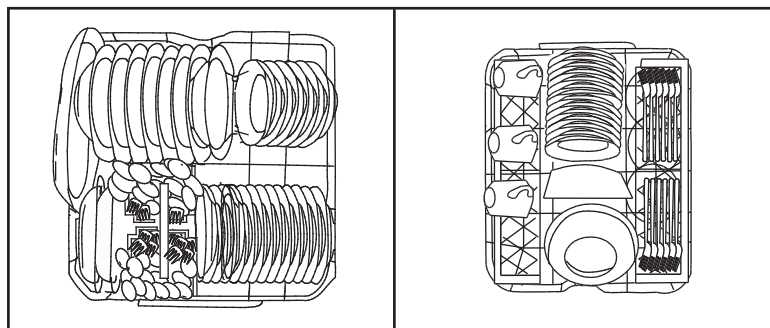

Height-adjustable top basket must be inserted in the uppermost position.

If the comparability tests do not comply fully with EN 50242, e.g., degree of soiling, type of dishes and cutlery, etc., contact the appliance manufacturer before starting the test.

Manufacturer's Guarantee

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK and N.Ireland – ISDAL Customer Care Centre

T: 0844 8001128 E: uksupport@cnagroup.hk

www.myspareparts.co.uk

Republic of Ireland (ROI) – ISDAL Customer Care Centre

T: 1-800 535542 E: uksupport@cnagroup.hk

France – SIDEPAR Customer Care Centre

T: 01 56 48 02 60 E: callcenter@sidepar.fr

CE Declaration of conformity

MANUFACTURER: CATA		
ADDRESS: C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)		
<p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p>		
MACHINE APPLICATION:	CLDW601W - C CLDW451W - C Dish-Washer	
TYPE:		
EC DIRECTIVES APPLIED:	Comply with the essential requirements of the 73/23/CEE, LOW TENSION, 89/336/CEE, ELECTROMAGNETIC COMPATIBILITY	
APPLIED HARMONIZED STANDARDS:		
EN 60335-1 Safety EN 60335-2-5 Particular requirements		
APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:	ISO 9001.2008	
PLACE: Torelló	David Sala Technical Manager	


This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc
 Chandlers Ford, Hants
 SO53 3LE United Kingdom
www.diy.com


Castorama
 Parc d'Activités B.P.101
 59175 Templemars - France
www.castorama.fr

In more detail...

Appendix...

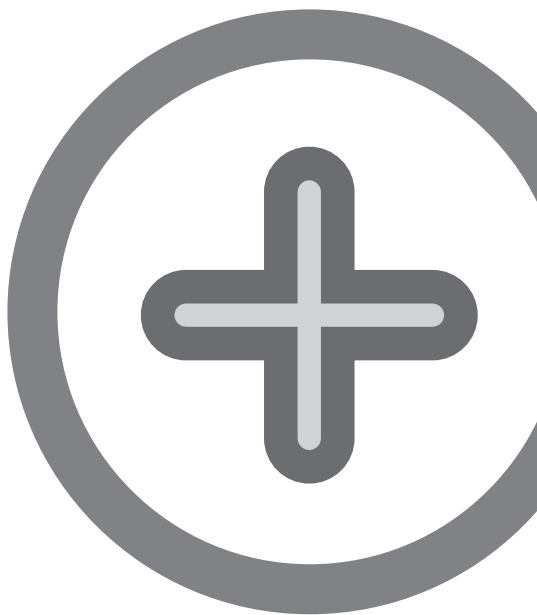

Installation

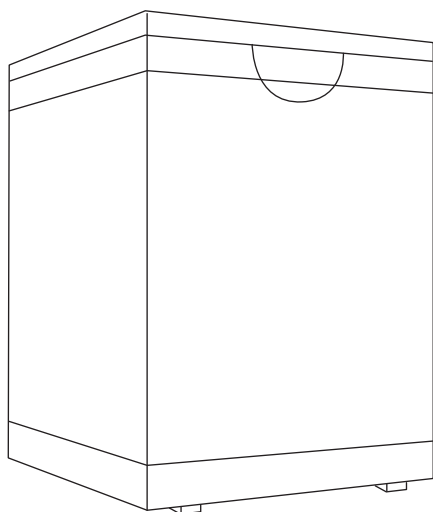


Installation




Caution: Do not place the dishwasher directly on a carpet or close to a wall or furniture.


Remove all the packing materials to prevent unsteadiness, including the polystyrene base. On opening the package, water droplets may be seen on the plastic bag and the base. This is normal phenomenon resulting from water tests in the factory.

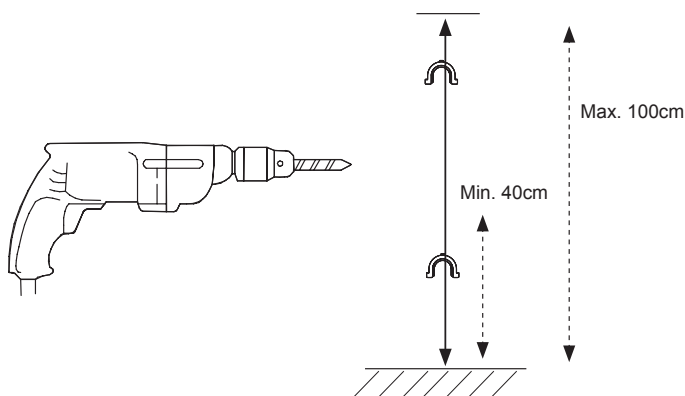

01

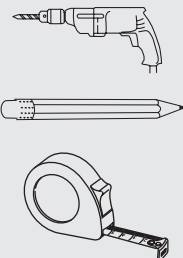

02

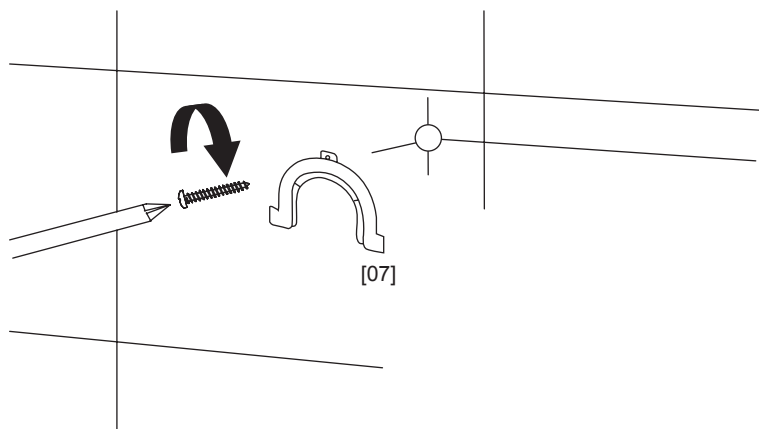

[07]



x 1



x 1




Ensure wall plugs (not supplied) used are suitable for wall type.

03

Water connection - cold fill



Warning: The appliance is to be connected to the water mains using new hose sets. Old hose sets should not be reused.

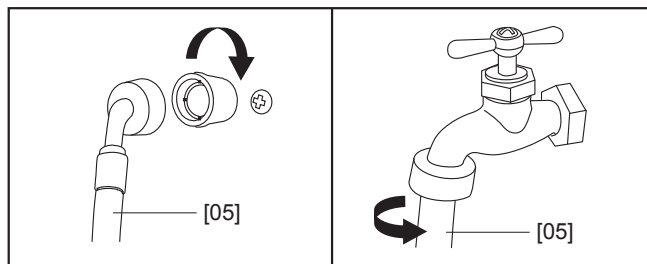


1. Connect the hose to the outlet of the machine.
2. Connect the water supply hose to a threaded 3/4 BSP connector on the water supply, making sure that it is fastened tightly in place.

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities.


If this precaution is not taken, there is a risk that the water inlet may become blocked and damage the appliance.

04

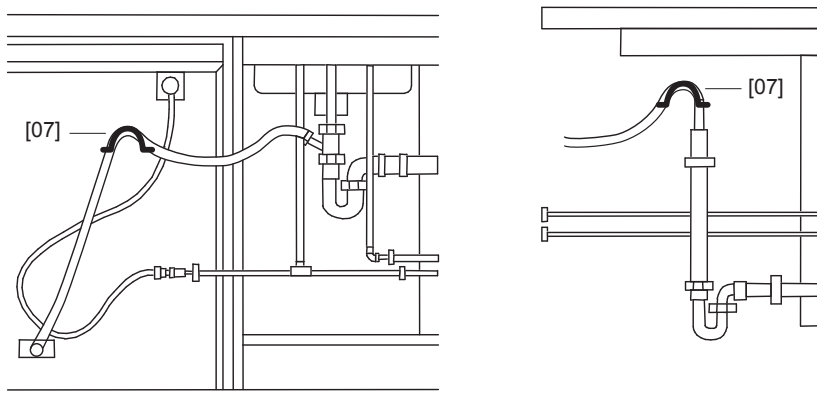

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, making sure to avoid bending or crimping. When the waste hose of the washing machine is connected beneath the sink, fit a siphon trap (accessory not included) (U-bend) with a connecting piece for the drain hose.

05


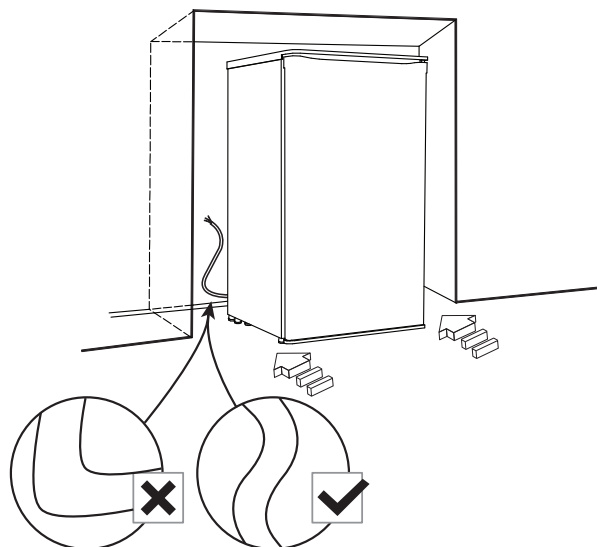


Positioning the appliance

Position the appliance in the desired location.

The dishwasher is equipped with a water supply and drain hoses that can be positioned to the right or the left to facilitate installation.

 06

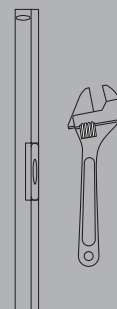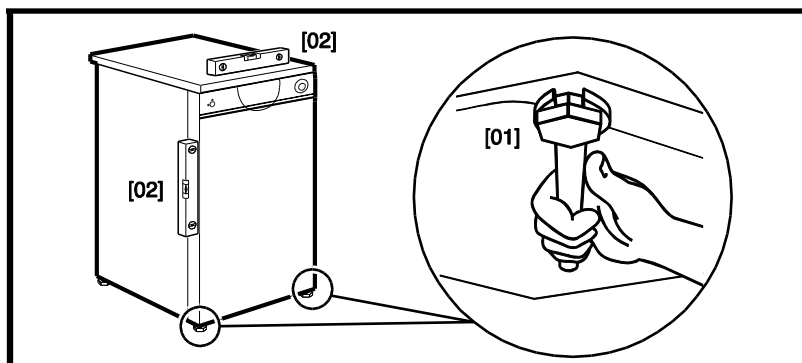

Note: For electrical connection see **Technical and legal information** section



B&Q plc
Chandlers Ford, Hants
SO53 3LE United Kingdom
www.diy.com



Castorama
Parc d'Activités B.P.101
59175 Templemars - France
0 810 104 104
www.castorama.fr
