


COOKE™ &LEWIS

60CM WARMING DRAWER

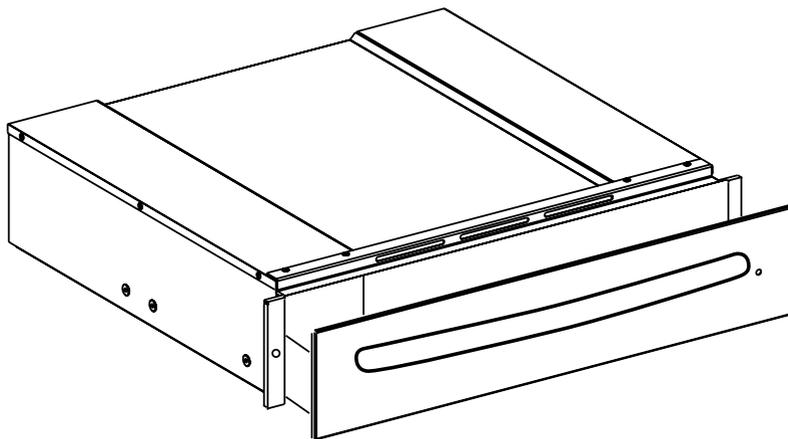


WD140CL - Version: 01



Warmer drawer - Barcode: 5052931258802



WARNING: Read the instructions before using the appliance.

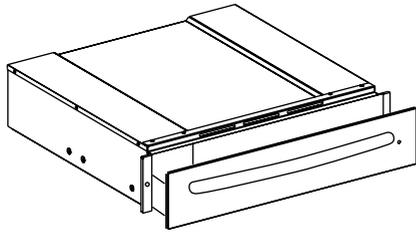


[01] x 1



[02] x 2



[03] x 3

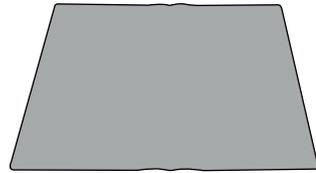

[04] x 1

1 : 1



[05] x 2 (Ø4mm x 25mm)


Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

	Getting started...	
	Your product	03
	Before you start	04
	Safety	06
	In more detail...	
	Operation	11
	Care and maintenance	14
	Troubleshooting	14
	Recycling and disposal	16
	Technical and legal information	16
	Guarantee	17
	CE Declaration of conformity	19
	Appendix...	
	Installation	20

Your product

- 01. ON/OFF switch (neon indicator)
- 02. Temperature control
- 03. Warming drawer
- 04. Anti-slip mat
- 05. Operation indicator

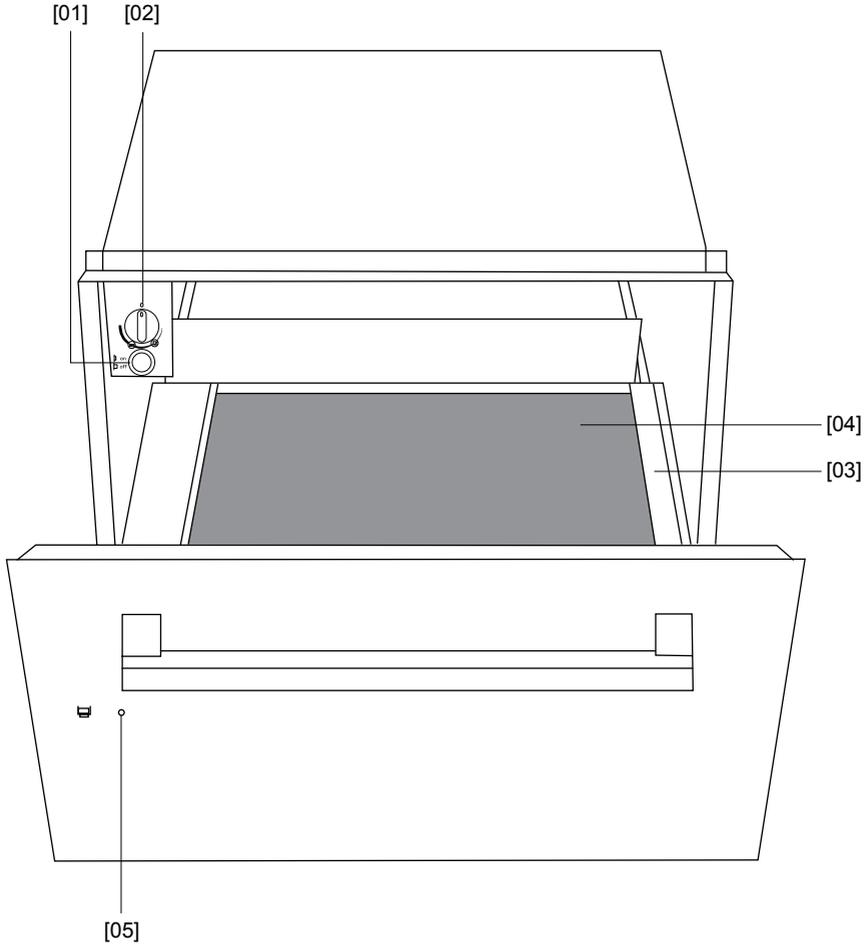


Things to check before you start

- To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 0144 75261 (Ireland).
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.
- The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

Intended use

- The warmer drawer is intended exclusively for heating crockery.
- It uses a hot air warming system. A fan distributes heat given off by a heater element evenly throughout the drawer. The circulating air ensures that crockery is heated evenly and quickly.
- A protective grille protects you from touching either the fan or the heating elements.
- Keep these instructions in a safe place for reference, and pass them on to any future user.

You will need

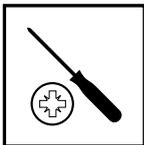

Installation guide
located at the end of
the guidebook

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.



- All installation work must be carried out by a competent person or qualified electrician.
 - This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.
-
- This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
 - Do not allow the electric cables to touch the hot parts of the appliance.
 - Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
 - Do not remove the plug in the presence of flammable gas.

- ☑ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ☑ Please dispose of the packing material carefully.
- ☑ Do not use flammable sprays in close vicinity to the appliance.
- ☑ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- ☑ Cleaning and user maintenance shall not be made by children without supervision.
- ☑ Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.
- ☑ A steam cleaner is not to be used.

- ✓ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ✓ The appliance is for domestic use only.
- ✓ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ✓ **Danger of burns!** During use the appliance becomes hot. Care should be taken to avoid touching the base of the drawer.
- ✓ **Warning!** Accessible parts may become hot during use. Children should be kept away.
- ✓ **Warning!** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- ✓ The drawer must be installed in accordance with installation instructions and all dimensions must be followed.
- ✓ Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.

- ✓ Never use a damaged appliance! Disconnect the appliance from the electrical outlet and contact your retailer if it is damaged.
- ✓ **Danger of electric shock!** Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
- ✓ To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- ✓ Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.
- ✓ Keep the appliance and its cord out of reach of children.
- ✓ If an extension cord is used, its capacity needs to be suitable for the power consumed by the appliance.
- ✓ Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.



- ✓ Connect the power plug to an easily reachable electrical outlet so that in case of an emergency the appliance can be unplugged immediately. Pull the power plug out of the electrical outlet to completely switch off the appliance. Use the power plug as the disconnection device.
- ✓ Disconnect the power plug from the electrical outlet when not in use and before cleaning.
- ✓ Always turn the appliance off before disconnecting the power plug.
- ✓ This appliance is classified as protection class 1 and must be connected to a protective ground (Earth).
- ✓ Means for full disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. To achieve this install an appropriate circuit breaker (CB) and residual current device (RCD). It should be installed in an easily reachable place so that in case of emergency the appliance can be disconnected from power immediately.
- ✓ The fixed wiring must be protected against heat surfaces.
- ✓ Do not hang an objects to the handle of the drawer.




Introduction

**Note:**

- Do not use the appliance to re-heat, cook or keep food and drink warm. Condensation from the food or drink could lead to corrosion in the appliance.
- Always use heat-resistant gloves to remove heated crockery from the drawer.
- The load bearing capacity of the appliance, irrespective of its height, is 20kg maximum.

Controls

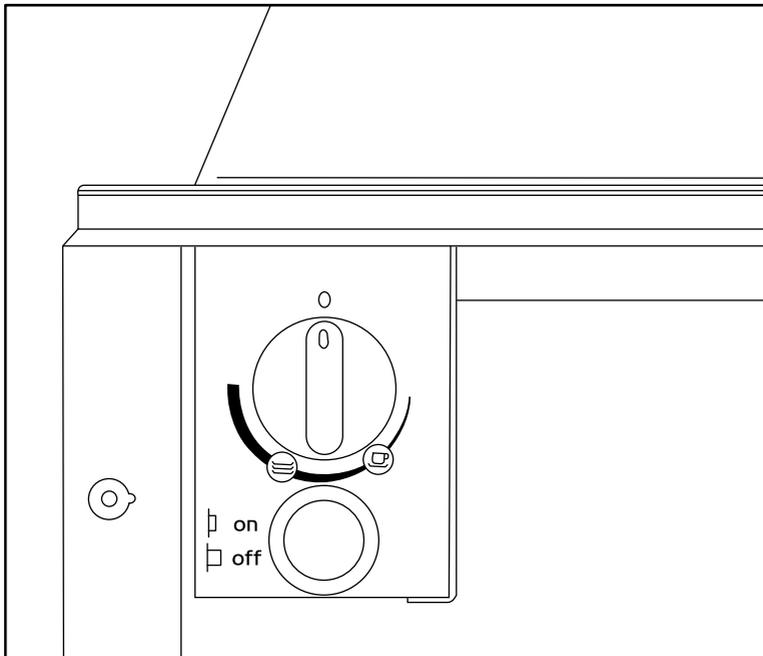

The controls consist of a temperature dial and an ON/OFF switch. These are only visible when the drawer is open. When the drawer is closed, you can tell when the appliance is switched on because the ON/OFF switch illuminates through the hole in the front of the drawer.

Using the drawer

- Place dishes inside the drawer.
- Select the temperature required.
- Switch on the appliance (). The neon indicator lights up.
- Close the drawer gently: if you use too much force, it can spring open again.
- Switch the appliance off () before removing the warmed dishes.

Selecting a temperature

- The temperature dial allows you to select any temperature between approx. 30°C and 80°C.



Note!

The temperature dial must only be turned in a clockwise direction as far as it will go and then back again. Do not turn it too far as this would damage it.

- When the selected temperature is reached, the heating element switches itself off.
- When the temperature falls below that selected, the heating element switches on again automatically.
- The temperature scale around the dial is shown in symbols rather than in °C. The symbols represent the most suitable temperature for the type of dishes depicted:
 -  approx. 40°C - For cups or glasses. Drinks poured into warmed cup do not cool down so quickly, the cup will not get too hot to handle.
 -  approx. 60°C - For serving dishes and plates. Food stays warmer for longer if served in pre-heated dishes. The dishes will not get too hot to handle.

Heating up times

Various factors will affect the heating up times:

- The material and thickness of the dishes
- The quantity
- How the dishes are arranged
- The temperature setting

It is therefore not possible to state precise times. However, the following information can be used as a guide:

Heating up times

Temperature setting  is approx. 60°C. Evenly heated dishes will take about:
30 - 35 minutes for 6 place setting.
40 - 45 minutes for 12 place setting.

As you use the plate warmer, you will get to know which setting suits your own needs best.

Capacity

The quantity that can be loaded will depend to a great extent on the type and size of your own dishes.




Note!

The maximum load bearing capacity of the drawer is 20kg.

The following layouts are suggestion only.

Layout 1			Or individually		
#	Item	Diameter (mm)	#	Item	Diameter (mm)
6	Dinner plates	280	20	Dinner plates	280
6	Soup bowls	100	36	Soup bowls	220
1	Serving bowl	220	30	Soup bowls	100
1	Serving bowl	190	10	Pizza plates	360
1	Serving bowl	170	80	Espresso cups	
Or layout 2			40	Cappuccino cups	
10	Dinner plates	280	30	Punch glasses	
10	Soup bowls	220			
Or layout 3					
18	Soup bowls	220			
2	Soup terrines	210x180			

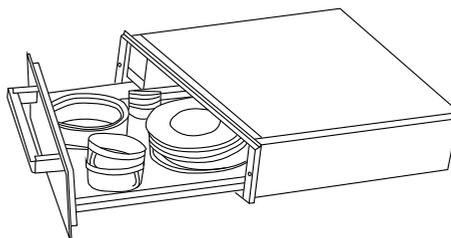

Appliance front, control panel and interior

- All surfaces and controls should be cleaned using warm water with a little washing up liquid applied with a soft sponge or cloth.
- Wipe the surfaces dry using a soft cloth.

**Note!**

Allow the appliance to cool down to a safe temperature before cleaning.

- Avoid knocking the glass front with dishes when loading the drawer as the glass is tough but not unbreakable.
- Avoid rubbing the glass surface with any abrasive cleaner or pad as it can cause scratching.
- If the glass front becomes damaged switch off the appliance at the mains to avoid electric shock.

Troubleshooting

**Note!**

Installation work and repairs to electrical components of this appliance must only be carried out by a suitably qualified and competent person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

What to do if...

...the dishes are not warm enough.

Check whether,

- The appliance has been switched on.
- The correct temperature setting has been selected.
- Any ventilation openings have been blocked by large plates or bowls.
- The dishes have been allowed to heat up for a sufficiently long time.

Various factors will affect how long the dishes will take to heat up, for example:

- The material and thickness of the dishes
- The quantity
- How the dishes are arranged
- The temperature setting

Troubleshooting

- The times quoted are only guidelines. As you use the warming drawer you will get to know which setting suits your own needs best.
- If any of the following problems occur, the advice of a qualified electrician or Customer Services must be sought.

... the crockery does not heat up.

Check whether,

- You can hear the noise from the fan or not.
- If you can hear the noise from the fan, there could be a problem with the heater element. Call Customer Services.
- If you cannot hear the noise from the fan, there could be a problem with the fan or the mains fuse has blown. Check the mains fuse and if this does not solve the problem call Customer Services.

...the crockery is too hot.

- There could be faulty on temperature control. Check the temperature control is set to the right level and if still faulty call Customer Services.

...the ON/OFF switch does not light up when the appliance is switched on.

- There could be defective on the indicator light of the switch. Check the mains fuse and if this does not solve the problem call Customer Services.



Note!

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical and legal information

Technical information:

Power supply	: 220-240V~, 50/60Hz
Power consumption	: 390-470W

Measurements:

Max. load of dishes	: 20kg
External dimensions (WxHxD)	: 594 x 577 x 141mm
Net weight	: 17kg

Legal information

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

Guarantee

This appliance is covered by a full manufacturer's 2 year parts and 2 year labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Extended parts only warranty

As testimony to our commitment to you as a valued customer of Cooke & Lewis, we will offer you an additional 3 years parts warranty absolutely free.

If during the extended parts warranty period the appliance fails and it is considered uneconomical to repair our Customer Service Department will offer you the opportunity to purchase the same or equivalent model at a discounted price.

All parts supplied free of charge under the extended warranty must be fitted by our approved engineers and will be subject to a call out charge to fit the part.



Guarantee

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland
Phone: 0844 800 1128
Email: uksupport@apelson.co.uk
Web: www.myspareparts.co.uk

Republic of Ireland (Eire)
Phone: 014475261



CE Declaration of Conformity



MANUFACTURER: CATA

ADDRESS: C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)

We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.

MACHINE APPLICATION: WD140CL

TYPE: Warmer drawer

EC DIRECTIVES APPLIED: Comply with the European Directives 2006/95/CE: LVD and the 2004/108/CE: EMC

APPLIED HARMONIZED STANDARDS:

EN 60335-2-25/A2:2006
EN 60335-2-6/A2:2008
EN 60335-1/A13:2008
EN 62233:2008

APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS: ISO9001.2008

PLACE: Torelló


David Sala

Technical Manager

This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves he right to adapt and carry out any modification considered necessary without prior warning.


B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

Possible installation examples

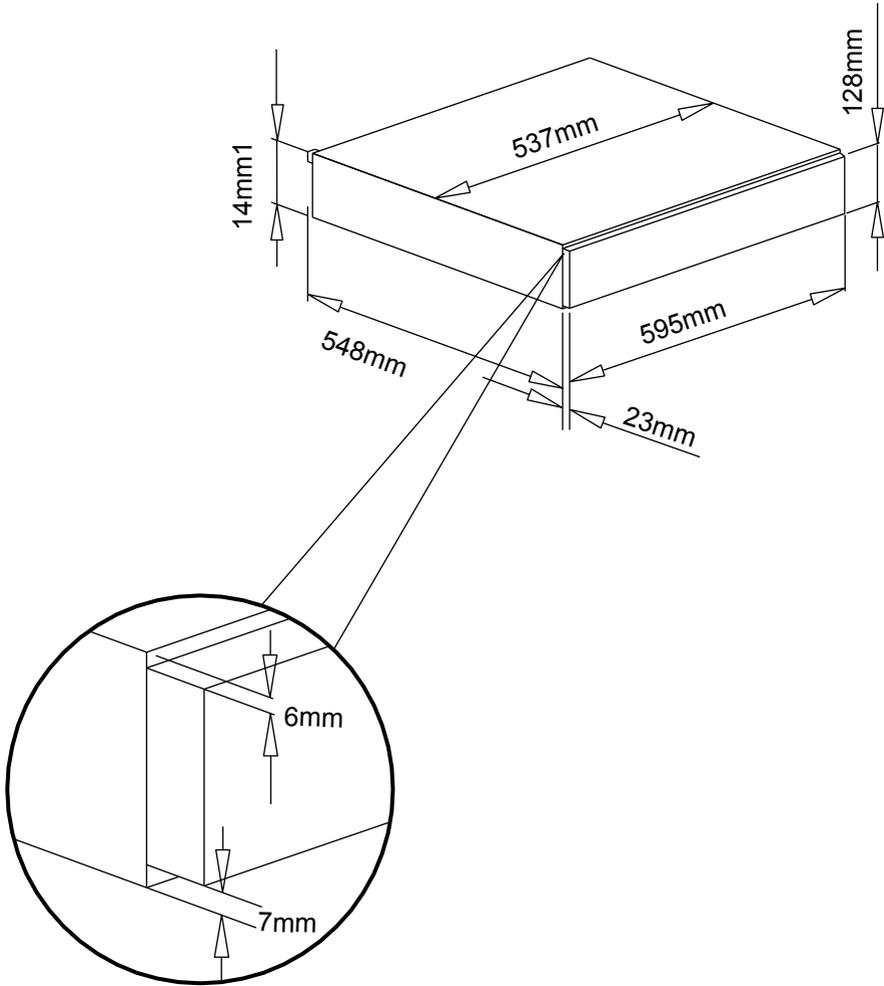

Positioning the appliance in the housing unit

Push the appliance into the housing unit as far as the vapour strip and align it.

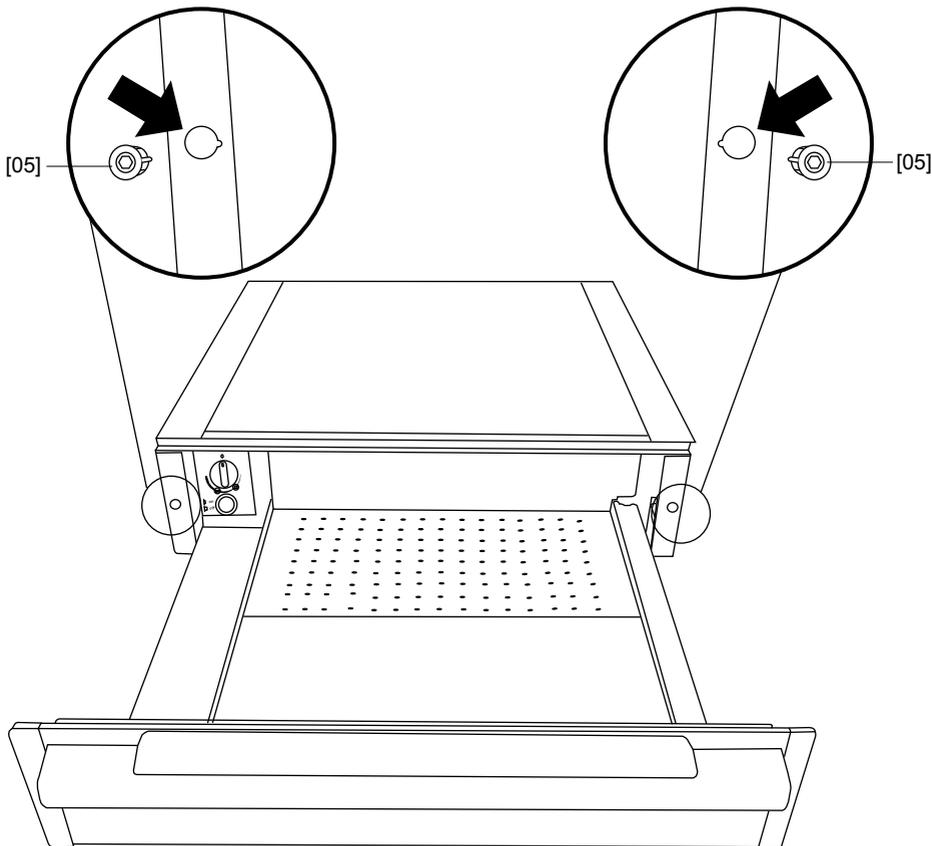


Note!

Ensure that the housing unit is aligned at a right angle.

- Open the drawer, and use the 2 screws [05] and plastic supports [02] supplied to secure the appliance to the side walls of the housing unit.
- The appliance is supplied with three metal trims [03] which have an adhesive underside. These trims must be stuck on to the drawer so that they seal any gaps between the housing unit and the drawer (Fig 1).
- Then position the side trims x2 as shown in Fig 1 so that they are flush with the side walls of the housing unit and If the unit does not have a back wall you do not need the third trim. If the unit has a back, position the back trim x1 as shown in Fig 1, so that it is flush with the back wall of the housing unit.

Positioning the appliance in the housing unit

Fig 1

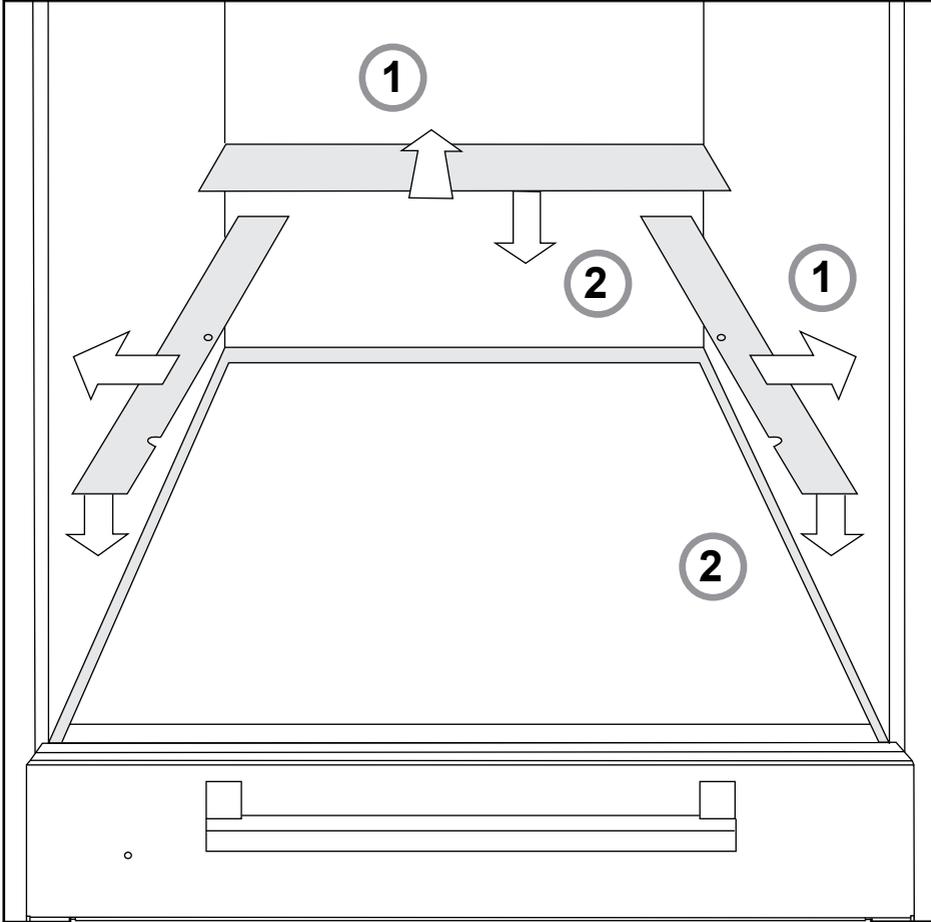



B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

