


# COOKE<sup>TM</sup> &LEWIS Cooker hood

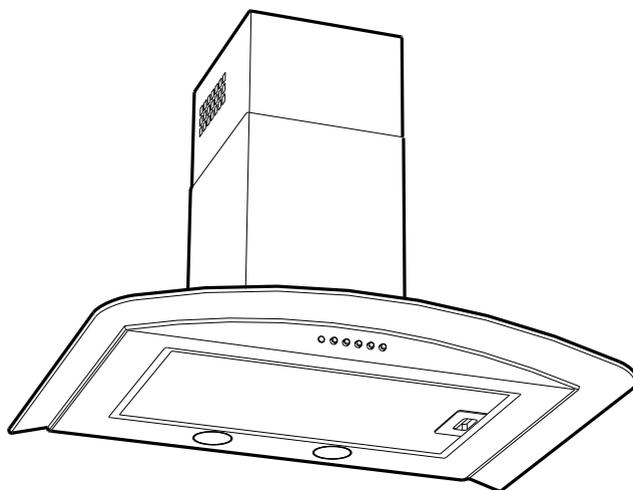


CLLED60-BK / CLLED70-BK / CLLED90-BK-Version:01




Cooker hood - Barcode: 5052931536917 / 5052931536924 / 5052931536931




**WARNING:** Read the instructions before using the appliance.

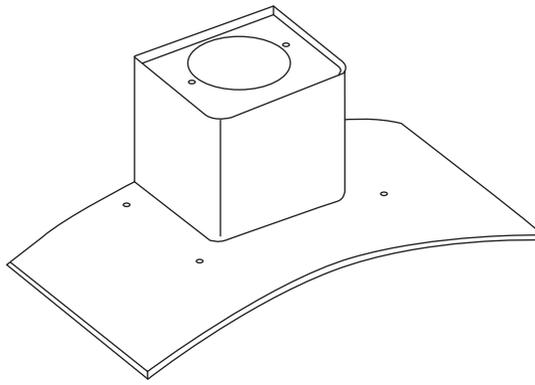

[01] x 1

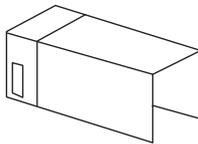


[02] x 1

 


[03] x 1




[04] x 2

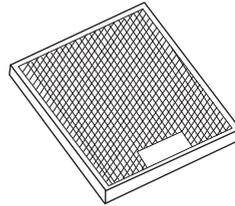

[05] x 1

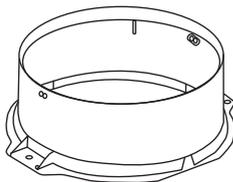


[06] x 1

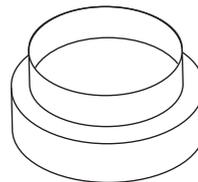


[07] x 1

**Cooker hood**

 


[08] x 4

 

[09] x 4



 [10] x 1



[11] x 6

1 : 1

[12] x 4  
(3.9x18)



[13] x 6  
(3.9 x 32mm)



[14] x 4  
(3.4 x 10mm)



Cooker Hood

# Let's get started...



## Getting started...

05

**Safety**

06

**Before you start**

10



## In more detail...

12

**Product functions**

13

**Operation**

13

**Care and maintenance**

14

**Troubleshooting**

17

**Recycling and disposal**

18

**Technical and legal information**

19

**Guarantee**

21

**CE Declaration of conformity**

23



## Appendix

**Installation**

24

**ErP Information of the bulb provided**

32

**Information for EU66**

33




# Getting Started...

**Safety**

06

**Before you start**

10

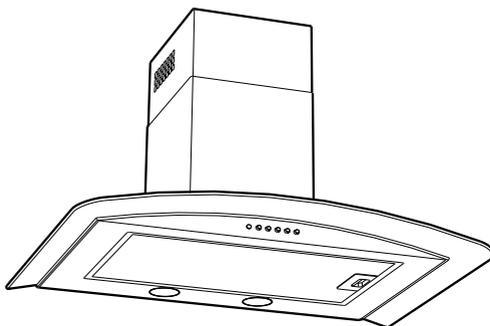

Getting started...

**Safety**

**These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.**



- All installation work must be carried out by a competent person or qualified electrician.
  - This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.
- This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.
  - Accessible parts may become hot during use. Young children should be kept away. Care should be taken to avoid touching the appliance
  - The Manufacturer highly recommends that this appliance be kept out of the reach of babies and small children.
  - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- ✓ Keep the appliance and its cord out of reach of children less than 8 years.
- ✓ Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.
- ✓ Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.
- ✓ Do not allow the electric cables to touch the hot parts of the appliance.
- ✓ Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- ✓ Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.
- ✓ **Warning:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards
- ✓ Please dispose of the packing material carefully.
- ✓ Do not use flammable sprays in close vicinity to the appliance.
- ✓ We also recommend that great care be taken

during use and cleaning. Read the cleaning and maintenance sections for this appliance carefully.

- ✓ A steam cleaner is not to be used.
- ✓ The appliance is not intended to be operated by means of external timer or separated remote-control system.
- ✓ The appliance is for domestic use only.
- ✓ **Warning:** Consult local regulations regarding fumes outlets. Do not connect the hood to a fume, ventilation or hot air duct. Confirm that room ventilation is appropriate with the local authorities. Make sure the maximum air extraction flow rate for the appliances in the room does not exceed 4 Pa (0.04 mbar). The room must have adequate ventilation if an extractor hood is used simultaneously with appliances that run on gas or other fuels. The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels. Regulations regarding air extraction must be complied with.
- ✓ **Warning:** Before connecting the hood: switch off the electricity supply and check that the supplied voltage and frequency coincide with that indicated on the appliance nameplate.
- ✓ **Warning:** The hood may stop working during an electrostatic discharge (e.g. lightning). This involves no risk of damage. Switch off the

electricity supply to the hood and reconnect after one minute.

- ✓ To avoid the risk of fire, clean the metal filter regularly and closely watch and regulate pans containing hot oil.
- ✓ Do not use the hood if it shows signs of damage or imperfection. Contact customer services.
- ✓ Flambe cooking must not be carried out underneath this appliance.
- ✓ When installing the appliance, make sure that the following distances between the top of cooker or hob and the lowest part of the cooker hood must be observed:
  - > Gas hobs: 750mm.
  - > Electric hobs: 650mm.
- ✓ The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- ✓ Regarding the information pertaining to installation, thanks to refer to the below paragraph of the manual.
- ✓ Regarding the information for replacing the bulb, please see section "Care and maintenance"



### Warning

There is a risk of electric shock and fire if cleaning is not carried out in accordance with the instructions.

## Things to check before you start


---

- To avoid the risks that are always present when you use an electrical appliance it is important that this cooker hood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the cooker hood please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0H44 800 1128 (UK), 01 4475261 (Ireland) and 01 56 48 02 60 (France)..
- Check the package and make sure you have all of the parts listed.
- Decide on the appropriate location for your product.
- This product contains glass. Care must be taken when fitting or handling to prevent personal injury or damage to the product.


## Your product

---


### 1. Cooker hood

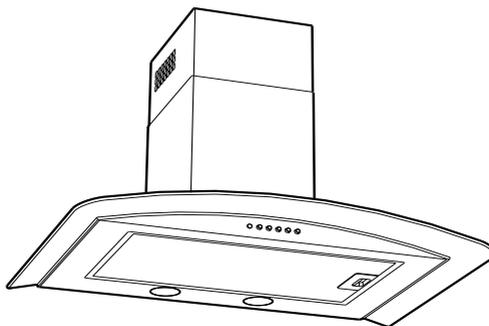

# Tools required

 


Ø6mm

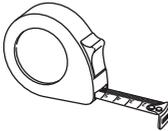


SELF ADHESIVE ALUMINIUM TAPE

Extraction

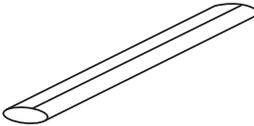


Ø125mm or Ø150mm

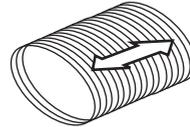

Ø125mm or Ø150mm

Aluminium

Recirculation

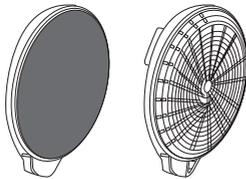

CARBFILT4 (UK & IE)  
OR CARBFILT4CL (FR)

## CARBON FILTER ORDERING HOTLINE

0144 800 1128 (UK) 01 4475261 (IE)



## In more detail...



<b>Product functions</b>	13
<b>Operation</b>	13
<b>Care and maintenance</b>	14
<b>Troubleshooting</b>	17
<b>Recycling and disposal</b>	18
<b>Technical and legal information</b>	19
<b>Guarantee</b>	21
<b>CE Declaration of conformity</b>	23

## Product functions

This appliance extracts the air of the kitchen to remove the odours and keep an optimum level of the air quality inside the room, it also allows you to illuminate the cooking area.


Cooker Hood

Operation

## Operation

- Switch on the appliance at the switched fused connection unit. The appliance is ready for operation functions.

Five-button panel

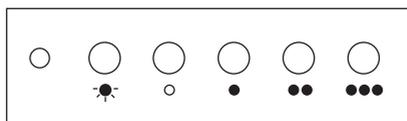

- Extractor fan operating control pilot light.
- ⊖ Lighting on and off.
- Extractor fan off.
- Extractor fan speed - button: speed 1
- Extractor fan speed - button: speed 2
- Extractor fan speed - button: speed 3


To obtain the best results from your cooker hood it is recommended that you leave it switched on for 15 minutes after you have finished cooking.

In more detail...





## Care and maintenance

**Warning:** always switch off the electricity supply before carrying out maintenance work on the hood. In the event of a fault, contact customer services.


### Bulb replacement

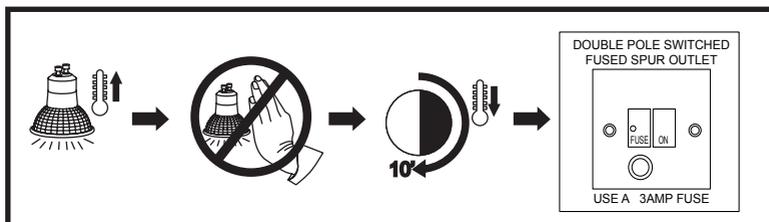

The Bulb may be hot, leave it 10 minutes before replacement.

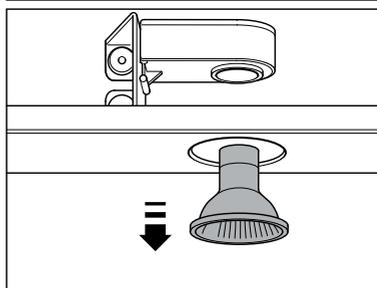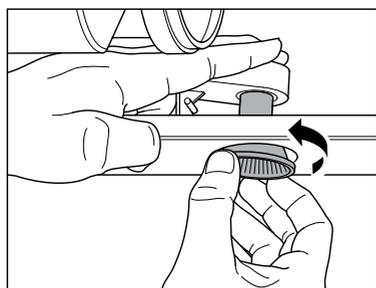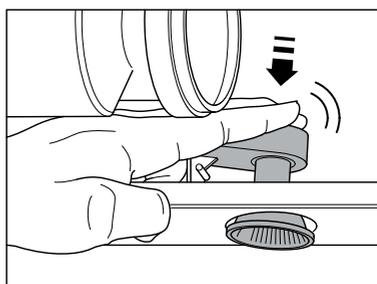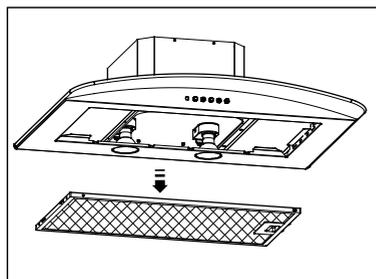

Turn to replace the Bulb.

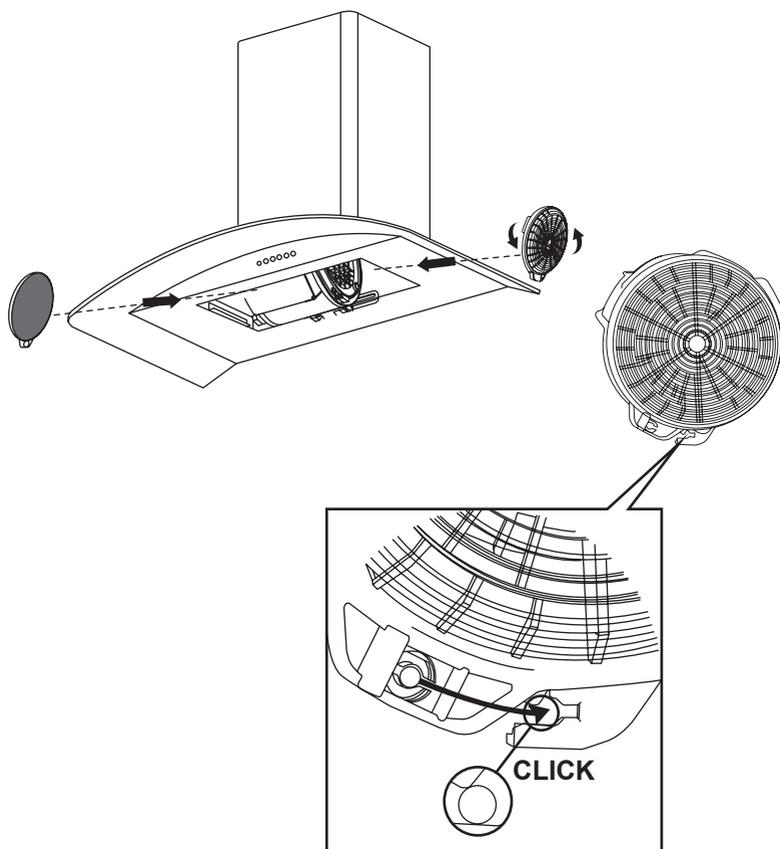
**Active charcoal filter replacement:**

2 X ACTIVE CHARCOAL FILTER (NOT SUPPLIED).  
MODEL NUMBER CARBFILT4 (UK & IE) OR CARBFILT4CL (FR).



### Warning


Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.

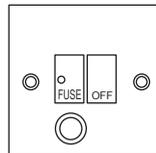

### Metal filter replacement:

Exterior cleaning: use non-corrosive, liquid detergent and avoid the use of abrasive cleaning products.


1 MONTH

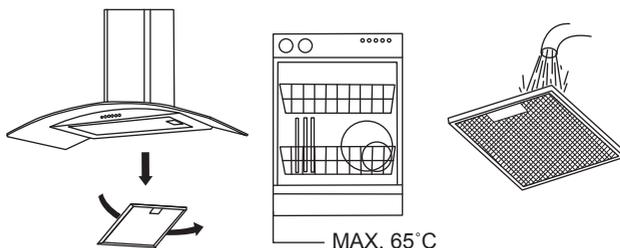

**Aluminium filters:** to avoid fires, clean thoroughly once a month. To do so, remove the filters and wash with hot water and detergent. If using a dishwasher, position the filters vertically to improve the cleaning process.



3 MONTH

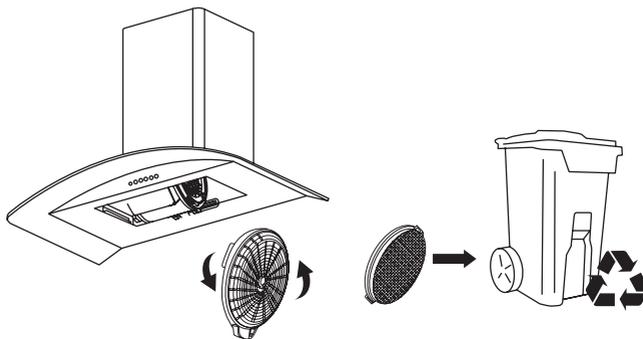

Active charcoal filters: replace every 3 months.

**Important:** increase the filter cleaning/replacement frequency if the hood is used for more than 2 hours a day. Always use genuine filters from the manufacturer.

## Troubleshooting

Fault	Cause	Solution
Excessive vibration.	The appliance is not installed properly on the brackets.	Take down the appliance and check it is properly fixed.
	The fan blade is damaged.	Switch off the appliance. Repair to be carried out by qualified service personnel only.
	The fan motor is not fixed tightly.	
Light on, but motor does not work.	The fan blade is jammed.	
	The motor is damaged.	
Both light and motor do not work.	Light bulb blown.	Replace with a bulb with correct rating.
	Power connection loose.	Check power supply.
Suction performance reduced.	Speed may be too low.	Select a higher speed.
	Distance between the cooker hood and the hob is too great.	Readjust the distance to: Gas hobs: 750mm Electric hobs: 650mm
	Aluminium grease filter is dirty.	Clean filters. See <i>Care and maintenance</i> section.
	Top vent might be obstructed.	Clear any obstruction.
	Optional vent kit might be twisted.	Ensure that the vent kit is fitted to the manufacturers instructions.
Works normally but cooking smells linger.	Charcoal filter not fitted in recirculation mode or charcoal filter is full of grease.	Fit charcoal filter if recirculating or change the filter. See <i>Care and maintenance</i> section.

## Recycling and disposal

### Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.


On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

## Technical specifications

Supply voltage	220-240V~, 50Hz
Power consumption - Fan	95W
Power consumption - Luminary	GU10 2 x 4W Max
Decorative Lights	8W
Power consumption - Total	111W
Protection class	II
Light bulb	2X3W LED(supplied)

In more detail...

## Wiring

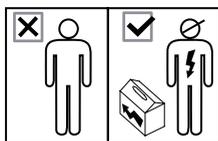


All installation work must be carried out by a competent person or qualified electrician.  
Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate.



**WARNING: THIS APPLIANCE MUST NOT BE EARTHED.**

Mains Supply could be connected to the Mains Voltage by Direct Connection

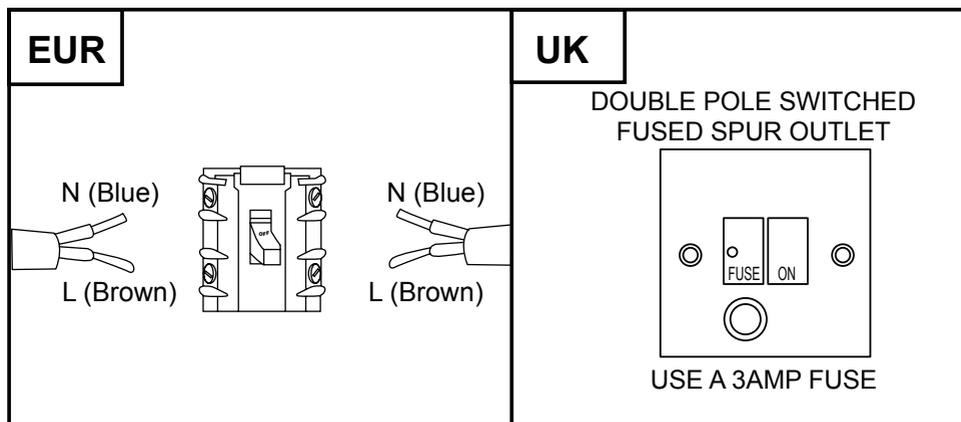

### Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

## Technical and legal information

---

The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

### Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

### Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.



**WARNING: THIS APPLIANCE MUST NOT BE EARTHED**

The appliance is supplied with a 2-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 3 Amps.

The wires in the mains lead are coloured in accordance with the following code:

**Brown = L - Live**

**Blue = N - Neutral**

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

## Guarantee

---

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferrable between EU countries.

This guarantee is non-transferrable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

### **Exclusions to the guarantee**

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

## Guarantee

---

### Exclusions to the guarantee (continued)

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

### This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza, 2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

### Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

#### UK & Northern Ireland

Phone: 0344 800 1128\*

Email: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)

Web: [www.spareszone.co.uk](http://www.spareszone.co.uk)

#### Republic of Ireland (Eire)

Phone: 014475261

Email: [uksupport@apelson.co.uk](mailto:uksupport@apelson.co.uk)

\* Local call rates apply

## CE Declaration of Conformity



**MANUFACTURER:** CATA

**ADDRESS:** C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)

We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.

**MACHINE APPLICATION:** CLLED60-BK / CLLED70-BK / CLLED90-BK

**TYPE:** Decorative Cooker Hood

**EC DIRECTIVES APPLIED:** Comply with the European Directives 2006/95/EC: LVD and the 2004/108/EC: EMC  
2011/65/EU: RoHS

**APPLIED HARMONIZED STANDARDS:**

Standard EN 60335-1 Safety of household and similar electrical appliances  
Standard EN 60335 part 2-31, particular requirements for range hoods  
Standard EN 55014 Limits and methods of measurement of radio disturbance  
Standard EN 61000-3-2 Electromagnetic compatibility limits for harmonic.  
Standard EN 61000-4-5 Electromagnetic compatibility (EMC)

**APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS:** ISO9001.2008

**PLACE:** Torelló


David Sala  
Technical Manager

This appliance respects laws of the suppression of radiointerference. As the Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

**B&Q plc,**  
Chandlers Ford, Hants,  
SO53 3LE United Kingdom  
[www.diy.com](http://www.diy.com)

In more detail...


01

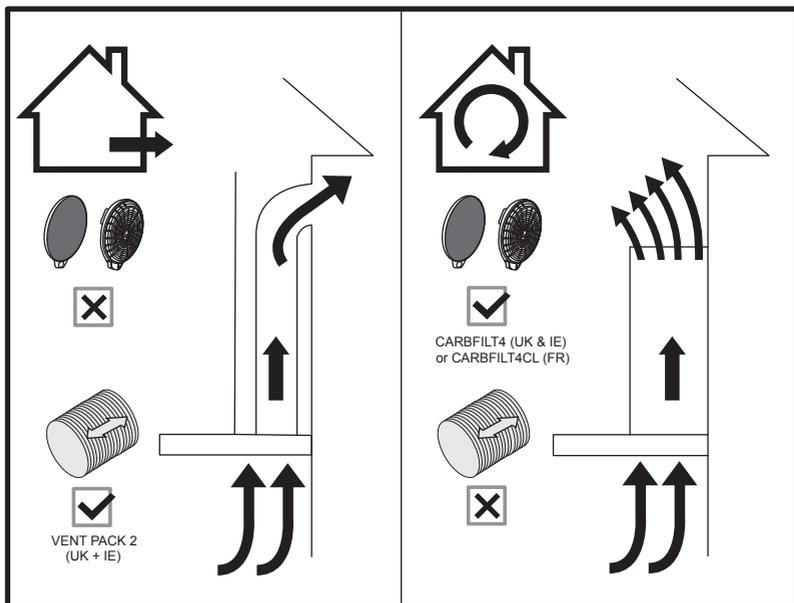

You can choose two type of installation:

- Ducted option
- Recirculation option

**Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards**

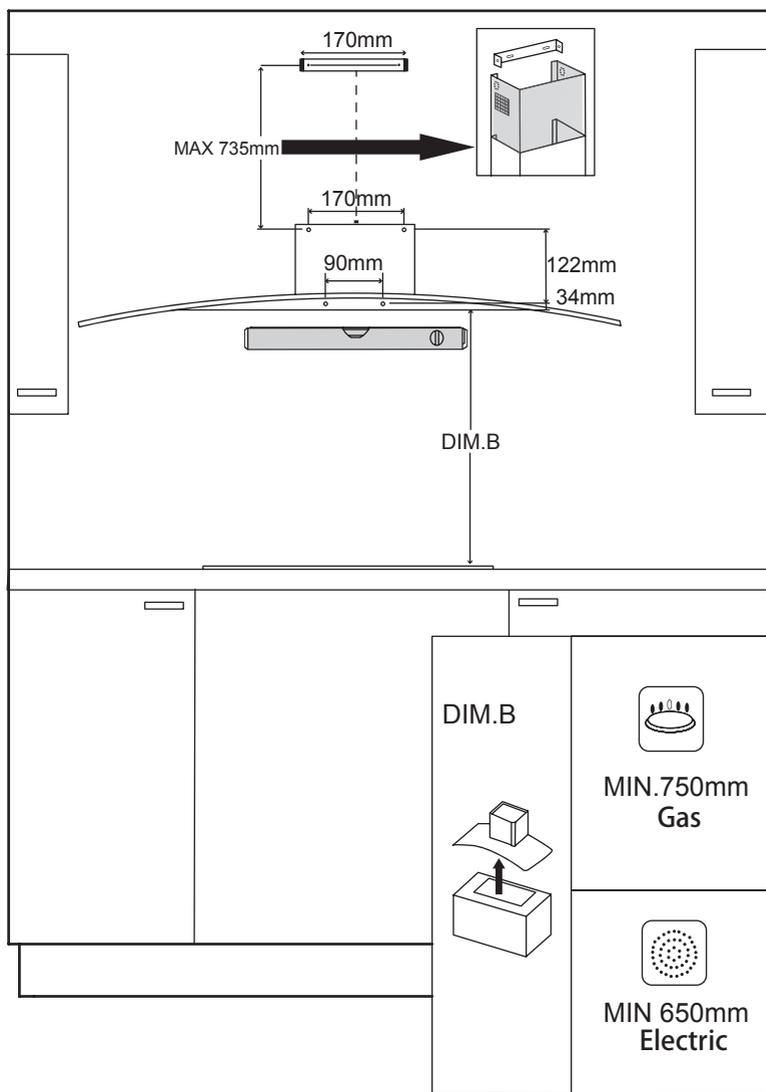

Mark on the kitchen wall the holes to fix the cooker hood.



**The Wall Plugs supplied are suitable for solid walls only. When fixing to any other type of wall use suitable alternative fixings.**


 
# 03



[11] x 6



[13] x 2

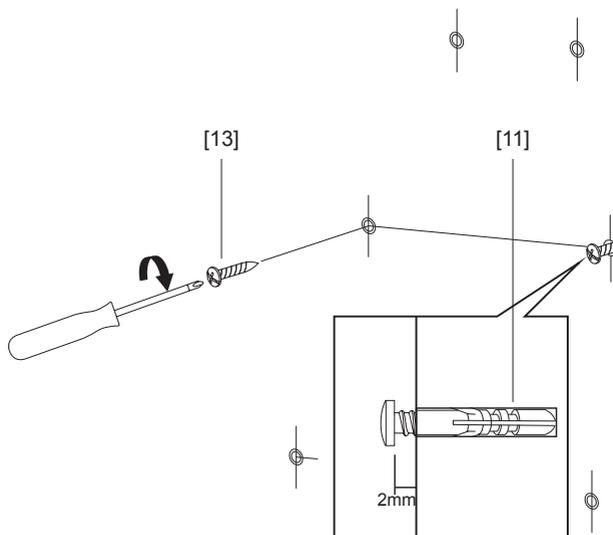

Drill the holes, insert the wall plugs in all 6 holes. Insert the screws in the middle 2 holes in fig.03. Maximum gap between top 2 holes and middle 2 holes can be no more than 735mm, dependant on ceiling height


# 04




[03]





[13] x 2

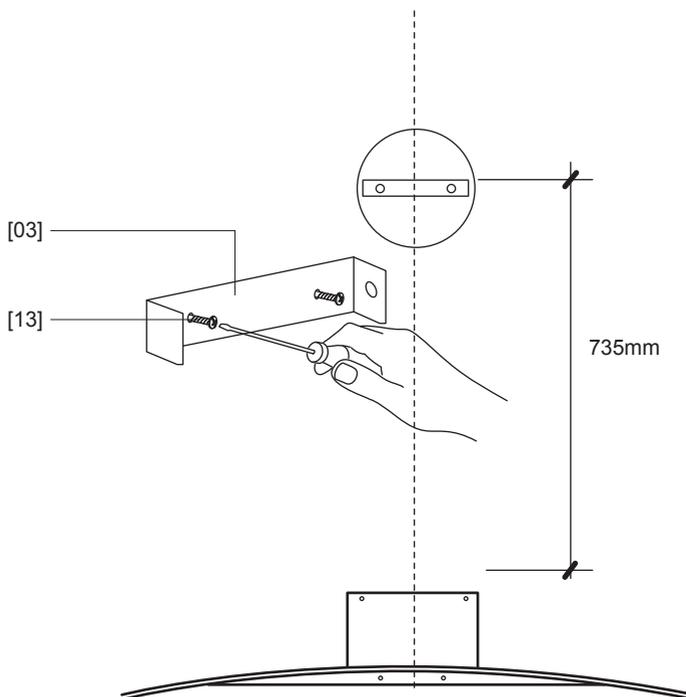

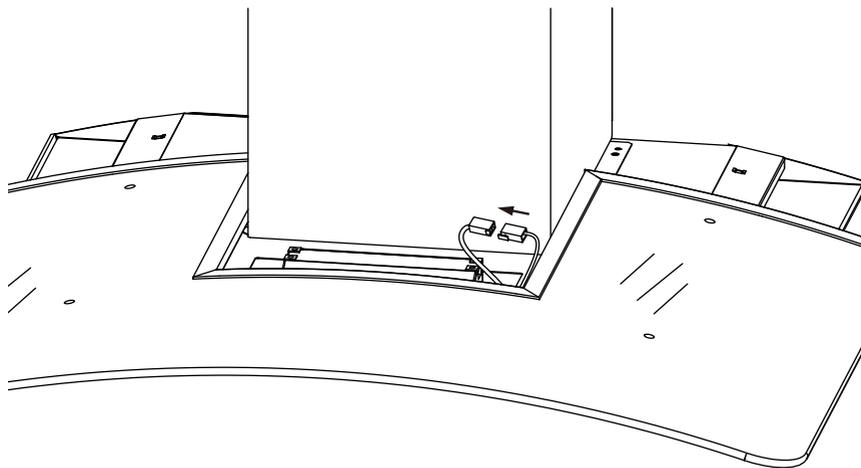

 Insert the 4x bolts, rubber washer and washer and tighten with the allen key, ensuring not to over tighten as this may cause damage to the glass.

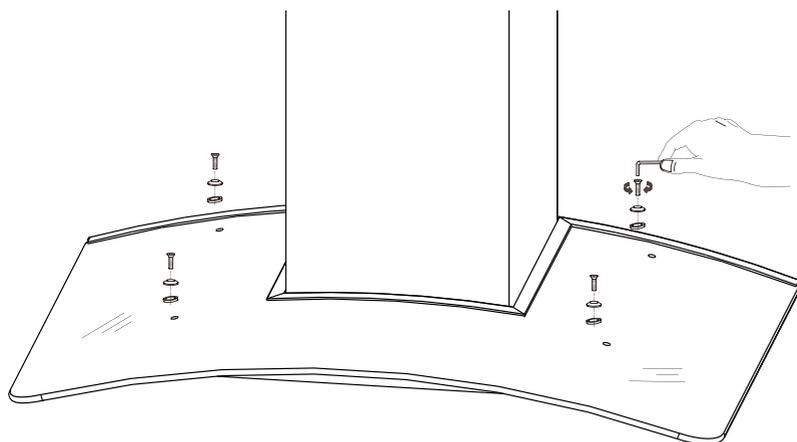

[08] x 4



[09] x 4





[12] x 4



[10]


Insert the 4x bolts, rubber washer and washer and tighten with the allen key, ensuring not to over tighten as this may cause damage to the glass.

# 07

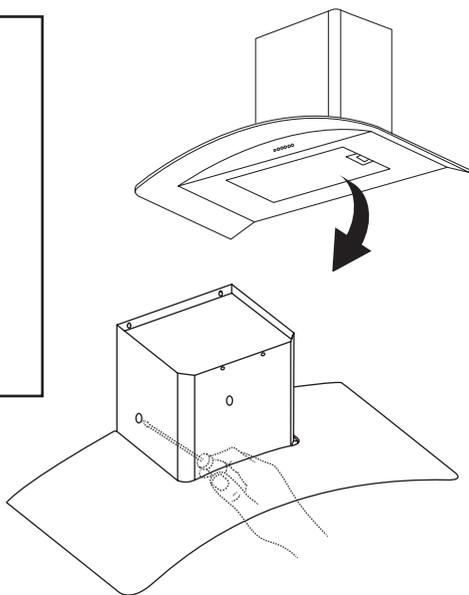
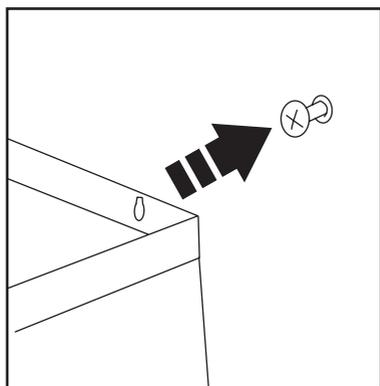


Position the hood over the top two screw then fix the bottom screws from inside the hood.


# 08

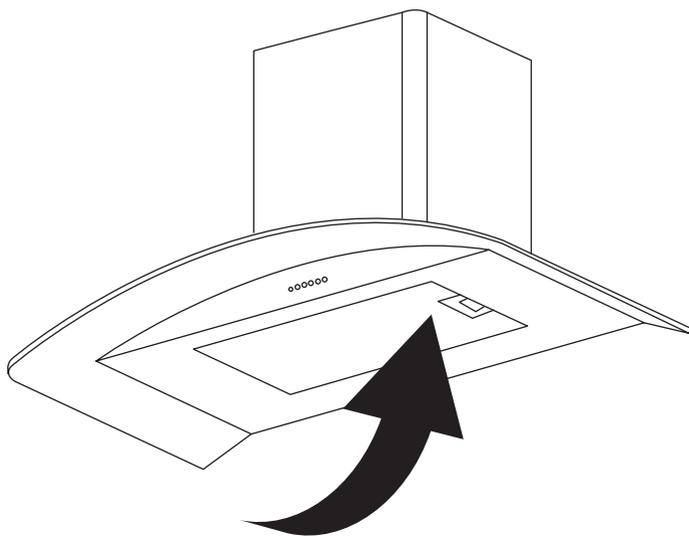

Replace the aluminium Filter

 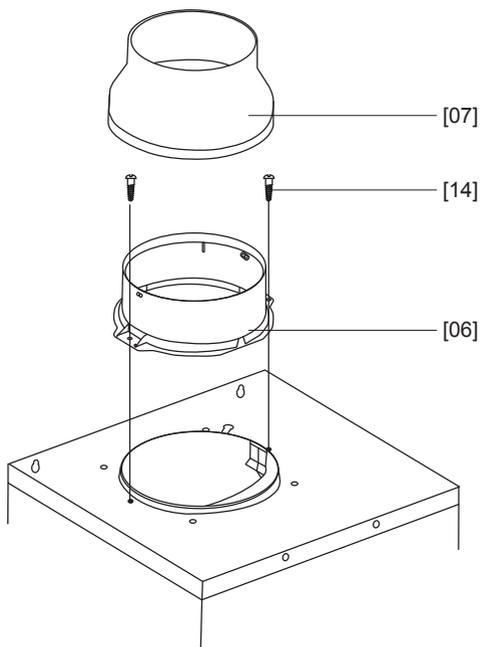

[06]


 


[07]




[14] x 2

Fix the Collar and the reducer if required..

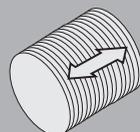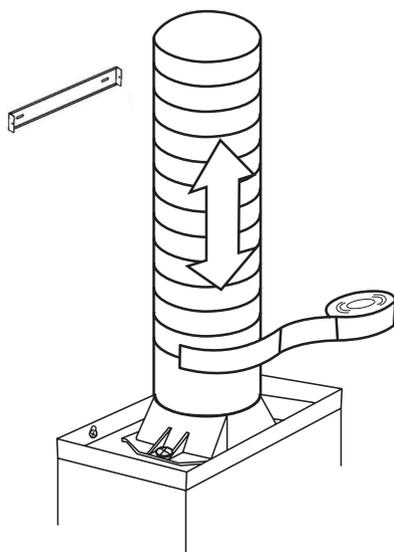


Vent Pack 2  
(UK + IE)  
x 1

 


Fix the Ducting Tube 125 or 150 using tape or clamp.

# 11

 


[02] x 1

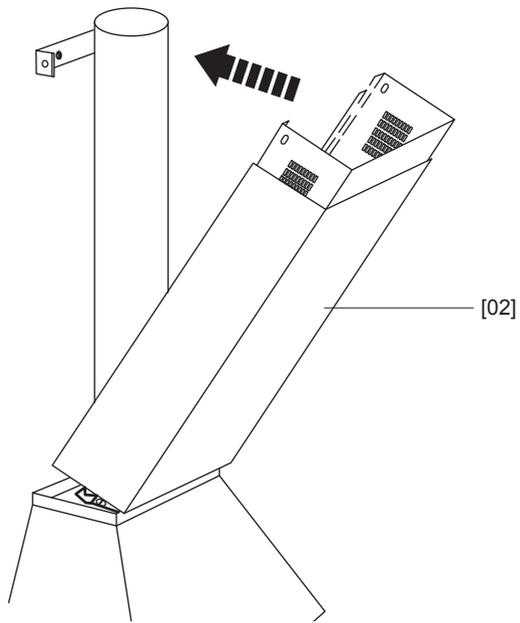


# 12



[14] x 2

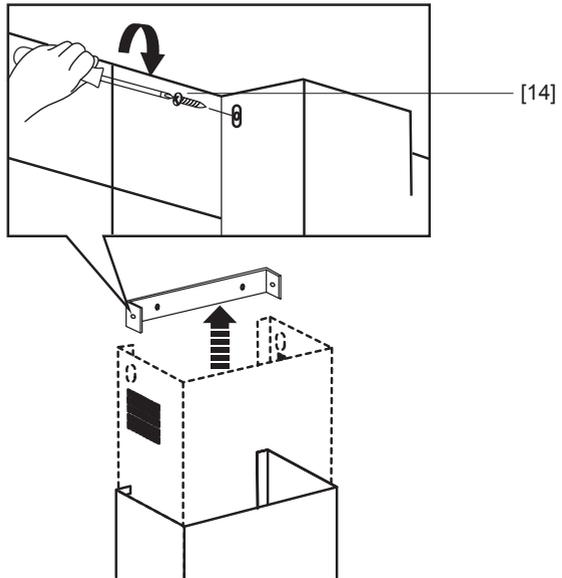

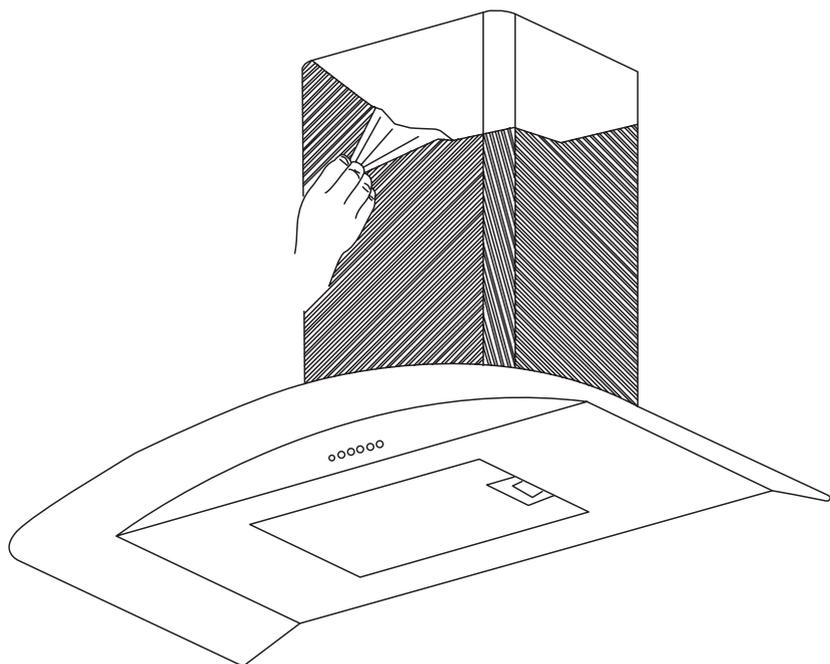

Remove the Protector film

For recirculating option refer to **Care and maintenance** section.

**Note:** For electrical connection see **Technical and legal information** section.



GB IE

### Appendix...

ErP Information of the bulb provided

RUS

### Приложение...

Данные об эффективной мощности излучения приведены на лампе

FR

### Annexe...

Informations ErP de l'ampoule fournie

ES

### Анехо...

Información ErP de la bombilla incluida

PL

### Załącznik...

Informacja ErP dotycząca dołączonej żarówki

TR

### Ek bölüm...

Ürünle birlikte verilen ampulün ErP bilgileri

<p><b>GU10 3W</b>          Warm light   Lumi re chaude   ciepłe światło          Теплый свет   Luz cálida   Sıcak ışık          3000 Kelvin</p>		<p>100°</p>
	<p>55 mm 50 mm</p>	<p>95% &lt; 2.0 s</p>
<p>≥ 7500 x</p>	<p>Mercury          Mercure          Merkurij          Меркурій          Mercurio          Civa</p> <p>Hg          &lt;10 mg</p>	<p><b>220-240 V</b></p>
<p><b>195</b> Lumen</p>		<p><b>3 Watt</b> 15000 h</p>

**ENERG** Y IJA  
 IE IA  
 энергия · ενεργεια  
**FSL**® GU10-3-30/A257/27

A <sup>++</sup>	
A <sup>+</sup>	<b>A<sup>+</sup></b>
A	
B	
C	
D	
E	

**3 kWh/1000h**

220-240V ~ 50Hz

**(A) Information of the cooker Hood (www.diy.com)**

	Symbol	Value	Unit
Model identification		CLLED60-BK CLLED70-BK, CLLED90-BK	
Annual Energy Consumption	$AEC_{hood}$	54.3	kWh/a
Time increase factor	f	1.6	
Fluid Dynamic Efficiency	$FDE_{hood}$	9.8	
Energy Efficiency Index	$EEl_{hood}$	84.6	
Measured air flow rate at best efficiency point	$Q_{BEP}$	208.6	m <sup>3</sup> /h
Measured air pressure at best efficiency point	$P_{BEP}$	123	Pa
Maximum air flow	$Q_{max}$	343.7	m <sup>3</sup> /h
Measured electric power input at best efficiency point	$W_{BEP}$	72.9	W
Nominal power of the lighting system	$W_L$	14	W
Average illumination of the lighting system on the cooking surface	$E_{middle}$	315	lux
Measured power consumption in standby mode	$P_s$	—	W
Measured power consumption off mode	$P_o$	0	W
Sound power level	$L_{WA}$	Max. 62 / Min. 58	dB

The measurement and calculation method of the above table was done in accordance with commission regulation (EU) No 65/2014 & 66/2014.

**(B) The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process.**

- (1) Install the cooker hood in a proper place where there is efficient ventilation.
- (2) Clean the cooker hood regularly so as not to block the airway.
- (3) Remember to switch off the cooker hood light after cooking.
- (4) Remember to switch off the cooker hood after cooking.

**(C) Information for dismantling.**

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with you Local Authority or retainer for recycling advice.







---

**B&Q plc,**  
Chandlers Ford, Hants,  
SO53 3LE United Kingdom  
[www.diy.com](http://www.diy.com)

---