



USER MANUAL

**OVG60SS V2A
BUILT-IN GAS OVEN**

**CUSTOMER CARE
0844 800 1128**

cata

IMPORTANT INFORMATION

OVG60SS

CONTENTS

Important Information		Daily operation of your oven	
Before you start	2	Minute minder	7
Safety information	3	Using the grill	7
Environment information	4	Using the oven	7
Technical and legal information	4	Care and Maintenance	
Voltage and frequency of power supply	4	How to keep your oven in good condition	8
Your oven		How to remove the oven doors	9
Your control panel	5	Replacing the oven lamp	10
Your Oven	5	Installation	11
First use/Setting up your oven		Trouble shooting	13
Cleaning the oven	6	Guarantee	14
The right gas connection	6	Useful contacts	15
Product functions	6		

BEFORE YOU START

To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Apelson on 0844 800 1128.

Decide on the appropriate location for your product.

 
Check the package and make sure you have all of the parts below.

Your product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.


The specifications plate displays all the necessary identification information for ordering replacement parts.

If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.


OVG60SS Oven x1

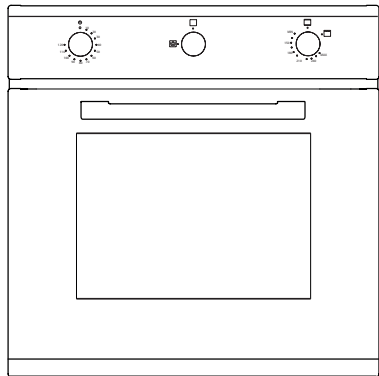


Grill pan handle x1

 


Grill pan/drip tray x1

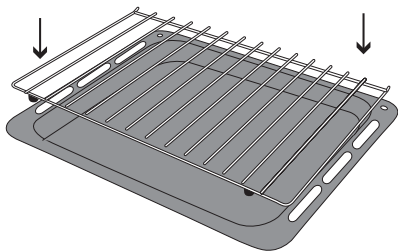 


Oven shelf x1

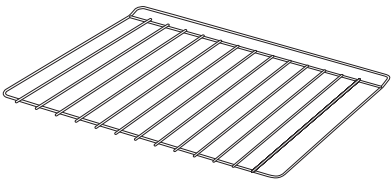 

Ø4mm x 25mm screws x4

 

Plastic washers x4

 

SAFETY INFORMATION

These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.

All installation work must be carried out by a competent person or qualified electrician.

This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

This appliance complies with all current European safety legislation, however, the Manufacturer must emphasise that this compliance does not prevent the surfaces of the appliance from heating up during use and remaining hot during its operation.

Do not allow the electric cables to touch the hot parts of the appliance.

Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.

Do not remove the plug in the presence of flammable gas.

Do not install the appliance outdoors in a damp place or in an area which may be prone to water leaks such as under or near a sink unit. In the event of a water leak allow the machine to dry naturally.

Please dispose of the packing material carefully.

Do not use flammable sprays in close vicinity to the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.

A steam cleaner is not to be used.

The appliance is not intended to be operated by means of external timer or separated remote-control system.

The appliance is for domestic use only.

The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.

Danger of burns! During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

WARNING! Accessible parts may become hot during use. Children should be kept away.

WARNING! If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

Do not lean on the door or place any objects on the door of the appliance. This can damage the door hinges.

The oven should be cleaned regularly and any food deposits removed.

WARNING! Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

The oven must be installed in accordance with installation instructions and all dimensions must be followed.

Before connecting the appliance to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.

Never use a damaged appliance! Disconnect the appliance from the electrical outlet and contact your retailer if it is damaged.

Danger of electric shock! Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.

To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.

Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.

Keep the appliance and its cord out of reach of children.

Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.

Connect the power plug to an easily reachable electrical outlet so that in case of an emergency the appliance can be unplugged immediately. Pull the power plug out of the electrical outlet to completely switch off the appliance. Use the power plug as the disconnection device.

Means for isolating the appliance must be incorporated in the fixed wiring in accordance with the current wiring regulations. An all-pole disconnection switch having a contact separation of at least 3 mm in all poles should be connected in fixed wiring.

Disconnect the power plug from the electrical outlet when not in use and before cleaning.

Always turn the appliance off before disconnecting the power plug.

IMPORTANT INFORMATION

OVG60SS

This appliance is classified as protection class I and must be connected to a protective ground (Earth).

Means for full disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. To achieve this install an appropriate circuit breaker (CB) and residual current device (RCD). It should be installed in an easily reachable place so that in case of emergency the appliance can be disconnected from power immediately.

The fixed wiring must be protected against heat surfaces.

Do not hang an objects to the handle of the oven door.

Do not cover the bottom of the oven with aluminium foil or other objects. Caution: Risk of fire!

Do not allow aluminium foil, plastic, paper or fabric contact with heating elements.

Never leave the appliance unattended during use, especially when cooking with flammable substances (e.g. hot oil, fat, etc.).

ENVIRONMENTAL INFORMATION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



This symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Do not store or never use harsh chemicals, sprays, flammable or non-food in or near the oven. Oven is designed specifically for heating or cooking food. The use of corrosive chemicals in heating or cleaning will damage the unit and may cause injury.

Should any food inside the oven catch fire, keep the door closed. Switch the oven off and disconnect the power supply.

Always exercise caution when opening the door. Move to side, open the door slowly to vent the hot air and/or steam. Make sure your face is away from the opening and make sure there are no children or pets near the oven.

Only use utensils that are suitable for use in this type of oven.

TECHNICAL AND LEGAL INFORMATION


TECHNICAL INFORMATION:

Power supply:	220-240V~, 50/60Hz
Bulb Type:	E14
Wattage & Voltage:	25W/220-240V
Measurements:	
Oven capacity (net):	56L
External dimensions (WxHxD):	594x594x543mm
Net weight:	32.5kg

LEGAL INFORMATION


The Manufacturer declines all liability for damage caused to persons and objects due to incorrect or improper installation of the appliance.

 YOUR CONTROL PANEL

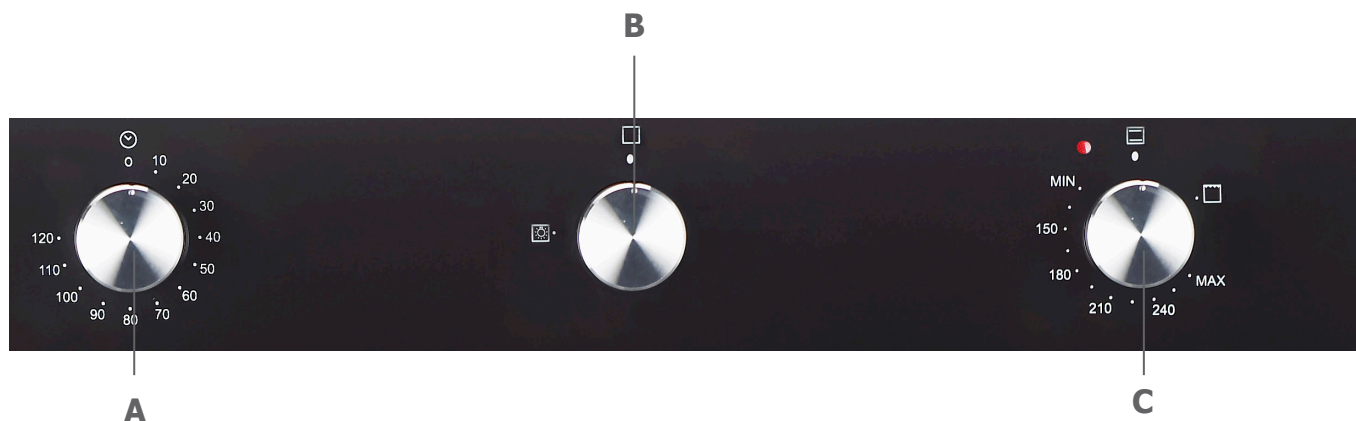


A. Minute minder dial

B. Light selector dial

C. Oven/ Grill selector dial, turn anticlockwise to light the oven and rotate to desired cooking temperature. Turn clockwise to the  symbol to select the grill function

YOUR OVEN

 - a.** Control panel
- b.** Shelf guides
- c.** Oven shelf
- d.** Grill pan set

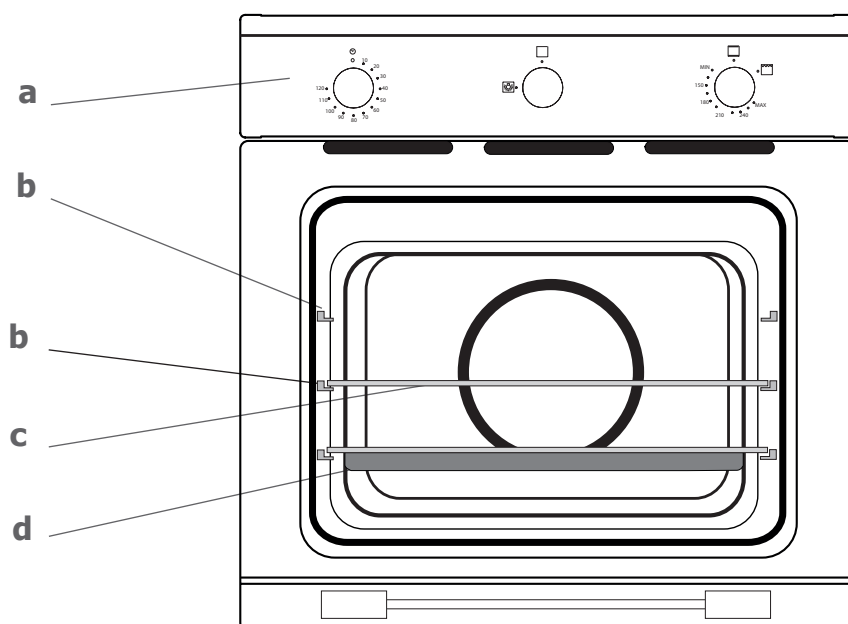

FIRST USE/SETTING UP YOUR OVEN

OVG60SS

We recommend that you read the instructions in this owner's manual carefully before use for the best performance and to extend the life of your appliance, as it will provide you with all the instructions you require to ensure its safe installation, use and maintenance. Always keep this owner's manual close to hand since you may need to refer to it in the future.

Thank you.

CLEANING THE OVEN FOR THE FIRST TIME

Before using the oven for the first time we recommend that oven be switched on and set to there highest temperature. Keep the oven door closed and leave the appliance on for 30 minutes with nothing in it. Ensure adequate ventilation during this process by opening any doors and windows in the room. Any odours created during this operation will be due to the evaporation of substances used to protect the appliance during storage prior to installation.

THE RIGHT GAS CONNECTION

This oven can be use on NATURAL GAS or LPG.

It is a legal requirement that all gas appliances are Installed & Serviced by a competent person in accordance with the current editions of the following Standards & Regulations:

Gas Safety (Installation & Use) Regulations
Building Regulations
British Standards
Regulations for Electrical Installation

Installation and service of any gas product must be made by a suitably qualified and registered person competent on the type of product being installed or serviced and holding a valid certificate of competence for the work being carried out.

PRODUCT FUNCTIONS

The gas oven is controlled by a thermostat between 50°C and 250°C, depending on the temperature required. The thermostat light turns on and off to indicate the temperature control during use.

The gas grill is switched on using the oven/ grill selector switch.

Turning the light selector dial to the light position will illuminate the inside of the oven even if no cooking fucntion is selected..

The appliance is equipped with auto ignition and is also fitted with a safety switch off and flame failure devices (FFD's).

DAILY OPERATION OF YOUR OVEN

OVG60SS

This gas oven uses gas for both the oven and grill functions and is equipped with a minute timer.

MINUTE MINDER

To use the minute minder, set the timer by turning the dial clockwise. The numbers correspond to minutes (maximum 120 minutes). Setting is on a gradual scale and intermediate positions between the numbers can be used. At the end of the set time a buzzer sounds but does not turn off the oven.

The light selector dial "☀" setting turns on the light inside the oven during normal operation.

USING THE GRILL

When using the grill function the appliance door must be closed.

To ignite the grill, turn the oven / grill selector dial clockwise to the position "☐". The grill is equipped with an auto ignition system.

To operate this system completely open the oven door and press the grilling dial and turn it to the maximum temperature setting; this automatically activates the electric spark ignition device. Once the burner has ignited, keep the knob pressed down for a few seconds to allow the thermocouple to heat up.

If the burner has not lit after 15 seconds, stop trying, leave the oven door open and wait 1 minute before trying again.

USING THE OVEN

 
The oven is equipped with an auto ignition system.

To operate this system completely open the oven door and press the thermostat dial and turn it to the maximum temperature setting; this automatically activates the electric spark ignition device. Once the burner has ignited, keep the knob pressed down for a few seconds to allow the thermocouple to heat up.

If the burner has not lit after 15 seconds, stop trying, leave the oven door open and wait 1 minute before trying again.

You can also lighting the burner by hand by completely open the oven door and turn the thermostat dial to max. Place a lit match close to the end of the flame pipe "A" in the centre of the bottom of the oven and press the thermostat knob. Once the burner has ignited, keep the knob pressed down for a few seconds to allow the thermocouple to heat up and check that the burner has lit properly through the inspection hole B. The cooking temperature is set by turning the knob clockwise to the value required, between 50° and 250°.

If the burner accidentally goes out, turn the dial to the off position and wait at least one minute before trying to relight it.

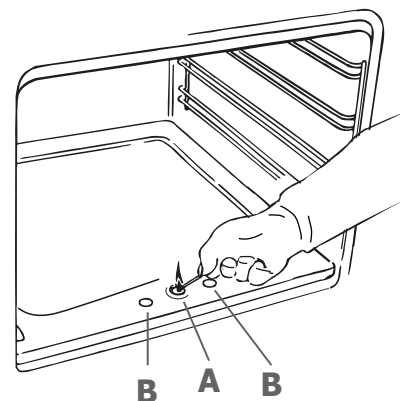

WARNING

 
The gas oven and grill cannot be used simultaneously.

CARE AND MAINTENANCE

OVG60SS

WARNING

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.



CAUTION

Do not use hot water, dilutents, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc. for cleaning so as not to damage the enamel coating and plastic. The appliance must not be cleaned directly with water as this could cause rusting or render the insulation less efficient

The enamelled and stainless steel parts of the appliance should be wiped clean using a damp cloth using the minimum possible amount of soap and lukewarm water. Do not use abrasive powders or corrosive substances which could ruin the surfaces. Remember stainless steel could tarnish and restoring these surfaces can be difficult. Specialist stainless steel cleaners are available from major supermarkets. After cleaning these surfaces should be wiped with a clean cloth and lukewarm water to remove any traces of detergent.

The inside of the oven should ideally be cleaned when the oven is still warm using a damp cloth and the minimum possible amount of soap and hot water. After cleaning the soap should be removed using a clean damp cloth and hot water. Dry the interior of the oven with a soft dry cloth after cleaning.

Do not use abrasive powders, cleaners, sponges or acids (lime scale remover) to clean the interior as these can damage the enamel. If the interior is very difficult to clean use a specialist oven cleaner. Follow closely the instructions provided on the packaging.

WARNING!

DO NOT USE EXCESSIVE AMOUNTS OF WATER WHEN CLEANING THE PRODUCT AND NEVER USE A STEAM CLEANER TO CLEAN THE INSIDE OF THE OVEN.

If the oven is in use for an extended length of time condensation may form. Once the oven has cooled remove the condensation using a dry cloth.

HOW TO KEEP YOUR OVEN IN GOOD CONDITION

Before cleaning your oven, or performing maintenance, disconnect it from the power supply.

To extend the life of your oven, it must be cleaned frequently, keeping in mind that

The enamelled or stainless steel parts should be washed with lukewarm water without using any abrasive powders or corrosive substances which could ruin them. Stainless steel could get stained. If these stains are difficult to remove, use special products available on the market. After cleaning, it is advisable to rinse thoroughly and dry.

The inside of the oven should preferably be cleaned immediately after use, when it is still warm, with hot water and soap. The soap should be rinsed away and the interior dried thoroughly. Avoid using abrasive detergents (for example cleaning powders, etc.) and abrasive sponges for dishes or acids (such as lime scale remover, etc.) as these could damage the enamel. If the grease spots and dirt are particularly tough to remove, use a special product for oven cleaning, following the instructions provided on the packet.

WARNING!

NEVER USE A STEAM CLEANER TO CLEAN THE INSIDE OF THE OVEN.

If you use your oven for an extended period of time, condensation may form. Dry it using a soft cloth.

 
There is a rubber seal surrounding the oven opening which guarantees its perfect functioning. Check the condition of this seal on a regular basis. If necessary, clean it and avoid using abrasive products or objects to do so. Should it become damaged, please contact the customer service centre. We recommend you avoid using the oven until it has been repaired.

Clean the glass door using non-abrasive products or sponges and dry it with a soft cloth.


HOW TO REMOVE THE OVEN DOORS

For a more thorough clean, you can remove the oven door.
To remove the oven door use the following instructions:


1. Open the door to the full extent.

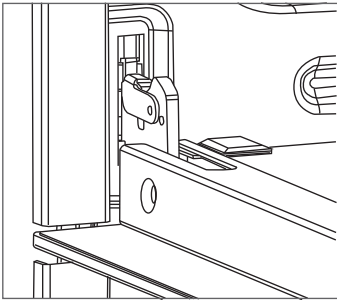

 
2. Open the lever A completely on the left hand hinges

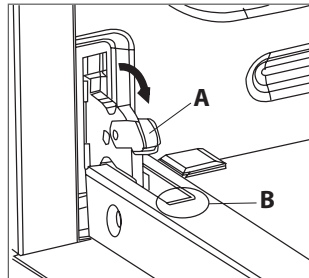

 
3. Open the door to angle as shown.

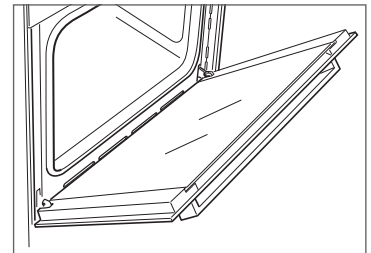

 4. Close the door until the left & right hand levers A are hooked to part B of the door

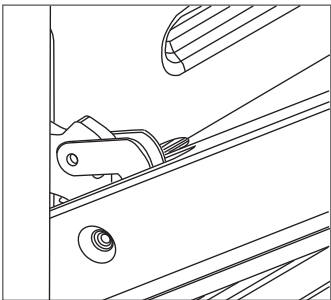

 5. Withdraw the hinge hoods for there position following arrow C.

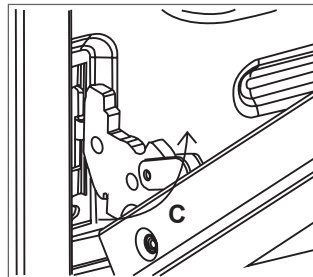

To replace the door, reverse the above procedure

 
CARE AND MAINTENANCE

OVG60SS

REPLACING THE OVEN LAMP


WARNING!

Disconnect the appliance from the electricity supply, open the oven door remove the oven shelves. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

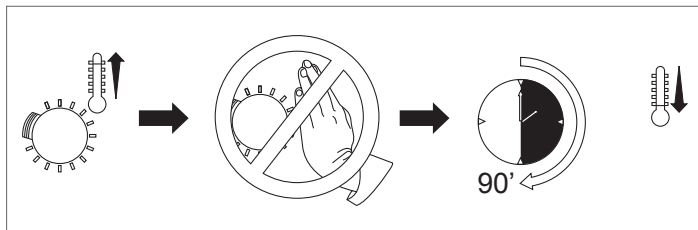

Remove the glass cover that protects the light bulb by turning it anti-clockwise.

 Unscrew the old light bulb and dispose of it safely and ecologically, change it for one as specified in the "Technical data" and replace the cover.

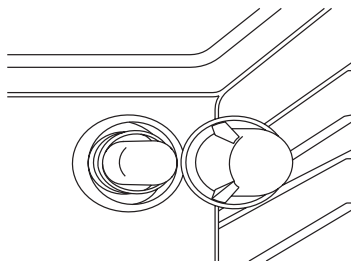

Only a qualified person in compliance with the instructions provided must install the appliance. The manufacturer declines all responsibility for improper installation, which may harm persons and animals and damage property.

CAUTION

 
The power supply to the appliance must be switched off before any adjustments or maintenance work is undertaken.

INSTALLATION OF BUILT-IN SINGLE GAS OVEN

This product can be fitted under the work surface or in a tall unit. To ensure that the oven functions correctly it should be installed using one of the two methods shown:


INSTALLATION METHOD 1

Fitting under the work top in a new or existing oven housing unit.

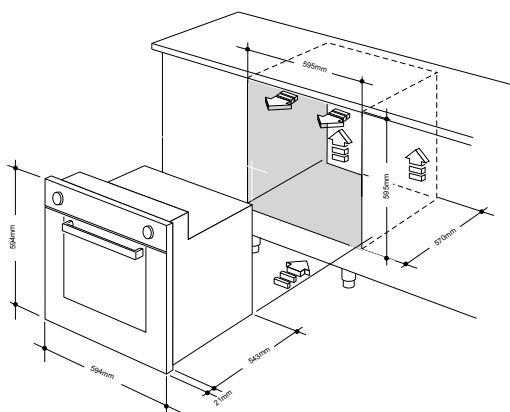

INSTALLATION METHOD 2

 Fitting in a tall unit in a new or existing oven housing unit.

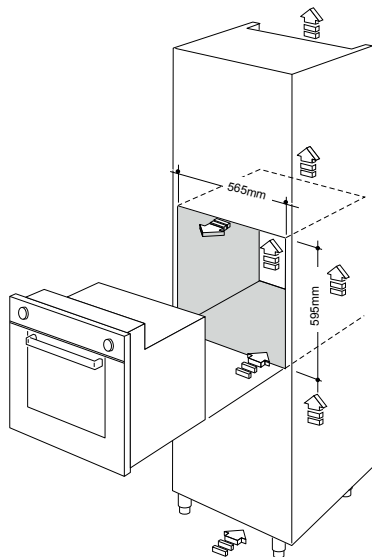

ELECTRICAL CONNECTION

All installation work must be carried out by a competent person or qualified electrician.

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

 
WARNING:

THIS APPLIANCE MUST BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

WARNING

Make sure the fused spur outlet is located in an accessible position.

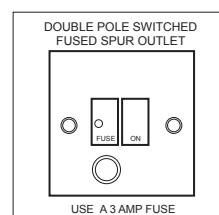

DIRECT CONNECTION

If the appliance is being connected directly to the mains an omnipolar circuit-breaker must be installed with a minimum opening of 3mm between contacts.

If the cable is damaged or to be replaced, the operation must be carried out by a qualified electrician with dedicated tools to avoid any accidents.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

The cable must be checked regularly and replaced by authorized technicians only.

ELECTRICAL REQUIREMENTS

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.

WARNING:

THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

INSTALLATION

OVG60SS

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended

The fuse must be rated at 3 Amps.

The wires in the mains lead are coloured in accordance with the following code:

Brown = L - Live

 
Blue = N - Neutral

Green and Yellow = ⊕ - Earth

The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.


Disconnect the appliance from the mains supply before carrying out any kind of maintenance or cleaning.

FIXING THE GAS SINGLE OVEN

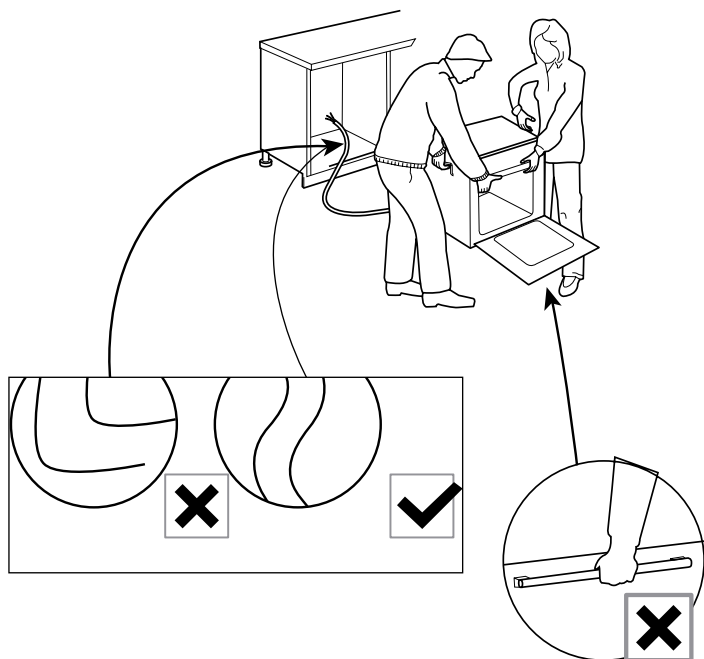

Once the oven has been lifted into place insert the 4x plastic washers into the holes located within the sides of the metal casing of the oven as shown and secure with 4x screws [Ø4mm x 25mm].

 
Also ensure that you adjust the furniture doors adjacent to the sides of the oven so there is a 5 - 7mm gap between them, otherwise heat displaced from the oven might damage the furniture door.

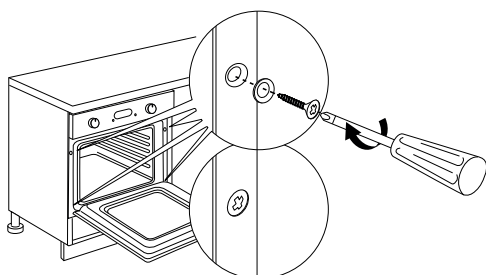

VENTILATION

An air circulation slot that should be cut into the plinth if fitted. See below for air circulation requirements.

 It is essential when installing your oven there is adequate air circulation around the appliance to ensure the correct operation of the appliance. Inadequate air circulation will greatly impair the operation of the appliance and can affect surround cabinets due to the rise in temperature.

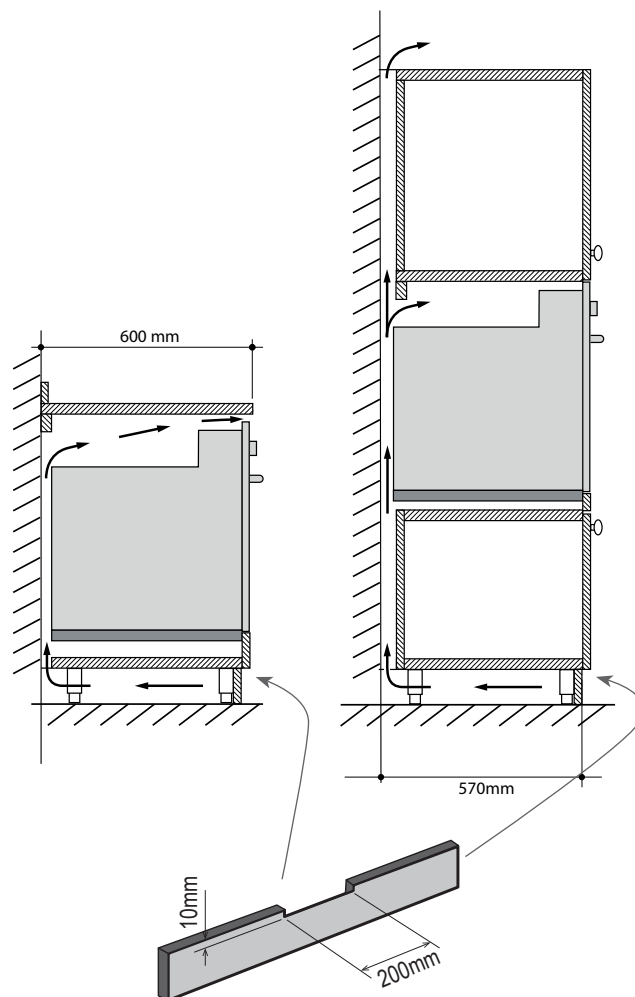

THE APPLIANCE IS NOW READY TO USE.

WHAT SHOULD I DO IF THE OVEN/GRILL DOESN'T STAY LIT?

If the burner has not lit after 15 seconds, stop trying, leave the oven door open and wait 1 minute before trying again.

If after trying again the burner does not stay lit contact the customer service centre.

WHAT SHOULD I DO IF THE OVEN LIGHT DOES NOT ILLUMINATE?

The oven light could be faulty. Replace the oven light bulb (see "Replacing the oven lamp the lamp").

If after replacing the light it still does not illuminate contact the customer service centre.

I CAN STILL HEAR A FAN RUNNING AFTER THE OVEN HAS BEEN SWITCHED OFF?

The oven is equipped with a thermodynamically controlled cooling fan. This can continue to run after the oven has been used if the temperature around the oven is still high. This feature is designed to dissipate heat to protect the oven and the installation housing. This does not indicate a fault and is normal operation.

GUARANTEE

OVG60SS

This appliance is covered by a full manufacturer's 24 month parts and labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by Apelson then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at Apelson's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the Apelson guarantee will be valid and any further call outs during this prescribed period will be covered by Apelson on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland and Ireland but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product.

The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

EXCLUSIONS TO THE GUARANTEE

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - Apelson will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs. Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then Apelson reserves the right to charge for the call out at the going rate of £55.00 plus VAT.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by Apelson Appliances UK Ltd, 1 Express Way, Off California Drive, Castleford, WF10 5QJ

USEFUL CONTACTS

TECHNICAL SUPPORT

Apelson Appliances UK LTD

Phone: 0844 800 1128

Email: uksupport@apelson.co.uk

Web: www.myspareparts.co.uk

SPARES

Apelson Appliances UK LTD

Phone: 0844 800 1128

Email: uksupport@apelson.co.uk

Web: www.myspareparts.co.uk

SERVICE AND GUARANTEE

Apelson Appliances UK LTD

Phone: 0844 800 1128

Email: uksupport@apelson.co.uk

Web: www.myspareparts.co.uk

**APELSON APPLIANCES UK LTD,
1 EXPRESS WAY
OFF CALIFORNIA DRIVE
CASTLEFORD
WF10 5QJ**