


COOKE™ &LEWIS

60cm Built in dishwasher

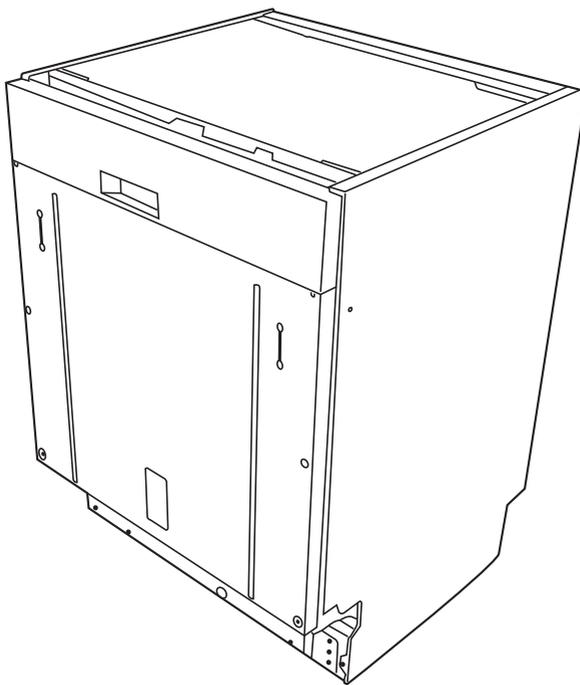

BDW60CL - Version: 01



60cm Built in dishwasher - Barcode: 5052931258482



 
WARNING: Read the instructions before using the appliance.




[01] x 1



[02] x 2




[03] x 1

 

[04] x 1




[05] x 1

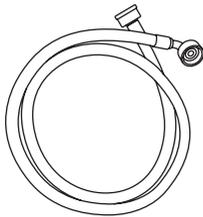


[06] x 1



[07] x 4 (Prefilled on appliance)

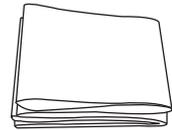


[08] x 1

 


[09] x 1

 1 : 1



[10] x 4 (3.9x19mm)

 

[11] x 4 (4x37mm)



[12] x 4 (3.9x13mm)


Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

	Getting started...	03
	Your product	03
	Before you start	04
	Safety	06
	In more detail...	09
	Operation	09
	Care and maintenance	22
	Troubleshooting	25
	Recycling and disposal	27
	Technical and legal information	28
	Guarantee	31
	CE declaration of conformity	33
	Appendix...	
	Installation	34


Your product

1. Upper spray arm
2. Lower spray arm
3. Filters
4. Rinse aid dispenser
5. Detergent dispenser
6. Cutlery basket
7. Lower basket
8. Upper basket
9. Top sprayer

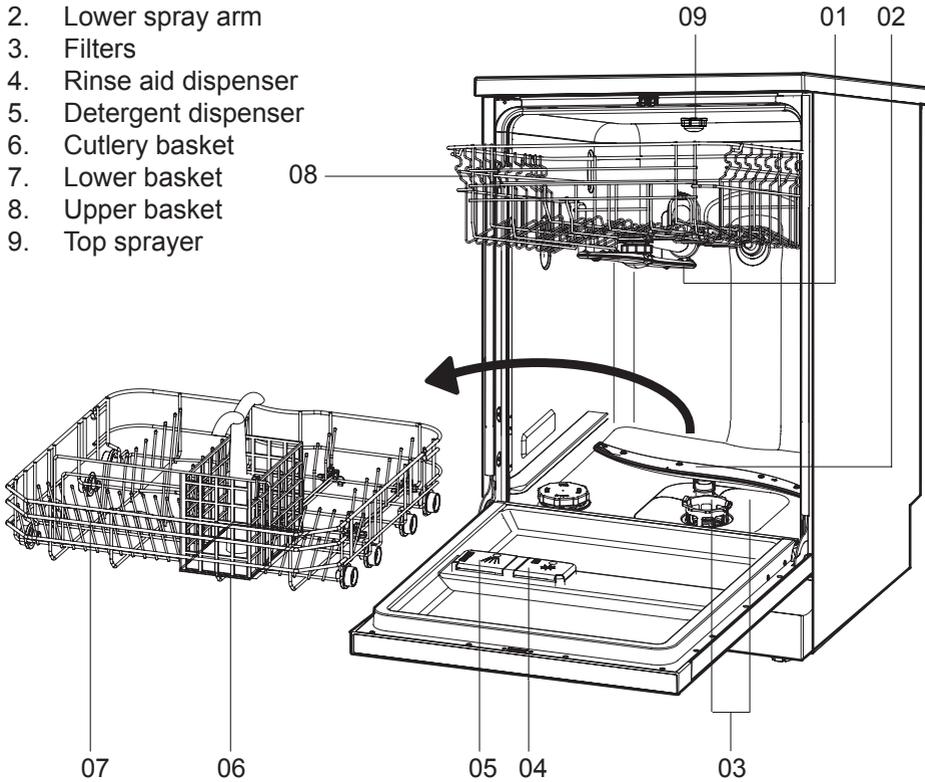

Installation guide
located at the end of
the guidebook

You will need

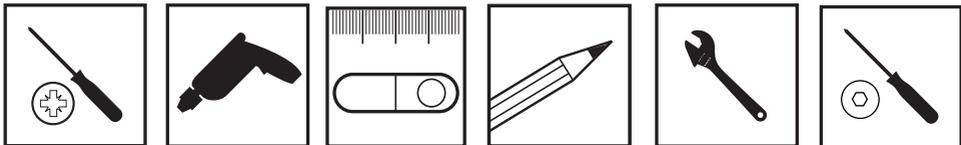

Before you start

- Please read these instructions carefully before using this appliance. The instructions contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance.
- Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the appliance.
- If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and safety warnings.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses ;
- by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

Symbol explanation



General information and tips



Warning – Important safety information



Environmental information

Safety

Note!



The appliance was designed for domestic use inside the house. It is not intended for commercial or industrial use.

Before switching on the appliance for the first time

Do...

- Make sure all packaging is removed.
- Make sure that the mains voltage and frequency is compatible with the electrical information on the appliance rating plate.
- Use a separate earthed socket for the power supply. The appliance must be earthed.
- Make sure the plug is easily accessible.
- Hold the plug and not the electric cable when unplugging the power supply.
- Make sure not to damage the electric cable and the plug. If they become damaged have them replaced by a qualified person.
- If you find a leak, turn the electricity supply off. Turn the water supply off. Stop the water leak, Ensure there are no water leaks before turning on the electricity supply.

Do not...

- Install or use the appliance where the ambient temperature is below 5°C.
- Use multi-plug adapters or extension cables.
- Put flammable products or items that have been wet with flammable products in, near or on the appliance.
- Use water spray or steam to clean the appliance.

During daily use**Do...**

- Put knives and cutlery with sharp points in the cutlery basket with the points down or in a horizontal position.

Do not...

- Open the door while a programme is in operation. The appliance can release hot steam.

Do not...


-  Leave the door in the open position since this could present a tripping hazard.
-  Allow children or pets near dishwasher when the door is open.
-  Sit or stand on the open door.
-  Remove the dishes from the appliance until the programme is completed. There can still be detergent on the dishes.
-  Drink the water in the appliance. The water may be contaminated with detergent residues.



Note: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Control panel

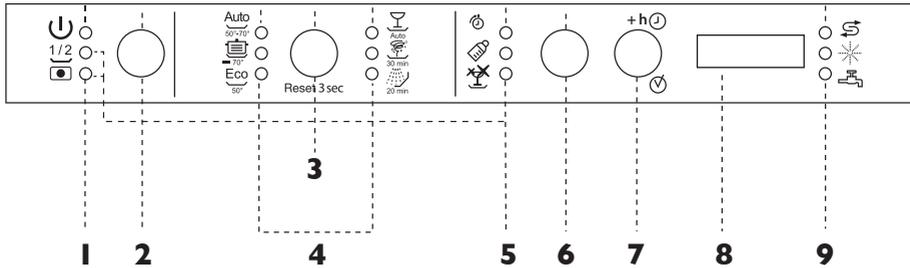

1. On/off indicator and option indicator
2. On/off button
3. Programme/Reset button
4. Programme indication
5. Option indication
6. Option button
7. Option change button
8. Time & Info display
9. Low salt/rinse indicator and water indicator

Operation

 GB
IE

In more detail...

Status indication

	Multitab	Activate this option only when you use the combi detergent tablets. This option decreases the flow of rinse aid and salt. Related indication. The programme duration can increase.
	Half load	Use this option if you have only a few items to wash. This will save water, energy and time. If you use powder detergent use a little less detergent than for a full load.

Option indication

	Delay start	You can delay the start of a programme in 1 hour steps up to 24 hours. Check the according paragraph under "Daily use".
	Extra Hygiene	This option gives more hygienic results. During the rinsing phase, the temperature stays at 70°C for approximately 10 minutes.
	Extra shine	This option reduces spots on glassware and dinnerware. The option adds an extra intermediate rinse.

Deficit indication

	Salt	If the indicator lights up: Softener salt is empty! This indicator is off while the programme operates.
	Rinse aid	If the indicator lights up: Rinse aid is empty! This indicator is off while the programme operates.
	Water	If the indicator lights up: The appliance does not fill with water. See <i>Troubleshooting</i> section.

Programmes

The water pressure and temperature, the variations of the mains supply, the options and the quantity of dishes can change the programme duration and performance. Consumption values are measured under standard conditions. The display always shows the related programme duration.

Programme description			
Programme	Type of food remnants	Type of load	Programme phases
 Auto 50–70°C ¹⁾	Light to heavy food remnants: Casseroles, sauces, potatoes, pasta, rice, roasted or fried food	Nondelicate: Dinnerware, cutlery, pots and pans	Prewash cold Wash 50–70°C Rinse cold Rinse hot Dry
 Intensive 70°C	Heavy food remnants: Casseroles, sauces, potatoes, pasta, rice, roasted or fried food	Nondelicate: Dinnerware, cutlery, pots and pans	Prewash cold Wash 70°C Rinse cold Rinse hot Dry
 ECO 50°C ²⁾	Normal food remnants: Soups, eggs, sauces, potatoes, pasta, rice, roasted or fried food	Nondelicate: Dinnerware, cutlery, glassware	Prewash cold Wash 50°C Rinse hot Dry
 Glass-Auto	Light food remnants: Coffee, cake, milk, cold drinks, salad, sausage	Delicate: Glassware, dinnerware, cutlery	Wash 45°C Rinse hot Dry
 Party 30min ³⁾	Fresh food remnants: Coffee, cake, milk, cold drinks, salad, sausages	Nondelicate: Dinnerware, cutlery, glassware	Wash 43°C Rinse hot
 Prewash ⁴⁾	Dishes to be stored for a few days before washing	All: Dinnerware, cutlery, glassware pots and pans	Prewash 45°C

Programme consumption

Programme	Programme Type	Cycle Time in min.	Energy Consumption in kWh	Water Consumption in ltr
 Auto ¹⁾ * 50°-70°	Automatic	115-165	1,05-1,65	9,5-15,5
 70°	Intensive	130	1,45	12,5
 Eco ²⁾ * 50°	Eco	170	0,94	10,0
 Auto	Glass	120-140	1,05-1,20	9,5-12,5
 30 min ³⁾ *	Party	30	0,85	7,0
 20 min ⁴⁾ *	Prewash	20	0,45	3,5

* Remark

- 1) The appliance senses the type of soil and the quantity of items in the baskets. It automatically adjusts the temperature and quantity of water, energy consumption and programme duration.
- 2) Standard programme for the Energy Labelling according to 2010/30 EU. With this programme you have the most efficient use of water and energy consumption for dishes with normal soil.
- 3) With this programme you can wash a load with fresh soil. It gives good washing results in a short time.
- 4) Use this programme to quickly rinse the dishes. This prevents the remaining food to bond on the dishes and bad odours to come out from the appliance. Do not use detergent with this programme!

Water softener

Hard water contains a high quantity of minerals that can cause damage to the appliance and bad washing results. The water softener neutralises these minerals in coaction with salt specifically designed for a dishwasher. To make sure that the water softener uses the correct quantity of dishwasher salt and water it should be thoroughly adjusted to your local water hardness.

Water hardness				Water softener adjustment
German degrees (°dH)	French degrees (°fH)	mmol/l	Clarke degrees	Electronic
31 – 50	55 - 89	5.5 - 8.9	39 - 63	H9
22 – 30	39 – 54	3.9 - 5.4	27 - 38	H8
17 – 21	30 – 38	3.0 - 3.8	21 – 26	H7
13 – 16	23 – 29	2.3 - 2.9	16 – 20	H6 ¹⁾ *
11 – 12	19 – 22	1.9 - 2.2	14 – 15	H5
9 – 10	16 – 18	3.0 - 3.8	11 – 13	H4
7 - 8	12 – 15	1.2 - 1.5	9 - 10	H3
0 - 6	0 - 11	0 - 1.1	0 - 8	H2 ²⁾ *
-	-	-	-	H1 ³⁾ *

* Remark

- 1) Factory default setting for powder detergent.
- 2) Factory default setting for combi detergent tablets.
- 3) Indicator for Salt is off. No usage of salt at this level.



Note!

If you use combi detergent tablets (multitabs), activate the Multitab option. These tablets contain detergent, salt, rinse aid and other added agents. Be sure that these tablets are applicable to the water hardness in your area. Refer to the instructions on its packaging.

Different settings for water softener

There are 2 different softener settings related to the used kind of detergent:

Detergent powder setting

- The salt is added from the water softener only.
With the multitab indicator **OFF** the multitab option is off.
Factory default setting: *H6*, multitab off.

Multitab setting

- The salt is added from the water softener in addition to the multitab salt.
With the multitab indicator **ON**, you have selected the multitab option.
Factory default setting: *H2*

While your setting for detergent powder is mandatory, factory default setting for multitab will normally perform well.

For adjustments see *How to adjust a default setting* section.


How to fill the salt container



Caution!

Only use dishwasher salt. Other products can cause damage to the appliance!

Water and salt can come out from the salt container when you fill it.
Risk of corrosion. To prevent it, run a programme immediately after filling.

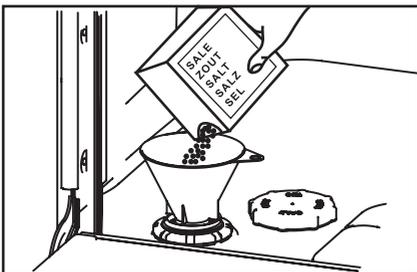

- Turn the cap anticlockwise and open the salt container.
- Only for the first time:
Put 1 litre of water into the salt container.
- Fill the salt container with dishwasher salt.
- Remove the salt around the opening of the salt container.
- Turn the cap clockwise to close and seal the salt container.

How to fill the Rinse Aid dispenser




Caution!

Only use rinse aid for dishwashers.
Other product can cause damage to the appliance!



Note!

The rinse aid is added during the last rinsing phase. It helps to dry the dishes without streaks and stains.

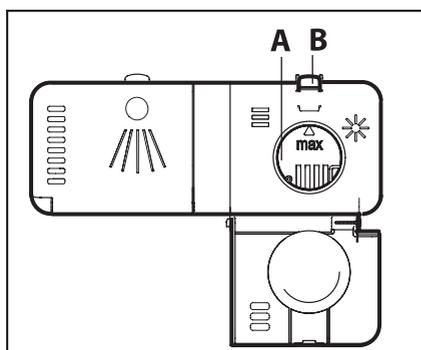

1. Press the release button (**B**) to open the lid.
2. Fill the rinse aid dispenser (**A**) no more than the mark, "max".
3. Remove spilled rinse aid with an absorbent cloth to prevent creation of foam.
4. Close the lid. Make sure that the release button locks into position.

Different Rinse Aid settings

If you think it necessary to adjust the rinse aid see *Troubleshooting* section to know about the necessary quantity.

You can adjust the quantity of rinse aid between **d1** and **d7**.



Note!

If you set the position **1**, you switch off the usage of rinse aid and you switch off the indicator for rinse aid.

Factory default setting is **6**.

For adjustments see *How to adjust a default setting* section.

How to adjust a default setting

To get best results in each programme there are well defined specific default settings. If there is no special requirement default settings are recommended. You may adjust three default settings in one menu: Rinse aid dosage, buzzer ON/OFF (sound at programme end), water softener setting.

For rinse aid setting **dx**, the following step can be selected:

d1:	rinseaid dosage will be 0 ml; Indication for rinse aid will be deactivated
d2:	rinseaid dosage will be 1 ml;
d3:	rinseaid dosage will be 2 ml;
d4:	rinseaid dosage will be 3 ml;
d5:	rinseaid dosage will be 4 ml;
d6:	rinseaid dosage will be 5 ml;
d7:	rinseaid dosage will be 6 ml;

For acoustical end signal beep **bx**, the following choice can be selected:

b0:	acoustical end signal off
b1:	acoustical end signal on

- The appliance has to be switched off. Press **RESET** button for about 3 seconds. The programme indicators light up. The flashing one indicates which default setting could be currently changed.

- First indicator: Menu for rinse aid dosage .
- Second indicator: Menu for buzzer indication .
- Third indicator: Menu for water softener adjustment .

Press **RESET** button to select the setting for rinse aid/buzzer/water softener.

- First indicator blinks: Press ON/OFF indicator for rinse aid dosage setting from **d1** to **d7**.
 - Second indicator blinks: Press ON/OFF indicator for buzzer setting from **b0** to **b1** or display shows value for buzzer ON (1)/ OFF (0).
 - Third indicator blinks: Press ON/OFF indicator for water setting from **H1** to **H9** or display shows value for water softener setting (1-9).
- To select another default setting press sequentially the **RESET** button.
 - When you finish the setting, press **ON/OFF** button around 5 seconds for confirmation.

Using the dishwasher

1. Open the water tap.
2. Press the **ON/OFF** button to activate the appliance.
 - If the salt indicator is on, fill the salt container right to the top. Press and hold the **RESET** button for 3 seconds to confirm the refilling of softener salt.
 - If the rinse aid indicator is on, fill the rinse aid container up to the "max" mark. Press and hold the **RESET** button for 3 seconds to confirm the refilling of rinse aid.
3. Press **ON/OFF** button to select "1/2", "multi-tab" if applicable.
4. Press programme/reset button for program selection.
5. To select "delay start", "extra hygiene", "extra shine" function if applicable, press option button and the relevant operation indication light is flashing. Then press option change button for selection.

Delay start function. - The selection is from 0 hour to 24 hour. For example, if you select 1H, the appliance will turn on after one hour.

Extra Hygiene function - Press button 6 twice to light on this function and then press button 7 to activate this.

Extra Shine function - Press button 6 three times to light on this function and then press button 7 to activate this.

6. When the program is set, close the door and the appliance will operate as per the setting.



Note!

During operation, press **ON/OFF** button to switch off the operation or cancel the setting.



Note!

Refill such a container always completely before you press the **RESET** button. Failure to fill the containers completely at this initial stage could lead to poor washing results at a later date.

7. Load the baskets.
8. Add the detergent.
9. According to the type of load and soil select
 - a programme
 - possibly a start time delay
 - possibly an option
10. Close the door and the programme starts.
11. After the programme finishes you can unload the baskets.
12. Close the water tap.


Load the baskets

**Note!**

With delicate glasses and porcelain make sure they are labelled "dishwasher-proof".


- Do not put in the appliance items made of wood, horn, aluminium, pewter copper or cast iron.
- Do not put in the appliance items that can absorb water (sponges, household cloths, etc).
- Only use the appliance to wash items that are "dishwasher-safe".
- Remove remaining food from items prior to loading.
- Items with burnt on food should be pre soaked to soften residues.
- Put hollow items (cups, glasses and pans) with the opening down.
- Mix spoons with other cutlery to prevent them to bond together.
- Make sure that cutlery and dishes do not bond together.
- Make sure that glasses do not touch other glasses.
- Put small items in the cutlery basket.
- Put light items in the upper basket. Make sure they can not move.
- Before each programme start check if spray arms can move freely.

Cutlery basket

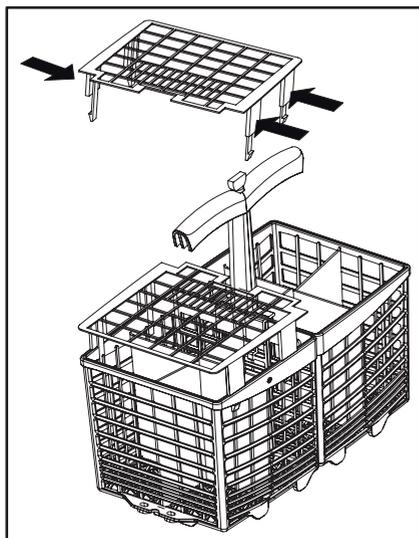

1. Mix spoons with other cutlery to prevent them bonding together.
2. Place cutlery with the points down for reasons of safety.
3. Place long items in a horizontal position so the spray arms can move freely.

Upper basket

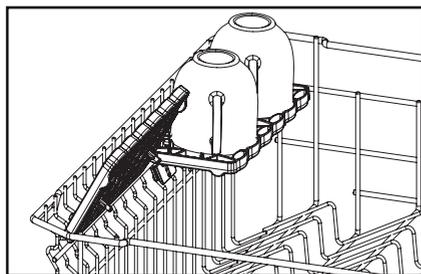

1. Place normal or lightly soiled utensils (like breakfast plates and glasses) in the upper basket.
2. Place small items on the cup holder.

Adjust height of upper basket


To create more space in the upper or lower basket you can adjust the height of the upper basket.



Caution!


Only adjust the height if the basket is empty. Otherwise the basket might be too heavy to secure the new position. Always make sure that both sides of the basket are at the same height after an adjustment.

Lift basket

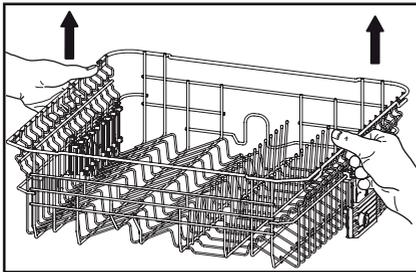


1. Pull out the upper basket.
2. Hold the basket on both sides on the edge above the lever.
3. Lift the basket till you hear a click.
4. Push down the basket with light pressure to check secure adjustment.

Knife rack

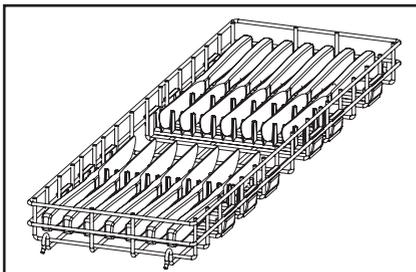


For best washing results place your table knives in the knife rack.

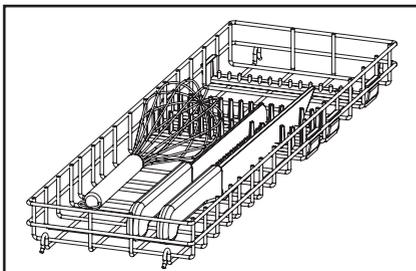

Place all long items like soup ladle, spatula, egg whisk, etc. in the knife rack.

**Caution!**

Place your sharp/longer kitchen knives into the knife rack.

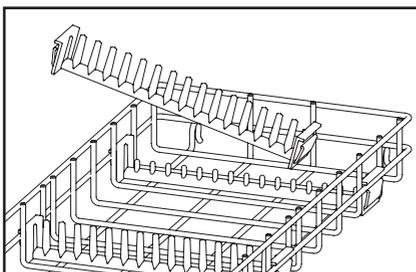

For more space you can take the spikes out.

Bottom basket

Place heavily soiled items (like pots and pans or dinner plates) in the bottom basket. The more powerful spray jets provide a better dish washing result.



Note!


If you hear knocking noises during operation: Check spray arm clearance and that your dishes and glassware are in a firm position.

Detergent



Caution!

Only use dishwasher detergent or tablets.

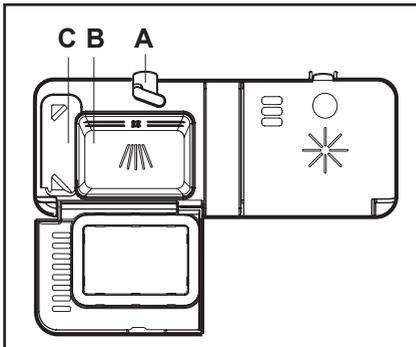

1. Open the dishwasher door fully open (horizontal). Press the release button (A) to open the lid.
2. Put the detergent into compartment (B) (If you use detergent tablets, put the tablet in the compartment (B)).
3. If the programme has a prewash phase, put a small quantity of detergent on the inner part of the appliance door (C).
4. Close the lid. Make sure that the release button locks into position.

Multitab

These detergent tablets combine detergent, rinse aid and dishwasher salt. Some types of tablets can contain additional agents.



Caution!

Only use detergent tablets, that contain dishwasher salt or another water softener. If you have very soft water you should use tablets without water softener.



Note!

Recommendation:

Make sure the rinse aid dispenser is full.
Adjust the rinse aid setting to 2.

Operation

Care and maintenance

End of programme

When the programme is completed, you will hear an acoustic signal.

1. Open the appliance door.
 - Optional: Press **ON/OFF** button to switch off the appliance.
 - For better drying results, keep the appliance door ajar for some minutes.
 - Let the dishes become cold before you remove them from the appliance. Hot dishes damage more easily.
 - First remove the items from the lower basket, then from the upper basket.



Note!

There can be water on the sides and on the door of the appliance. Stainless steel becomes cool more quickly than the dishes.

2. Close the door.
3. Close the water tap.

Care and maintenance

Inspect your appliance at regular intervals. This saves time and prevents problems.



Caution!

Never clean the appliance with a steam cleaner.
Never use bleach or other chlorinated detergents.

External cleaning


- Clean the appliance with a damp soft cloth.
- Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads or solvents.
- Clean the door seal with a damp soft cloth.

Cleaning the filters




Note!


Dirty filters and clogged spray arms will result in poor washing results. Make a check regularly and, if necessary, clean them.

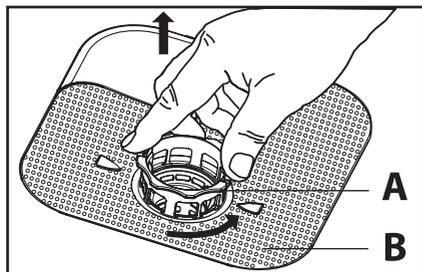

1. Turn the filter **A** anti-clockwise and remove it.

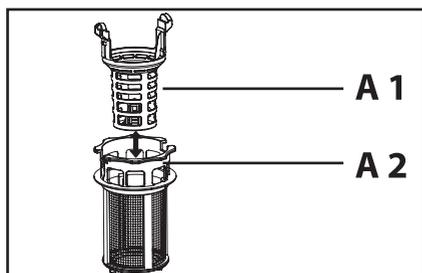

2. To disassemble the filter **A** pull apart **A1** and **A2**.
3. Remove the filter **B**.
4. Wash the filters with water.

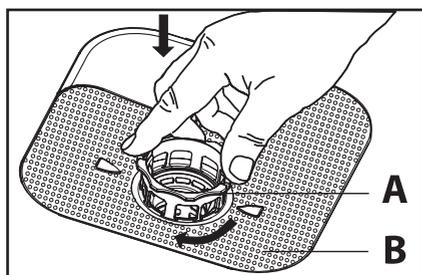

5. Put the filter **B** to its initial position.
6. Assemble the filter **A** and put it into position in filter **B**. Turn it clockwise until it locks.




Caution!

An incorrect position of the filters can cause poor washing results and damage to the appliance.

Cleaning the spray arms

**Note!**

If the holes in the spray arms are clogged, you can remove the spray arms for more easy cleaning.

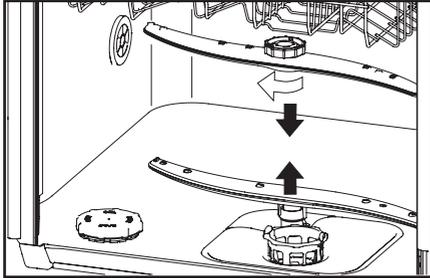**Upper spray arm**

1. Turn screw fastening anti clockwise to remove spray arm.
2. Remove remaining parts of food remnants with a thin pointed object.
3. Flush with water and check all the holes are clear.
4. Refit spray arm.

Lower spray arm

1. Pull vertical at the centre to remove spray arm.
2. Remove remaining parts of food remnants with a thin pointed object.
3. Flush with water and check all the holes are clear.
4. Place spray arm at the centre with a light push.

Troubleshooting

Many problems could be solved by yourself without calling an engineer. In case of malfunction, please check carefully the list and possible solutions below before you contact Customer Services.

Problem	Possible cause	Possible solution
The programme does not start.	Appliance door is open.	Close the appliance door.
	Delay start is set.	Refer to displayed time.
	Mains plug is not connected in the mains socket. Fuse in the house circuit is damaged.	Connect the mains plug. Replace the fuse.
	UK plugs according to BS1363 only: Fuse in the plug is damaged.	Replace the fuse.

For all other Alarm codes:

1. Note Alarm code.
2. Contact Customer Service. See *Guarantee* section.

Washing results are not satisfactory

Problem	Possible cause	Possible solution
Remains of food are stuck to the dishes, cutlery, etc.	Dishwasher not loaded properly. Water jets could not reach all parts of the dishes, etc. Too many items in rack.	Reload the appliance.
	Items in rack touching each other.	Reload the appliance.
	Not enough detergent added to dispenser.	Add more detergent.
	Selected wash program not intensive enough.	Select the intensive wash program.
	Filters blocked.	Clear the obstruction.
	Filters incorrectly fitted.	Refer to <i>Care and maintenance</i> section.
Dishes, cutlery, etc. have not been dried.	Amount of rinse-aid set too low.	Alter the amount of rinse-aid.
	Items removed from dishwasher too soon.	Program must complete its cycle.
Glasses have a dull appearance.	Amount of rinse-aid set too low.	Alter the amount of rinse-aid.
Tea stains or traces of lipstick have not been completely removed.	Detergent has insufficient bleaching effect.	Use a more powerful detergent.
	Washing temperature set too low.	Set to a high temperature.
Traces of rust on cutlery.	Cutlery not sufficiently rustproof.	Buy dishwasher safe cutlery.
	Lid on salt container not screwed tight.	Make sure the salt container lid is secure.
	Too much salt spilt while filling container.	Take care when filling the container.

Problem	Possible cause	Possible solution
Smears left behind on glasses and cutlery; glasses have acquired a metallic appearance.	Amount of rinse-aid set too high.	Adjust the rinse-aid to a lower setting.
Lid in detergent compartment cannot be closed.	Detergent compartment has been overfilled.	Empty, clean and refill.
	Mechanism is clogged with remnants of detergent.	Clean compartment.
Remnants of detergent stuck inside dispenser.	Compartment was damp when it was filled up with detergent. Compartment must be dry before detergent is added.	Clean, dry and refill.
Water remains inside appliance after programme has ended.	Blockage or kink in drainage hose.	Check drainage hose for blockage and reposition.
	Filters are blocked.	Refer to <i>Care and maintenance</i> section.
	The programme is still running. Wait for the programme to end.	Close door and wait for program to finish.

Recycling and disposal

Environmental protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



The symbol on the product or its packaging indicates that this product cannot be treated as normal household waste. This product must be handed over to an electric and electronic equipment collection point for recycling.

On ensuring that this product is disposed of correctly, you will help to avoid possible negative consequences for the environment and public health, which could occur if this product is not handled correctly. To receive more detailed information about recycling this product, contact your local government, domestic waste disposal services or the outlet where the product was bought.

Technical and legal information




1. Given information are based on the European Union's standards and rules according to DIR 2010/30/EU.
2. The device meets the European standards and the directives in the current version at delivery:
LVD 2006/95/EC, EMC 2004/108/EC, ERP 2009/125/EC
3. Any values have been measured in accordance with standards under specific operating conditions. Daily consumption values will depend on how the appliance is used.

Manufacturer	CATA	
Capacity	Place settings	14
Energy	Energy efficiency class	A++
	Annual energy consumption	266kWh
	Energy consumption standard cleaning cycle	0,94kWh
	Energy consumption On/standby	< 0,82W
Water	Annual water consumption	2800 litres
Efficiency	Drying efficiency class	A
Standard cleaning cycle	Programme	Eco 50°
	Duration	170 min
Description	Duration left-on mode	2 min
	Noise level	44 dB(A) re 1 pW
	Installation type	Full integrated
Dimensions	Width	598mm
	Depth	550mm
	Height	820 – 880mm
Electrical connection	(Refer to the rating plate)	
	Voltage	230V
	Frequency	50Hz
	Ampere	13A
	Watt	1900W
Water supply	Pressure	bar 0,5 – 10 MPa 0,05 – 1,0
	Temperature	Cold water

Information for Test Institutes

Loading patterns, Soiling according to EN 50242 / IEC 60436

Test Conditions	Soiling	Cutlery / Soiling
Test programme: Eco 50 °C	a = milk	C = Teaspoon
Detergent quantity (powdered): Pre wash: 5g / Main wash: 30g	b = tea	D = Dessert spoon
Height adjustment of upper basket: Uppermost position	c = minced meat	E = Table fork / egg
Water softener setting: <i>H6</i>	d = oat flakes	F = Beef fork
Rinse aid setting: <i>d6</i>	e = egg	L = Gravy ladle
Capacity of place settings: 14	f = spinach	S = Table spoon/ oat flakes
	g = margarine	V = Serving spoon

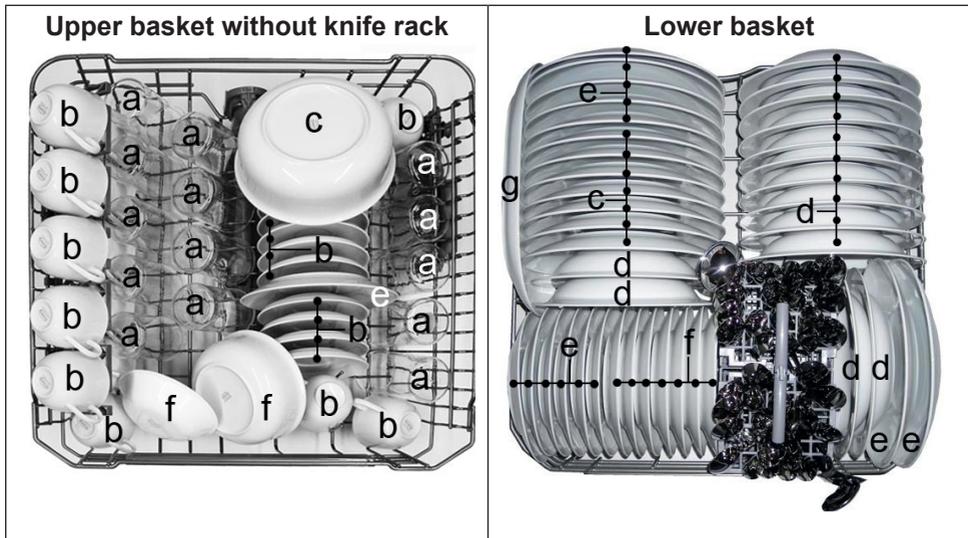

Information for Test Institutes

Upper basket with Knife Rack




Knife Rack



14 Knives

13 Forks

Cutlery basket

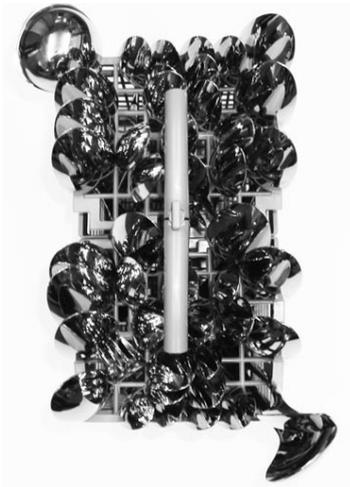

Cutlery basket loading pattern

L	C	C	C	C	S
		C	C		
S		D	C		S
S	D		D	D	
S	D		D	D	S
			F		
		S		S	
S	D		D	D	S
S		D	D	D	
S		D	C		S
	E	C	C		V
S	C	C	C	C	V

Guarantee

This appliance is covered by a full manufacturer's 2 year parts and 2 year labour guarantee and covers all parts and labour costs associated with the repair of the appliance in a domestic environment. We will repair any defect that arises due to faulty materials or workmanship and use genuine manufacturers parts.

All claims must be supported with the original receipt or other reasonable proof of purchase.

If, during the guarantee period, the appliance becomes irreparable as agreed by the engineer approved by GAA then we reserve the right, at our discretion, to exchange the defective product with a replacement appliance at GAA's sole cost. If the same product is no longer available an alternative will be offered with the same functions as the faulty item.

After an appliance has been repaired or replaced any remaining balance of the GAA guarantee will be valid and any further call outs during this prescribed period will be covered by GAA on the replacement appliance.

Should any person other than an authorized engineer modify or attempt to repair the appliance then the warranty will be invalid.

The guarantee applies to the UK mainland, Scotland, Ireland, ROI and France but is not transferable between EU countries.

This guarantee is non-transferable to any other person or product. The guarantee is covered by UK law and is in addition to and does not diminish your legal rights.

Extended parts only warranty

As testimony to our commitment to you as a valued customer of Cooke & Lewis, we will offer you an additional 3 years parts warranty absolutely free.

If during the extended parts warranty period the appliance fails and it is considered uneconomical to repair our Customer Service Department will offer you the opportunity to purchase the same or equivalent model at a discounted price.

All parts supplied free of charge under the extended warranty must be fitted by our approved engineers and will be subject to a call out charge to fit the part.

Guarantee

Guarantee

Exclusions to the guarantee

This guarantee does NOT cover:

Appliances that have been damaged or neglected as a result of failure to store, assemble, install, use or care of the products in accordance with the manufacturer's instructions - GAA will not accept responsibility under this guarantee if a product is damaged or becomes defective due to, misuse, neglect, wilful or accidental damage or act of god.

Normal wear and tear.

Consumable items such as carbon filters and bulbs.

Claims arising from non-domestic use or commercial environment.

Any gas appliance not fitted by a gas safe qualified installer.

If no fault is found then GAA reserves the right to charge for the call out at the going rate.

In the course of the service work carried out it may be necessary to remove the built in appliance from its fitted position. If the appliance is glued, grouted or tiled in such a manner that it cannot be removed, it is the responsibility of the customer/installer to remove and reinstall the appliance to facilitate the repair.

This Guarantee does not affect your statutory rights.

The guarantee is offered by GAA Ltd, 1301-1303 Lu Plaza,
2 Wing Yip St, Kwun Tong, Kowloon, Hong Kong.

Customer Service

To arrange an in guarantee service call, please contact customer services on the following numbers.

UK & Northern Ireland

Phone: 0344 800 1128*

Email: www.spareszone.co.uk

Web: www.myspareparts.co.uk

***Local call rates apply**

Republic of Ireland (Eire)

Phone: 014475261

CE Declaration of conformity

MANUFACTURER: CATA		
ADDRESS: C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)		
<p>We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.</p>		
MACHINE APPLICATION:	BDW60CL	
TYPE:	60cm Built in dishwasher	
EC DIRECTIVES APPLIED:	Comply with the following European Directives 2006/95/EC: LVD (Low Voltage Directive) and the 2004/108/EC: EMC (Electromagnetic Conformity)	
APPLIED HARMONIZED STANDARDS:		
EN60335-2-5		
Standard EN 60335-1		
Standard EN 50366		
APPLIED INTERNATIONAL TECHNICAL STANDARDS AND SPECIFICATIONS: ISO9001.2008		
PLACE: Torelló	<p style="text-align: right;">David Sala <hr style="width: 100px; margin: 0 auto;"/> Technical Manager</p>	


The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc,
 Chandlers Ford, Hants,
 SO53 3LE United Kingdom
www.diy.com

01

**Warning!**


Installation may be carried out by a qualified technician only. Refer to "Safety" section.

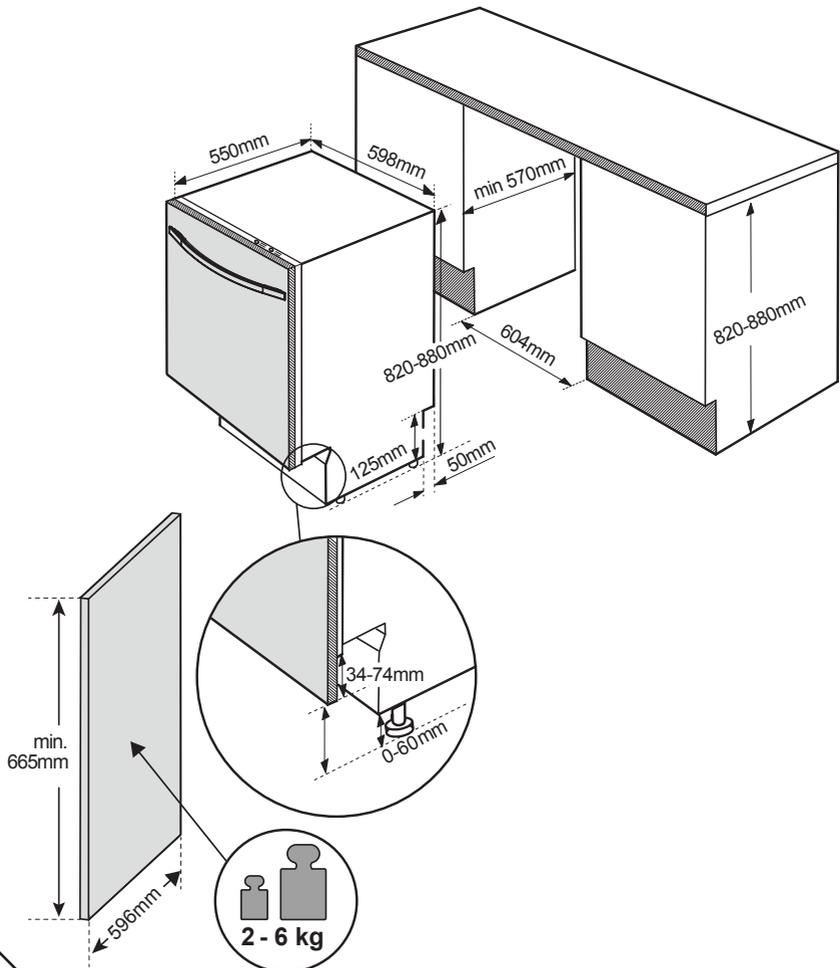Installation under Kitchen Counter

1. Make sure that the dimensions of the recess agree with the dimensions in the drawing above.
2. Put the appliance adjacent to a water tap, water drain and power supply.

How to use water-proof plastic

02

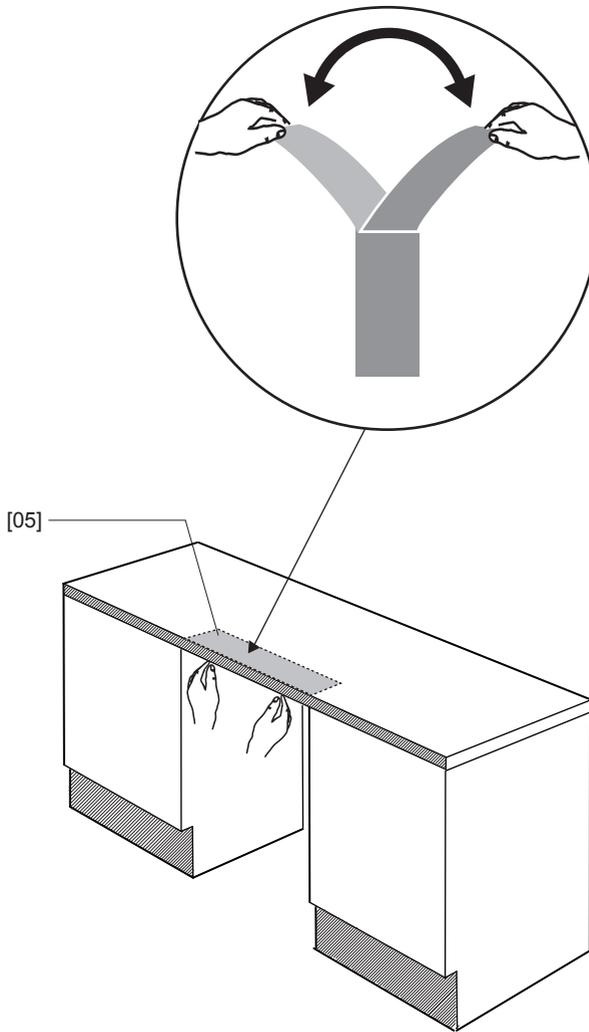


[05] x 1

Firstly take off the water-proof plastic from the sticker [05] with the appliance.
Secondly stick it on the bottom of the kitchen board.

All of this can avoid humidity in the kitchen.


03

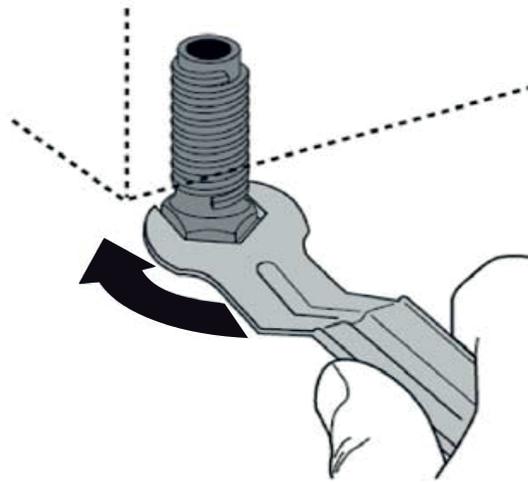

Position appliance

1. Install the appliance on a firm floor.
2. Loosen or tighten the adjustable front feet with an open spanner for a stable and level position.

04

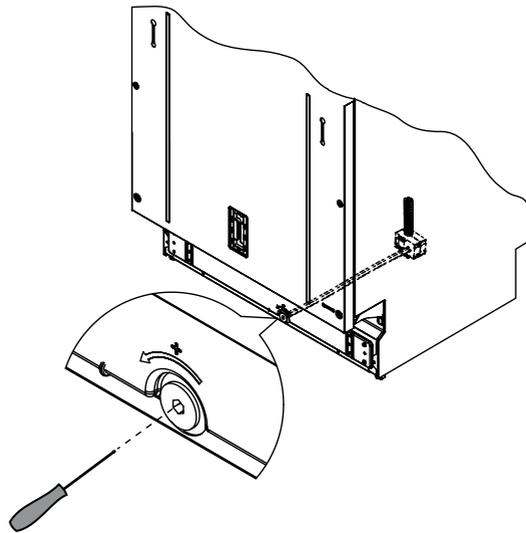

1. Loosen or tighten the adjustable back foot with a hexagon key.



Note!

Once the appliance is level, check the door closes and seals correctly.


2. Screw the appliance to the work top or to the adjoining units.



Caution!

Screw tightly to ensure the appliance does not tip.

Fully integrated

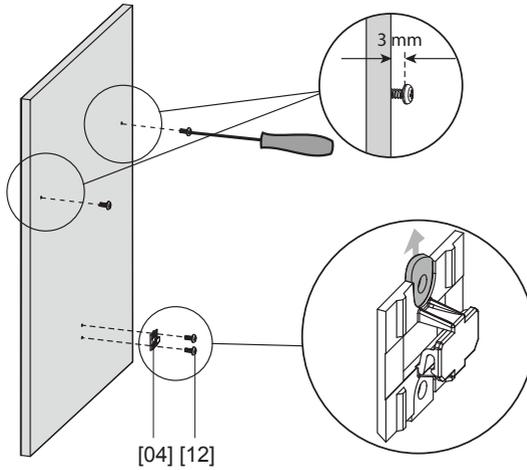

05



[04] x 1



[08] x 1




[12] x 4

The door of the appliance can be fitted with a wooden door/cupboard door with the following dimensions:

Width	596mm
Thickness	16mm - 24mm
Height	min. 665mm
Weight	min. 2,0kg/max 6kg

Prepare the door according to the installation template supplied.

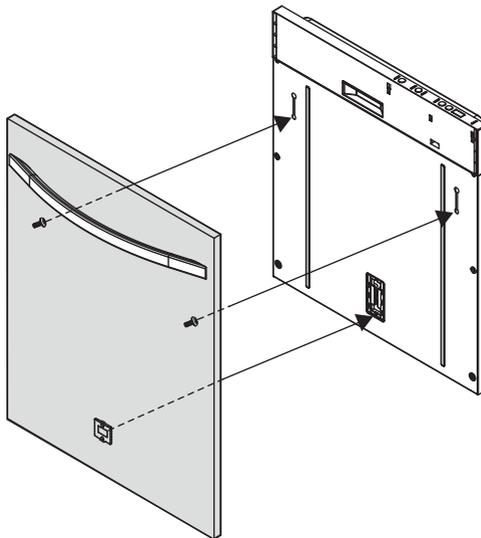


06

1. Close the appliance door.
2. Hang the cabinet door to the appliance door using the cut out.

37

07

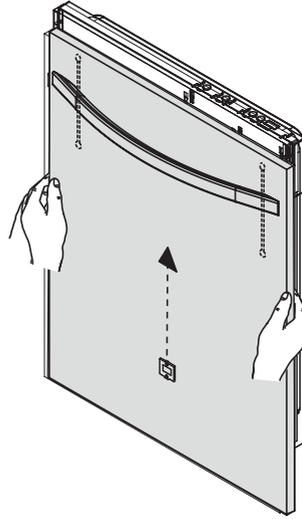

3. Lift the door to the right position.



Note!


If the door was accidentally lifted to high:

- Open the door about 30° and lift the door till it comes loose.
- Repeat step 2 to 4.

08




[11] x 4

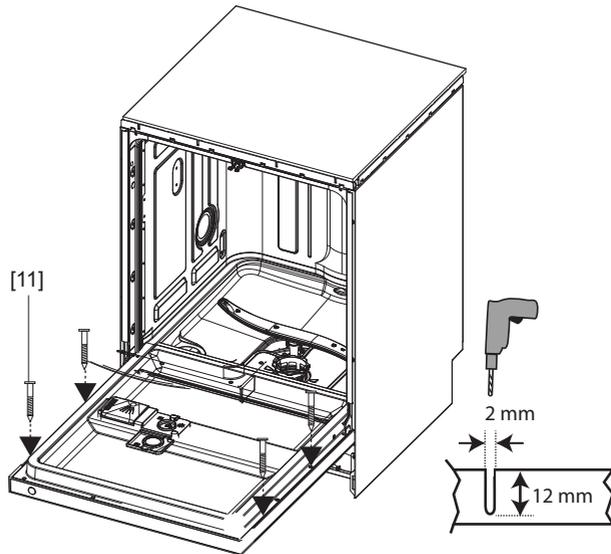

4. Open the door and tighten the screws [11].

38

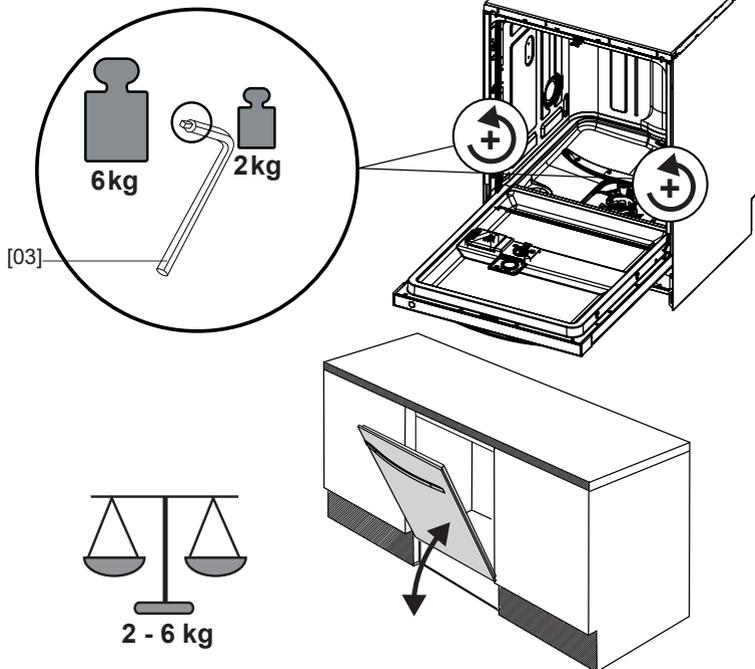

09




[02] x 2



[03] x 1


The door balance can be adjusted via two screws accessed through two holes in the front. Adjust these until the door just remains open under its own weight and is level when open.

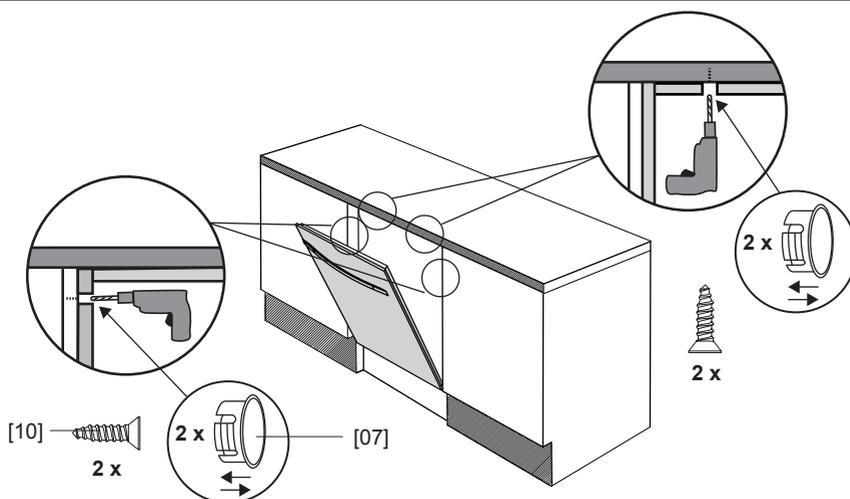

10



 [07] x 4
(Prefilled on appliance)



[10] x 4

1. The dishwasher should now be screwed to the underside of the worktop, via the two fixing holes in the top trim.
2. Secured to the appliance using the two screws (left & right) [10] at the top of the appliance.

39

11




[06] x 1



Caution!

Make sure that the drain hose and the fill hose is not crushed, kinked or twisted and is safely attached so it does not leak.

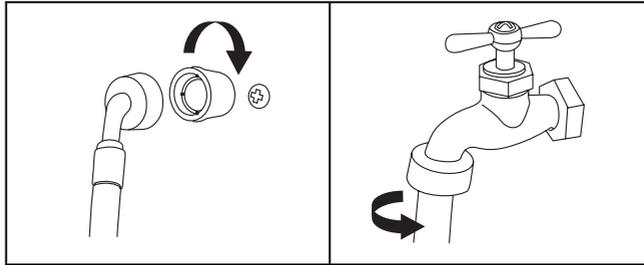

Water connection - cold fill

1. Connect the hose to the outlet of the machine.
2. Connect the water supply hose to a threaded 3/4 BSP connector on the water supply, making sure that it is fastened tightly in place.
3. **The dishwasher is to be connected to the water mains using new hose-sets and that old hose-sets should not be reused.**


If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear and free of impurities.

If this precaution is not taken, there is a risk that the water inlet may become blocked and damage the appliance.

12



[01] x 1

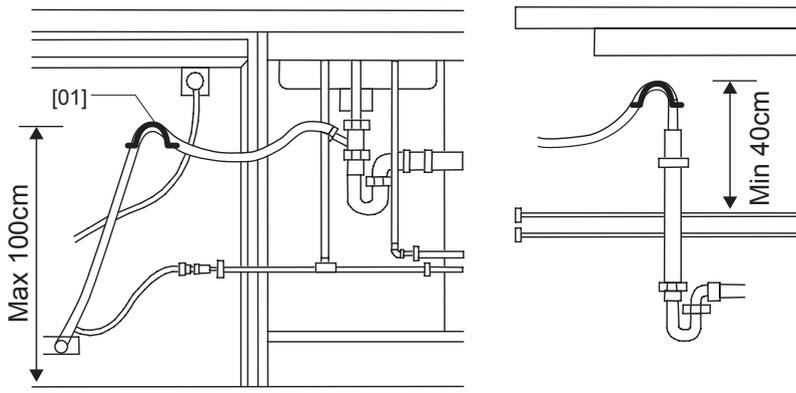

Waste connection

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, making sure to avoid bending or crimping. When the waste hose of the washing machine is connected beneath the sink, fit a siphon trap (accessory not included) (U-bend) with a connecting piece for the drain hose (u-bend fixing screw is not provided).



Note!

The free end of the hose must be at a height between 40 and 100 cm and must not be immersed in water.

Anti flood system

The dishwasher is equipped with a system that stops the supply of water in the event of a problem with the water supply hose or leaks within the unit, in order to prevent damage to your home.

In the event of a fault the safety valve immediately interrupts the supply of water, the drain pump is activated and a audible tone can be heard.

Remove the sink plug when the appliance drains. This prevents water to go back to the appliance.

Once the appliance is fully drained switch the appliance off at the **ON/OFF** button. Disconnect the plug from the mains supply and check the fill and drain hoses for leaks. If no leaks can be seen please call Customer Services.

Electrical connection



Warning!

This appliance must be earthed.
Any electrical work required to install this appliance may be carried out by a qualified electrician only.
Refer to "Safety" section.

The socket must be attached near the dishwasher and be freely accessible. For electrical requirements refer to "Technical and legal information" section.

Connect the power plug to the mains socket.







B&Q plc,
Chandlers Ford, Hants,
SO53 3LE United Kingdom
www.diy.com

