

ECO MODE CONFIGURATION INSTRUCTION

IMPORTANT: PART FOR QUALIFIED INSTALLERS ONLY.

ECO Mode Configuration


This hob can be connected to a 13,16,25 or 32Amp supply and configured to work on any of these power settings.

The hob is preset to be connected to a **13Amp** supply, all four zones are selected at the same time the hob will limit the maximum power consumed so that the 2.8kW power supply cannot be exceeded. In a similar way, when the hob is connected and configured to a 16/25Amp supply, the hob will limit the maximum power at 3.5/6.0kW.


If, however, the hob is connected and configured to a 32Amp power supply, all four zones can be used on the maximum setting with boost at the same time.

To change the cable before configuring ECO Mode

1. Remove the screw and lift the top cover up.

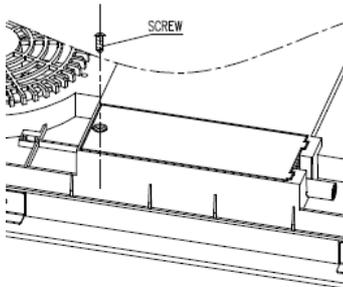

2. Replace the preset 13Amp cable by qualified 32A cable in the accessory bag. (Refer to “Connecting the hob to the mains power supply” in Installation Manual.)

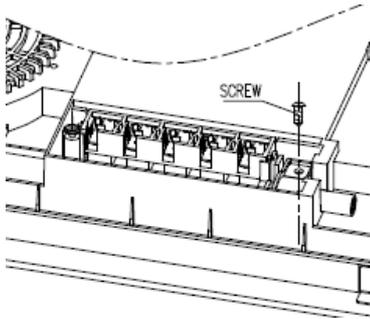

Before configure the ECO mode, Read the Installation Manual especially the “Safety Warnings” section.

The induction hob must be connected to the mains supply only by a suitably qualified electrician.

For power consumed exceed 13Amp, cable must be replaced to qualified 32A one.

WARNING: Don't have the hob work at 3.5/6.0/7.2kW mode with pre-assembly 13Amp cable & plug. Exceeding power consumption will blow the fuse and may damage the hob & causing other issues.

To configure the hob into ECO Mode

1. Touch ON/OFF key to switch on the power supply. The buzzer beeps once, all displays show “-” and “-”.



2. Touch front left zone key and rear left zone key simultaneously for 3 seconds. The buzzer beeps indicating that the induction hob enters selection of ECO Mode.



3. Touch timer key, then timer display will flash.



4. Touch the relevant zone keys and the number (e.g.28) show in the display indicating that the total power will set to relevant ECO power settings:



Selection Key	Timer Display	ECO power level	Power supply (Fuse protection required)
Front left zone key	28	2.8kW	13Amp (BS plug available)*
Rear left zone key	35	3.5kW	16Amp
Rear right zone key	60	6.0kW	25Amp
Front right zone key	72	7.2kW	32Amp

* On first use the power setting is factory set to 2.8kW.

5. Touch timer key again, timer display stop flashing and the previously selected zone key will show “o” indicating that the setting is ok.



6. Touch the ON/OFF to switch off. Then switch on and the hob is configured ready to use at the ECO Mode you set for.



To change the ECO configuration setting

1. Cut off the power supply to the hob.
2. Leave the power supply cut off for five minutes.
3. Switch on the power supply again.
4. Follow the instructions under “To configure the hob into ECO Mode” from number “1” onward.

NOTE: The ECO Mode Configuration can be entered only once if the power supply of the hob is not cut off.