



Oven:UB70NPYS





Product reference code:UB70NPYS

Modified by:Eason

Modification:

00_2019.05.10 New document

UB70NPYS Exploded drawing

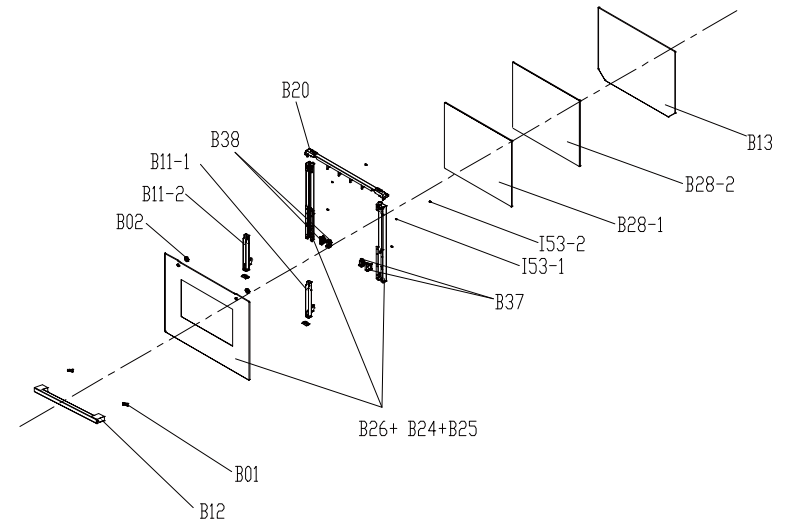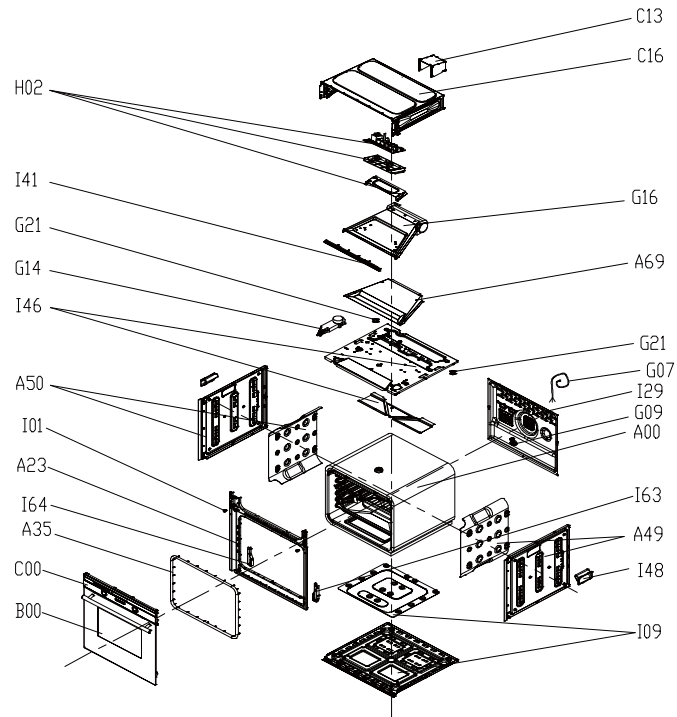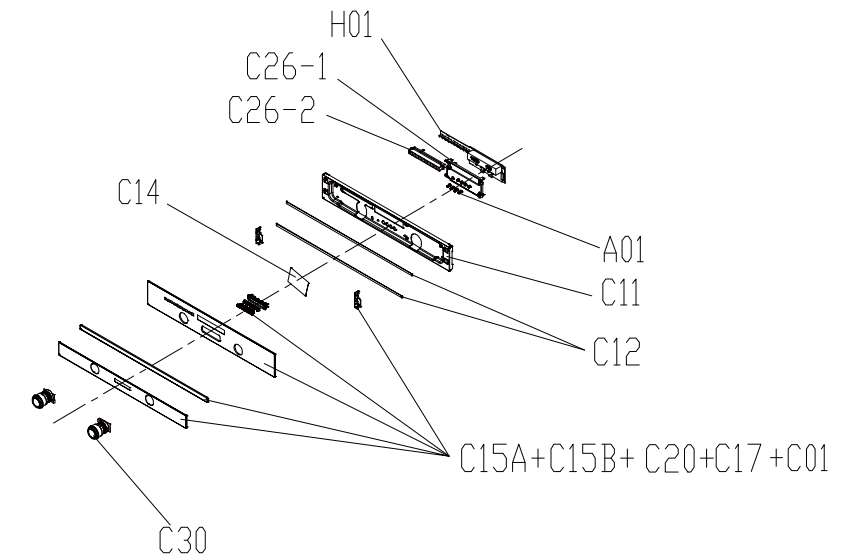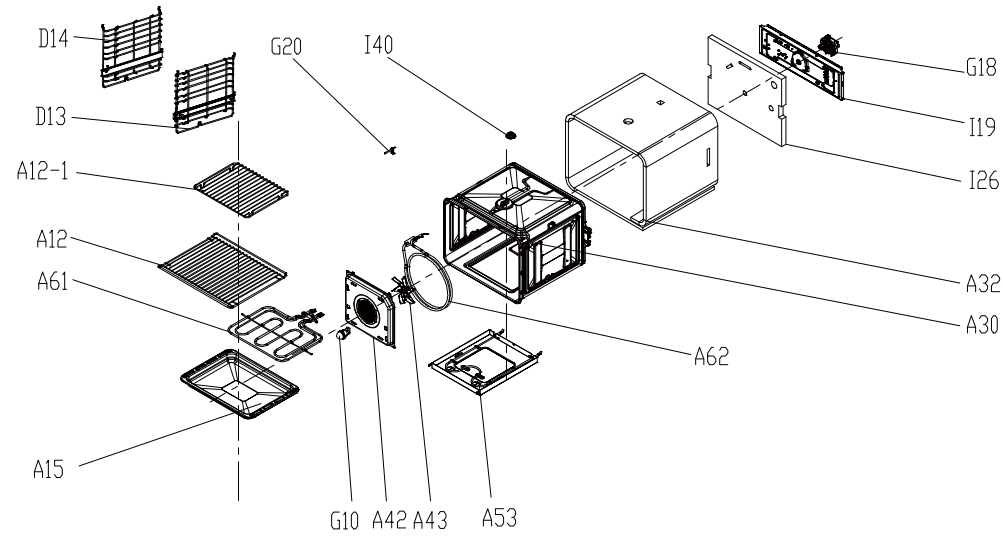

UB70NPYS parts list

No.	Ref part code	Midea Part Code	Part name		Qty
A35	60501700	12671100001134	cavity sealing ring	腔体密封圈	1
G07	261201002601	17471100000108	power cord	电源线	1
G09	291200700008	17471100000957	teminal block	接线排	1
G14	261200300160	17471100000551	door lock	门锁	1
G16	64900925	17471100002273	cooling fan motor	排气电机	1
G21	62101060	17471100002793	thermostat	温控器	2
H02	63900370	17171100001080	power board	电源板	1
I01	291599900023	12971100001049	fastener assembly	紧固件组件	1
I48	261331200201	12171100000284	handle box	提手盒	2
I63	261504501200	12971100000470	hinge fixed frame (Right)	铰链固定架(右)	1
I64	261504501100	12971100000534	hinge fixed frame (Left)	铰链固定架(左)	1
A00	N/A	\	cavity ass'y	腔体组件	1
A12	291501300006	12971100000649	bake rack	烤架	1
A12-1	25108130	12971100014302	bake tray rack	深浅烤盘烤架	1
A15	291501400002	12271100003074	bake tray (deep)	烤盘 (深)	1
A32	262100600072 & 262100600073	12471100000050x1 & 12471100000010x1	Cavity insulation	腔体隔热棉	1
A42	291503400004	12271100002160	convection motor cover	热风电机罩	1
A43	261508200600	12971100001067	convection fan blade	热风扇叶	1
A53	25107850	17471100001474	under heating element & cover	下发热管罩组件	1
A61	291200800051	17471100000574	metal heating element*(top)	金属发热管(上)	1
A62	261201702190	17471100000261	turbo heating element	热风发热管	1
D13	291504200040	12971100002583	Rail bracket(Right)	导轨支架(右)	1
D14	291504200038	12971100002588	Rail bracket(Left)	导轨支架(左)	1
G10	25108825	17471100002113	lamp	炉灯	1
G18	291201300015	17471100000166	convection motor	热风电机	1
G20	263004100027	17171100000025	temperature sensor	温度传感器	1
I26	292100200020	12471100000041	back insulation	后端隔热棉	1
B00	25109645	12971100A56562 +12971100A61622	door ass'y	炉门组件	1
B01	292100900002	12671100000013	door handle cushion	拉手垫片	2
B02	291300600021	12171100000172	handle support	拉手支撑柱	2
B11-1	25108135	12971100010681	door hinge ass'y (Right)	门铰链组件(右)	1
B11-2	25108140	12971100010682	door hinge ass'y (Left)	门铰链组件(左)	1
B12	25109710	12971100014907	door handle	门拉手	1
B13	69411515	12571100001931	door inner glass	门内窗玻璃	1
B20	291399900055	12171100001197	door frame up cover	门体上盖	1
B24+B25 +B26	25109660	12971100A61622	Outer Door Drop Glue Assembly	门外窗滴胶组件	1
B28-1	292100600041	12571100000362	door middle glass A	门中窗玻璃 A	1
B28-2	292100600038	12571100000359	door middle glass B	门中窗玻璃 B	1
B37	291301200102	12171100001415	door rotary bracket (Right)	门体旋转支架(右)	1
B38	291301200101	12171100001414	door rotary bracket (Left)	门体旋转支架(左)	1
I53-1	292100800005	12671100000096	rubber gasket A	橡胶垫 A	4
I53-2	60501695	12671100000274	rubber gasket B	橡胶垫 B	4
C00	25109680	12971100A61049 +12971100A51365	control panel ass'y	控制面板组件	1
A01	291300200002	12171100001216	drive shaft	传动轴	4
C12	292100300002	12471100000054	control panel sponge	控制板海绵条	2
C01+C1 5A+C15B +C17+C 20	25109700	12971100A51365	Control Panel Drop Glue Assembly	控制面板滴胶组件	1
C01	291300100033	12171100001416	Button Assembly	按键组件	1
C17	291504200117	12971100004148	control panel bracket	控制板支架	2
C26-1	291301200097	12171100001214	display bracket (left)	显示板支架(左)	1
C26-2	291301200088	12171100000886	display bracket (right)	显示板支架(右)	1
C30	291301000068	12171100000788	Knob Assembly	旋钮组件	2
H01	63901180	17171100002104	display board	显示板	1

UB70NPYS Wiring diagram

