



oven:SWING60SS

Product reference code:SWING60SS

Modified by:Eason

Modification:


00_2018.11.30 New document

01_2018.12.06 Add part coed for Complete door assembly

02_2021.07.08 Add part code for S/S control panel assembly

03_2021.08.11 Modify the supplier code of No.11

SWING60SS Exploded drawing

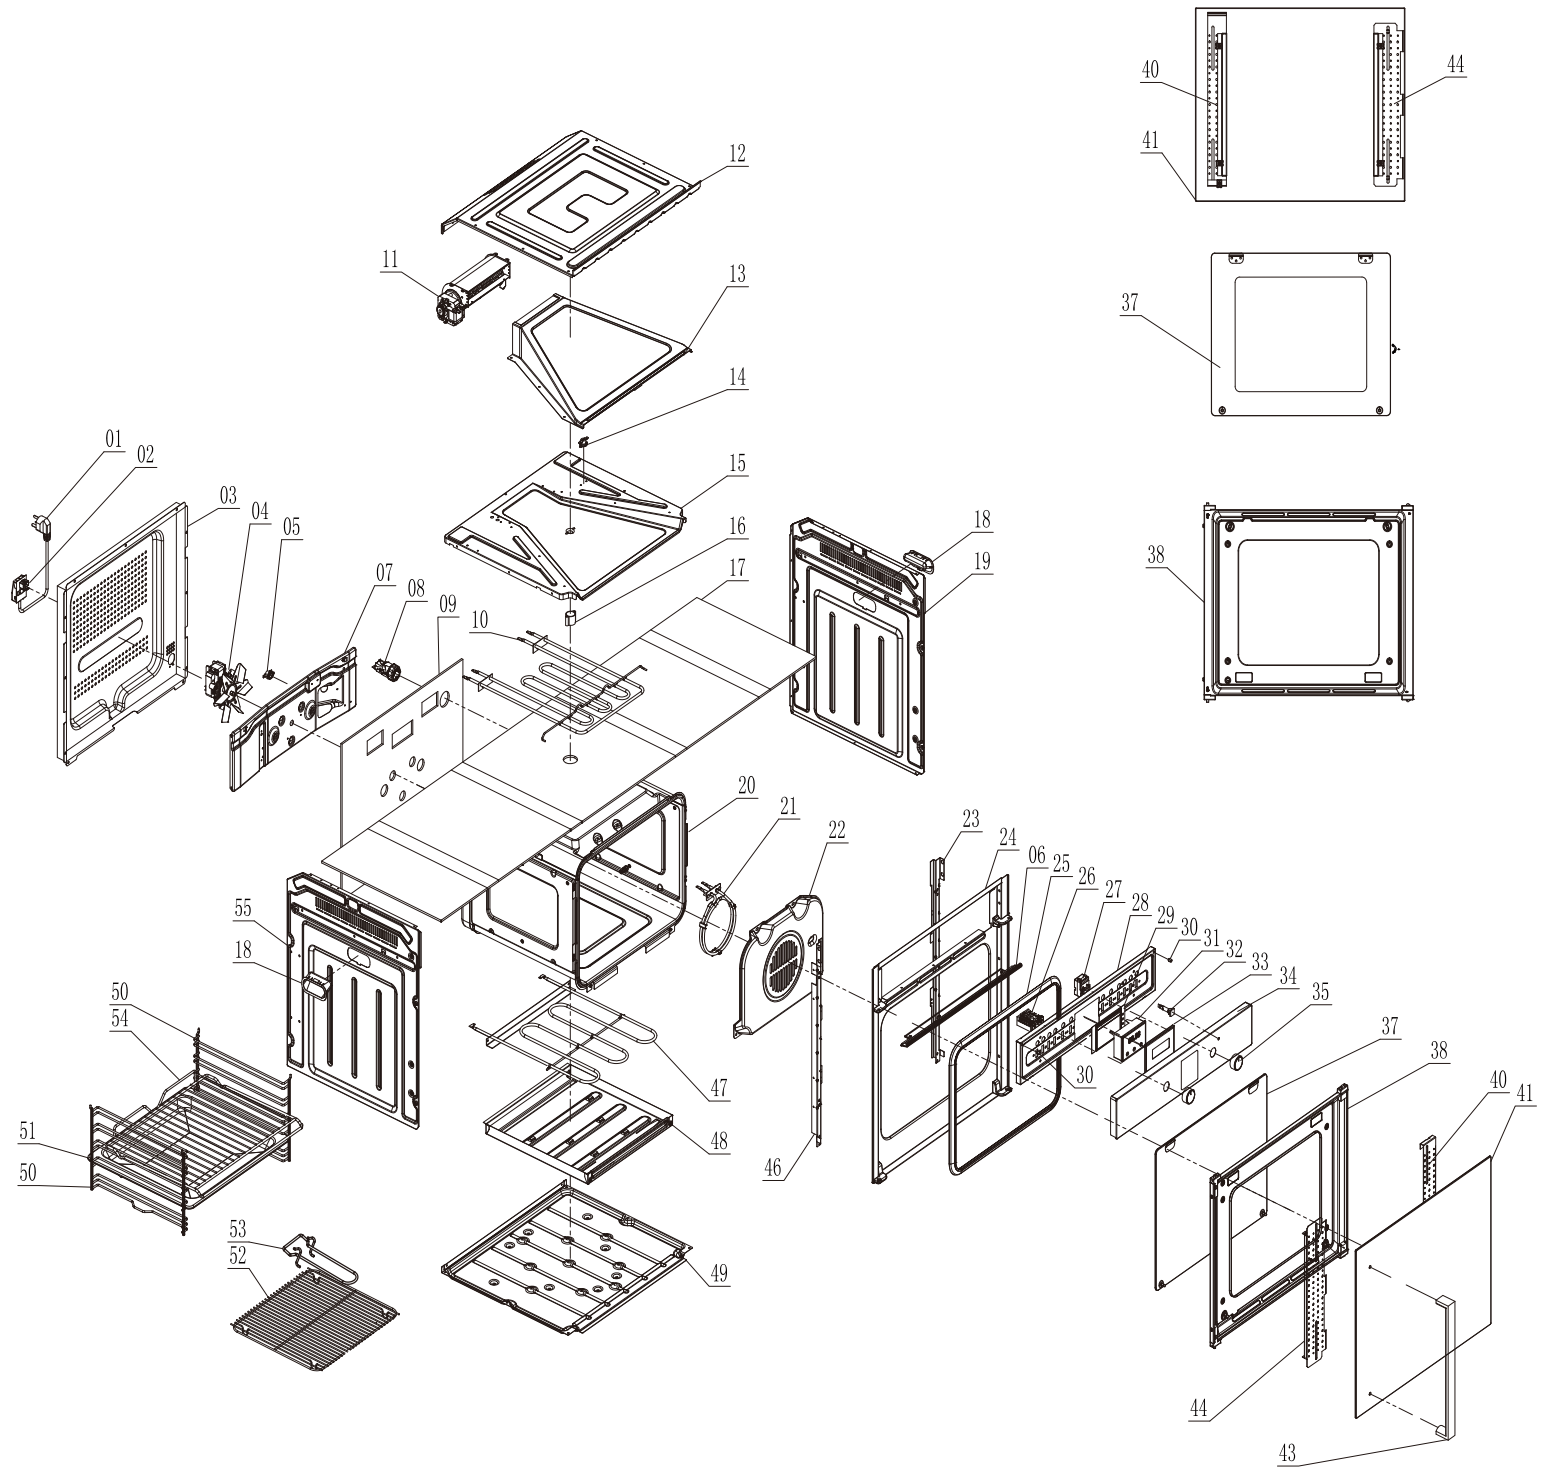

SWING60SS parts list

No.	part code	supplier code	drawing code	Description		Qty
01	60101220	1421015036		power cable	电源线 黑色橡胶线 3X1.5mm2 无头线 1.3米无头线狗牙端子 10#	1
02	26201375	1421600101	XH-B-3	electrical box	烤箱 接线盒 XH-B-3	1
04	64900950	142090020303	EB56-41-05	Circulating fan motor	烤箱 罩板电机 YJ62H-20 AC220-240V/50/60Hz (56L) 兆力 国外	1
05	62101160	1421200107	EB56-28-01	125℃ thermostat	烤箱 超温保护器 125°/15A	1
08	25107860	1420700109	EB-56ECG-P8B22-02	lamp	烤箱 照明灯 FCWVL002-03	1
10	25109060	1420500125	EB-67ERCD-11-00	Upper Heating element	烤箱 上发热管 67L	1
11	64900945	220207213008003	EB56-41-06	Cooling fan motor	烤箱 排风机 YJ61H-16 AC 220-240V 50/60HZ (56L 兆力) 国外	1
14	25107865	1421200108	EB56-31-01	50℃ thermostat	烤箱 超温保护器 50°/10A	1
21	25108335	1420500309	EB57-512-1	Circle heater 2100W	烤箱 环形发热管 220V 2100W 56L/57L	1
22	55001295	212030080201	EB-67ERCD-09	rear fan cover	烤箱 挡风盖 搪瓷冷板50.7 360X490X0.7 搪瓷黑色	1
25	60501535	1320200901	EB-67ERCD-14	door seal	烤箱 门封 67L	1
26	25109065	1420200111	EB-56ECX-05	function switch	烤箱 TD89A功率开关	1
27	25109070	1421100205	EB-67ERCD-28	Temperature switch	烤箱 液胀式温控器 国产中恒 270度	1
31	25109075	1421500132	EB-67ECD6S-8BC45-02	Timer	烤箱 三键触摸定时器（蓝色）组件	1
32	25107885	1420400106		Indicator light	烤箱 2#指示灯 红色6.5头 56L57L不锈钢控制板(通用)	1
33&34	25117085	24020812T000033	EB888D3-8BC06-01-02	S.S control panel assembly	控制板玻璃	
		20020700604023	EB56-119-2A		不锈钢控制板	
35	60703465	1320100151		Knob (Φ6)	烤箱 旋钮 Φ6芯 大圆铝 氧化不锈钢色	1
37	69416780	1120100352	EB-67ECS-04-01	inner glass assy	烤箱 内玻璃 67L 印油 505.5X389X4 (侧门)	1
40&41&44	69416785	2127300101		outer glass assy	烤箱 侧门内玻璃支撑板 56L (左) 镀锌	1
		112010060401			烤箱 门外玻璃 56L 不镀膜 591X463X4(侧门) 350孔距	1
		2127300102			烤箱 侧门内玻璃支撑板 56L(右)镀锌	1
43	64501185	1122400408	EB56-BC49-03	handle	烤箱 57L圆柱拉手 铝350孔距	2
47	25109080	1420500215	EB-68ECD3-32	bottom heating element	烤箱 下发热管 220V 1200W (68L)	1
51	25109085	212210011301	EB-67ERCD-20A	tray	电烤箱 接油盘 67L 搪瓷黑色	1
52	25109090	1120500205	EB-67ERCD-25	grill for tray	烤箱 小烤网 67L	1
53	25108815	2123800102	EB56-195-A	Handle for tray	烤箱 烤铲 2	1
54	25109095	1120500119	EB-67ERCD-19	shelf	烤箱 普通大烤网	1
37&38&40&41&43&44	69416805			Complete door assembly	完整炉门组件	1

SWING60SS Wiring diagram

