




Dishwasher:DWI60

Version:03

Date:2015-03-03


Product reference code: DWI60

DWI60 Exploded drawing(1)

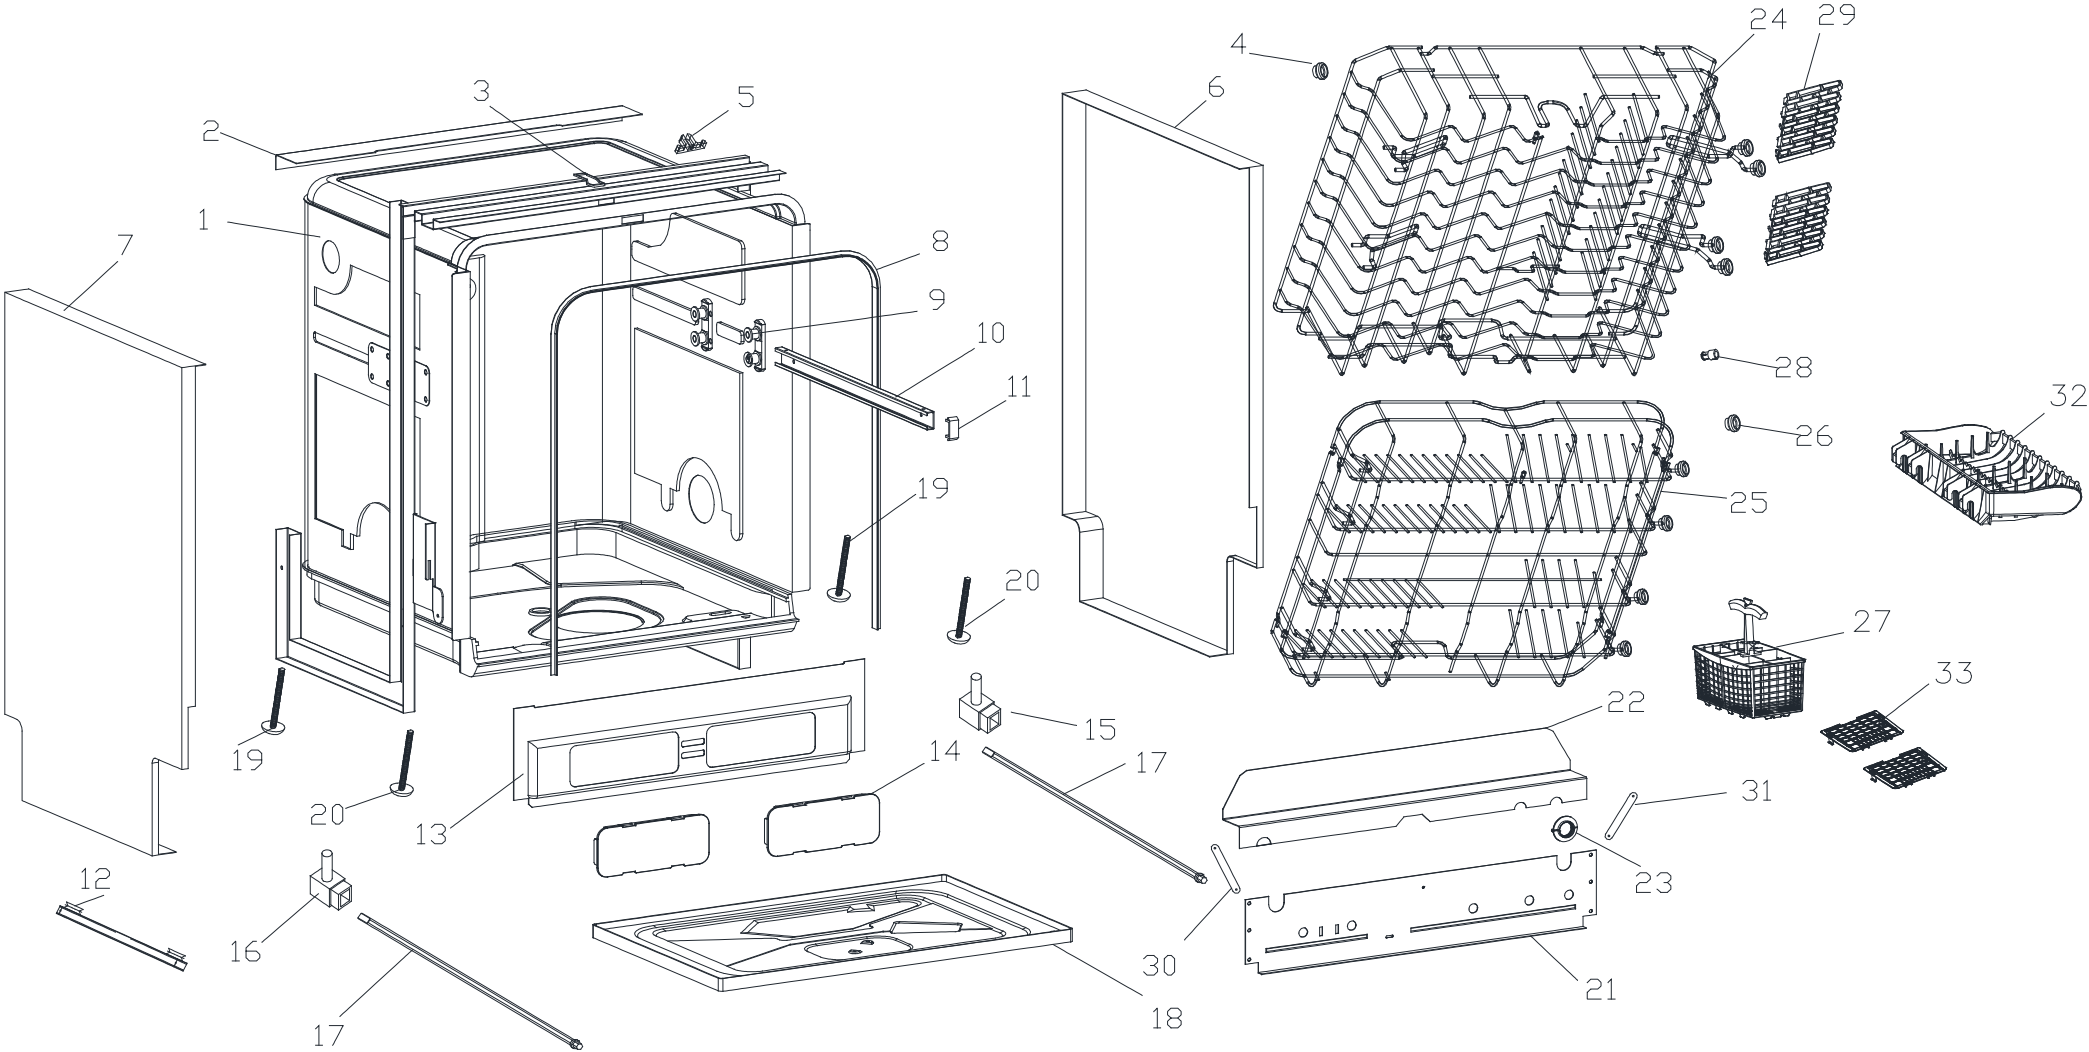


03	Update No.96 part number	Eason	2015. 03. 03
02	Add to No.122	Eason	2014. 11. 03
Index	Modify description	Modified by	Date

# DWI60 Exploded drawing(2)

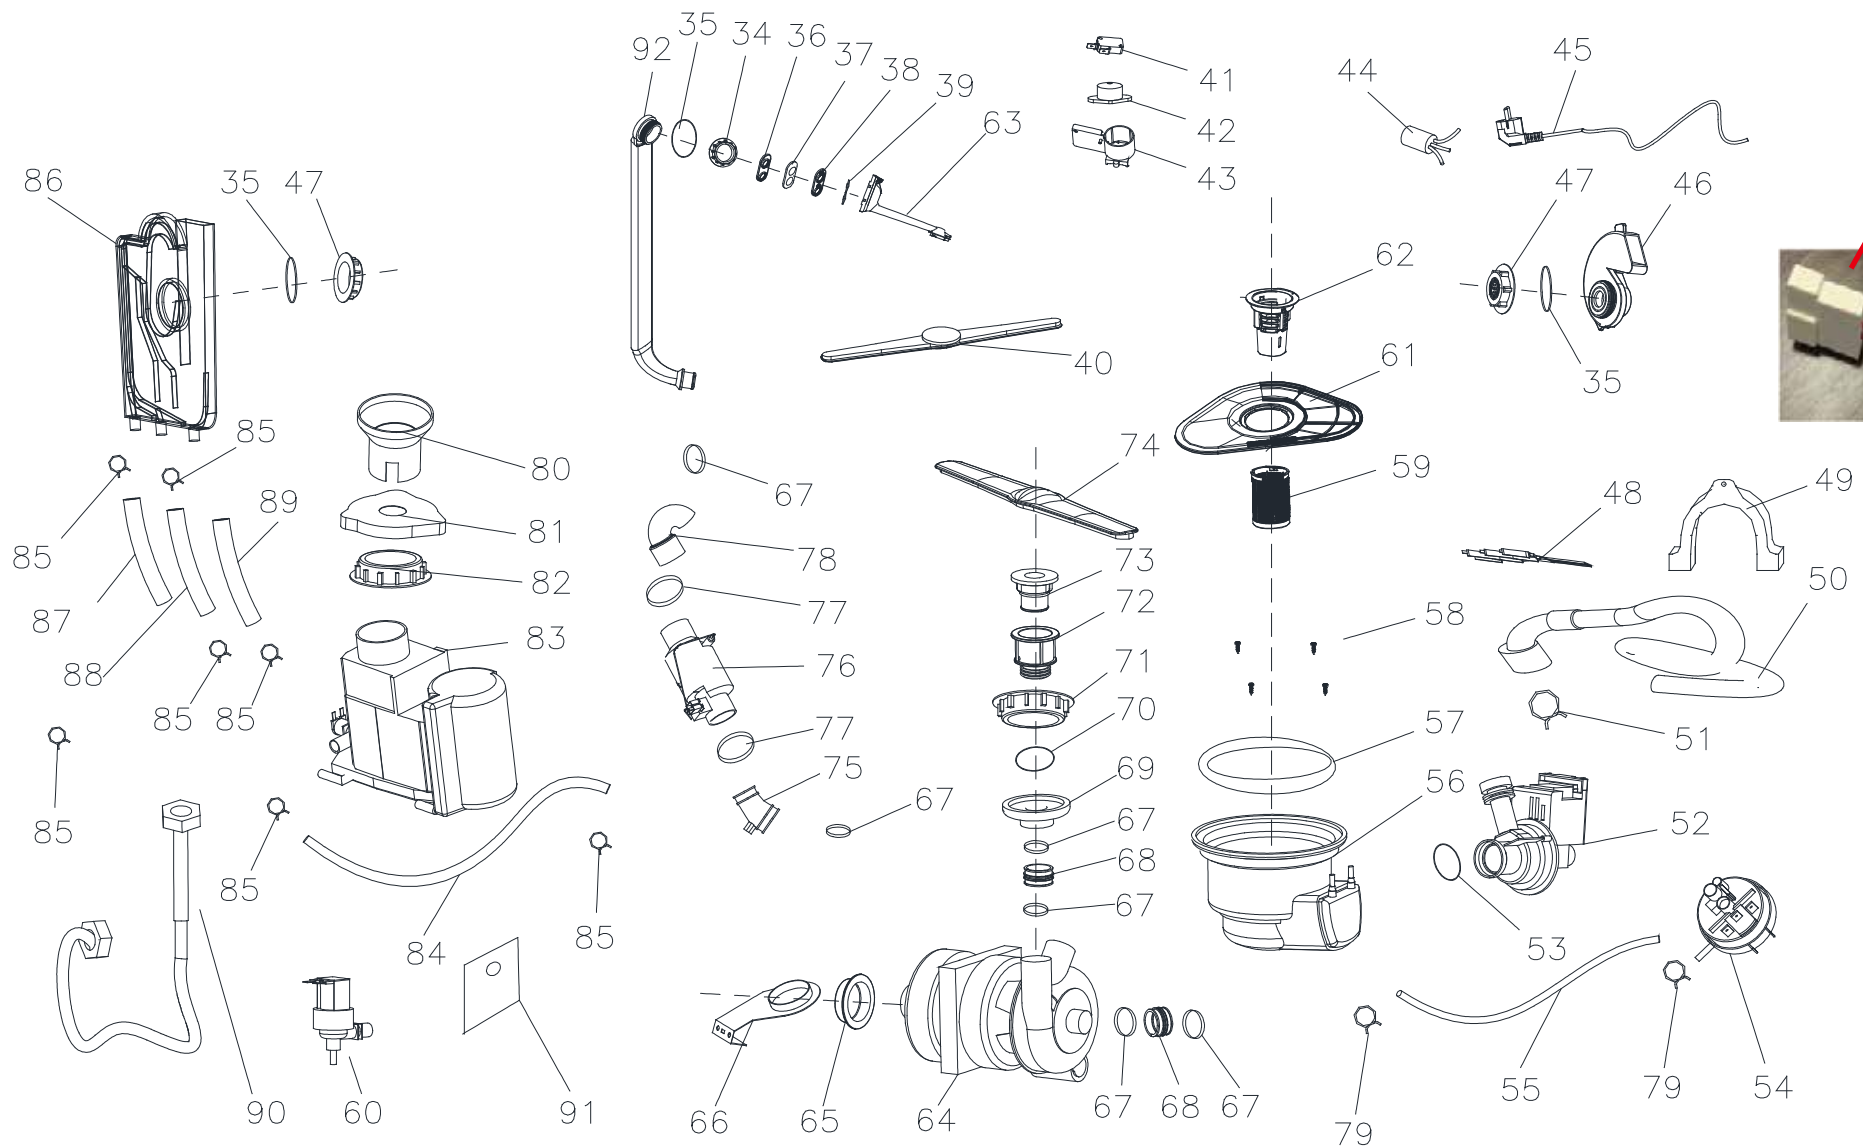

# DWI60 Exploded drawing(3)

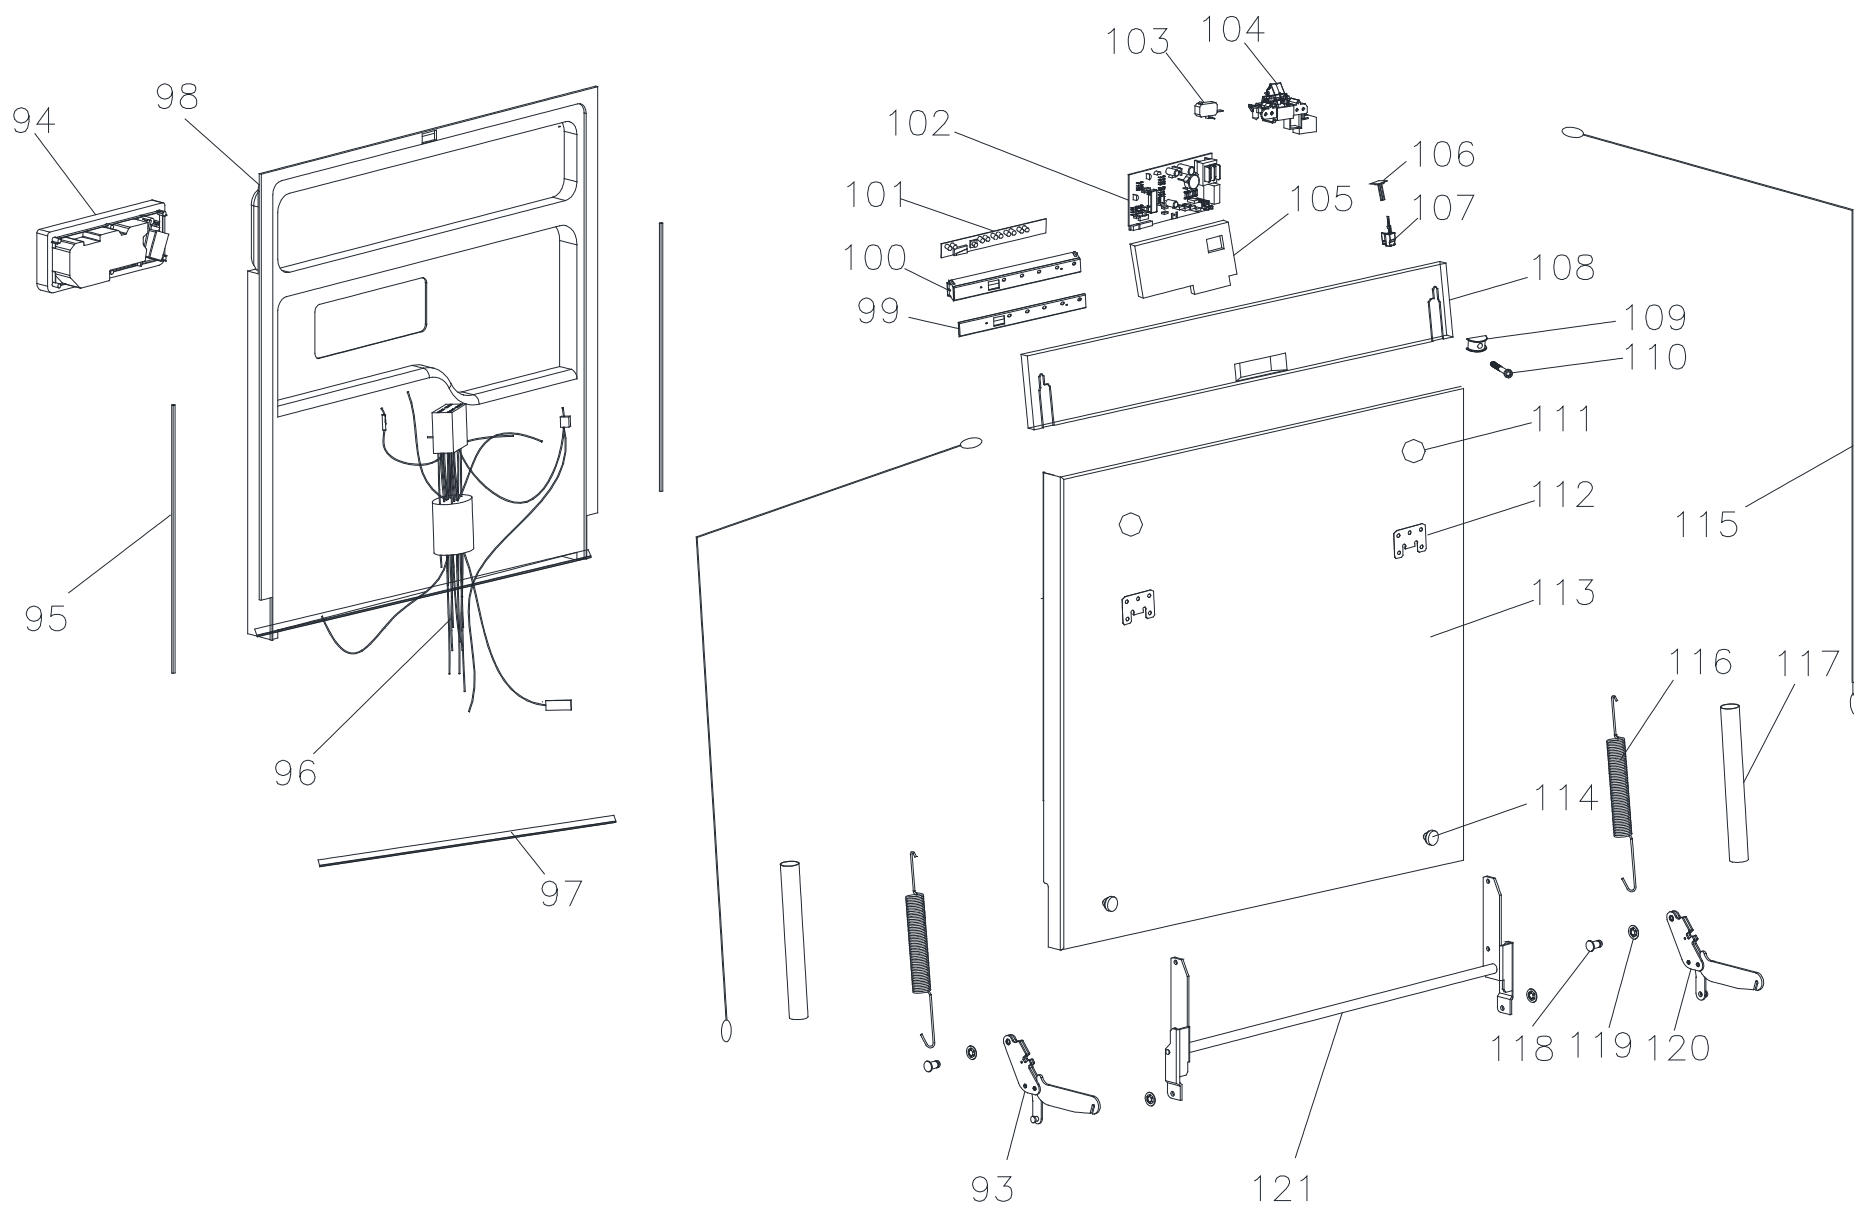

# DWI60 parts list

S/N	Ref code	Description	QTY.	Supplier code
1	26201125	Insulated tub assembly-dishwasher-DWI60	1	0120801820
2	69600545	Upper rear crosspiece-dishwasher-DWI60	1	012G1310020
3	69409000	Door hook-dishwasher-CLDW601W-C	1	012G2150037
4	63700565	Wheel for upper basket-dishwasher-DWI45	8	0120200963
5	26201100	Main screw for self-dishwasher-DWI45	3	0120200057
6	25105845	Painted right side pannel-dishwasher-CLDW601W-C	1	0120106819
7	25106050	Painted left side pannel-dishwasher-CLDW451W-C	1	0120106818
8	60501010	Tub gasket-dishwasher-CLDW601W-C	1	0120300248
9	25104575	Rail support assembly-dishwasher-CLDW601W-C	4	0120801989
10	69600510	Mobile rail for basket-dishwasher-DWI45	2	012G1020069
11	69600515	Basket rail stop-dishwasher-DWI45	4	0120200967
12	60500430	Isolation rubber tube-dishwasher-DWI60	4	001A17521098
13	69600550	Lower front crosspiece-dishwasher-DWI60	1	012G1310027
14	69408830	Cover for front crosspiece-dishwasher-CLDW601W-C	2	0120200065
15	63700550	Right threaded tapered gear-dishwasher-DWI45	1	0120800223
16	63700555	Left threaded tapered gear-dishwasher-DWI45	1	0120800224
17	64500460	Tie rod for foot adjusting-dishwasher-DWI45	2	0120100051
18	62901585	Tray-dishwasher-DWI60	1	0120100230
19	26201115	Adjustable foot-dishwasher-DWI45	2	0120600009
20	26201120	Adjustable screw-dishwasher-DWI45	2	0120600065
21	69600555	Lower rear crosspiece-dishwasher-DWI60	1	0120101601
22	69600560	Rear intermediate crosspiece-dishwasher-DWI60	1	012G1310023
23	60702480	Drain hose stop-dishwasher-CLDW601W-C	1	012G2160204
24	25105850	Upper basket -dishwasher-CLDW601W-C	1	0120106652
25	25105855	Fixed lower basket-dishwasher-CLDW601W-C	1	0120106687
26	63700570	Wheel for lower basket-dishwasher-DWI45	8	0120200964
27	25105860	Cutlery basket-dishwasher-CLDW601W-C	1	0120801727
28	63700560	Wheel support pin-dishwasher-DWI45	16	0120200965
29	69408845	Tilter for upper basket-dishwasher-CLDW601W-C	2	0120201235
30	62901575	Strengthen iron board for back (left)-dishwasher-DWI45	1	0120106568
31	62901580	Strengthen iron board for back (right)-dishwasher-DWI45	1	0120106569
32	69408850	Knife rack-dishwasher-CLDW601W-C	1	0120201260
33	69408855	Net of cutlery basket-dishwasher-CLDW601W-C	2	0120201261
34	69408930	Upper sprayer base-dishwasher-CLDW601W-C	1	0120202777
35	60501065	O-Ring gasket-dishwasher-CLDW601W-C	3	012G4050157
36	25105915	Inner duct -dishwasher-CLDW601W-C	1	0120202779
37	60501035	Diversion pipe sealing-dishwasher-CLDW601W-C	1	0120300947
38	60501075	Inner duct sealing-dishwasher-CLDW601W-C	1	0120202780
39	69408925	Duct for upper sprayer-dishwasher-CLDW601W-C	2	0120202675
40	69409565	Upper sprayer assembly-dishwasher-DWI60	1	0120801726
41	25105895	Micro switch-dishwasher-CLDW601W-C	1	012G6050040
42	69408890	Float for Acquastop-dishwasher-CLDW601W-C	1	0120505219
43	69408885	Support for float-dishwasher-CLDW601W-C	1	0120202056
44	25105865	EMI Filter -dishwasher-CLDW601W-C	1	0124000821
45	60100440	Power supply cable—dishwasher-DWI45	1	0120400120
46	60702495	Air break nozzle-dishwasher-CLDW601W-C	1	012G2160197
47	69409030	Breather ring nut -dishwasher-CLDW601W-C	2	0120201008
48	62100190	Sensor assembly-dishwasher-DWI60	1	0120800696A
49	60702500	U-support for drain hose-dishwasher-CLDW601W-C	1	012G2130193
50	60702620	Drain hose assembly-dishwasher-DWI60	1	0120203547A
51	69408950	Band-dishwasher-CLDW601W-C	1	0120600757
52	26000080	Drain pump-dishwasher-DWI60	1	0120400050
53	60501015	O-Ring gasket-dishwasher-CLDW601W-C	1	012G4050158
54	69600565	Water-level pressure switch-dishwasher-DWI60	1	012G6050043B
55	60702490	Pressure switch tube-dishwasher-CLDW601W-C	1	012G2140067
56	26000085	Water gutter-dishwasher-DWI60	1	0120200174
57	60500435	Cup gasket-dishwasher-DWI60	1	0120200177
58	62701065	self-tapping screw-dishwasher-DWI60	4	0120600160
59	65300520	Strainer-dishwasher-DWI60	1	0120200176
60	25105950	Inlet valve-dishwasher-CLDW601W-C	1	012G5060020

61	69408875	Stainless steel extractable filter-dishwasher-CLDW601W-C	1	012G1040012
62	65300525	strainer(grey)-dishwasher-DWI60	1	0120200210
63	69408920	Cover for inner duct-dishwasher-CLDW601W-C	1	0120202778
64	25105930	Washing Motor assembly-dishwasher-CLDW601W-C	1	012G9370094A
65	25105935	Vibration-proof ring for motor-dishwasher-CLDW601W-C	1	0120300389
66	25105940	Motor support bracket assembly-dishwasher-CLDW601W-C	1	012G9350006
67	69408895	Band-dishwasher-CLDW601W-C	6	012G1040028
68	60501025	Rubber coupling-dishwasher-CLDW601W-C	2	012G4050152
69	69408900	Lower sprayer base fixing piece-dishwasher-CLDW601W-C	1	012G2160193
70	60501030	O-Ring gasket-dishwasher-CLDW601W-C	1	012G4050153
71	69408905	Ring nut for lower spayer fastening-dishwasher-CLDW601W-C	1	0120201006
72	69408910	Lower sprayer base-dishwasher-CLDW601W-C	1	0120201004
73	69408915	Lower sprayer column-dishwasher-CLDW601W-C	1	0120201005
74	25105900	Lower sprayer-dishwasher-CLDW601W-C	1	012G1020070
75	25105925	Water intake hose (heating element)-dishwasher-CLDW601W-C	1	0120300949
76	25105920	Hidden heating element-dishwasher-CLDW601W-C	1	0124000590B
77	69409015	Band-dishwasher-CLDW601W-C	2	0120105775
78	60501040	Coupling (column / heating element)-dishwasher-CLDW601W-C	1	0120300950
79	69409005	Band-dishwasher-CLDW601W-C	2	012G8050084
80	69408940	Salt funnel-dishwasher-CLDW601W-C	1	0120201753
81	25105965	Softener plug assembly-dishwasher-CLDW601W-C	1	0120802037
82	69409020	Softener fastening ring nut-dishwasher-CLDW601W-C	1	012G2150042
83	25105960	Water softener -dishwasher-CLDW601W-C	1	0124000164
84	25105945	Connection pipe(yellow)-dishwasher-CLDW601W-C	1	012G4050247
85	69408935	Band-dishwasher-CLDW601W-C	6	012G1040020
86	26000090	Breather assembly-dishwasher-DWI60	1	0120806230A
87	60501050	Connection pipe-dishwasher-CLDW601W-C	1	012G4050244
88	60501055	Connection pipe(red)-dishwasher-CLDW601W-C	1	012G4050246
89	60501060	Connection pipe(green)-dishwasher-CLDW601W-C	1	012G4050245
90	25105955	Water charging hose-dishwasher-CLDW601W-C	1	0120800683
91	60702485	PVC velum for solenoid volve-dishwasher-CLDW601W-C	1	012G2140092
92	25105910	Outer duct-dishwasher-CLDW601W-C	1	0120202702
93	25105995	Right hinge articulation-dishwasher-CLDW601W-C	1	012G9380558
94	69408990	Detergent dispenser-dishwasher-CLDW601W-C	1	0124000752
95	60500420	Door gasket guard strip-dishwasher-DWI45	2	012G2140094
96		Control cable-dishwasher-DWI60	1	0120804565A
97	60501070	Inner door gasket-dishwasher-CLDW601W-C	1	012G4050243
98	25106440	Inner Door-dishwasher-DWI60	1	0120101404
99	65100030	Control rubber membrane-dishwasher-DWI60	1	0120200985
100	69409570	Cover plate-dishwasher-DWI60	1	0120200994
101	60702990	Display panel-dishwasher-DWI60	1	0121800025
102	60702995	PCB board-dishwasher-DWI60	1	0124000165A
103	69409050	Door switch-dishwasher-CLDW451W-C	1	0120800356
104	25106105	Switch mechanism assembly-dishwasher-CLDW451W-C	1	0120800357A
105	25106090	PCB board cover-dishwasher-CLDW451W-C	1	0120200244
106	25106405	Power button-dishwasher-DWI45	1	0120200226
107	25106410	Power switch assembly-dishwasher-DWI45	1	012G9370091
108	69409580	Control pannel-dishwasher-DWI60	1	0120802453R
109	63300125	Springs adjusting small block-dishwasher-DWI45	2	0120100042
110	63300130	Spring adjusting screw-dishwasher-DWI45	2	0120600197
111	25106420	Sealed plug-dishwasher-DWI45	2	0120300304
112	25106435	Block hooking bracket-dishwasher-DWI45	2	0120100052
113	69409585	Door shell assembly-dishwasher-DWI60	1	0120100043
114	60500440	Block rubber-dishwasher-DWI60	2	0120300014
115	63300145	Adjusting cables-dishwasher-DWI60	2	0120100053
116	63300140	Door spring-dishwasher-DWI45	2	0120100047
117	60702510	PVC Cover-dishwasher-CLDW601W-C	2	0120200048
118	25106005	Hinge pin-dishwasher-CLDW601W-C	2	012G8080007
119	25105990	Elasticity retainer-dishwasher-CLDW601W-C	4	0120600060
120	25106010	Left hinge articulation-dishwasher-CLDW601W-C	1	012G9380559
121	25106000	Complete hinge assembly-dishwasher-CLDW601W-C	1	0120800589
122		the sensor cables	1	0120400524